


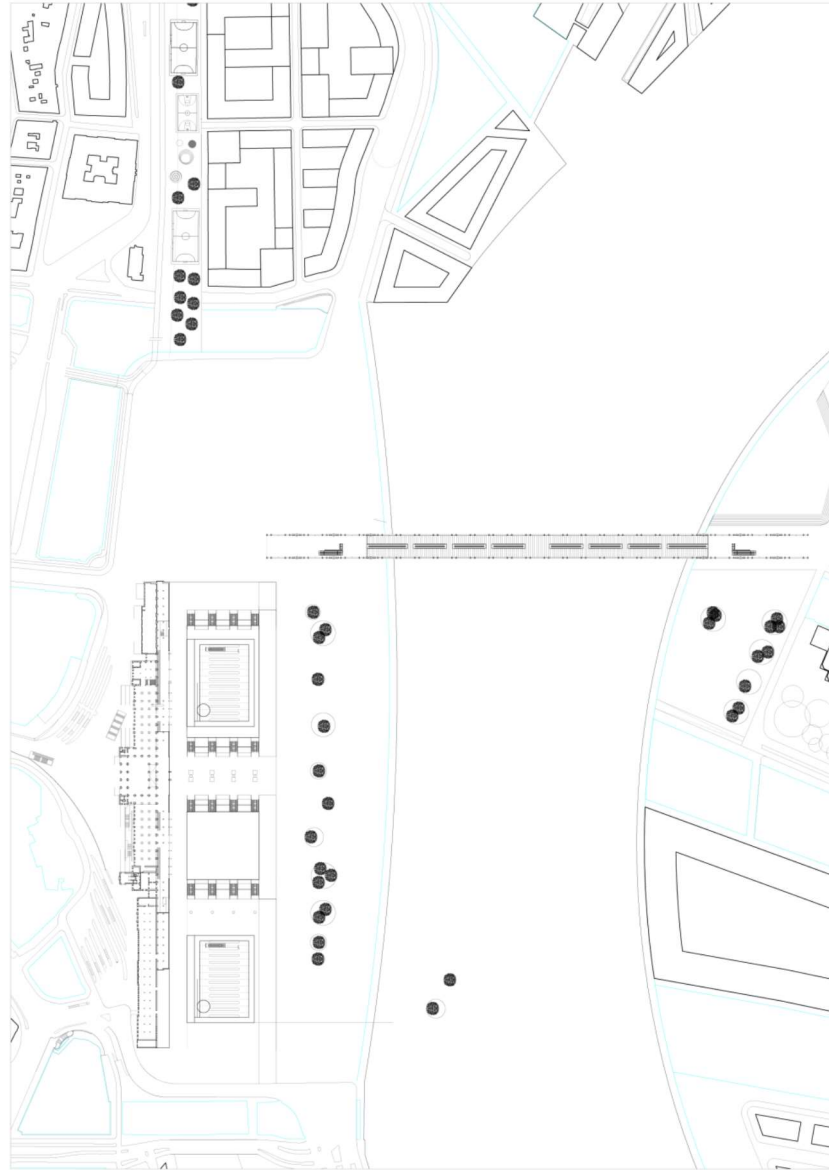


SCALE 1:5000









SCALE 1:1000 0 20 50 100 200

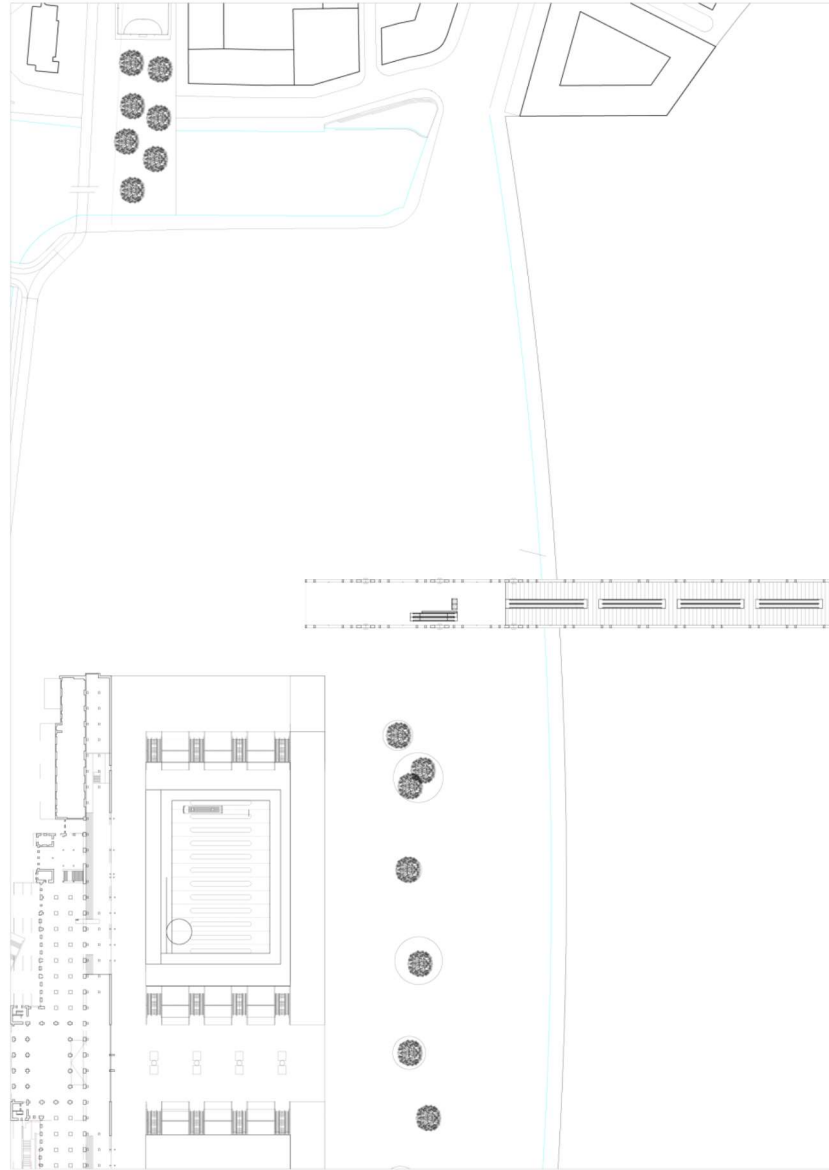

SCALE 1:500
0 10 50 100



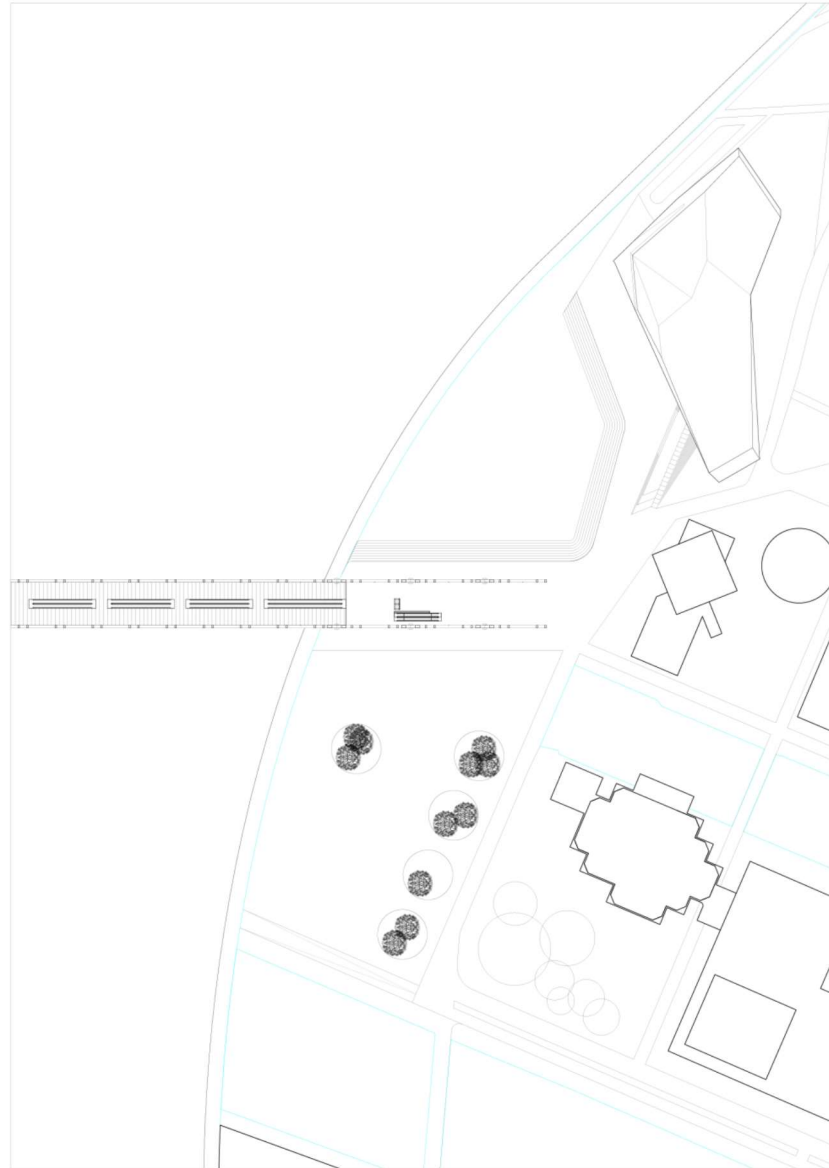


SCALE 1:500 0 10 50 100

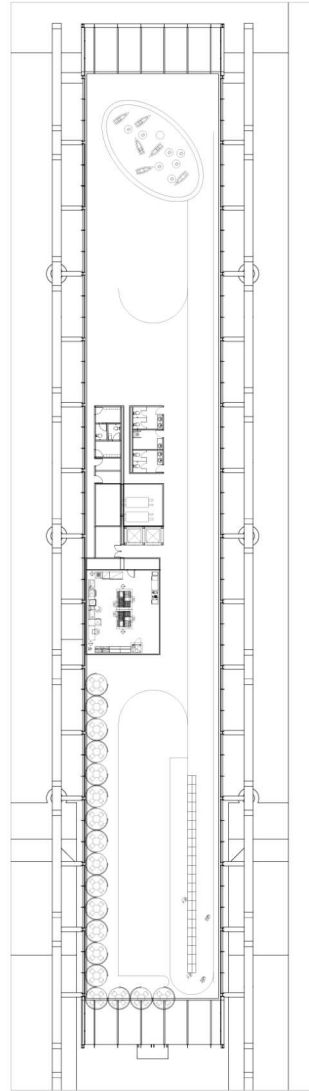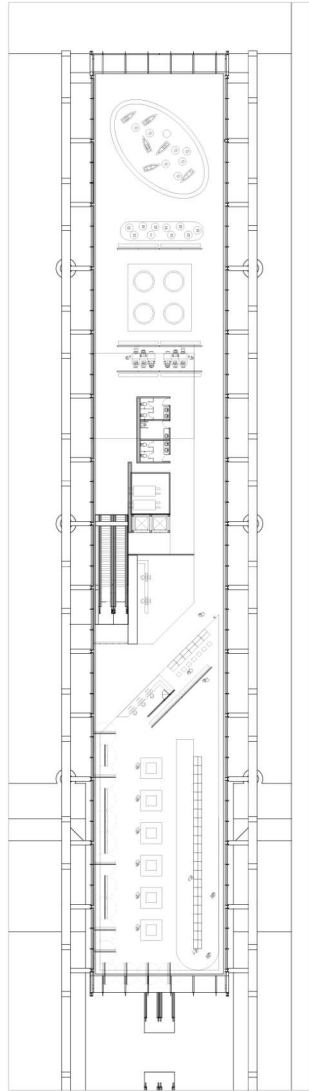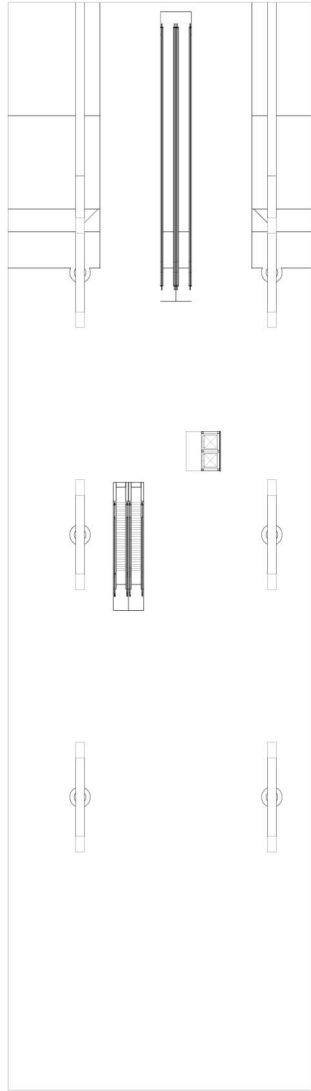


SCALE 1:200

A graphic scale bar is located at the bottom of the page. It consists of a horizontal line with tick marks at intervals of 5 units, labeled 0, 5, 10, 20, and 40. The scale is used to indicate the dimensions of the architectural drawings.

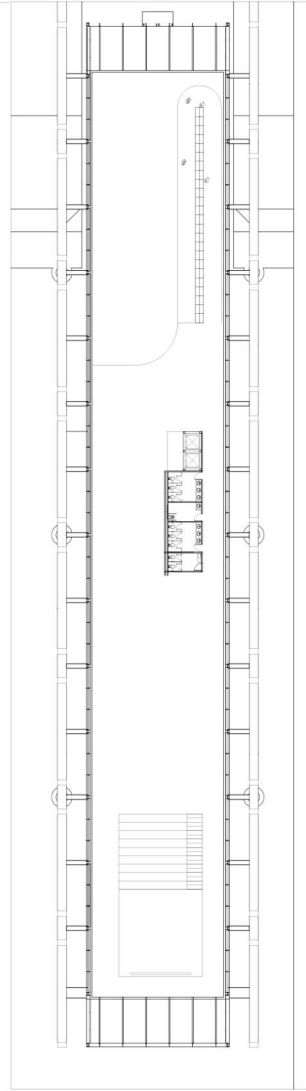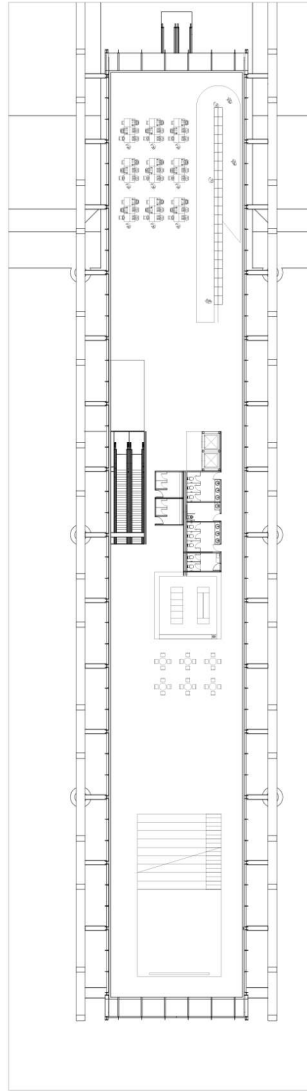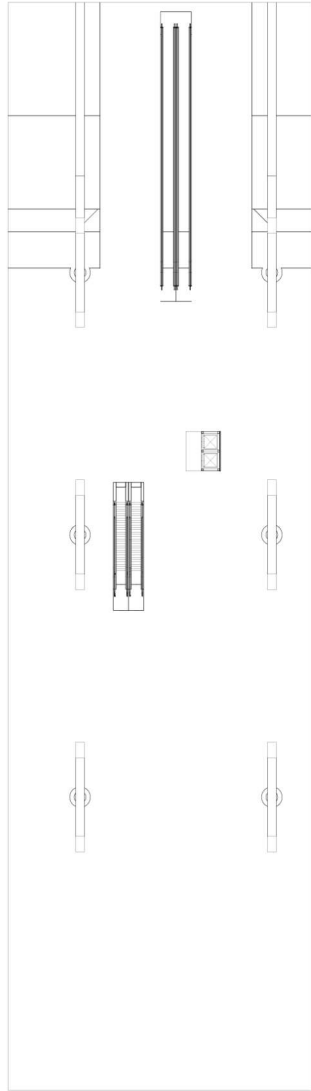


SCALE 1:200

A graphic scale bar is located at the bottom of the page. It consists of a horizontal line with vertical tick marks at intervals of 5 units. The numbers 0, 5, 10, 20, and 40 are placed below the line to indicate the scale.

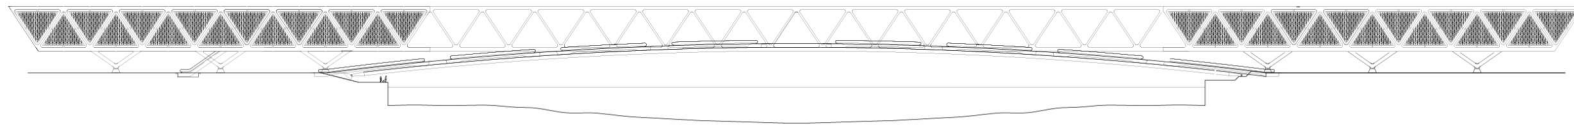


SCALE 1:500




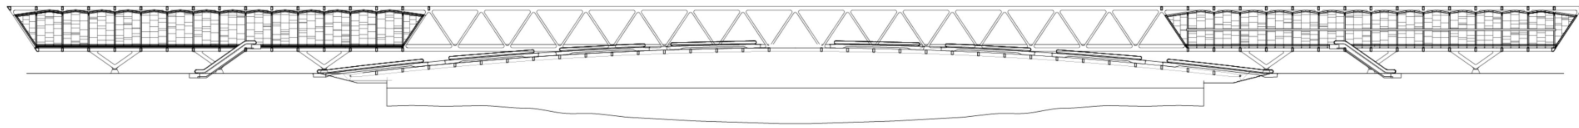

SCALE 1:500 0 10 50 100

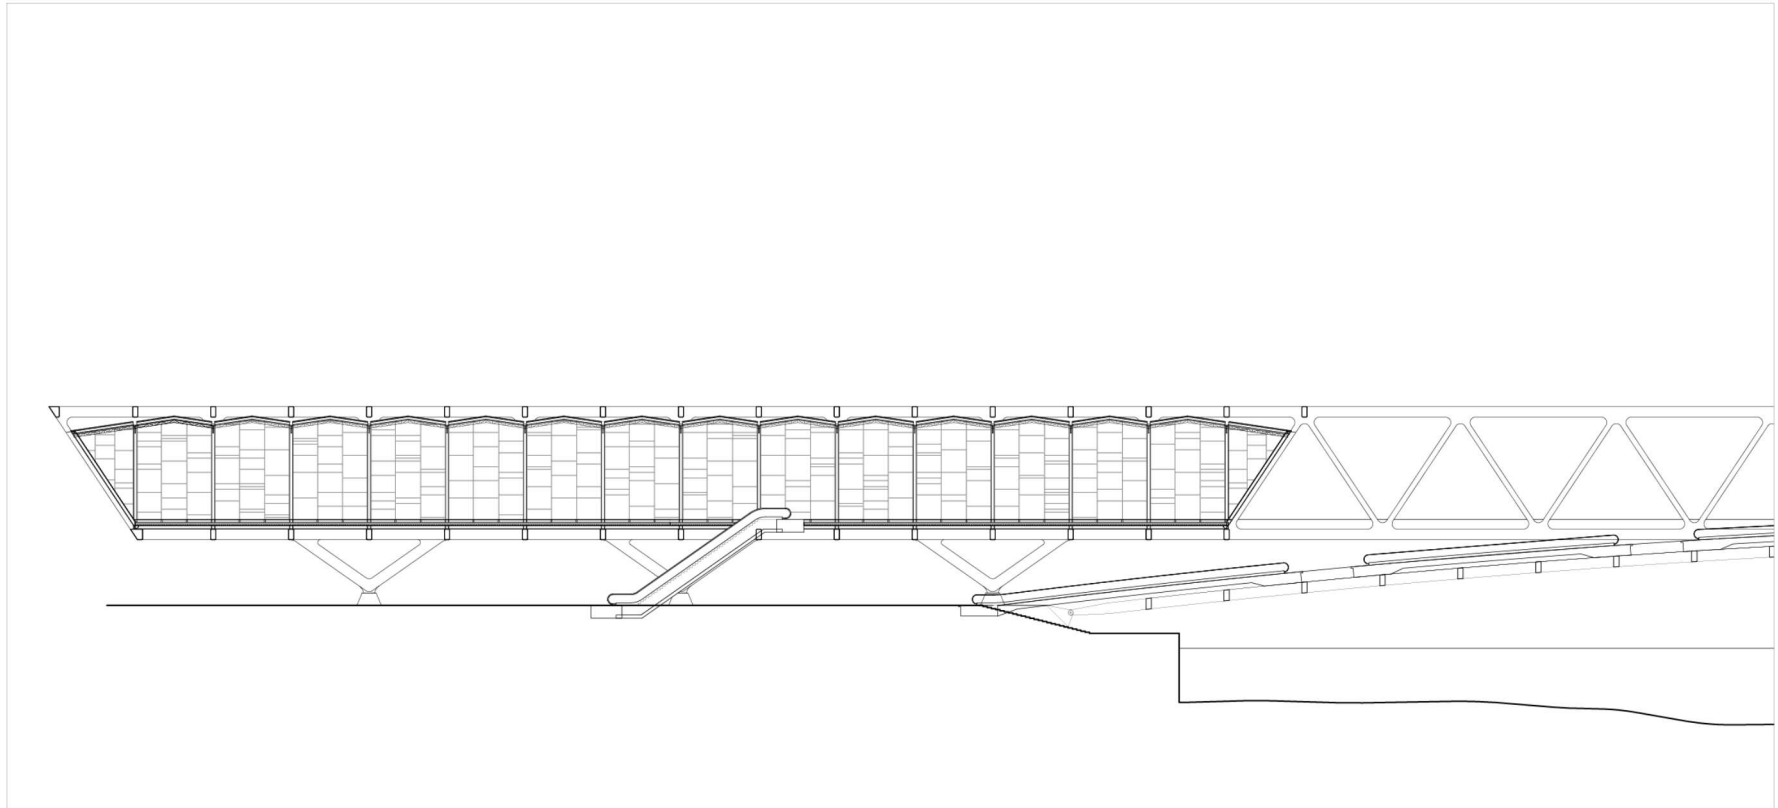


SCALE 1:200 0 5 10 20 40

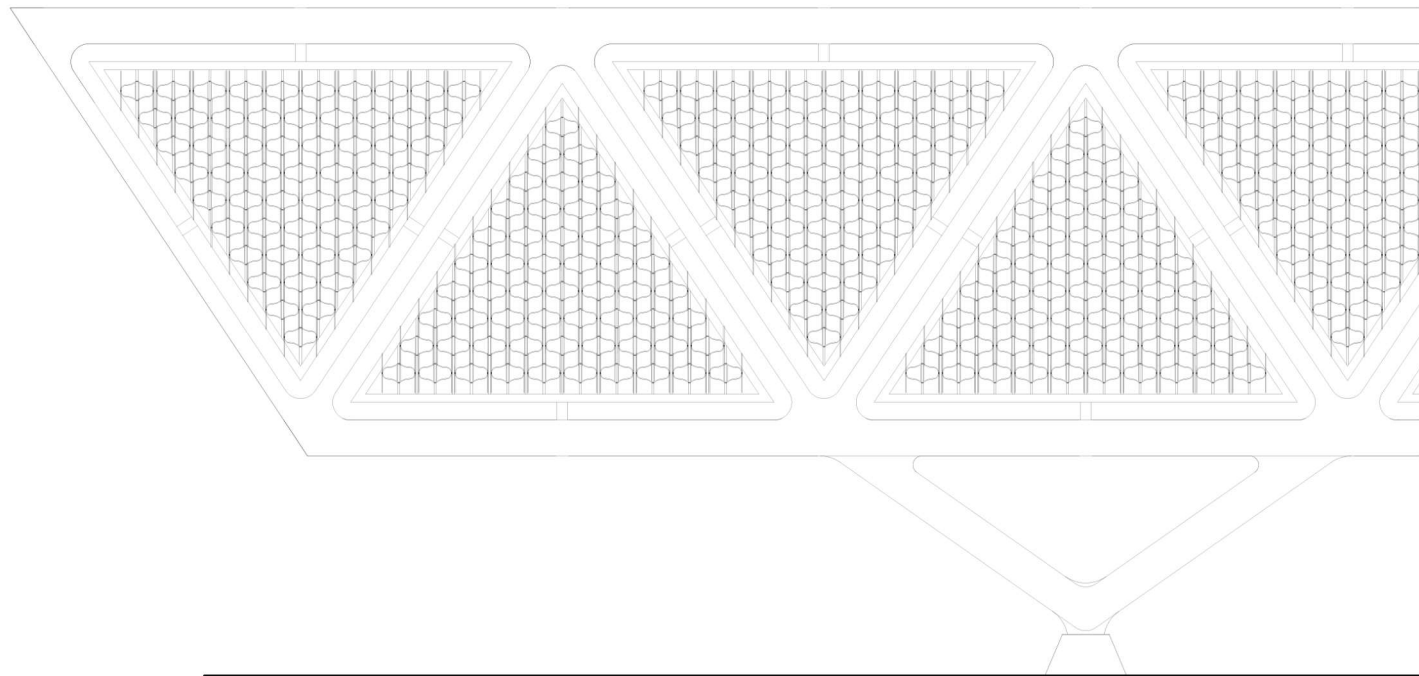


SCALE 1:50



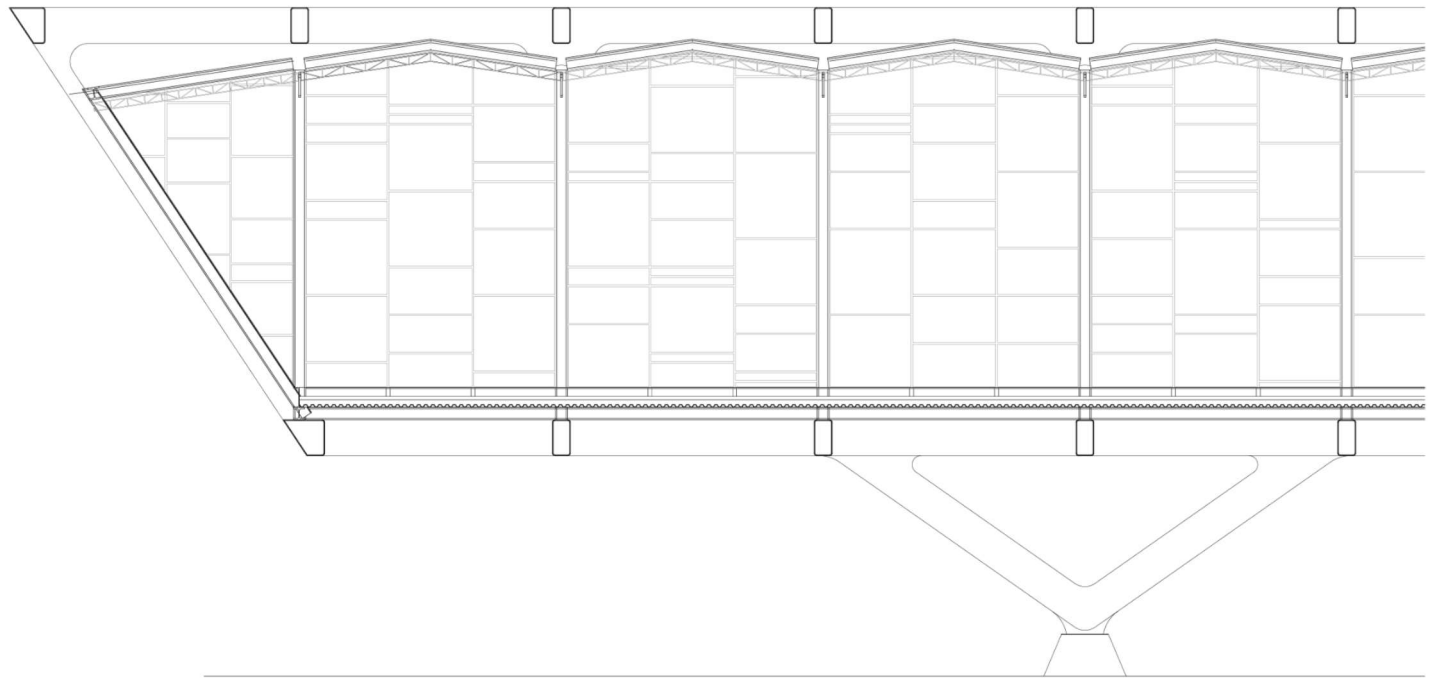


SCALE 1:50



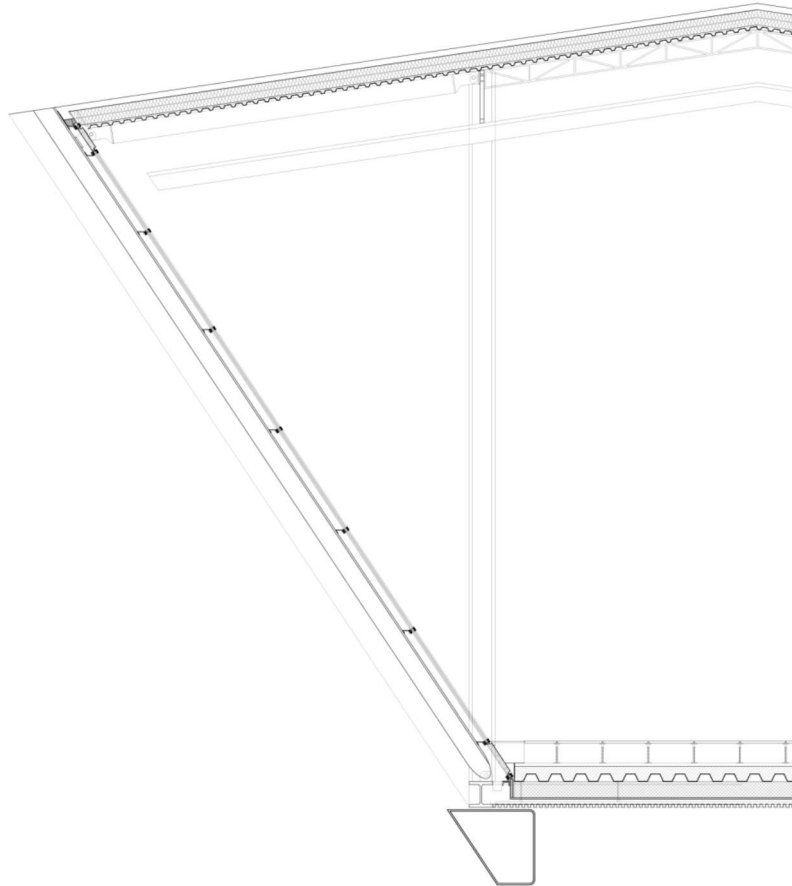


SCALE 1:20



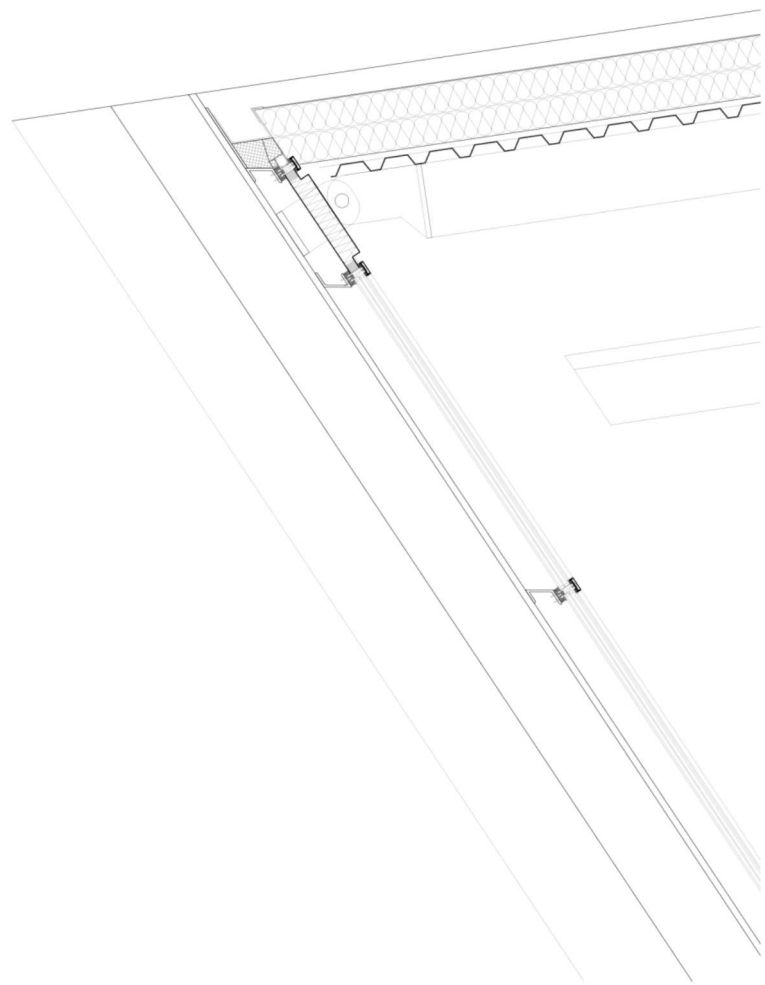



SCALE 1:5



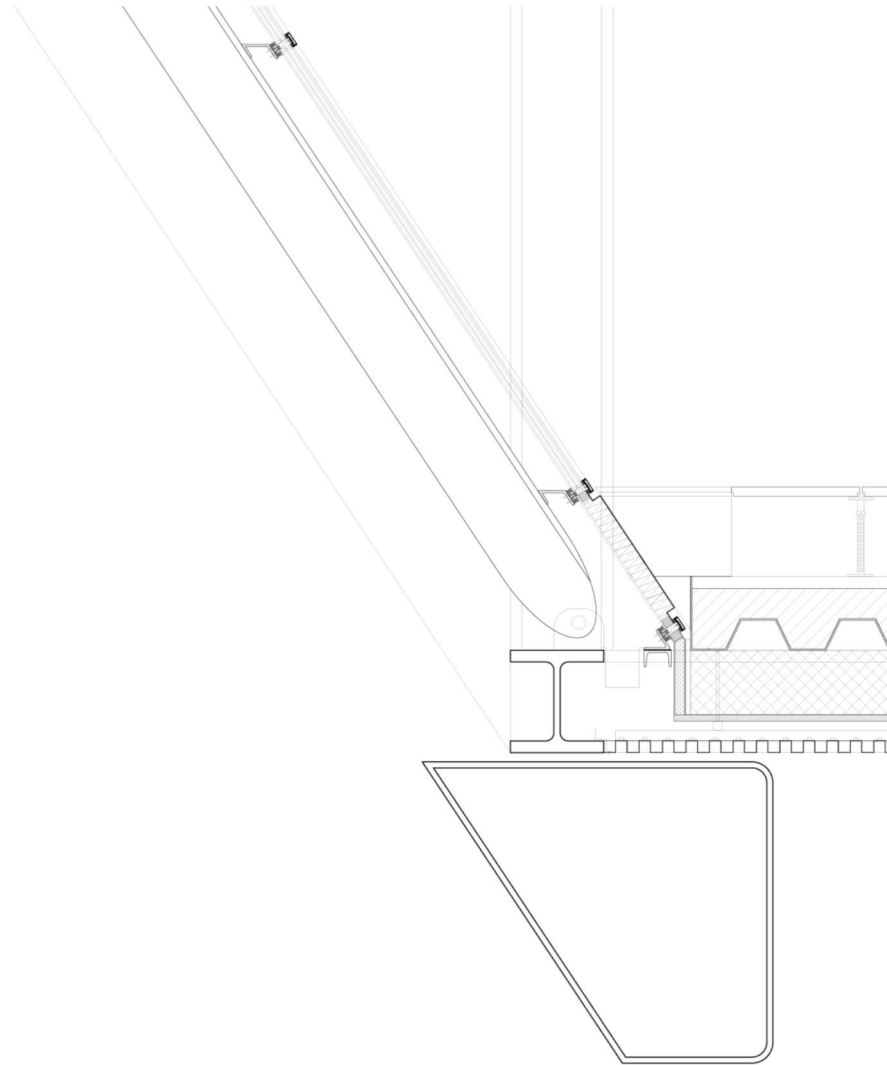


SCALE 1:5



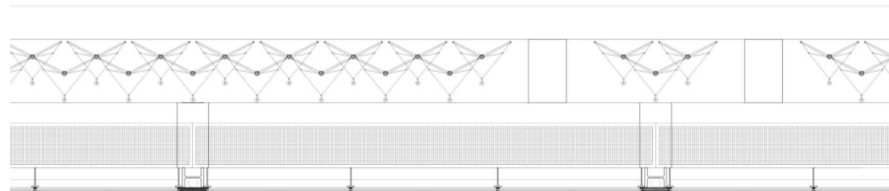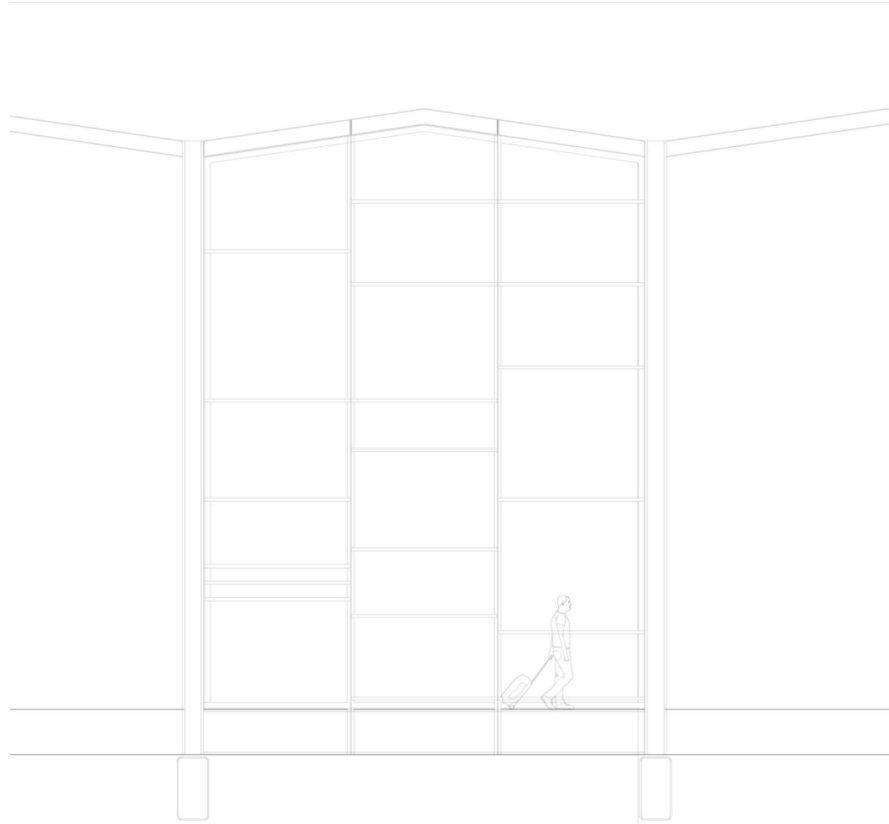




SCALE 1:50



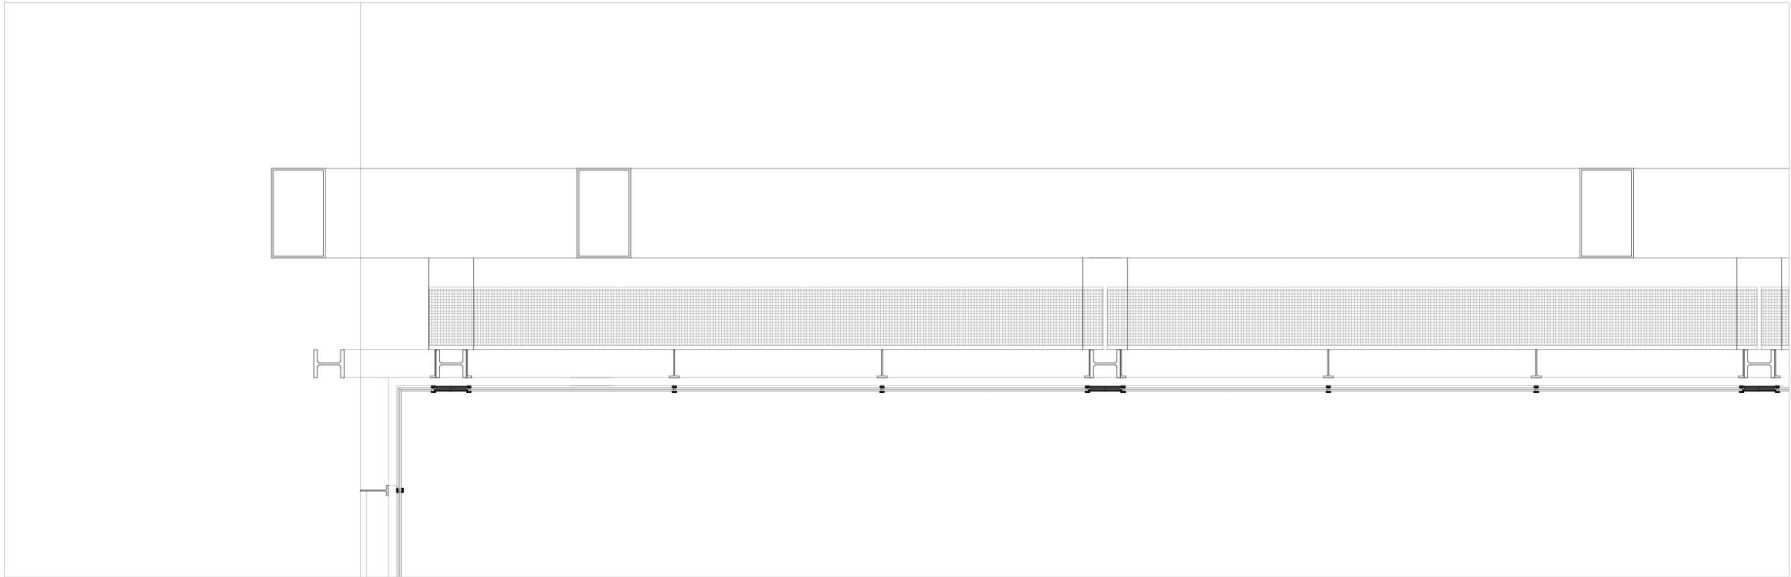

SCALE 1:20



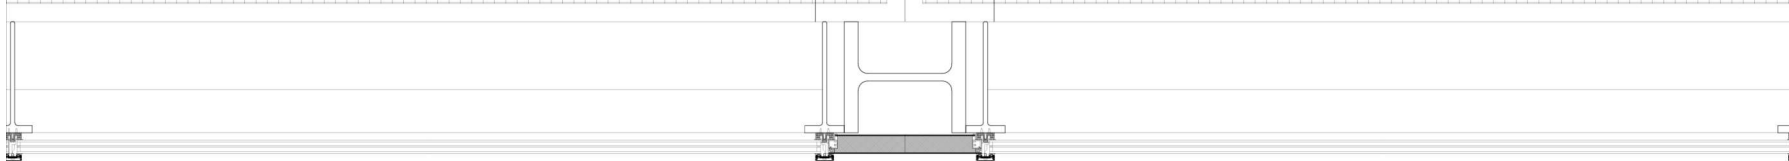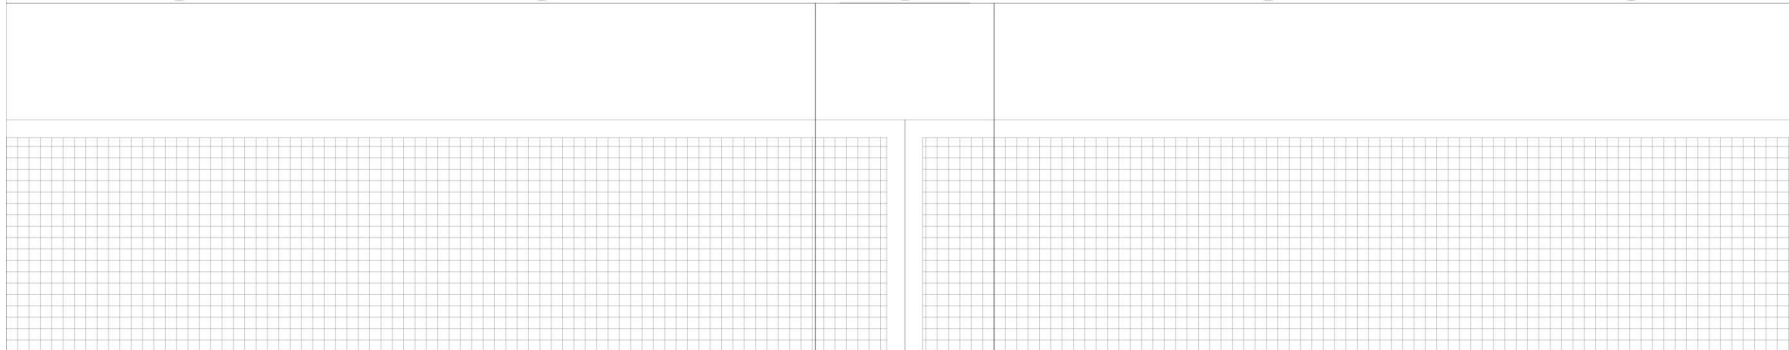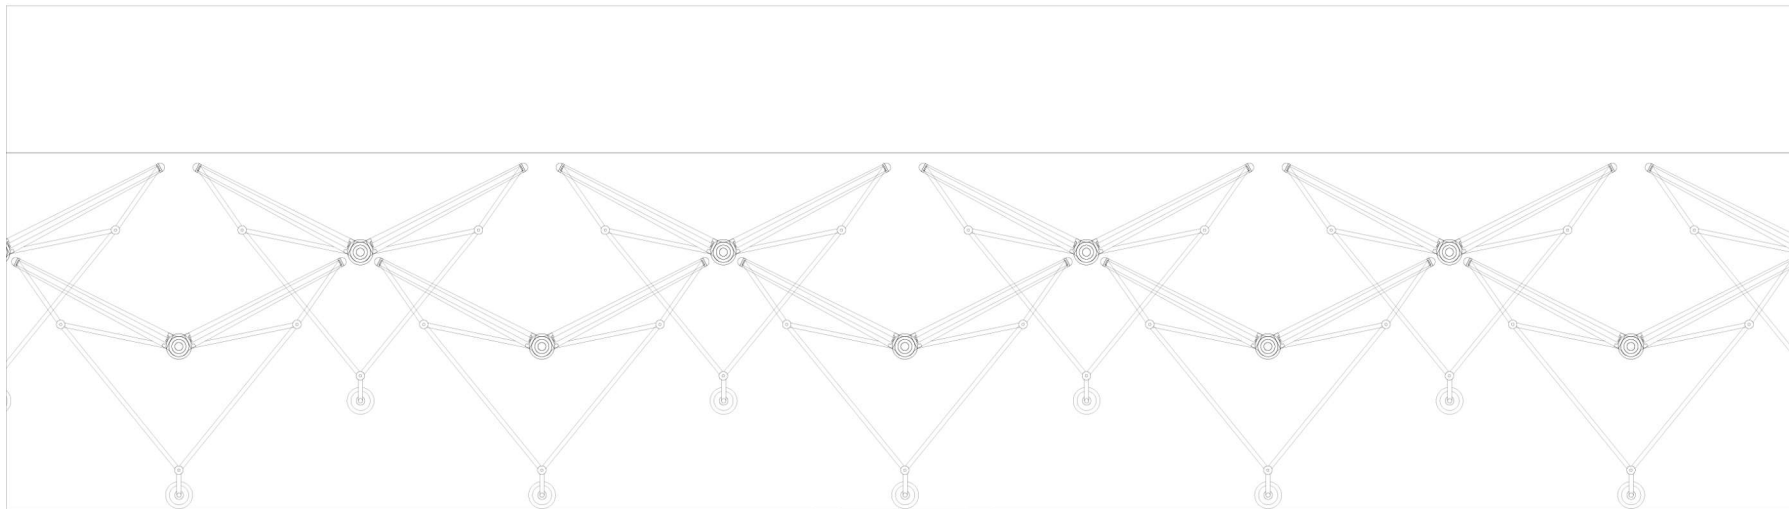

SCALE 1:5

