


GSI, FSI, OSI

MIDDLESTREAM AREA

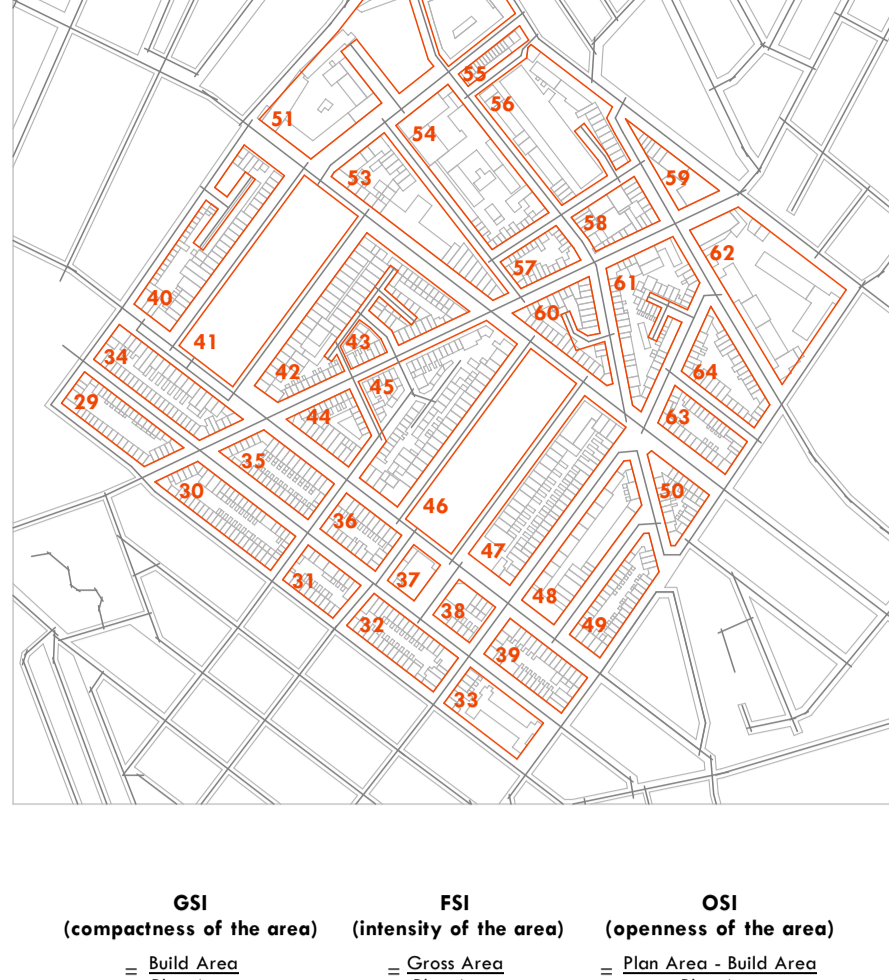

GSI (compactness of the area)

$$= \frac{\text{Build Area}}{\text{Plan Area}}$$

FSI (intensity of the area)

$$= \frac{\text{Gross Area}}{\text{Plan Area}}$$

OSI (openness of the area)

$$= \frac{\text{Plan Area} - \text{Build Area}}{\text{Plan Area}}$$

