



Delft University of Technology

Document Version

Final published version

Licence

CC BY

Citation (APA)

Ruijgrok, GJJ., Voskuijl, M., & Varriale, C. (2025). *Elements of Airplane Performance*. TU Delft OPEN Publishing.
<https://doi.org/10.59490/mt.235>

Important note

To cite this publication, please use the final published version (if applicable).
Please check the document version above.

Copyright

In case the licence states "Dutch Copyright Act (Article 25fa)", this publication was made available Green Open Access via the TU Delft Institutional Repository pursuant to Dutch Copyright Act (Article 25fa, the Taverne amendment). This provision does not affect copyright ownership.
Unless copyright is transferred by contract or statute, it remains with the copyright holder.

Sharing and reuse

Other than for strictly personal use, it is not permitted to download, forward or distribute the text or part of it, without the consent of the author(s) and/or copyright holder(s), unless the work is under an open content license such as Creative Commons.

Takedown policy

Please contact us and provide details if you believe this document breaches copyrights.
We will remove access to the work immediately and investigate your claim.

This work is downloaded from Delft University of Technology.

Elements of Airplane Performance

Ger J.J. Ruijgrok, Mark Voskuil, Carmine Varriale



ELEMENTS OF AIRPLANE PERFORMANCE

GER J.J. RUIJGROK, MARK VOSKUIJL, CARMINE VARRIALE

Colophon

Elements of Airplane Performance



Authors:

Ger J.J. Ruijgrok

Mark Voskuil, M.Voskuil@mindef.nl, <https://orcid.org/0000-0001-9193-1203>

Carmine Varriale, C.Varriale@tudelft.nl, <https://orcid.org/0000-0001-7419-992X>

Keywords:

Aircraft Performance, Flight Mechanics

First edition (2007) and second edition (2009) published by:

Delft Academic Press

Third edition published by:

TU Delft OPEN Publishing | Delft University of Technology, The Netherlands

DOI: <https://doi.org/10.59490/mt.235>

ISBN (softback/paperback): 978-94-6384-861-9

ISBN (E-book): 978-94-6518-164-6

Copyright statement:



This work is licensed under a Creative Commons Attribution 4.0 International ([CC BY 4.0](https://creativecommons.org/licenses/by/4.0/)) licence

© 2025 published by TU Delft OPEN Publishing on behalf of the authors

Electronic version of this book is available at: <https://textbooks.open.tudelft.nl/textbooks>

Cover design made by Alispective on Pexels: Turkish Stars Aerobatic Display in Clear Blue Sky

Copyright clearance made by the TU Delft Library copyright team

Disclaimer:

Every attempt has been made to ensure the correct source of images and other potentially copyrighted material was ascertained, and that all materials included in this book have been attributed and used according to their license. If you believe that a portion of the material infringes someone else's copyright, please contact C.Varriale@tudelft.nl

CONTENTS

Preface	xi
1 Basic concepts	1
1.1 Introduction	1
1.2 The airplane is regarded a rigid body	1
1.3 Application of Newton's law with respect to an axis system attached to the Earth	3
1.4 Gravitation	6
1.5 The effect of curvature of the Earth	9
1.6 Coordinate-systems.	10
1.7 Angles and velocities describing the angular displacement of the airplane	10
1.8 The airplane	18
1.9 Flight types, airplane configuration and flight condition	19
1.10 Forces on the airplane	21
1.11 SI-system of units	23
1.12 Problems	24
2 The atmosphere	27
2.1 Nature of the atmosphere	27
2.2 Variation of pressure with altitude	30
2.3 Standard atmospheres	31
2.4 Off-standard atmospheres	36
2.5 Humidity	38
2.6 Vertical motion in the atmosphere	42
2.7 Wind	47
2.8 Atmospheric fronts	51
2.9 Problems	54
3 Equations of Motion	57
3.1 Translational Motion	57
3.2 Rotational motion.	59
3.3 Unsteady motion	61
3.4 The most general steady motion	63
3.5 Special types of steady flight	65
3.5.1 Steady straight non-sideslipping flight	65
3.5.2 Steady straight sideslipping flight	66
3.5.3 The flat turn	67
3.5.4 Steady non-sideslipping banked turn	68
3.6 Translational equation for variable mass	70
3.7 Problems	71

4	Aerodynamic Basis	73
4.1	Aerodynamic coefficients	73
4.2	Airfoil and wing characteristics	77
4.3	The lift-drag polar	83
4.4	Parabolic lift-drag polar	92
4.5	Problems	96
5	Air Data Instruments	99
5.1	Introduction	99
5.2	The altimeter	99
5.3	The vertical-speed indicator	103
5.4	The airspeed indicator	104
5.5	The Machmeter	109
5.6	Ambient air temperature measurement	110
5.7	Problems	112
6	Propulsion	113
6.1	Types of airplane propulsion systems	113
6.2	The piston engine	118
6.3	The electric motor	124
6.4	Definition of thrust for jet propulsion	128
6.5	Ideal turbojet cycle	131
6.6	Component efficiencies	135
6.7	Typical turbojet performance	142
6.8	The turboprop engine	147
6.9	The turbofan	151
6.10	Hybrid-electric propulsion architectures	158
6.11	Problems	160
7	Propeller Performance	163
7.1	Propeller thrust and efficiency	163
7.2	Propeller geometry	169
7.3	Blade element theories	172
7.4	Propeller charts	177
7.5	Installed propeller performance	182
7.6	Problems	183
8	The airplane in Symmetric Flight	185
8.1	Fundamental equations	185
8.2	Integral and point performance	190
8.3	Air loads	190
8.4	Stalling speeds	193
8.5	Load factor envelopes	194
8.6	Problems	197

9	Performance in steady symmetric flight	199
9.1	Basic Relations	199
9.2	Drag and power required	201
9.3	Thrust and power available	208
9.4	The performance diagram	213
9.5	Performance prediction using analytical expressions	219
9.6	Problems	223
10	Effect of Altitude	225
10.1	Effect of altitude on drag and power required	225
10.2	Rate of climb and climb angle	226
10.3	Stall, propulsion and buffet boundaries	231
10.4	Flight envelope	237
10.5	Problems	239
11	Flight and airplane condition effects	241
11.1	Effect of weight	241
11.2	Effect of engine failure	244
11.3	Effect of changes of engine control setting	250
11.4	Effect of airplane configuration	254
11.5	Problems	256
12	Turning Performance	259
12.1	Governing equations	259
12.2	Equations for the performance in a coordinated turn	261
12.3	Calculation of turning performance	267
12.4	Analytic expressions for best turning performance	270
12.5	Climbing and descending turns	274
12.6	Problems	276
13	Gliding Flight	279
13.1	Symmetric Flight	279
13.2	Effect of altitude	284
13.3	Effect of wind	289
13.4	Turning flight	291
13.5	Cross-country flight	295
13.6	Problems	299
14	Symmetric Climb and Descent	301
14.1	Quasi-steady symmetric flight	301
14.2	The unsteady quasi-rectilinear climb	303
14.3	Optimum climb	307
14.4	Effects of vertical wind gradients	310
14.5	Limitations on vertical velocity	313
14.6	Problems	314

15	Cruise Performance	317
15.1	Range and Endurance	317
15.2	Approximate analytic expressions for range and endurance: propeller propulsion	320
15.3	Approximate analytic expressions for range and endurance: jet propulsion	322
15.4	Effect of wind on cruise performance	327
15.5	Weight breakdown	329
15.6	The economic performance of transport airplanes	331
15.7	Problems	334
16	Airfield Performance	337
16.1	The takeoff maneuver	337
16.2	Takeoff ground run	339
16.3	The airborne phase of the takeoff maneuver	343
16.4	Effect of wind on takeoff	346
16.5	The landing maneuver	348
16.6	The airborne distance of the landing maneuver	349
16.7	The landing ground run	352
16.8	Problems	356
A	Newtonian Mechanics	359
A.1	Newton's laws of motion	359
A.2	Newton's first law	359
A.3	Newton's second law of motion	360
A.4	Effect of rotation	361
A.5	Non-inertial reference frames	363
A.6	Systems of particles	364
A.7	General bodies	366
A.8	Rigid bodies	368
A.9	Center of gravity	369
B	Switching Between Axis Systems	371
B.1	Euler angles and axis systems	371
B.2	Matrix representation	372
B.3	Rotation matrices	373
B.4	Moving Earth and body axis system relationships	375
B.5	Moving Earth and air-path axis system relationships	376
B.6	Air-path and body axis system relationships	377
B.7	Deriving the equations of motion: symmetric flight	377
B.8	Deriving the equations of motion: generic flight in wind field	379
C	One-dimensional steady flow equations	383
C.1	Continuity equation	383
C.2	Bernoulli's equation	383
C.3	The momentum equation	385
C.4	The energy equation	387
C.5	Isentropic relations	389

C.6	The speed of sound	390
C.7	Bernoulli's equation for compressible flow	391
C.8	Isentropic flow of a perfect gas through a channel of varying cross-section	392
C.9	Normal shock waves	395
C.10	Oblique shock waves	398
D	International Standard Atmosphere	403
E	Conversion Factors	413
	References	415

PREFACE

PREFACE TO THE FIRST EDITION

This book presents a teaching text on airplane performance. This field has to do with the translational motion of flight vehicles, in which we study such questions as maximum flight speed, maximum rate of climb, range, and takeoff distances. A number of books on the dynamics of flight have appeared in the last decades, aimed at a variety of subjects.

Concerning the treatment of the capability of airplanes to perform specific maneuvers and their operational tasks, most of the existing books are of limited scope. However, the technological developments and the growing importance for all airplane types to function economically have introduced the need for a comprehensive, modern book on the principles and practice of airplane performance prediction suited for use as a primary text in undergraduate engineering courses. The present book is intended to fulfill that need.

The book is a description of the regular courses on airplane performance as have been taught for many years by the author at the Faculty of Aerospace Engineering of Delft University of Technology (TUD), The Netherlands, and at the Faculty of Applied Sciences of the Brussels Free University (VUB), Belgium.

In the text, three fairly well-defined parts may be distinguished. The first part comprises the chapters 1 to 7, which deal with some basic concepts of the airplane and its motion, the properties of the atmosphere, and the general equations of motion. Furthermore, these supporting chapters include the basics of the generation of aerodynamic forces and moments, the operating principles of the air data instruments and their application to flight, some fundamental aspects and operating characteristics of airplane propulsion systems, and the theory of the propeller. These subjects represent the required background knowledge necessary for the subsequent analysis of the performance of powered and un-powered airplanes. The second part is formed by the chapters 8 to 13, where especially are discussed the classical methods of predicting the performance values of airplanes that pertain to a given point of time or a given point on the flight path (point performance). To illustrate the applications of the theory in practical problems, numerous worked examples, employing the SI-system of units and notation, are included in these chapters. The last part of the main text (chapters 14 to 16) is devoted to giving an account of the most common techniques used for estimating the performance items that are related to the course of the flight (integral performance). To analyze the performance of aircraft in chapters 8 to 16, use is made of both analytical and graphical techniques.

In order to provide a clear understanding of the fundamental equations of motion, the essentials of Newtonian mechanics are described in [Appendix A](#). Fundamentals concepts to switch between different axis systems are discussed in [Appendix B](#). [Appendix C](#) reviews one-dimensional steady flow equations, the knowledge of which is a prerequisite for an appreciation of the aerodynamics and the many technical aspects of atmospheric flight. In [Appendix D](#), a table of values is given for the International Standard Atmosphere up to an altitude of 32 km. Finally, [Appendix E](#) lists a

number of conversion factors between English and metric units, and between technical units and the equivalent SI units. References to the literature are indicated in the text and listed at the end of the book. In addition, a few more general references have been included.

My special thanks are due to the late Mr. Dirk M. van Paassen, who was a colleague in much of the preparation of the material presented, and without whose cooperation this book could not have been written.

Delft, The Netherlands

May 2007

G.J.J. Ruijgrok

PREFACE TO THE SECOND EDITION

In this second edition, apart from a few minor adjustments, all the material from the first edition has been retained and the errors found in the first edition have been rectified.

Delft, The Netherlands

August 2009

G.J.J. Ruijgrok

PREFACE TO THE THIRD EDITION

Over the past decades there has been a huge increase in the number of Unmanned Aerial Vehicles (UAV). Small UAVs typically make use of batteries as energy source to power electric motors, which drive propellers or rotors. This development in electric propulsion is not limited to small UAVs. The potential for hybrid-electric or even full-electric commercial aircraft has received a great deal of attention in recent years. The industry is currently in the process of adopting the “more-electric” aircraft in which secondary aircraft systems (pneumatic and hydraulic) are replaced by electric systems. Various recent studies highlight the potential of (partly) using electric power for propulsion. This opens a realm of new propulsion system architectures and even new aircraft configurations.

[Chapter 6](#), which describes fundamental aspects and operating principles of airplane propulsion systems, is extended to account for these developments in (hybrid-)electric propulsion. The book has been extended with [Appendix B](#) that gives a thorough treatment on how to switch between different axis systems. Each individual chapter has been extended with a limited number of exercises to test the knowledge of the reader. A synthetic recap of the equations of motion describing the most generic case of unsteady flight of a powered airplane has been added to [Chapter 3](#). Lastly, several minor corrections have been made throughout the text and the formulas, and the book has been given a new layout.

In future editions, the book may be further extended by including detailed solutions to all or part of the provided exercises, and by including the treatment of numerical flight path simulation. The latter would complement the analytical and graphical techniques already presented in the current version, enabling the reader to address more complex performance optimization scenarios, such as those involving environmental conditions and operational constraints.

Delft, The Netherlands

November 2025

M. Voskuil, C. Varriale

1

BASIC CONCEPTS

1.1. INTRODUCTION

This course book deals with performance prediction of aircraft. By performance we understand certain extremes of quantities that are related to the translational motion of the vehicle, such as: rate of climb, flight regime, takeoff and landing distance, range and endurance, turning rate, etc.

In this book the subject matter is limited to that class of aircraft known as airplanes. An airplane may be defined as a mechanically driven fixed-wing aircraft, heavier than air, which is supported by the reaction forces caused by the airflow against the surface of its body. Moreover, the attention is devoted to the examination of the performance of existing airplanes so that - in principle - pertinent airplane data are available. This means that the problem of designing an airplane that meets specified performance requirements, will not be discussed.

As a simplification, performance will be represented by the translational motion of the airplane as a response to the external forces acting on the center of mass of the airplane. The prerequisite for this treatment is the assumption that the airplane is regarded a rigid body.

Another important idealization may be the assumption of an airplane flying over an Earth that is considered to be non-rotating and flat. The different approximations will be discussed in some detail in subsequent sections of this chapter.

1.2. THE AIRPLANE IS REGARDED A RIGID BODY

In this book we shall limit our analyses to rigid airplanes. In the case of rigidity, the motion of an airplane can be divided into a translational and a rotational motion.

As illustrated by [Fig. 1.1](#), a rigid airplane has six degrees of freedom; the three components of the linear velocity and the three components of the angular velocity, acting along and about the X Y and Z axes, respectively, where the origin of the axis system coincides with the center of mass of the airplane (see [Appendix A](#)).

The displacement of the airplane can be determined by treating the airplane as a point mass located at the center of mass, customarily referred to as the center of gravity (abbreviation: c.g.).

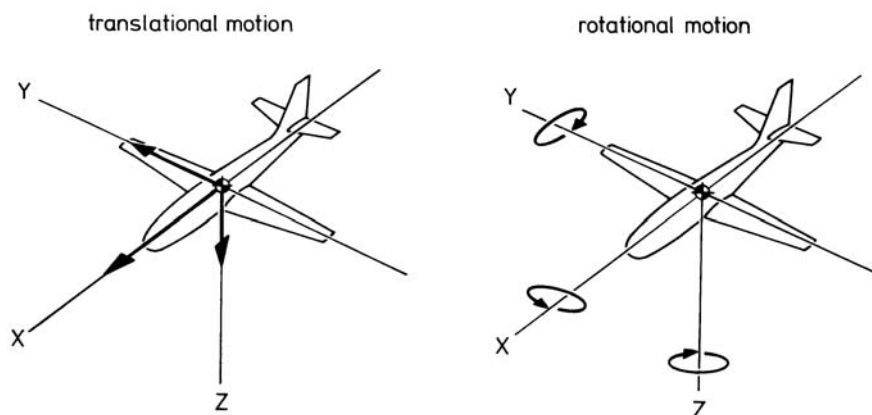


Figure 1.1 Division of airplane motion

The rotation of the airplane depends on the moments about the center of gravity. The effects the moments have on the rotation of the airplane are studied in the field of aeronautics, called *stability and control*. The subjects stability and control concern the abilities to maintain and to change prescribed flight conditions, respectively.

Since throughout this book the emphasis is on the computation of airplane performance, we can limit our considerations to the effects that the application of the external forces and moments have on the displacement of the center of gravity of the airplane.

According to its definition, the center of gravity of an airplane is the point through which the resultant of the partial weights acts, independent of the attitude of the airplane.

The location of the center of gravity in longitudinal direction can be found by measuring the reaction forces N_1 and N_2 in the ground-based situation [Fig. 1.2](#).

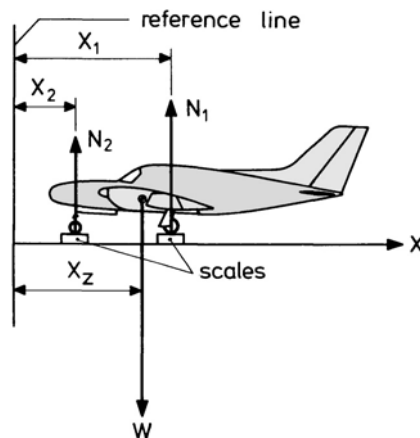


Figure 1.2 Determination of center of gravity

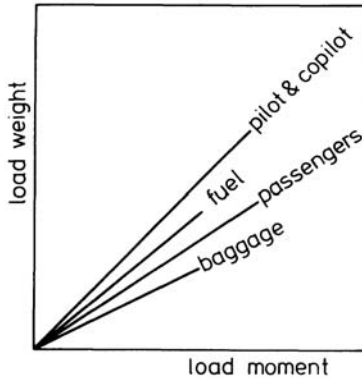


Figure 1.3 Loading graph

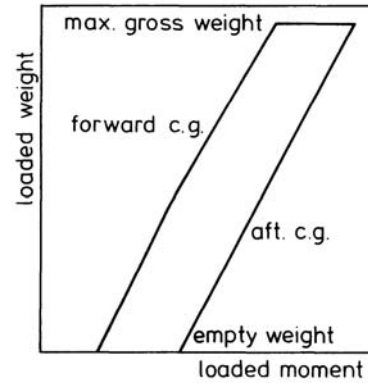


Figure 1.4 Center of gravity moment envelope

The sum of the loads at each wheel is equal to the weight of the airplane:

$$W = N_1 + N_2$$

The sum of the moments of the loads at each wheel equals the weight multiplied by the distance between the center of gravity and the reference line:

$$N_1 X_1 + N_2 X_2 = W X_z$$

From the latter equality we obtain

$$X_z = \frac{N_1 X_1 + N_2 X_2}{W} \quad (1.1)$$

In order to determine the location of the center of gravity in vertical direction, weighing must be executed at inclined airplane positions.

To ensure safe and convenient operations, every pilot has to be aware of the airplane weight, as well as the way this weight is distributed in the airplane, in order to make sure that allowable weight and approved center of gravity limits are not exceeded.

A typical light airplane loading graph and center of gravity moment envelope are sketched in Fig. 1.3 and Fig. 1.4.

For a properly loaded airplane the actual weight and moment values must fall within the lines indicating forward and aft center of gravity.

1.3. APPLICATION OF NEWTON'S LAW WITH RESPECT TO AN AXIS SYSTEM ATTACHED TO THE EARTH

The translational motion of a rigid body with constant mass is described by Newton's second law of motion:

$$F = Ma \quad (1.2)$$

where F is the vector sum of all external forces acting on the body, M is its mass, and a is the absolute acceleration. Eq. 1.2 must be written down with respect to an inertial frame of reference, that is to say, an axis system in a state of complete rest, or any coordinate system which translates with uniform velocity relative to the frame at rest.

According to the analysis in Appendix A we can apply Eq. 1.2 in a coordinate system attached to the Earth if two apparent forces are added to the force F ,

$$F - M\omega_e \times [\omega_e \times (R + h)] - M(2\omega_e \times V) = Ma_r \quad (1.3)$$

where ω_e is the Earth's angular velocity (about 7.29×10^{-5} rad/s), R is the Earth's radius vector, h is the height above the surface of the Earth, V is the velocity of the body with respect to the Earth, and a_r is the acceleration relative to the Earth.

The second term of the left-hand side of Eq. 1.3 is a centrifugal force,

$$F_t = -M\omega_e \times [\omega_e \times (R + h)] = -Ma_r \quad (1.4)$$

where a_t is a centripetal acceleration. The last term is a Coriolis force,

$$F_c = -M(2\omega_e \times V) = -Ma_c \quad (1.5)$$

where a_c is the Coriolis acceleration.

In deriving Eq. 1.3, the assumption is made that the Earth translates with a constant velocity along a straight line. This idealization of the Earth's translational motion may be correct since our performance analyses normally deal with small time intervals, that is, small with respect to the period of revolution of the Earth around the Sun.

By expressing the Eq. 1.4 and Eq. 1.5 in trigonometric form, we obtain for the magnitude of the centrifugal force:

$$F_t = M\omega_e^2 (R + h) \cos \theta \quad (1.6)$$

and for the Coriolis force:

$$F_c = M2\omega_e V \sin \phi \quad (1.7)$$

In the latter expressions the angle θ is latitude, positive in the Northern Hemisphere and negative in the Southern. The angle ϕ defines the direction of the velocity relative to the Polar axis. The forces and geometry used in Eq. 1.7 and Eq. 1.6 are depicted in Fig. 1.5. It is interesting to note that the radius to the North Pole is somewhat larger than the radius to the South Pole. This deviation from the sphere is indicated as the pear shape of the Earth.

The centrifugal force is directed perpendicular to the Earth's Polar axis and points out from the Earth along a line intersecting the axis of rotation. At a position in the equator plane ($\theta = 0$ deg) and near the Earth's surface we obtain for the magnitude of the centripetal acceleration, using the approximation that the Earth may be regarded a sphere with a radius $R_e = 6371$ km

$$a_t = \omega_e^2 R_e = (7.29 \times 10^{-5})^2 \times 6371 \times 10^3 = 0.034 \text{ m/s}^2$$

Eq. 1.7 shows that at a given velocity, the Coriolis acceleration, a_c , has its maximum value when the velocity is directed perpendicular to the polar axis ($\phi = 90$ deg).

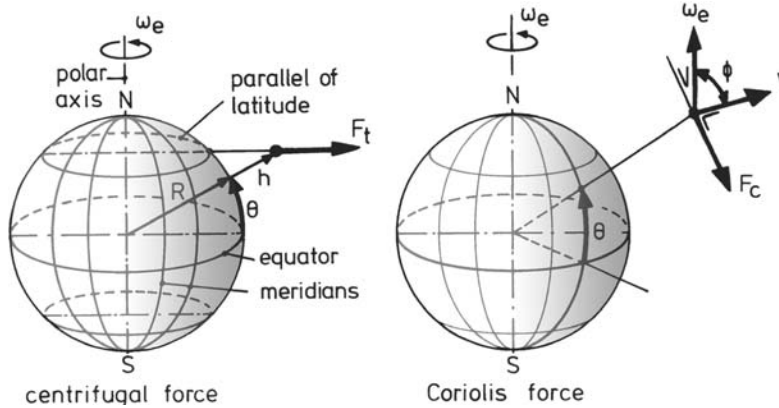


Figure 1.5 Forces due to the rotation of the Earth

To illustrate the Coriolis force in more detail, the effect of a vertical velocity, a northward velocity, and an eastward velocity is considered successively in Fig. 1.6, where the body is in a point on the Earth's surface. It follows from Eq. 1.5 that a body moving vertically upward appears to an axis system referenced to the rotating Earth to be forced to the west by

$$F_c = M2\omega_e V \sin(90 - \theta)$$

When the body has a northward velocity, the Coriolis force becomes

$$F_c = M2\omega_e V \sin(\theta)$$

In this case the body is subject to an eastward force. Fig. 1.6, finally, shows that a body with an eastward velocity appears to be forced outward from the Earth. It is seen from Eq. 1.5 that now the Coriolis force is not dependent on latitude:

$$F_c = M2\omega_e V \quad (1.8)$$

This force can be resolved into a component directed upward along the radius vector of the Earth, and a southward component.

In order to provide an idea of the degree of importance of the Coriolis acceleration, assume a body with a velocity of 2000 km/hr to the east. Then,

$$a_c = 2\omega_e V = 2 \times 7.29 \times 10^{-5} \frac{2000}{3.6} = 0.081 \text{ m/s}^2$$

Anticipating the discussion on gravitation in the following section, it can be noticed here that in comparison with the acceleration of gravity ($g = 9.81 \text{ m/s}^2$ at the Earth's surface) the centripetal accelerations as well as the Coriolis accelerations are very small.

From the numerical examples given before it will also be clear that the effects of rotation of the Earth on the motion of a body may only become of interest in the study of high-altitude and high-velocity vehicles. This means that these effects are negligible for most airplane operations, which

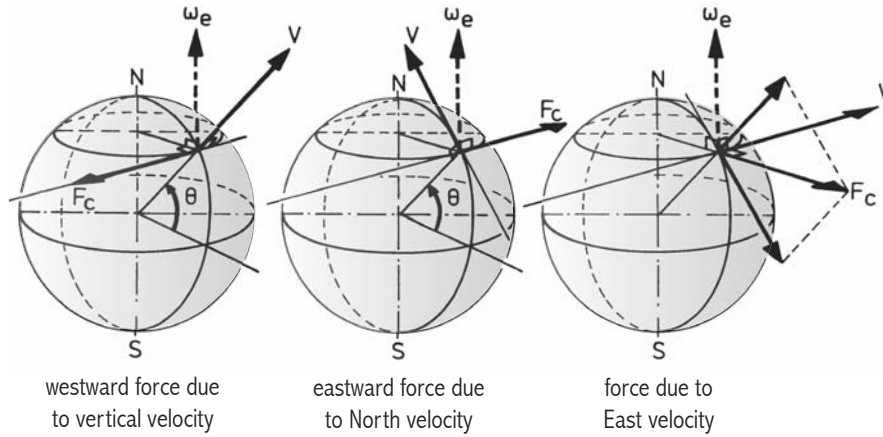


Figure 1.6 Coriolis forces

are executed at lower altitudes and at relatively low airspeeds. The latter conditions are evident from Fig. 1.7, where flight altitudes and airspeeds are shown for typical airplane types. Especially the layer below 20 km is an important region to aeronautics since most airplane operations are executed in this atmospheric shell.

1.4. GRAVITATION

Newton's law of gravitation states that any two particles attract one another with a force of magnitude :

$$F = \frac{\mu M_1 M_2}{R^2} \quad (1.9)$$

where M_1 M_2 are the masses of the particles, R is the distance between them and μ is a proportionality factor, known as the universal gravitational constant. The force F acts along the line joining the particles. Accordingly, if M is the mass of a particle outside the Earth, and M_e the mass of the Earth, the gravitational force F_g on the particle is given by Fig. 1.8.

$$F_g = \frac{\mu M_e M}{(R_e + h)^2} \quad (1.10)$$

This equation says that the gravitational force due to the Earth is the same as if all mass M_e were concentrated at the center of the Earth. To derive Eq. 1.10 the assumption must be made that the Earth can be considered a sphere (mean radius $R_e = 6371$ km), of which the density is a function of the distance to the center only.

As shown in Fig. 1.8, the gravity force or weight W of a body is actually the vector sum of the gravitational force F_g and the centrifugal force F_t due to the rotation of the Earth about its Polar axis. Therefore, the gravity force does not point exactly to the center of the Earth.

The centrifugal force in Fig. 1.8 results from the choice of an earthbound rotating frame of reference and is given by Eq. 1.6, repeated below,

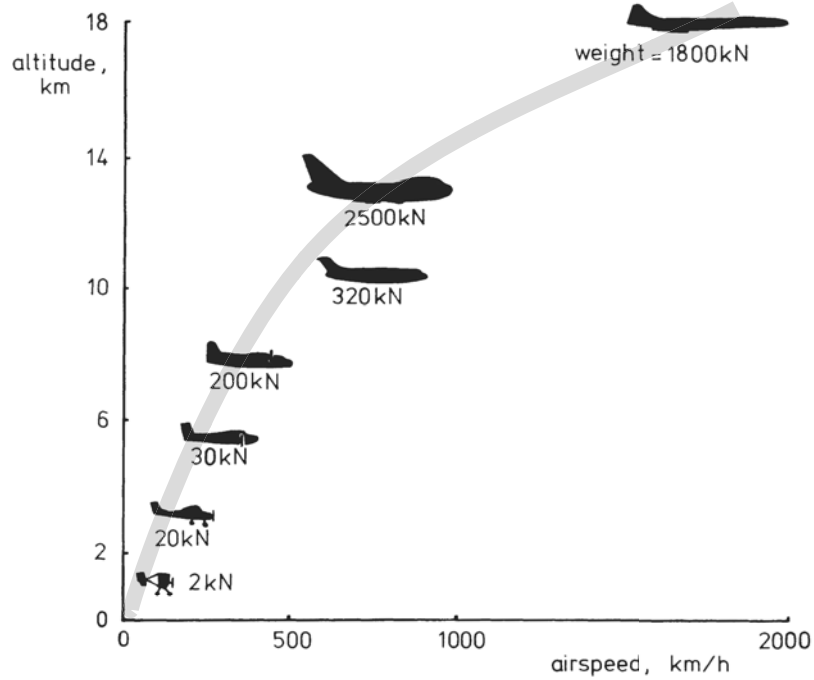


Figure 1.7 Typical flight velocities and altitudes.

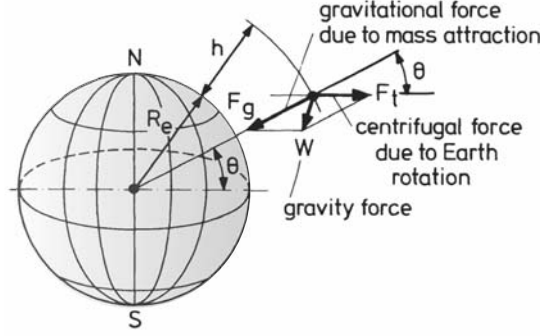


Figure 1.8 Components of gravity force

$$F_t = M\omega_e^2 (R + h) \cos \theta \quad (1.11)$$

The gravity force per unit mass is the acceleration of gravity, $g = \frac{W}{M}$. The sea-level value of g may be given by, from Eq. 1.10 and Eq. 1.11, and Fig. 1.8,

$$g = \frac{\mu M_e}{R_e^2} - \omega_e^2 R_e \cos^2 \theta \quad (1.12)$$

At the Equator the centrifugal force is a maximum. There we get for the acceleration of gravity at the Earth's surface, using $\mu = 6.67 \times 10^{-11} \text{ m}^3/(\text{kg s}^2)$, $M_e = 5.98 \times 10^{24} \text{ kg}$, $R_e = 6.371 \times 10^6 \text{ m}$, and $\omega_e = 7.29 \times 10^{-5} \text{ /s}$.

$$g = \frac{\mu M_e}{R_e^2} - \omega_e^2 R_e = 9.827 - 0.034 = 9.793 \text{ m/s}^2$$

Because of the variation of the centrifugal force with latitude, the above value of g increases gradually to 9.827 m/s^2 at the Poles ($\theta = 90 \text{ deg}$). At 45 deg geographic latitude the sea-level acceleration of gravity, denoted g_0 , becomes

$$g_0 = \frac{\mu M_e}{R_e^2} - \omega_e^2 R_e \cos^2 \theta = 9.827 - 0.034 \times 0.5 = 9.81 \text{ m/s}^2$$

At this point, it is worthy to note that in particular for the International Standard Atmosphere (see Chapter 2) the acceleration of gravity g_0 is used and taken as 9.80665 m/s^2 .

In our applications, mostly, it is possible to ignore the effect of the centrifugal force when considering the variation of g with height. Then, it follows from Eq. 1.10 that the acceleration of gravity varies inversely as the square of the distance from the center of the Earth.

$$g = \frac{\mu M_e}{(R_e + h)^2} \quad (1.13)$$

$$\frac{g}{g_0} = \frac{R_e^2}{(R_e + h)^2} = \left(1 + \frac{h}{R_e}\right)^{-2} \quad (1.14)$$

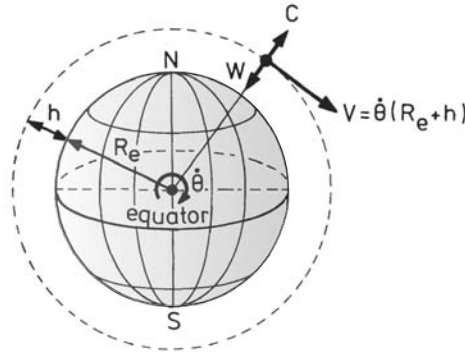


Figure 1.9 Flight around the Earth

Using the first two terms of the binomial expansion we get:

$$\frac{g}{g_0} = 1 - 2 \frac{h}{R_e} \quad (1.15)$$

The latter expression may show that even at the maximum altitudes suitable for atmospheric flight ($h = 60$ to 80 km), there is only a slight difference between g and g_0 . But certainly at the heights encountered during normal operations (less than 20 km) the actual value of g is very near to its standard sea-level value ($g/g_0 = 0.993$ at $h = 20$ km).

1.5. THE EFFECT OF CURVATURE OF THE EARTH

Let us consider a body moving at constant speed in a circular orbit of radius $R_e + h$ around the Earth in a plane perpendicular to the Equator plane Fig. 1.9. If we neglect air forces, on the body act the weight W of the body in a direction approximately toward the center of the Earth and in the opposite direction an apparent force associated with the circular motion. The latter force is the familiar *centrifugal force* C , which is given by Eq. 1.4.

$$C = -M\dot{\theta} \times [\dot{\theta} \times (R_e + h)] = \frac{W}{g} \frac{V^2}{(R_e + h)} \quad (1.16)$$

where θ is the latitude and V is the velocity of the body. The relative importance of the centrifugal force can be expressed by the ratio:

$$\frac{C}{W} = \frac{V^2}{(R_e + h)g} \quad (1.17)$$

The speed at which the centrifugal force equals the weight of the body is called the circular velocity V_c :

$$V_c = \sqrt{(R_e + h)g} \quad (1.18)$$

At sea level ($h = 0$) we find from Eq. 1.18, using $R_e = 6371 \times 10^3$ m and $g = g_0 = 9.80665$ m/s², $V_{c_0} = 7904$ m/s = 28455 km/hr.

Since Fig. 1.7 indicates that our analyses mostly will concern airspeeds which are small with respect to the circular velocity, it follows from Eq. 1.17 that we usually can ignore the effect of the centrifugal force $C \ll W$ on the motion of the airplane so that the Earth can be regarded as ideally flat.

1.6. COORDINATE-SYSTEMS

To describe the motion of an airplane four coordinate systems, employing right-handed, rectangular Cartesian axis systems, are used. The origin is denoted by “0” and the axes designated X , Y and Z . Displacements are positive in the positive senses of the axes and angles are positive in clockwise direction when looking along the appropriate axis in the positive direction. Velocities, angular velocities and accelerations also are positive in these directions.

1. The Earth axis system or ground axis system (Fig. 1.10). Earth axes are denoted by the subscript “g”. The origin of this coordinate system is any point on the Earth’s surface. The X_g and Y_g axes lie in the horizontal plane of the Earth. The X_g axis points into an arbitrary direction. For example, the X_g axis is taken in the direction of flight. The Z_g axis points vertically and positive downward.
2. The moving Earth axis system or local horizon system (Fig. 1.11). The axes are denoted by the subscript “e”. The origin of the system is taken to be the center of gravity of the airplane. The X_e , Y_e and Z_e axes are parallel to the corresponding axes of the Earth axis system. Thus, the plane formed by the X_e and Y_e axes is always parallel to the surface of the Earth.
3. The *body axis system* or airplane axis system (Fig. 1.12). Body axes are denoted by the subscript “b”. The origin of the system is at the center of gravity of the airplane. The X_b axis lies in the plane of symmetry of the airplane and points out of the nose of the airplane. The Z_b axis is perpendicular to the X_b axis, lies also in the plane of symmetry, and is directed downward for a normal flight attitude. The Y_b axis is directed out of the right wing of the airplane. The body axes are fixed to the airplane and oriented by reference to some geometrical datum. The X_b axis coincident with what is called the longitudinal axis of the airplane. The Y_b axis usually is termed transverse or lateral axis and the Z_b axis is named normal axis. The rotational components about X_b , Y_b and Z_b are called roll, pitch and yaw, respectively.
4. The *air-path axis system* or flight-path axis system (Fig. 1.13). Air-path axes are denoted by the subscript “a”. The origin is at the center of gravity of the airplane. The X_a axis lies along the velocity vector. The Z_a axis is taken in the plane of symmetry of the airplane, and is positive downward for a normal airplane attitude. Consequently, the Y_a axis is positive to starboard.

1.7. ANGLES AND VELOCITIES DESCRIBING THE ANGULAR DISPLACEMENT OF THE AIRPLANE

In order to describe the attitude of the airplane with respect to the moving Earth axis system, a number of characteristic angles are used. An approach based on the so called *Eulerian angles* con-

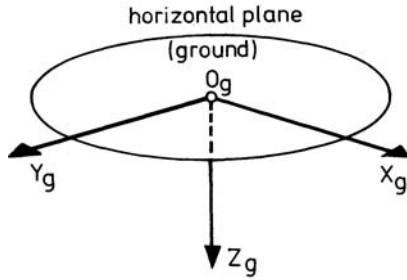


Figure 1.10 Earth axis system

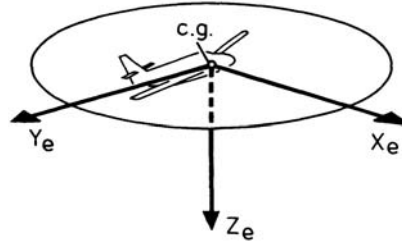


Figure 1.11 Moving Earth axis system

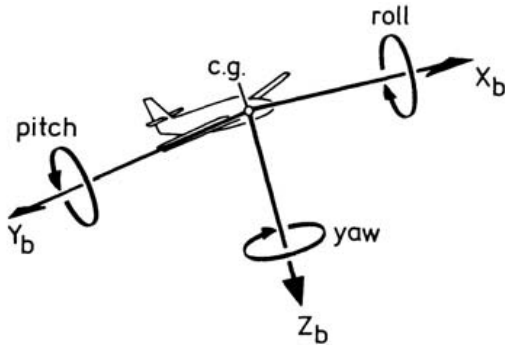


Figure 1.12 Body axis system

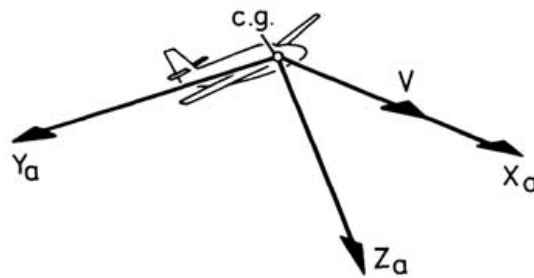


Figure 1.13 Air-path axis system

sists of three successive rotations to be applied about the axes of a given coordinate system. Different conventions are possible to choose an appropriate sequence of such rotations. The traditional convention in aerospace engineering is the so called *Tait-Bryan convention*, according to which the three rotations are sequentially applied to the third (z), second (y) and first (x) axis of consecutive coordinate systems.

Two examples are described in the following to express the orientation of the body and air-path coordinate systems with respect to the moving Earth coordinate system. A visualization of Eulerian angles corresponding to different sequences is presented in Fig. 1.14.

1. Eulerian angles defining the orientation of the airplane body axes. These angles are:

- Angle of yaw ψ ; the angle between the projection of the X_b axis on the $X_e Y_e$ plane (horizontal plane) and the X_e axis.
- Angle of pitch θ ; the angle between the X_b axis and its projection on the $X_e Y_e$ plane.
- Angle of roll ϕ ; the angle between the X_b axis and the intersecting line of the $Y_b Z_b$ plane with the $X_e Y_e$ plane.

The Eulerian angles ψ , θ and ϕ are obtained by three defined successive rotations of the moving Earth axes. This procedure is illustrated in Fig. 1.15. First, we rotate by ψ about Z_e , then

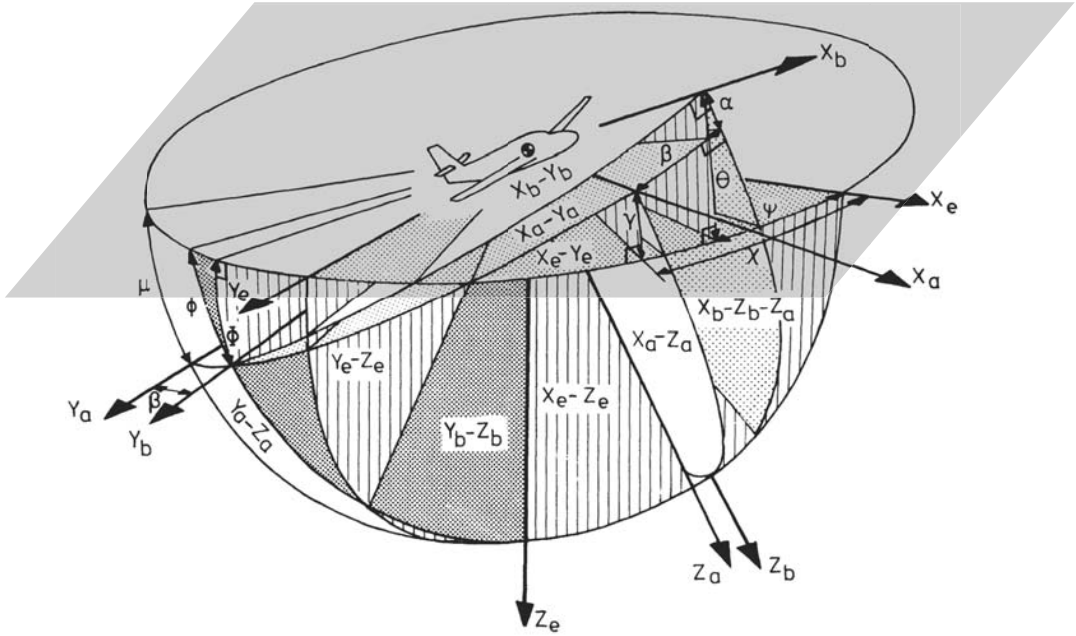


Figure 1.14 Eulerian angles

by θ about Y' and finally by ϕ about X_b . The angle of bank Φ , as shown in Fig. 1.14, may also be used. This is the angle between the Y_b axis and its projection on the $X_e Y_e$ plane. The angle of bank can be written in terms of the angle of roll and the angle of pitch:


$$\sin \Phi = \sin \phi \sin (90 - \theta) \Rightarrow \sin \Phi = \sin \phi \cos \theta \quad (1.19)$$

The Eq. 1.19 follows by applying a theorem from spherical trigonometry in the spherical triangle ABC in Fig. 1.16.


2. Eulerian angles defining the orientation of the air-path axes. These angles are (Fig. 1.14):

- (a) Azimuth angle χ ; the angle between the projection of the X_a axis on the $X_e Y_e$ plane and the X_e axis.
- (b) Flight-path angle γ ; the angle between the X_a axis and its projection on the $X_e Y_e$ plane.
- (c) Aerodynamic angle of roll μ ; the angle between the Y_a axis and the intersecting line of the $X_a Y_a$ plane with the $X_e Y_e$ plane.


The angles χ , γ and μ are also generated by three successive rotations of the moving Earth axes. The sequence of rotations is indicated in Fig. 1.17. First, we rotate by χ about Z_e , then by γ about Y' , and finally by μ about X_a . Of importance is also the relationship between the air-path axis system and body axis system. Both coordinate systems are

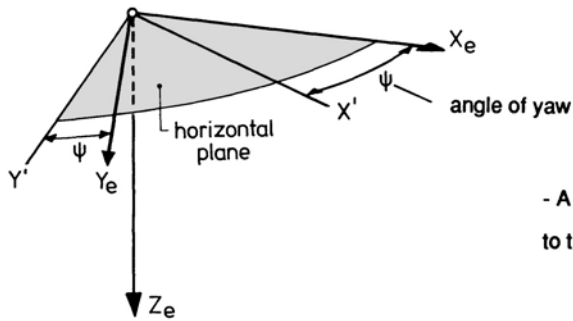

- A rotation by ψ about the Z_e -axis to the intermediate position $X'Y'Z_e$.

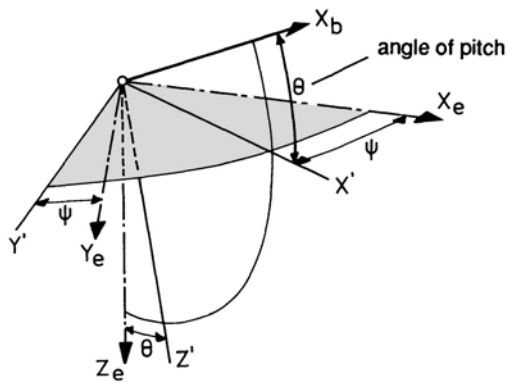

- A rotation by θ about the Y' -axis to the intermediate position $X_bY'Z'$.

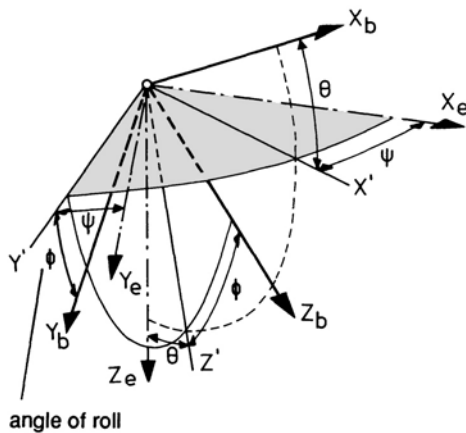

- A rotation by ϕ about the X_b -axis to the final position $X_bY_bZ_b$.

Figure 1.15 Orientation of body axes to moving Earth axes

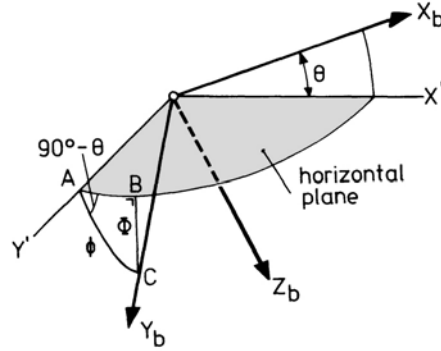


Figure 1.16 Relation between angle of roll, angle of pitch and angle of bank

shown in Fig. 1.18. Since the Z_a axis lies in the $X_b Z_b$ plane (plane of symmetry of the airplane), the orientation of the air-path axis system with respect to the body axis system is completely defined by the following two angles:

1. Angle of attack α ; the angle between the projection of the X_a axis on the plane of symmetry of the airplane and the X_b axis.
2. Angle of sideslip β ; the angle between the X_a axis and its projection on the plane of symmetry of the airplane.

The angle of attack is positive when the aircraft velocity component along the Z_b axis is positive. The angle of sideslip is positive when the aircraft velocity component along the Y_b axis is positive. At this point it is suited to define the components of the airspeed V along the X_b , Y_b and Z_b axes of the body axis system as u , v and w , respectively Fig. 1.19. The following relations are apparent:

$$\begin{aligned} V^2 &= u^2 + v^2 + w^2 \\ u &= V \cos \beta \cos \alpha \\ v &= V \sin \beta \\ w &= V \cos \beta \sin \alpha \end{aligned} \quad (1.20)$$

Similarly, the resultant angular velocity Ω can be resolved into the components p , q and r along the X_b , Y_b and Z_b axes, respectively, where

$$\Omega^2 = p^2 + q^2 + r^2 \quad (1.21)$$

The angular velocity about the X_b axis is the rolling velocity, positive if the right wing drops. The angular velocity about the Y_b axis is the pitching velocity, positive if the nose of the airplane rises. The angular velocity about the Z_b axis, finally, is the yawing velocity, positive if the nose of the airplane moves to the right (clockwise when observed from above).

In connection with the study of airplane motion, the relations between the angular velocities, p , q , r , about the body axes and the time rate of change of the Eulerian angles ψ , θ , ϕ , may be of importance.

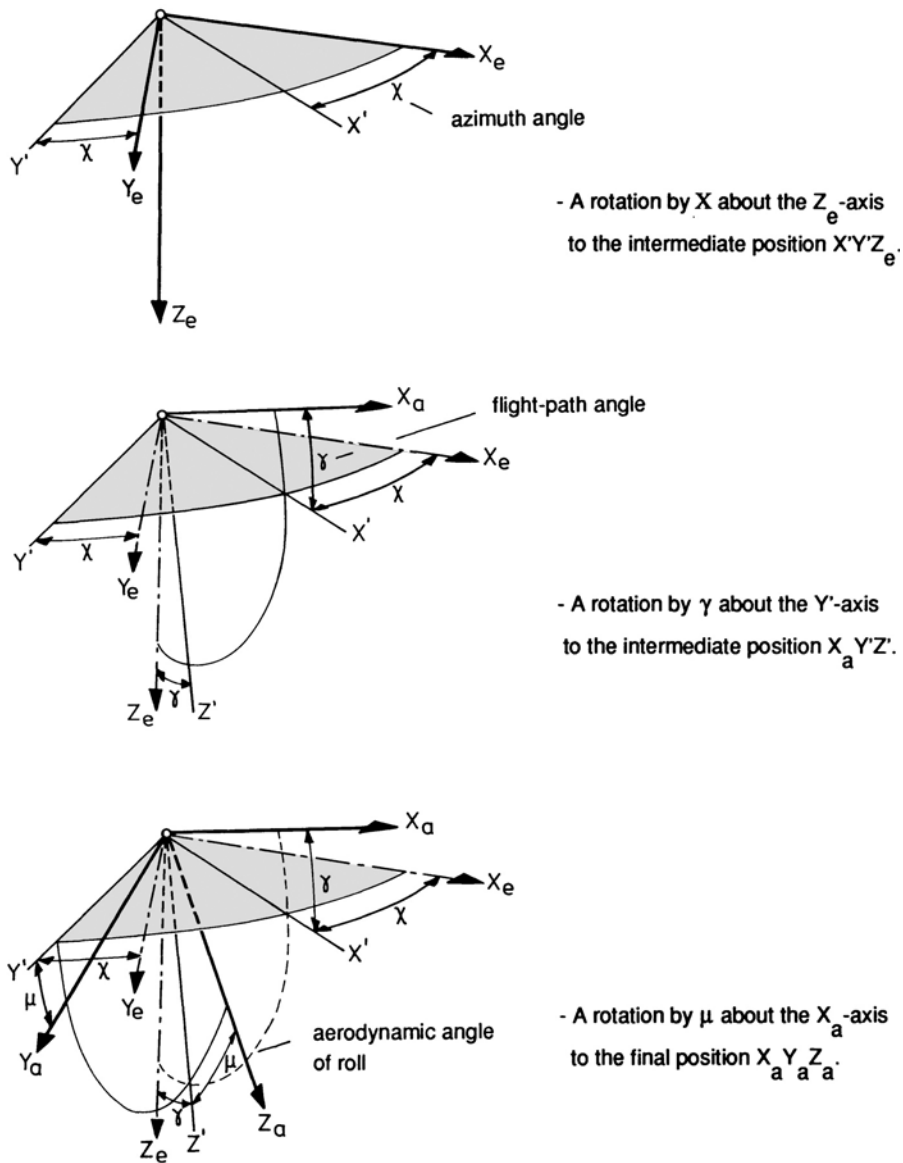


Figure 1.17 Orientation of air-path axes to moving Earth axes

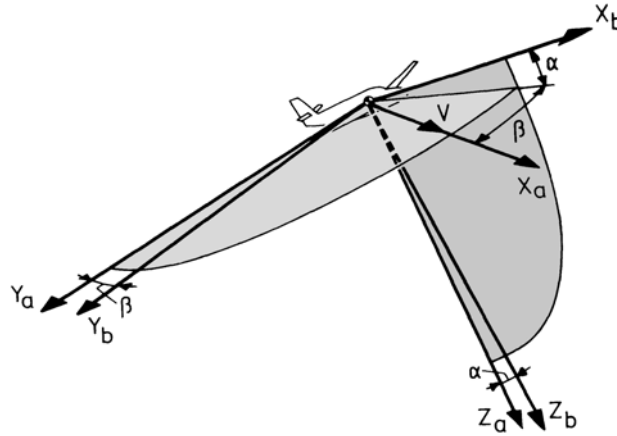


Figure 1.18 Orientation of air-path axes to body axes

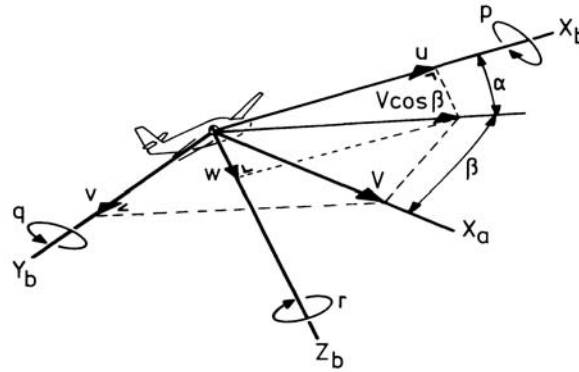


Figure 1.19 Components of airspeed

According to the rotations defined in Fig. 1.15, the vectors $\frac{d\psi}{dt}$, $\frac{d\theta}{dt}$, $\frac{d\phi}{dt}$ are directed along the Z_e , Y' and X_b axes, respectively. Fig. 1.20 shows these vectors. Resolving along the body axes leads to the following relationships between the two sets of angular velocities:

$$\begin{aligned}
 p &= -\frac{d\psi}{dt} \sin\theta + \frac{d\phi}{dt} \\
 q &= \frac{d\psi}{dt} \cos\theta \sin\phi + \frac{d\theta}{dt} \cos\phi \\
 r &= \frac{d\psi}{dt} \cos\theta \cos\phi - \frac{d\theta}{dt} \sin\phi
 \end{aligned}
 \tag{1.22}$$

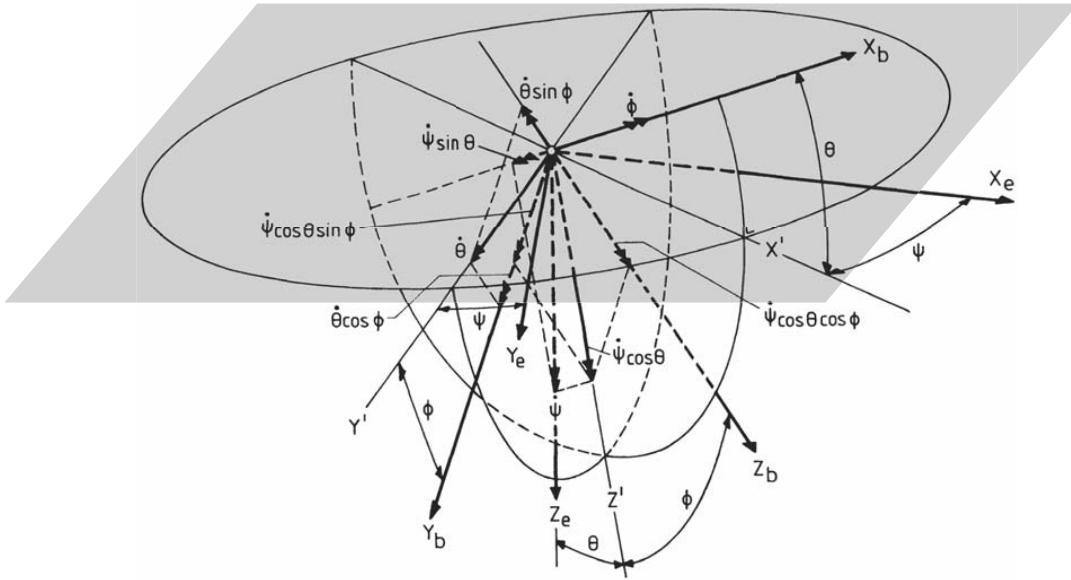


Figure 1.20 Angular velocities about the body axes

and the inverse relationships:

$$\begin{aligned}\frac{d\psi}{dt} &= \frac{1}{\cos\theta} (q \sin\phi + r \cos\phi) \\ \frac{d\theta}{dt} &= q \cos\phi - r \sin\phi \\ \frac{d\phi}{dt} &= p + \frac{d\psi}{dt} \sin\theta = p + (q \sin\phi + r \cos\phi) \tan\theta\end{aligned}\quad (1.23)$$

In the presence of wind, the velocity of the airplane with respect to the ground or ground speed V_g is the vector sum of the speed of the airplane relative to the air V and the wind velocity V_w . (Fig. 1.21):

$$\vec{V}_g = \vec{V} + \vec{V}_w \quad (1.24)$$

Since the airplane is carried along by the wind, the projection of the velocity vector $\vec{V}$ on the ground is at a so-called drift angle with the actual flight track. Fig. 1.22 shows the components of the airspeed along the axes of the moving Earth axis system. From this figure we obtain:

$$\begin{aligned}V_{X_e} &= V \cos\gamma \cos\chi \\ V_{Y_e} &= V \cos\gamma \sin\chi \\ V_{Z_e} &= V \sin\gamma\end{aligned}\quad (1.25)$$

Note that a positive sign is given to the component of $\vec{V}$ in the direction of the negative Z_e axis. Hence we find the components of the ground speed along the axes of the Earth axis system as:

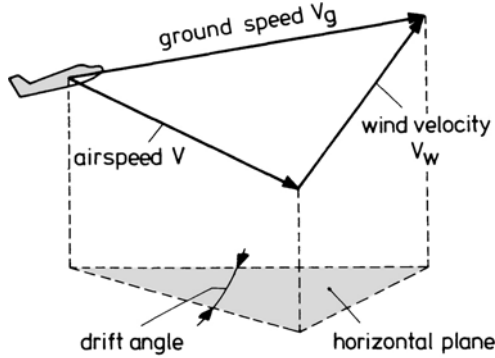


Figure 1.21 Ground speed

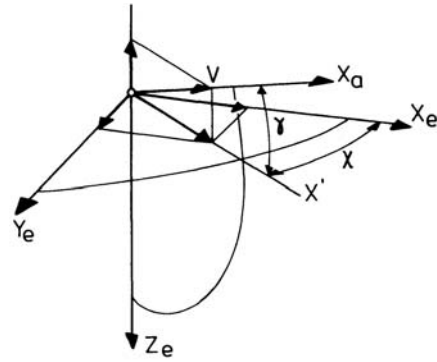


Figure 1.22 Components of airspeed

$$\begin{aligned}
 V_{X_g} &= V \cos \gamma \cos \chi + u_w \\
 V_{Y_g} &= V \cos \gamma \sin \chi + v_w \\
 V_{Z_g} &= V \sin \gamma + w_w
 \end{aligned}
 \tag{1.26}$$

In Eq. 1.26, wind data are given as u_w, v_w, w_w being the respective components of the wind velocity in terms of the moving Earth axis system. The positive sense of w_w is taken in upward direction. The above treatment of the angles defining the various axis systems was based on a geometrical approach. When describing the arbitrary motion of an aircraft, this geometrical approach may become rather complex. Furthermore, it can be valuable to switch between axis systems when certain problems are analyzed. An alternative method based on matrix algebra is therefore presented in Appendix B

1.8. THE AIRPLANE

Fig. 1.23 shows in some detail the overall make-up of a conventional airplane. Basic components are fuselage, wing, tail assembly, controls, landing gear, and engine (and propeller, in the case of propeller propulsion).

The fuselage may be seen as the structural component to which the other main parts are connected. Further, it provides space for crew, passengers, cargo, airplane systems and instrumentation. Generally, the fuselage is streamlined to reduce its drag. The wing is the principal component to generate the lift of the airplane by its motion with respect to the surrounding air. The wing may often be equipped with flaps. These adjustable parts are used to increase lift and drag at low airspeeds. The tail assembly consists of the vertical and the horizontal stabilizer, which surfaces provide directional stability in yaw and stability in pitch, respectively. Included in the tail assembly and the wing are the control surfaces. The usual position of the three primary controls is also illustrated in Fig. 1.23. Yaw control is provided by the rudder, which is connected with the vertical stabilizer. The elevators are attached to the horizontal stabilizer and control the pitch of the airplane. Roll control is provided by deflections of the ailerons which are located near the outer trailing edges of the wing. Depending on the type of airplane, small auxiliary control surfaces may be installed to the trailing

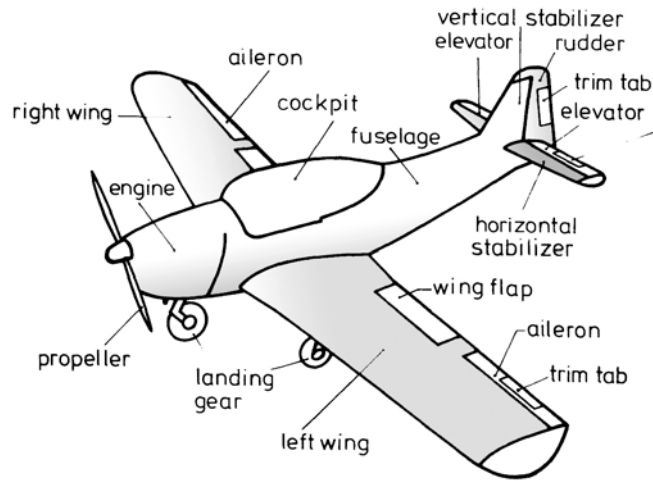


Figure 1.23 Basic airplane components

edges of the elevators, rudder and ailerons. These movable surfaces are known as trim tabs and are adjusted by the pilot. As shown in [Fig. 1.24](#), the airflow over the trim tab creates a moment that holds the primary control surface in the desired position without any help from the pilot.

Tabs may also be used to assist the pilot in the movement of the primary controls; these are known as balance tabs.

The landing gear or undercarriage supports the airplane while it is in contact with the ground. Modern airplanes generally are equipped with a tricycle gear, consisting of nose wheel and main wheels. The landing gear may be retractable, except special forms which include skis for snow and floats for operations on water ([Fig. 1.25](#)).

An important characteristic is the type of propulsion system. The main engine types are the piston engine (reciprocating engine), and the reaction engine such as turbojet, turboprop and turbofan. Over the last decades there has been a strong increase in the use of Unmanned Aerial Vehicles (UAVs), and several developments in the field of electric air mobility (with fixed or rotating wings). These advanced vehicles are often powered by electromotors. Converting the power of piston engines, electromotors and turboprops into thrust is accomplished by the propeller(s).

1.9. FLIGHT TYPES, AIRPLANE CONFIGURATION AND FLIGHT CONDITION

The typical flight phases encountered by an airplane during a trip over a given travel distance are illustrated in [Fig. 1.26](#). The takeoff consists of the takeoff run where the airplane is accelerated from standstill to the liftoff speed, followed by the climb-out to a distance over, say, 10.7 m (35 ft) obstacle. After the takeoff the power of the engine(s) is reduced and the airplane climbs to cruise altitude at, approximately, constant velocity. The latter conditions hold as much with regard to the descent. Cruise flight is typically executed in unaccelerated and straight flight. An example of a curved flight path is the turn and particularly the so-called constant-altitude banked turn, where the airplane is

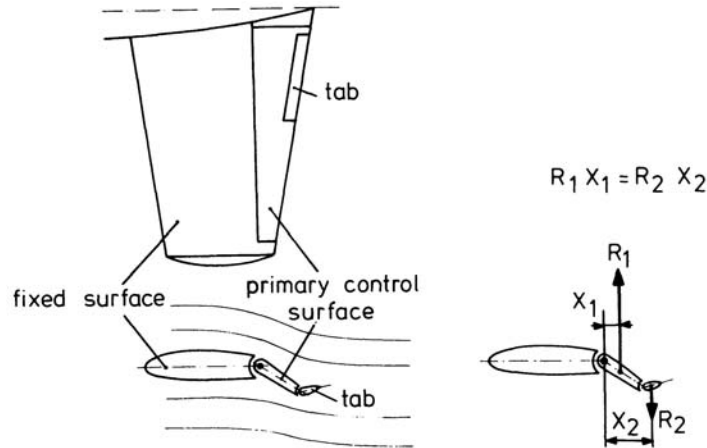


Figure 1.24 Balance and trim tab

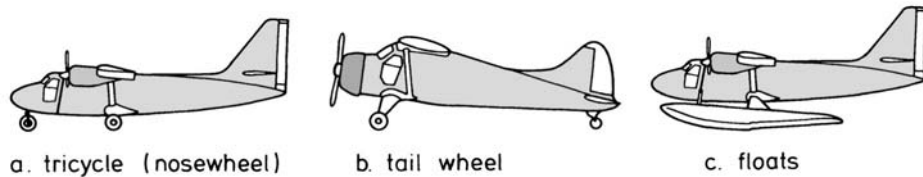


Figure 1.25 Landing gear types

inclined about the longitudinal axis. This type of turn is the usual manner in which the flight path heading is changed, for example, in the holding maneuver. As depicted in Fig. 1.26, during holding the airplane remains within a specified airspace whilst awaiting further clearance for the approach flight to the airport runway. The final flight phase, naturally, is the landing, proceeding from the steady approach flight so as to clear the screen height at the beginning of the runway and to come to rest on the runway at the end of the ground run. Just like the takeoff, the landing is a case of unsteady airplane motion.

In the various flight phases, usually, the airplane is controlled in such a manner that the instantaneous motion satisfies certain conditions. This leads to well-defined flight types, such as:

- Gliding flight: flight in which the thrust is zero.
- Steady flight: flight in which the forces and moments acting on the airplane do not vary in time, neither in magnitude nor in direction.
- Non-sideslipping flight: flight in which the velocity vector is parallel to the plane of symmetry of the airplane (angle of sideslip is zero).
- Straight flight: flight in which the center of gravity of the airplane travels along a straight line.

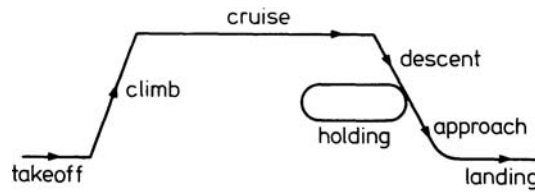


Figure 1.26 Typical flight phases

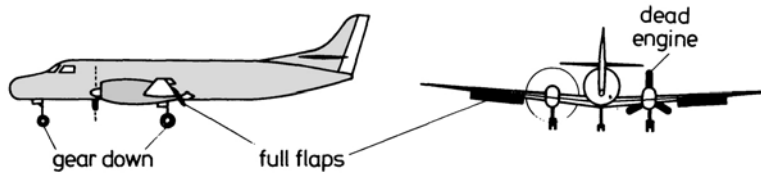


Figure 1.27 Example of airplane configuration

- Symmetric flight: flight in which both the angle of sideslip is zero and the plane of symmetry of the airplane is perpendicular to the horizontal plane of the Earth.

At this point, it is useful to emphasize that symmetric flight, and in particular steady symmetric flight forms the basis of considerations on the performance of airplanes during most of their time of flying. In this connection, it may be clear that at best an airplane can perform a quasi-steady flight due to the consumption of engine fuel (for propulsion systems that do not completely rely on battery electric power) and/or the variation of atmospheric conditions.

The term *airplane configuration* or *airplane condition* indicates the description of the external shape of the airplane and any parameter affecting the motion of the airplane which is characterized by the fact that it remains constant during a certain period of time. Examples of airplane configuration elements are (Fig. 1.27) landing gear position, flap angle, speed-brake and spoiler deflections, and number of operative engines.

The estimation of airplane performance may be treated by considering the airplane in a given configuration which is related to a particular flight phase, such as takeoff configuration, cruise configuration and landing configuration.

The term *flight condition* is the group of variables, which defines the motion of the airplane at each instant of the flight. A description of the flight condition will comprise airplane weight, altitude, atmospheric conditions, airspeed, power setting and control surface deflections.

1.10. FORCES ON THE AIRPLANE

Practically, there are two different kinds of external forces that act on an airplane in flight, gravity forces and aerodynamic forces.

Gravity forces are related to the mass of a body and act from a distance. A common example is, of course, the weight of the airplane.

Aerodynamic forces are developed through application of Newton's third law of motion, which states that for every action there is an equal and opposite reaction (Appendix A). Therefore, essen-

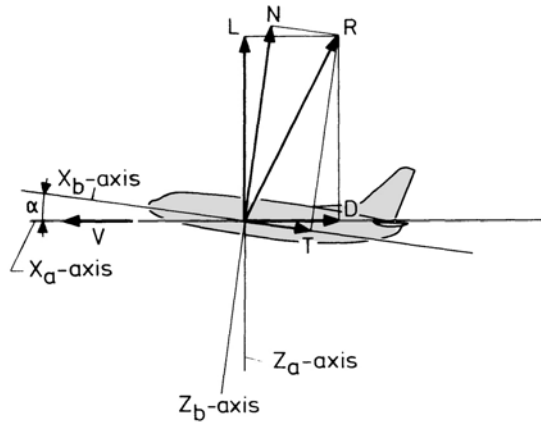


Figure 1.28 Aerodynamic force and components

tial to the generation of an aerodynamic force is the occurrence of relative motion between body and medium.

In this course book we shall use the symbol R to denote the aerodynamic force produced by the interaction between the air and the outer surface of the airplane. When resolved into components along the air-path axes, the vector force R delivers the lift, drag, and side force. The lift, designated by the symbol L , is the component along the negative Z_a axis. The major portion of the lift arises from the airflow around the wing. The drag D and side force S are the components of the aerodynamic force R along the negative X_a axis and Y_a axis, respectively. A side force or cross force appears only when the airplane is in sideslipping flight. Fig. 1.28 shows the aerodynamic force R in the case of symmetric flight. In this type of flight the motion is in the geometric plane of symmetry so that besides the X_b axis, also the X_a axis lies in the plane of symmetry of the airplane. When studying rotational motion in symmetric flight it may be useful to employ the tangential force T and the normal force N being the components of R along the negative X_b axis and Z_b axis, respectively. As can be seen from Fig. 1.28 the components L and D , and the components N and T are related by the expressions:

$$\begin{aligned}
 L &= N \cos \alpha - T \sin \alpha \\
 D &= N \sin \alpha + T \cos \alpha \\
 N &= L \cos \alpha + D \sin \alpha \\
 T &= -L \sin \alpha + D \cos \alpha
 \end{aligned}
 \tag{1.27}$$

The driving force of the propulsion system is also an aerodynamic force. This force is called the thrust and also given the symbol T . As indicated in Fig. 1.29, the thrust acts in forward direction along a working line which makes a fixed angle η with the longitudinal axis of the airplane (X_b axis). The type of flight considered in Fig. 1.29 represents the case of steady symmetric flight. Maintaining this type of flight requires that the vector sum of the forces acting on the airplane is zero:

$$\vec{R} + \vec{T} + \vec{X} = 0
 \tag{1.28}$$

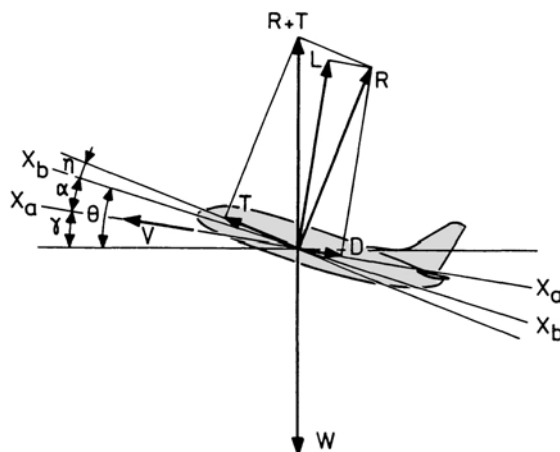


Figure 1.29 Forces In steady symmetric flight

The general definitions of the various angles used in Fig. 1.29, i.e., the angle of attack α , the flight-path angle γ and the angle of pitch θ have been given in Section 1.7.

1.11. SI-SYSTEM OF UNITS

Throughout this book the International System of Units (Système International d'Unités) is used. This system has been adopted by many countries as the recommended system of units for weights and measures. According to the publications of the International Organization for Standardization (ISO) there are seven basic units, which are tabulated in Tab. 1.1. Although the SI-unit of temperature is the Kelvin (K), also the Celsius ($^{\circ}\text{C}$) or centigrade scale is used. Since the unit degree Celsius is exactly equal to the unit Kelvin, the temperature expressed in degrees Celsius can be readily converted to the absolute temperature in Kelvin by the following relationship:

$$T\text{ }^{\circ}\text{C} = T\text{ K} - 273.15 \quad (1.29)$$

From the basic units in Tab. 1.1, the units of a wide range of quantities can be derived, whereby the product and/or quotient of any number of basic units forms the resultant unit of the derived quantity. The units of some of the more common quantities are listed in Tab. 1.2.

To obtain multiples or decimal fractions of the units, standard prefixes are used, which are collected in Tab. 1.3.

In order to prevent errors in calculations, it is strongly recommended that in computations only SI-units are used and not their multiples or decimal fractions.

It should be mentioned that, though becoming obsolete, in engineering practice frequently the so-called technical system of units is used. In this system the quantity force, having also the name kilogram, is a basic unit instead of mass. In order to distinguish both kilograms, in the technical system the quantity force is (often) denoted as kilogram-force (abbreviation: kgf). The following relation is defined: $1\text{ kgf} = 9.80665\text{ N}$. Some technical units and corresponding SI-units are given in Tab. 1.4.

Table 1.1 Basic SI-units

quantity	name of unit	symbol
length	meter	m
mass	kilogram	kg
time	second	s
temperature	kelvin	K
electric current	ampere	A
luminous intensity	candela	cd
amount of substance	mole	mol

Table 1.2 Derived SI-units

quantity	name of unit	symbol	definition
force	newton	N	$\text{kg}\cdot\text{m}/\text{s}^2$
pressure	pascal	Pa	N/m^2
work (energy)	joule	J	$\text{J} = \text{N}\cdot\text{m}$
power	watt	W	J/s
velocity	meter per second	V	m/s
acceleration	meter per second squared	a	m/s^2
moment of force	newton meter	M	$\text{N}\cdot\text{m}$
density	kilogram per unit cubic meter	ρ	kg/m^3

In [Appendix E](#) a number of conversion factors are collected, arranged according to subject categories.

1.12. PROBLEMS

1. The weight and center of gravity of a general aviation airplane with a tricycle landing gear are determined by measuring the loads at each wheel when it is stationary on the ground. The nose gear is located 1.3 m from the nose of the airplane and the weighing scale underneath the nose gear indicates 146 kg. The scales at each main gear, which are located 2.7 m from the nose of the airplane, measure 227 kg. Calculate the total mass and the center of gravity position of this airplane.
2. For commercial airplanes operating at relatively low airspeeds in the lower atmosphere, an axis system attached to the Earth can be idealized as an inertial frame of reference. List which assumptions have to be made to consider an axis system attached to the Earth as an inertial frame of reference.
3. The sea level gravitational acceleration g_0 defined in the International Standard Atmosphere is $9.80665 \text{ m}/\text{s}^2$. Based on this value, calculate the gravitational acceleration at 30 km altitude.
4. An airplane is in a long distance cruise flight at 11 km altitude. Since it is following the curva-

Table 1.3 Standard multiples and decimal fractions

multiple/fraction	prefix	symbol
10^{12}	tera	T
10^9	giga	G
10^6	mega	M
10^3	kilo	k
10^2	hecto	H
10	deca	da
10^{-1}	deci	d
10^{-2}	centi	c
10^{-3}	milli	m
10^{-6}	micro	μ
10^{-9}	nano	n
10^{-12}	pico	p
10^{-15}	femto	f
10^{-18}	atto	a

Table 1.4 Systems of units

quantity	technical system metric	English	SI-system
length	m	ft	m
time	s	s	s
force	kgf	lbf	$\text{kg}\cdot\text{m}/\text{s}^2$ (newton)
mass	$\text{kgf}\cdot\text{s}^2/\text{m}$	$\text{lbf}\cdot\text{s}^2/\text{ft}$ (slug)	kg
pressure	kgf/m^2	lbf/ft^2	N/m^2
work (energy)	$\text{kgf}\cdot\text{m}$	$\text{lbf}\cdot\text{ft}$	$\text{kg}\cdot\text{m}^2/\text{s}^2 = \text{N}\cdot\text{m}$ (joule)
power	$\text{kgf}\cdot\text{m}/\text{s}$	$\text{lbf}\cdot\text{ft}/\text{s}$	$\text{kg}\cdot\text{m}^2/\text{s}^3 = \text{J}/\text{s}$ (watt)
density	$\text{kgf}\cdot\text{s}^2/\text{m}^4$	$\text{lbf}\cdot\text{s}^2/\text{ft}^4$	kg/m^3

1

ture of the Earth, it is in fact in a circular motion. The airplane has a weight of 300 000 N and a constant airspeed of 250 m/s. Calculate the centrifugal force (which is an “apparent force”) as a result of this circular motion. Express your result as a percentage of the total airplane weight.

5. List four coordinate systems which are used to describe the motion of airplanes.
6. Explain the difference between the bank angle Φ and the angle of roll ϕ .
7. Which two angles can be used to define the orientation of the air-path axis system with respect to the body axis system?
8. Airplanes are equipped with control surfaces. In some cases trim tabs are installed on one or more of the control surfaces. What is the function of a trim tab?
9. Which control surfaces are used to control the roll motion of a conventional airplane?
10. Select the correct answer. The lift vector is by definition:
 - (a) Perpendicular to the surface of the Earth (parallel to the Z -axes of the Earth axes system and the Moving Earth axes system)
 - (b) Parallel to the Z -axis of the body axis system but in the opposite direction (positive up)
 - (c) Parallel to the Z -axis of the air path axis system but in the opposite direction (positive up)

2

THE ATMOSPHERE

2.1. NATURE OF THE ATMOSPHERE

The atmosphere is the gaseous shell surrounding to Earth. Atmospheric air consists of a mixture of gases with a total mass of about 5.3×10^{18} kg, which is about one millionth of the mass of the Earth. The normal constituents of air in the lower part of the atmosphere are listed in [Tab. 2.1](#), where also are given their concentrations and molecular masses.

The molecular mass of a substance may be defined as the mass of one kmol of the substance. The kmol is an amount of matter of a system which holds as many elementary particles (molecules, atoms, etc.) as there are atoms in precisely 12 kg of the isotope ^{12}C . This number amounts to 6.02257×10^{26} /kmol and is called Avogadro's number. Chiefly nitrogen and oxygen in the ratio of four-fifths nitrogen to one-fifth oxygen represent 99% of the total volume of all component gases. Though the volume percentages of carbon dioxide and methane are very small, their presence is especially significant to the temperature at the Earth's surface because these constituents are more absorptive of terrestrial than of solar radiations. They, therefore, are responsible for what is known as the greenhouse or blanketing effect, that is, an elevation of the mean temperature in the lower part of the atmosphere.

In addition to the constant constituents there is always a certain amount of water in the atmosphere, which exists in three states; gaseous (water vapor), liquid (rain and clouds), and solid (snow and hail). The presence of water is also of significance to the above-mentioned greenhouse effect. The proportion of water vapor varies with place on Earth (latitude and longitude), time of day and time of year. On the whole the highest humidity occurs at sea level and in the neighborhood of the Equator.

With respect to the chemical composition, the atmosphere may be classified into the *homosphere* and the *heterosphere* ([Fig. 2.1](#)). The homosphere extends from sea level to an altitude of about 90 km. Apart from water vapor and ozone, in the homosphere the composition of the air is essentially constant. Consequently, in this region also the mean molecular mass of the air (29 kg/kmol) is constant. In the heterosphere, mainly because of molecular dissociation, the molecular mass decreases from about 29 kg/kmol at a height of 90 km, to about 18 kg/kmol at 500 km.

Table 2.1 Normal composition of clean atmospheric air near sea level

constituent	gas	content, percent by volume	molecular mass [kg/kmol]
Nitrogen	N ₂	78.084	28.0134
Oxygen	O ₂	20.9476	31.9988
Argon	Ar	0.934	39.948
Carbon dioxide	CO ₂	0.0314	44.00995
Neon	Ne	0.001818	20.183
Helium	He	0.000524	4.0026
Methane	CH ₄	0.0002	16.04303
Krypton	Kr	0.000114	83.80
Sulfur dioxide	SO ₂	0 to 0.0001	64.0628
Hydrogen	H ₂	0.00005	2.01594
Nitrous oxide	N ₂ O	0.00005	44.0128
Xenon	Xe	0.0000087	131.30
Ozone	O ₃	0 to 0.000007	47.9982
Nitrogen dioxide	NO ₂	0 to 0.000002	46.0055
Iodine	I ₂	0 to 0.000001	253.8088
Water vapor	H ₂ O	variable	18.0

The atmospheric conditions, temperature, pressure, and density, depend strongly on height. For an analysis of these quantities it is appropriate to divide the atmosphere into five layers based on the vertical distribution of the air temperature. The typical variation of the average temperature with altitude is also sketched in [Fig. 2.1](#).

In ascending order, we distinguish the *troposphere*, the *stratosphere*, the *mesosphere*, the *thermosphere*, and the *exosphere*. The dividing planes between the next four layers are called *tropopause*, *stratopause*, and *mesopause*.

The lowest region of the atmosphere, the troposphere, is characterized by a decreasing temperature with increasing altitude. In this layer the phenomena occur which we call the weather, i.e., the local state of temperature, pressure, humidity, cloudiness, wind, and precipitation. The troposphere extends to about 8 km at the Poles and approximately to 17 km at the Equator.

At middle-latitude the tropopause lies at a height of about 11 km, where the average temperature decreases from roughly 15 °C at sea level to −56 °C at the tropopause. In the stratosphere, at first, there is a nearly constant temperature of about −56 °C up to an altitude of about 20 km. This layer may be called the *lower stratosphere*. Above 20 km we have the *upper stratosphere*, where the temperature increases to a maximum value of 0 °C at an altitude of about 50 km. This altitude is the stratopause, sometimes referred to as the ozonepause. It may be remarked that the atmospheric layer up to 20 km, being of major importance to aviation (see [Fig. 1.7](#)), contains approximately 95% of the total atmospheric mass.

In the mesosphere, reaching from the stratopause to an altitude of 90 km, the temperature decreases to a minimum value of about −90 °C at the *mesopause*.

The stratosphere and the mesosphere are of consequence in the sense that continuously there is a certain amount of ozone. In fact, the temperature increase above 20 km is related to the absorption

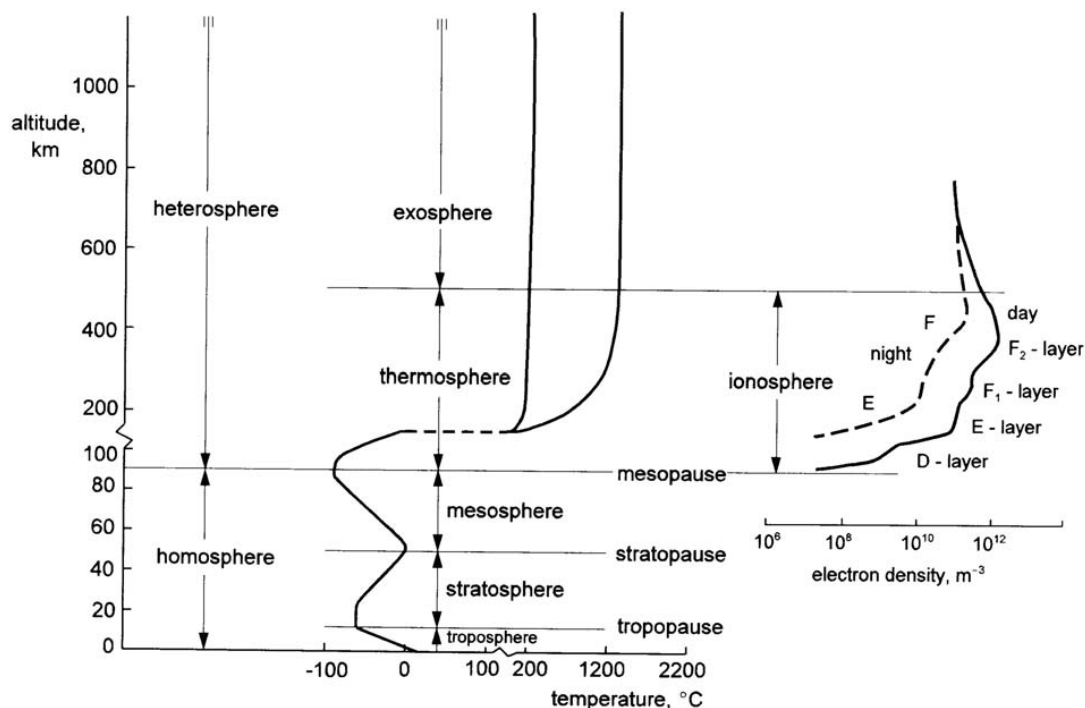


Figure 2.1 Arrangement of atmospheric layers

of ultraviolet radiation, involving ozone formation. Nevertheless, the proportion of ozone is quite small, the presence of it at these high altitudes is substantial to life on Earth, as it acts as a filter against solar ultraviolet radiation.

The absorption of solar ultraviolet radiation is caused by the dissociation of molecular oxygen (O_2) into atomic oxygen (O). A portion of the atomic oxygen forms ozone (O_3) by combination with molecular oxygen. Finally, ozone and atomic oxygen recombine to form molecular oxygen. The decomposition of ozone to ordinary oxygen causes heating of the atmosphere. The formation and destruction of ozone is a continuous process, resulting in more or less a constant amount of ozone in the stratosphere and mesosphere.

In the thermosphere, the temperature increases quickly with increasing altitude until at about 500 km the so-called *exospheric temperature* is reached. The magnitude of this temperature is dependent on solar activity (Ref. 1).

In the exosphere collisions between molecules are so rare that temperature is only an indication of the kinetic energy of the air particles.

From 90 km upwards, ionization processes occur, i.e., the generation of ions and the accompanying free electrons takes place. The ionosphere is therefore also depicted in Fig. 2.1. This is where layer ionization processes (generation of free electrons and ions) occur due to the absorption of solar radiation incident in this region.

Depending on electron density, the ionosphere is subdivided into four layers, designated D, E, F_1

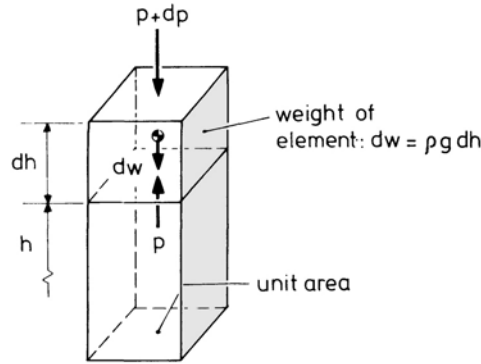


Figure 2.2 Forces acting on an element of air

and F_2 . Fig. 2.1 shows that the extent of ionization increases with altitude up to approximately 400 km. Also, the ionization varies with solar activity and time of the year. Finally, it should be mentioned that several classifications exist, each using different heights for the positions of the dividing planes between the various layers (Ref. 2).

2.2. VARIATION OF PRESSURE WITH ALTITUDE

The weight of the column of air at rest above a unit area will produce a certain pressure at that surface. The higher one rises in the atmosphere, the smaller will be the weight of the air above the unit area, and the smaller will be the occurring pressure.

To obtain an expression for pressure as a function of altitude, consider a unit body of air shown in Fig. 2.2. Summing the forces in vertical direction gives:

$$p - (p + dp) - \rho g dh = 0 \quad \text{or} \quad dp = -\rho g dh \quad (2.1)$$

where p is pressure, ρ is density, h is geometrical altitude, and g is the acceleration of gravity. The differential Eq. 2.2 is known as the *hydrostatic or aerostatic equation*, and shows us that with increasing altitude, the pressure decreases at the rate ρg . The combination of the hydrostatic equation and the equation of state for air is a suitable starting point to describe the variation of pressure and density with altitude. Atmospheric air can be assumed to satisfy the equation of state for an ideal gas, i.e.,

$$\frac{p}{\rho} = \frac{R_a}{M} T \quad (2.2)$$

In the perfect gas law Eq. 2.2 R_a is the universal gas constant, M is the molecular mass of the gas, and T is the absolute temperature (expressed in Kelvin). Insertion of Eq. 2.2 into Eq. 2.1 gives

$$dp = -\frac{Mp}{R_a T} g dh \quad \text{or} \quad \frac{dp}{p} = -\frac{Mg}{R_a T} dh \quad (2.3)$$

Integration of Eq. 2.3 from $h = 0$ (sea level) to an altitude h yields

$$\int_{p_0}^p \frac{dp}{p} = \int_0^h \frac{Mg}{R_a T} dh \quad (2.4)$$

$$\ln \frac{p}{p_0} = \int_0^h \frac{Mg}{R_a T} dh \quad (2.5)$$

Apparently, a calculation of the distribution of atmospheric pressure requires knowledge of:

- the variation of molecular mass with height,
- the variation of acceleration of gravity with height,
- the variation of temperature with height,
- sea level atmospheric pressure p_0 .

At this point it is appropriate to introduce the geopotential altitude H , which is defined by the following equation,

$$H = \int_0^H dH = \frac{1}{g_0} \int_0^h g dh \quad (2.6)$$

In this equation, g_0 may be taken equal to the standard sea-level value of the acceleration of gravity (see [Section 1.4](#)). Since both H and h are set equal to zero at sea level, the geopotential altitude H is the height in a uniform gravity field at which the potential energy is the same as at a geometrical height h in a variable gravity field.

The relationship between air pressure and geopotential altitude is obtained by combining [Eq. 2.5](#) and [Eq. 2.6](#):

$$\ln \frac{p}{p_0} = - \int_0^H \frac{Mg_0}{R_a T} dH \quad (2.7)$$

Clearly, the integration is simplified since the acceleration of gravity g_0 is independent of altitude. The adoption of a particular variation of air temperature with geopotential height will enable us to determine the corresponding pressure ratio variation, provided that the molecular mass M is constant or a known function of altitude.

2.3. STANDARD ATMOSPHERES

The real atmosphere never remains constant. There is always a considerable variation of temperature, pressure and density at any time, height and place on Earth. Since the performance of airplanes strongly depends on the atmospheric conditions, it will be obvious that the performance of an airplane measured at different moments and places must be related to a common reference. Also, the actual performance of an airplane does not provide a reliable basis of comparison with other airplanes. No more, the results of calculations can be correlated if not the same atmospheric conditions are employed.

In order to satisfy the need for standardization, over the years a number of standard atmospheres have been developed, which all are reflections of what may be expected as mean circumstances.

Table 2.2 Values of primary constants. c_p is the specific heat at constant pressure; c_v is the specific heat at constant volume.

constituent	gas
sea-level pressure	$p_0 = 101\,325 \text{ N/m}^2$
sea-level temperature	$T_0 = 288.15 \text{ K (15 °C)}$
sea-level density	$\rho_0 = 1.225 \text{ kg/m}^3$
acceleration of gravity at sea level	$g_0 = 9.806\,65 \text{ m/s}^2$
universal gas constant	$R_a = 8314.32 \text{ J/(K} \cdot \text{mol)}$
ratio of specific heats of air	$\gamma = c_p/c_v = 1.4$

Then, from the actual performance of an airplane it is possible to deduce what would have been the performance of this airplane under the conditions of a given reference atmosphere. The latter performance data can be compared with those measured at other times and places or can be compared with the performance of some other airplane which has been correspondingly converted to standard conditions.

The atmospheric model used in this book has been adopted for the derivation of the *International Standard Atmosphere* (I.S.A.) in Ref. 3. This reference atmosphere is based on the assumption that the air is a perfect gas, which is supposed to be devoid of moisture and dust. Also the assumption is made that the atmosphere is motionless with respect to the Earth.

For the computation of pressure, temperature, density, and other atmospheric properties as functions of altitude, standard conditions are defined at zero-altitude (sea level). Tab. 2.2 lists the values of primary constants for the International Standard Atmosphere.

The molecular mass of air M follows from Eq. 2.2 using the standard values of pressure, density, temperature and the universal gas constant as given in Tab. 2.2,

$$M = \frac{\rho_0 R_a T_0}{p_0} = 28.964\,42 \text{ kg/kmol.}$$

The specific gas constant of air is determined from the relationship

$$R = R_a / M = 287.05 \text{ m}^2/(\text{s}^2 \cdot \text{K}).$$

As $c_p = R \frac{\gamma}{\gamma-1}$ we find

$$c_p = 1004.68 \text{ m}^2/(\text{s}^2 \cdot \text{K}) \quad \text{and} \quad c_v = c_p / \gamma = 717.63 \text{ m}^2/(\text{s}^2 \cdot \text{K}).$$

The variation of temperature with geopotential altitude is presented in Fig. 2.3. Because it would be impossible to determine this curve on the basis of fundamental laws of physics, in light of the many complex phenomena at play, such temperature profile has been determined experimentally with high-altitude balloon measurements. Fig. 2.3 shows that a sequence of connected layers with constant temperature gradients can be identified. In the troposphere and the upper part of the stratosphere the temperature variation can be written as

$$T = T_1 + \lambda (H - H_1) \quad (2.8)$$

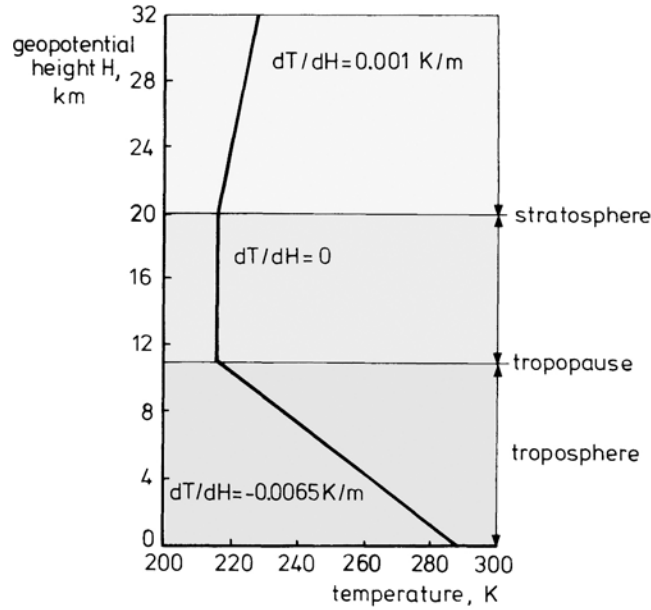


Figure 2.3 Temperature versus geopotential height (I.S.A.)

where $\gamma = dT/dH$ is the temperature gradient and T_1 is the temperature at height H_1 , being the base of the layer. By insertion of Eq. 2.8 into Eq. 2.7 we obtain

$$\ln \frac{p}{p_1} = - \int_{H_1}^H \frac{g_0}{R [T_1 + \gamma(H - H_1)]} dH = - \frac{g_0}{R\lambda} \ln [T_1 + \lambda(H - H_1)] \Big|_{H_1}^H$$

or

$$\ln \frac{p}{p_1} = - \frac{g_0}{R\lambda} \ln \frac{T_1 + \lambda(H - H_1)}{T_1} \quad (2.9)$$

Thus, the pressure ratio variation with altitude becomes

$$\frac{p}{p_1} = \left[1 + \frac{\lambda(H - H_1)}{T_1} \right]^{-\frac{g_0}{R\lambda}} \quad (2.10)$$

The corresponding density ratio variation follows from the equation of state,

$$\frac{\rho}{\rho_1} = \frac{p T_1}{p_1 T} = \left[1 + \frac{\lambda(H - H_1)}{T_1} \right]^{-\left[\frac{g_0}{R\lambda} + 1 \right]} \quad (2.11)$$

In the troposphere the height $H_1 = 0$, so that the Eq. 2.10 and Eq. 2.11 reduce to

$$\frac{p}{p_0} = \left[1 + \frac{\lambda H}{T_0} \right]^{-\frac{g_0}{R\lambda}} \quad (2.12)$$

$$\frac{\rho}{\rho_0} = \left[1 + \frac{\lambda H}{T_0} \right]^{-\left[\frac{g_0}{R\lambda} + 1 \right]} \quad (2.13)$$

In the lower part of the stratosphere the temperature is constant ($\lambda = 0$). Now the pressure ratio is obtained by direct integration of Eq. 2.7 between the height of the tropopause H_s and height H ($H \leq 20$ km),

$$\ln \frac{p}{p_s} = - \int_{H_s}^H \frac{g_0}{RT_s} (H - H_s) \quad (2.14)$$

$$\frac{p}{p_s} = e^{-\frac{g_0}{RT_s} (H - H_s)} \quad (2.15)$$

In these equations the subscript “s” denotes the condition at the tropopause. From the equation of state, we find

$$\frac{\rho}{\rho_s} = \frac{p}{p_s}$$

Thus

$$\frac{\rho}{\rho_s} = e^{-\frac{g_0}{RT_s} (H - H_s)} \quad (2.16)$$

In order to determine the value of the geometrical height as a function of geopotential altitude, it is essential to define a relationship between the acceleration of gravity and geometrical height (see Eq. 2.6).

From the discussion in Section 1.4 we know that the acceleration of gravity is the resultant of the gravitational force per unit mass and the centrifugal force per unit mass as caused by the Earth's rotation. Accordingly, it depends upon height and latitude. However, for our aims the acceleration of gravity may be obtained with adequate precision by ignoring the centrifugal force and applying only Newton's law of gravitation as already noticed in Section 1.4. Then we have the following expression

$$\frac{g}{g_0} = \frac{R_e^2}{(R_e + h)^2} \quad (1.14)$$

Combining Eq. 2.6 and Eq. 1.14 leads to

$$\int_0^H dH = \int_0^h \frac{R_e^2}{(R_e + h)^2} dh = R_e^2 \int_0^h \frac{dh}{(R_e + h)^2} \quad (2.17)$$

Performing the integration in Eq. 2.17 yields the following relationship between geometrical height and geopotential altitude,

$$H = R_e^2 \int_0^h -d(R_e + h)^{-1} = \frac{R_e h}{(R_e + h)}$$

or

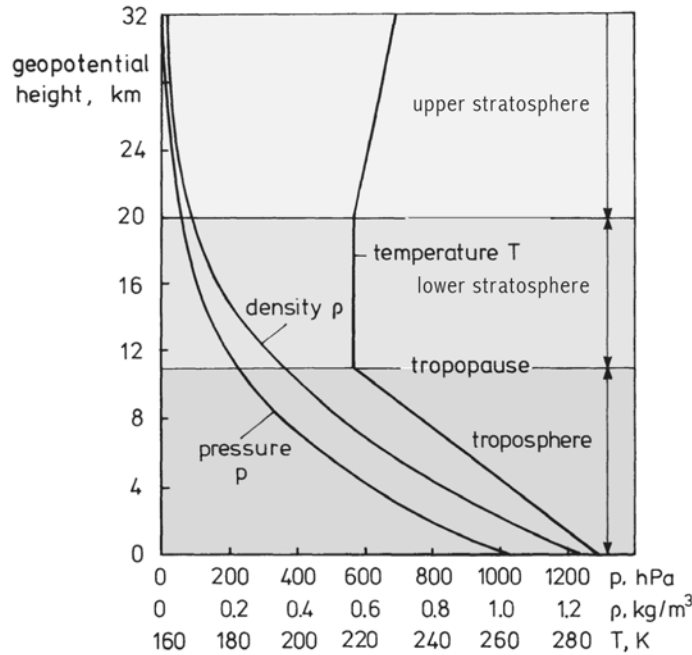


Figure 2.4 Variation of pressure, density and temperature in the International Standard Atmosphere

$$h = \frac{R_e H}{(R_e - H)} \quad (2.18)$$

The preceding equations in this section and the primary constants in [Tab. 2.2](#) are used to calculate temperature, pressure, density and geometrical height as functions of geopotential altitude. [Fig. 2.4](#) shows how pressure and density in the International Standard Atmosphere vary with height. Numerical values of T , p and ρ are given in the tables in [Appendix D](#). Other quantities listed in [Appendix D](#) are the coefficient of dynamic viscosity μ and the speed of sound c . The coefficient of dynamic viscosity is a state variable, which determines the shear stress between air layers moving adjacent to each other at different velocities. The following equation, basically derived from kinetic theory, is used for the computation of μ ,

$$\mu = \frac{\beta T^{3/2}}{T + S} \quad (2.19)$$

where β is a constant equal to $1.458 \times 10^{-6} \text{ kg}/(\text{ms}\sqrt{\text{K}})$, and S is Sutherland's constant, equal to 110.4 K.

At sea-level the coefficient of dynamic viscosity is: $\mu = 1.7894 \times 10^{-5} \text{ kg}/(\text{ms})$. The ratio of μ and the density of air is named kinematic viscosity: $\nu = \mu/\rho$. The speed of sound is the rate at which a small disturbance on the ambient condition travels through the air. The values of c in [Appendix D](#) are calculated from (see [Appendix C](#))

$$c = \sqrt{\gamma \frac{R_a}{M} T} = \sqrt{\gamma R T} \quad (2.20)$$

Its sea-level value becomes: $c = 340.294 \text{ m/s}$.

Since the temperature gradients are linear, it may be a sufficient approximation to consider dc/dH as a constant. For example, in the troposphere:

$$c = c_0 + \frac{dc}{dH} H \quad (2.21)$$

Insertion of Eq. 2.8 into Eq. 2.20 gives

$$c = [\gamma R (T_0 + \lambda H)]^{1/2} = \left[c_0 \left(1 + \frac{\lambda H}{T_0} \right) \right]^{1/2} \quad (2.22)$$

Using the first two terms of the binomial expansion we get

$$c = c_0 + \frac{c_0 \lambda}{2 T_0} H \quad (2.23)$$

We thus have in the troposphere:

$$\frac{dc}{dH} = \frac{c_0 \lambda}{2 T_0} = -0.00384/\text{s}$$

2.4. OFF-STANDARD ATMOSPHERES

Off-standard atmospheres are defined by a temperature distribution which is obtained by changing the temperature of the standard atmosphere with given increment ΔT . The resulting temperatures then are given by

$$T = T_{\text{ISA}} + \Delta T,$$

where the subscript “ISA” denotes a value in the International Standard Atmosphere. The constant increases in temperature are referred to the so-called geopotential pressure altitude, H_p . The latter altitude corresponds to the reading of an airplane altimeter. This instrument measures the actual air pressure and is calibrated by exposing it to various pressures and marking on the dial the geopotential altitudes that in the International Standard Atmosphere correspond to these pressures (see also Chapter 5). Thus, when the air temperatures are different from those of the standard atmosphere, the altimeter will also read the geopotential pressure altitude. Apparently, the geopotential pressure altitude is the geopotential altitude in the International Standard Atmosphere at which the pressure is equal to the actual pressure. For example, in the case of an altimeter which is calibrated according to Eq. 2.12, we have the following relationship between pressure and geopotential pressure altitude ($H_p \leq 11\,000 \text{ m}$)

$$H_p = \left[\left(\frac{p}{p_0} \right)^{-\frac{R\lambda}{g_0}} - 1 \right] \frac{T_0}{\lambda} \quad (2.24)$$

Similarly, for altitudes between 11 and 20 km it follows from Eq. 2.14 that

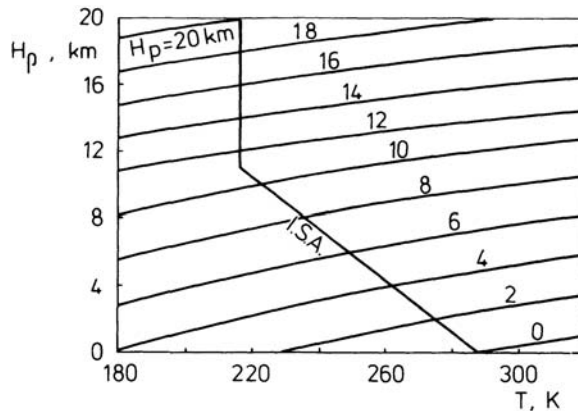


Figure 2.5 Relationship between pressure altitude and density altitude

$$H_p = H_s - \frac{RT_s}{g_0} \ln \frac{p}{p_0} \quad (2.25)$$

Apparently, the altimeter reading furnishes the actual air pressure only. If, in addition, the temperature increment T is known, the air density can be calculated from the equation of state,

$$\frac{p}{R} = \rho_{ISA} \times T_{ISA} = \rho (T_{ISA} + \Delta T) \quad (2.26)$$

or

$$\rho = \frac{\rho_{ISA}}{1 + \frac{\Delta T}{T_{ISA}}} \quad (2.27)$$

Usually, airplane performance data are represented as a function of geopotential pressure altitude and air temperature, $T_{ISA} + \Delta T$. Also the so-called *geopotential density altitude*, h_p , may be used. This is the geopotential altitude in the International Standard Atmosphere at which the density is equal to the actual air density.

By solving Eq. 2.13 for height we obtain the geopotential density altitude in the troposphere as

$$H_p = \left[\left(\frac{\rho}{\rho_0} \right)^{-\frac{R\lambda}{g_0 + R\lambda}} - 1 \right] \frac{T_0}{\lambda} \quad (2.28)$$

In the lower stratosphere, we find from Eq. 2.16,

$$H_p = H_s - \frac{RT_s}{g_0} \ln \frac{\rho}{\rho_0} \quad (2.29)$$

Fig. 2.5 shows the dependence of H_p with T for given values of H_p . By means of this chart, an altimeter reading can be converted into density altitude, provided that the actual air temperature is known.

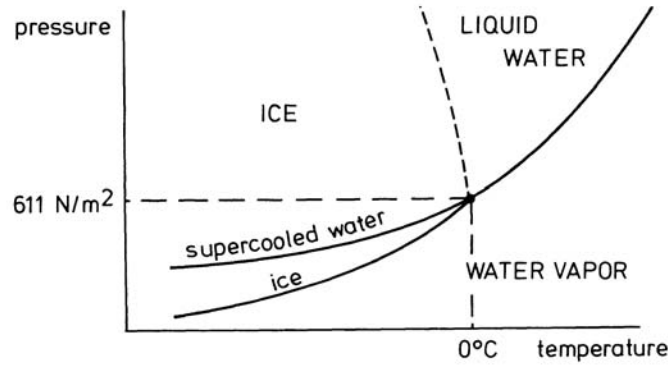


Figure 2.6 Saturation vapor pressure of water and ice

2.5. HUMIDITY

An upper limit exists concerning the concentration of water vapor that can be present in a fixed volume of air. When a given volume contains the maximum amount of water vapor the air is saturated. By definition, the saturation vapor pressure is the partial pressure at which water vapor can coexist in equilibrium with liquid water. This maximum value of the vapor pressure $e_{\max}$ increases rapidly with increasing temperature. The solid curves in Fig. 2.6 represent the variation of the saturation vapor pressure with temperature. This relationship may be approximated by:

$$\begin{aligned} e_{\max} &= 611 \times 10^{\frac{7.5T}{237.3+T}} & \text{water vapor} \longleftrightarrow \text{water} \\ e_{\max} &= 611 \times 10^{\frac{9.5T}{265.5+T}} & \text{water vapor} \longleftrightarrow \text{ice} \end{aligned} \quad (2.30)$$

In these expressions, T is the temperature in degrees Celsius, and the saturation vapor pressure is obtained in Pascal (N/m^2). From Fig. 2.6 we note that below 0°C water vapor can condense into ice as well as into supercooled water. Also note that the vapor pressure of supercooled water is appreciably greater than of ice.

According to Dalton's law, the pressure p of moist air is the sum of the partial pressure of dry air p_d and the partial pressure of water vapor e ,

$$p = p_d + e \quad (2.31)$$

The following quantities are used to express the amount of water vapor in the atmosphere:

1. absolute humidity, a
2. specific humidity, q
3. mixing ratio, x
4. relative humidity, H .

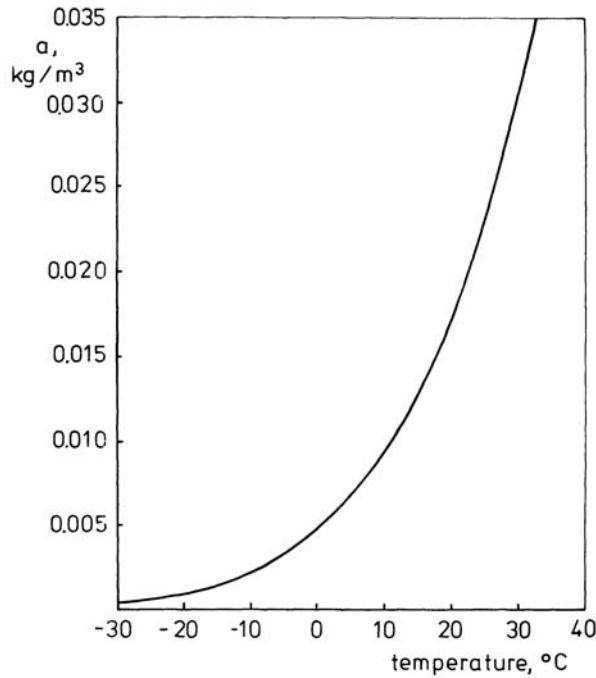


Figure 2.7 Absolute humidity for saturated air

Absolute humidity a is the mass of water vapor per cubic meter. Hence, the absolute humidity is equal to the density of water vapor ρ_v . Since, just like air, also water vapor follows the perfect gas law with sufficient approximation, we have

$$a = \rho_v = \frac{M_v e}{R_a T} = \frac{e}{R_v T} \quad (2.32)$$

In Eq. 2.32 M_v and R_v are the molecular mass and the specific gas constant of water vapor, respectively. As $M_v = 18.0 \text{ kg/kmol}$ (Tab. 2.1), we get

$$R_v = R_a / M_v = 8314.32 / 18.0 = 461.90 \text{ m}^2 / (\text{Ks}^2)$$

The absolute humidity is maximum if at the actual temperature the air is saturated ($e = e_{\max}$). Fig. 2.7 gives the maximum absolute humidity against temperature. This graph shows that at 0°C the maximum proportion of water vapor is about 0.004 kg/m^3 , which value increases to 0.023 kg/m^3 at 25°C .

Specific humidity q is the ratio of the density of water vapor to the density of the moist air,

$$q = \frac{\rho_v}{\rho_a + \rho_v} \quad (2.33)$$

where ρ_a is the density of dry air, which is given by

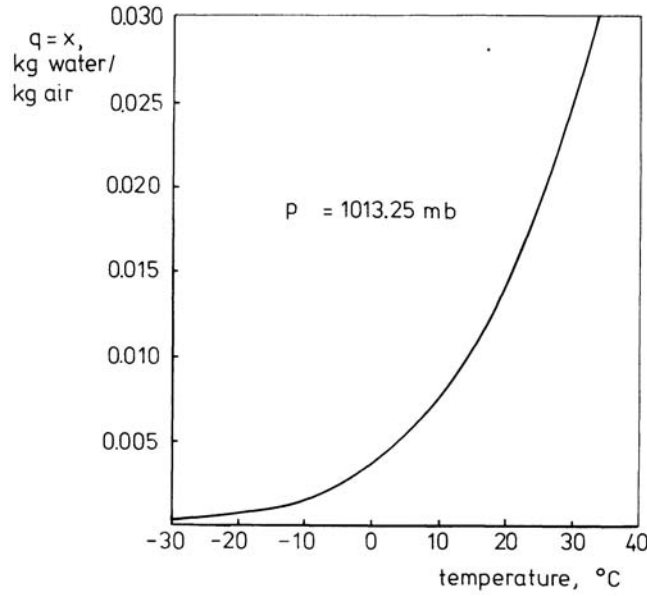


Figure 2.8 Specific humidity and mixing ratio for saturated air

$$\rho_d = \frac{p_d}{RT} = \frac{p - e}{RT}. \quad (2.34)$$

Insertion of Eq. 2.32 and Eq. 2.34 into Eq. 2.33 yields:

$$q = \frac{\frac{e}{R_v T}}{\frac{p - e}{RT} + \frac{e}{R_v T}} = \frac{\frac{R}{R_v} - e}{p - e \left(1 - \frac{R}{R_v}\right)} \quad (2.35)$$

Using $R = 287.05 \text{ m}^2/(\text{Ks}^2)$ and $R_v = 461.90 \text{ m}^2/(\text{Ks}^2)$ we obtain $R/R_v = 0.622$. It then follows that

$$q = \frac{0.622e}{p - 0.378e} \quad (2.36)$$

The mixing ratio x is the ratio of the density of water vapor to the density of dry air,

$$x = \rho_v / \rho_d \quad (2.37)$$

This leads to

$$x = \frac{\frac{e}{R_v T}}{\frac{p - e}{RT}} = \frac{\frac{R}{R_v} e}{p - e} = \frac{0.622e}{p - e} \quad (2.38)$$

The Eq. 2.36 and Eq. 2.38 may be approximated by

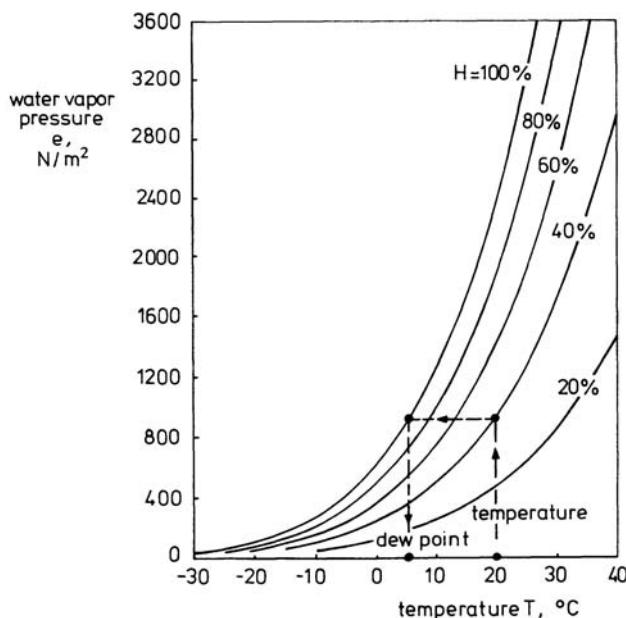


Figure 2.9 Relationship between water vapor pressure, temperature and relative humidity

$$q = x = 0.662 \frac{e}{p} \quad (2.39)$$

For saturated air, the variation of $q(=x)$ is plotted against temperature in Fig. 2.8. Relative humidity H is defined as the ratio of the actual water vapor pressure to the saturation vapor pressure at that temperature,

$$H = 100 \frac{e}{e_{\max}} \quad (2.40)$$

where H is expressed in percent. As clarified in Fig. 2.9, lines of constant values of *relative humidity* can be drawn, starting from the line of 100% relative humidity, which corresponds to the saturation vapor pressure curves in Fig. 2.6. Evidently, the use of relative humidity requires also a knowledge of the ambient air temperature to have a physical significance.

Instead of relative humidity, the air temperature in combination with the so-called *dew point* may be used to specify the moisture content of the air. As illustrated in Fig. 2.9, the dew point is the temperature to which moist air must be cooled isobarically, without addition of moisture, until the saturation point or *frost point* (if below 0 °C) is reached.

The magnitude of the difference between the air temperature and the dew point is an indication of how much the moist air will have to be cooled to reach saturation and *condensation*. If the difference between the actual temperature and the dew point is great, extreme cooling is needed to achieve *saturation*, whereas if the difference between the two thermometer readings is small, only slight cooling is required to saturate the air. Clearly, condensation will produce clouds and several

forms of precipitation as dew, rain, snow, and so forth. Therefore, the difference between the air temperature and dew point is also a measure for the height at which cloud formation begins. Finally, we will examine the influence of water vapor on the density of moist air. According to Eq. 2.35 we can write

$$\rho = \rho_d + \rho_v = \frac{p - e}{RT} + \frac{e}{R_v T} = \frac{p}{RT} \left[1 - \frac{e}{p} \left(1 - \frac{R}{R_v} \right) \right] \quad (2.41)$$

By insertion of $R/R_v = 0.662$ into Eq. 2.41 we obtain

$$\rho = \frac{p}{RT} \left(1 - 0.378 \frac{e}{p} \right) = \frac{p}{RT_v} \quad (2.42)$$

where R is the specific gas constant of dry air and T_v is an increased temperature which is called the virtual temperature and which is used to account for the effect of humidity on the air density. From Eq. 2.42 it follows that

$$T_v = \frac{T}{1 - 0.378 \frac{e}{p}} \quad (2.43)$$

Eq. 2.42 and Eq. 2.43 show that, at a given pressure, moist air is somewhat lighter than dry air. This feature may be of special importance to the thrust or power output of propulsion systems, and thus to airplane performance.

Most importantly, the humidity content on the atmosphere, together with the chemical composition of the exhaust gases, has a significant influence on the formation of contrails, which are deemed to be the biggest anthropogenic source of cirrus clouds, and therefore a significant contributor to the greenhouse effect due to aviation. The formation and persistence of contrails in the atmosphere is the result of two main processes. First, contrails are formed when the water vapor in the exhaust of aircraft engines condenses and freeze into ice crystals. This occurs at temperatures around -38°C at typical cruise altitudes in the upper troposphere or lower stratosphere. Then, contrails persist if the ambient air is sufficiently cold and humid, allowing the ice crystals to remain stable. This occurs if the mixed and cooled exhaust has a partial vapor pressure above the saturation point with respect to ice.

2.6. VERTICAL MOTION IN THE ATMOSPHERE

Though in all standard atmospheres the air is assumed to be at rest, we all know that the real atmosphere is often in a state of motion. In this section we will therefore consider the vertical displacements of limited masses of air as may occur in the atmosphere.

Since atmospheric pressure decreases with increasing height, the pressure within an isolated mass of air will also decrease when it is lifted into the surrounding air. Then, also its temperature falls because some of the heat energy is used in doing the work required for expansion. To describe this process we may assume that the moving body of air has nearly uniform properties and that its pressure p^* equals constantly the pressure p of the surrounding air, but not necessarily $T^* = T$. Furthermore, it is assumed that no changes of state occur and that the air expands adiabatically. Then, according to the *first law of thermodynamics* in Appendix C, the process is described by

$$c_p dT^* - \frac{1}{\rho^*} dp^* = 0 \quad (2.44)$$

where c_p is the specific heat at constant pressure of air. By making use of the hydrostatic Eq. 2.1 and noting that $dp^* = dp$ we find

$$c_p dT^* + \frac{\rho}{\rho^*} g dh = 0 \quad (2.45)$$

Combination of Eq. 2.45 and the equation of state Eq. 2.2 yields

$$c_p dT^* + \frac{T^*}{T} g dh = 0 \quad (2.46)$$

Hence, the rate of temperature fall is

$$\frac{dT^*}{dh} = -\frac{gT^*}{c_p T} \quad (2.47)$$

By substitution of $g = 9.80665 \text{ m/s}^2$, $c_p = 1004.68 \text{ m}^2 \cdot \text{s}^{-2} \cdot \text{K}$ (dry air) and $T^*/T = 1$ into Eq. 2.47, we find for the rate of change of temperature within the rising mass of air

$$\frac{dT^*}{dh} = -0.0098 \text{ K/m}$$

Thus, if the expansion process is adiabatic the temperature decrease is about 1 kelvin for each 100 meters rise. This lapse rate holds only for dry or unsaturated air, and is known as the *dry adiabatic rate*.

The water vapor in the moving body of air also cools as it ascends. When it reaches its saturation temperature, condensation will take place with any further cooling. The heat which is released by the condensation is added to the air and the lapse rate is therefore about half the value of the dry adiabatic rate. The temperature lapse rate for saturated air is denoted, therefore, as the *saturation adiabatic rate*. The variation of temperature with altitude according to the dry adiabatic rate is sketched in Fig. 2.10. From this illustration we can explain what actually can happen when a mass of unsaturated air is elevated. If the atmosphere has a lapse rate which is less than 1 K/100 m, the rising air will always be colder, and thus denser, than the surrounding air. As a result, vertical motion is suppressed so that the moving air will tend to sink back to its initial level. In this case the atmosphere is said to be in a stable condition.

On the other hand, if the observed lapse rate is greater than 1 K/100 m, the rising air will be constantly warmer, and therefore lighter than the surrounding air. In consequence, the rising air tends to move away from its initial position. This is known as an unstable condition. In order to explain the dynamics of lifting and sinking, a moving infinitesimal element of air with dimensions dx , dy and dh will be considered (Fig. 2.11). If we assume quasi-static motion ($p^* = p$) and the vertical motion involves no friction forces between the element and its environment, Newton's second law furnishes

$$\rho^* dx dy dh \frac{dw}{dt} = p dx dy - \left(p + \frac{dp}{dh} dh \right) dx dy - \rho^* g dx dy dh \quad (2.48)$$

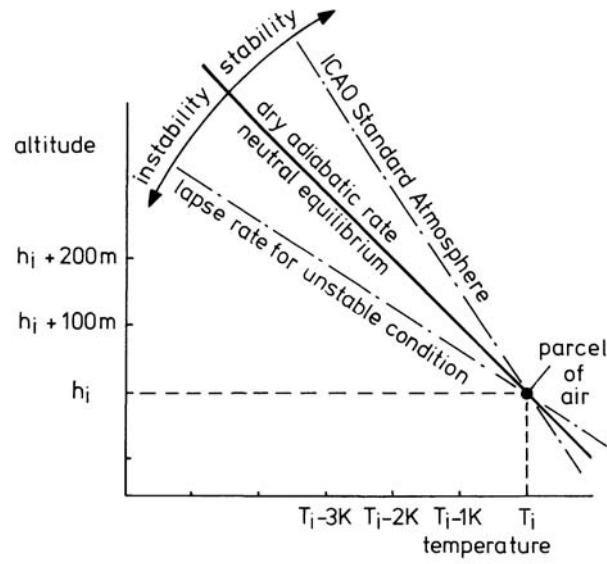


Figure 2.10 Temperature rates

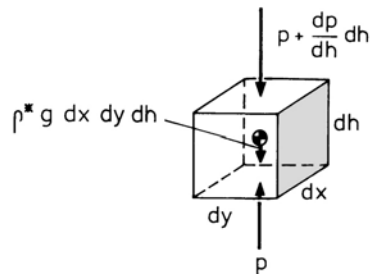


Figure 2.11 Force diagram

In this equation w is the vertical velocity of the element of air. Dividing the terms by $\rho^* dx dy dh$ gives

$$\frac{dw}{dt} = -\frac{1}{\rho^*} \frac{dp}{dh} - g \quad (2.49)$$

Inserting the hydrostatic Eq. 2.1 and the equation of state Eq. 2.2 into Eq. 2.49, we obtain

$$\frac{dw}{dt} = g \left(\frac{T^*}{T} - 1 \right) \quad (2.50)$$

This result indicates that the vertical velocity tends to increase (unstable condition) if starting from the original level, the ratio T^*/T increases. Indeed, this requires that the prevailing lapse rate is greater than the dry adiabatic rate.

In the special circumstance that the lapse rate in the atmosphere is the same as the dry adiabatic rate, the temperature within the moving air constantly coincides with the temperature of the surrounding air. Consequently, there is no density difference, and the air will not restore to or displace from its momentary position. This condition is called neutral equilibrium.

As explained earlier, in the case of moving air which is saturated, the rate of cooling is about 0.5 K/100 m. To examine the stability, now, the actual temperature variation in the atmosphere must be compared to the saturation adiabatic rate.

When the actual temperature lapse rate lies between that of the dry adiabatic rate and that of the saturation adiabatic rate, so-called *conditional instability* prevails (Fig. 2.12). This term expresses that there is a stable condition for unsaturated air and an unstable condition for saturated air.

Although air normally gets colder as we go up in the atmosphere, the air temperature also can rise with increasing height. This causes decided atmospheric stability. Then we have a *temperature inversion* (negative lapse rate) which may be produced by advection of warm air currents or by cooling through contact with a cold ground surface.

The vertical movements brought about by unstable atmospheric conditions are called *convection*. This type of air currents can emerge near the Earth's surface when local heating of the ground causes a lapse rate which is greater than the dry adiabatic rate. The rising air may be used by glider pilots to gain altitude while gliding (Fig. 2.13a).

The height at which the rising air reaches its saturation temperature is called the convective condensation level (Fig. 2.13b). If above this level conditional instability exists, the air may continue its upward motion thereby cooling at the saturation adiabatic rate. Then condensation of some of the moisture takes place and clouds may be formed due to the presence of condensation nuclei in the atmosphere. By reason of this, clouds consist of an enormous amount of droplets of water.

As illustrated in Fig. 2.13a and b, the rapid updrafts due to instability give localized clouds with vertical development. The cooling and condensation needed for cloud formation may also be caused by slow rising of a whole layer of stable air. For example, due to the horizontal movement of air (wind) against a mountain or over a front, which is a wedge of cold air moving under the influence of gravity beneath a warm air mass (Fig. 2.13c). This gives slow condensation processes and therefore layer-like clouds. Usually, cloud types are divided into four families according to the regions where particular forms are found (Fig. 2.14).

The distance from the ground to the base of the clouds is called the ceiling. In the case of fog, which is a cloud at the Earth's surface, the ceiling will be at zero altitude.

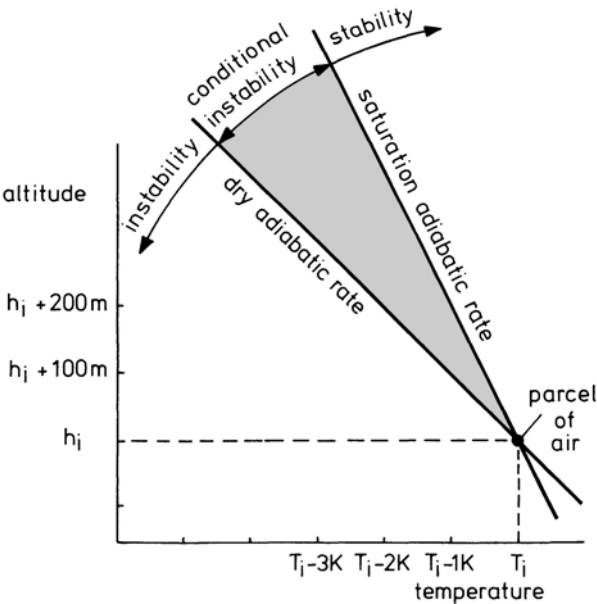


Figure 2.12 Conditional Instability

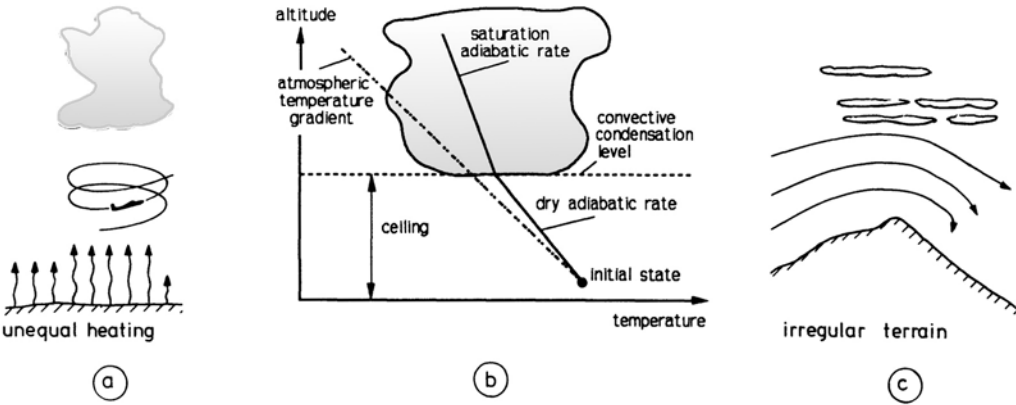


Figure 2.13 Cloud formation

It is quite obvious that the presence of clouds or fog is extremely important to aviation because it reduces the pilot's range of vision from the flight deck. In this respect, also information on the visibility is included in all aviation weather reports. According to its definition, visibility in a definite direction is the maximum distance to which prominent suitable objects like trees or houses, located in that direction and observed against the horizon sky, can be seen.

It is also important to know that water droplets are present in clouds, even when the air temperature is below freezing point. Only at temperatures below -15°C to -20°C clouds are composed mostly of *ice crystals*.

Supercooled water droplets exist in a highly unstable state and when excited will rapidly be transformed into ice. The freezing of water droplets which are intercepted by the airplane results in the formation of ice on various surfaces of the airplane. Also when the humidity is high and the air temperature is near freezing point, acceleration of the air flow around the wing and propeller blades may cause sufficient fall of temperature to start the freezing process.

Ice formation has always been a hazard to aviation since it affects the flying characteristics and the performance of airplanes by loss of lift, added drag, added weight and loss of thrust. Icing can also stop the air vents, leading to the flight instruments. Modern airplanes are equipped with anti-ice and deice systems in order to remove ice and prevent the formation of ice on the airframe.

2.7. WIND

Wind is the horizontal movement of air relative to the Earth, and is one of the primary atmospheric factors affecting airplane performance.

The direction of wind is that direction from which the wind comes. If the wind is blowing from

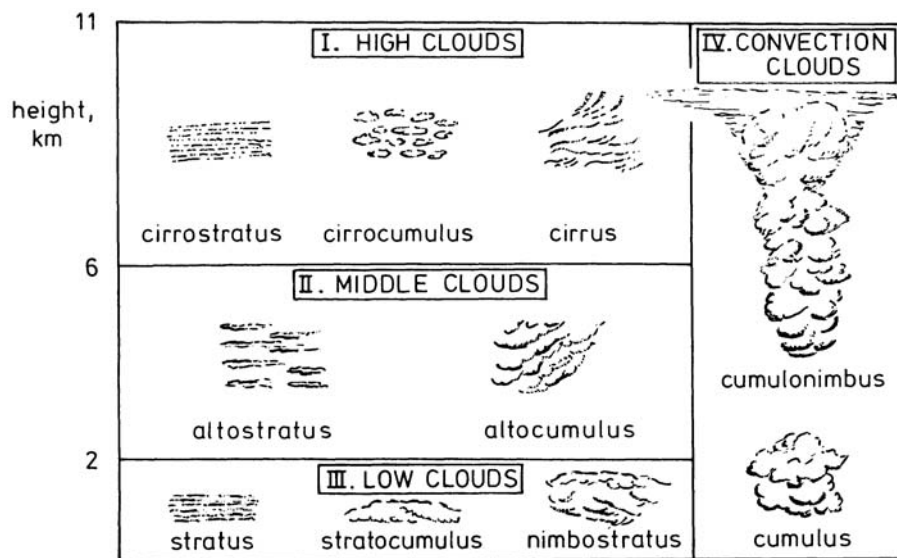


Figure 2.14 Basic cloud families

Table 2.3 Beaufort scale

Beaufort number	wind velocity (knots)	description of wind
0	< 1	calm
1	1-3	light air
2	4-6	light breeze
3	7-10	gentle breeze
4	11-16	moderate
5	17-21	fresh
6	22-27	strong
7	28-33	near gale
8	34-40	gale
9	41-47	strong gale
10	48-55	storm
11	56-63	violent storm
12	> 63	hurricane

the southwest, its direction is indicated as southwest (SW). Fig. 2.15 shows the generally used wind direction scales.

Wind velocity is reported either in knots or in meters per second. Surface winds may also be expressed in terms of the *Beaufort scale of wind force*. Originally, this system was used to estimate wind velocity by observing its effect on the condition of the sea surface. Tab. 2.3 gives the relationship between Beaufort number and wind speeds as defined for wind at a height of 10 meters above the ground. The table also includes the description of winds.

As a whole there is a systematic meridional circulation of the atmosphere, which is caused by the uneven distribution of solar heat over the Earth. Fig. 2.16 represents the general circulation on the Northern Hemisphere. Equatorial surfaces heat most. This causes the lower air to expand. Owing to this expansion the sea level pressure at the Equator is reduced and a higher pressure in upper levels over the Equator is created. Then, at higher elevations air flows from the Equator and in lower levels toward the Equator.

Due to the rotation of the Earth from west to east, the Coriolis force, (see Section 1.3), deflects the air

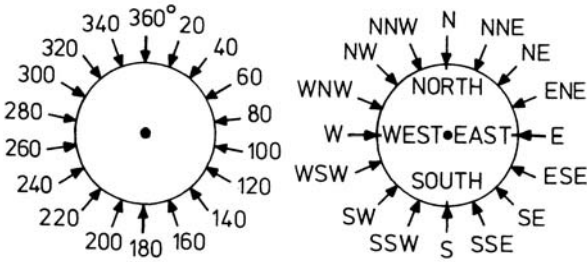


Figure 2.15 Wind direction scales

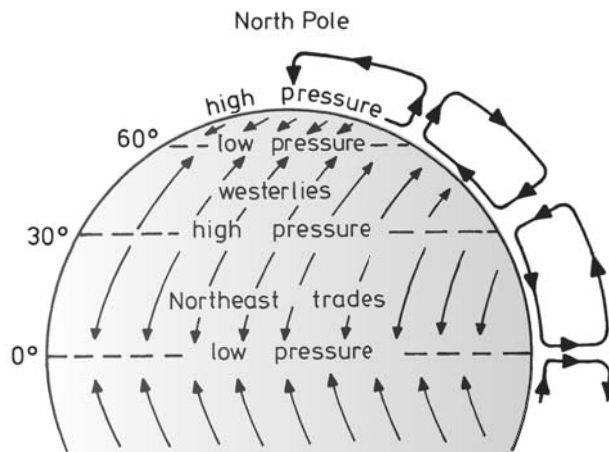


Figure 2.16 General circulation of Northern Hemisphere

which is moving from the Equator to the right. This leads to a high pressure zone at about latitude 30°, where calm and variable winds occur. The winds blowing Equator-ward become the well-known Northeast trades in the neighborhood of the Equator. Light winds occur in the equatorial low pressure zone between the two belts of trade winds.

The cooling in the Polar regions causes the air to contract, resulting in a high pressure at the ground and a relative low pressure in upper levels. The air moving southward from the North Pole is deflected into an easterly flow. The air which is forced Poleward from the high pressure zone at latitude 30° is turned to the west and becomes the familiar prevailing Westerlies. As a result, a low pressure zone is also found around latitude 60°.

Near the Earth's surface the forces that determine wind direction and wind speed are the force due to the horizontal pressure gradient, the Coriolis force and the friction force. The latter force arises from the relative motion between air and ground surface. The magnitude of the wind speed at lower altitudes is strongly affected by this friction force, which tends to decrease the wind velocity. The retarding effect of the surface is largest near the ground and remains of significance up to about 1000 meters above ground level. The region where the surface friction occurs may be called the *planetary boundary layer*.

Since the Coriolis force is proportional to the wind velocity, this apparent force increases with increasing height. In the so-called surface boundary layer, which reaches to about a height of 100 m, the Coriolis force is negligible small in comparison with the friction force and the pressure gradient force. In this layer the wind velocity increases continuously with increasing height, starting from the zero-velocity boundary value at ground level, whereby the air moves in a direction perpendicular to the isobars.

Above the surface boundary layer the wind speed increases further and wind blowing Poleward is deflected in an easterly direction under the influence of the Coriolis force. This situation is depicted in Fig. 2.17, where equilibrium of forces is assumed. The reduction of the wind velocity due to the friction force and the angle that the wind makes with the isobars depend on the type and roughness of the ground surface.

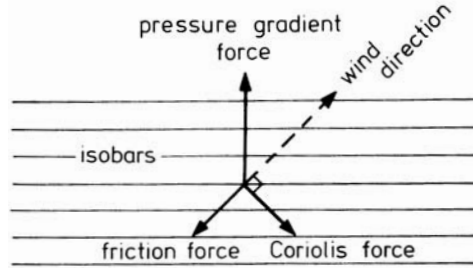


Figure 2.17 Change of wind direction due to Coriolis force

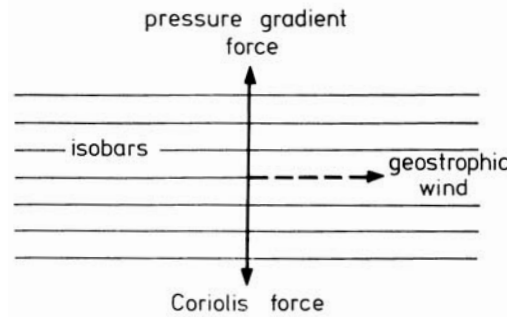


Figure 2.18 The geostrophic wind on the Northern Hemisphere

Above the planetary boundary layer the surface friction is no longer effective. Then, finally, the wind direction becomes parallel to the isobars. Under these circumstances the Coriolis force is balanced by the pressure gradient force (Fig. 2.18).

The equation which expresses this condition for straight isobars is the so-called geostrophic wind equation:

$$\frac{1}{\rho} \frac{dp}{ds} = 2\omega_e V_w \sin \phi \quad (2.51)$$

where dp/ds is the horizontal pressure gradient if s is measured across the isobars, V_w is the geostrophic wind velocity and ϕ is latitude.

A qualitative description of the direction of the geostrophic wind is given by the law of *Buys-Ballot*, which states that in the Northern Hemisphere, if you face the wind the atmospheric pressure decreases toward your right and increases toward your left. In the Southern Hemisphere the opposite is true.

Information services for air navigation all over the world regularly report meteorological data that comprise wind directions and velocities at various altitudes. On average, the wind speed increases up to the tropopause (Fig. 2.19a).

Also the presence of the so-called *jet streams* in the upper troposphere and lower stratosphere should be mentioned. These relative strong winds, having velocities of 300 to 400 km/hr, are con-

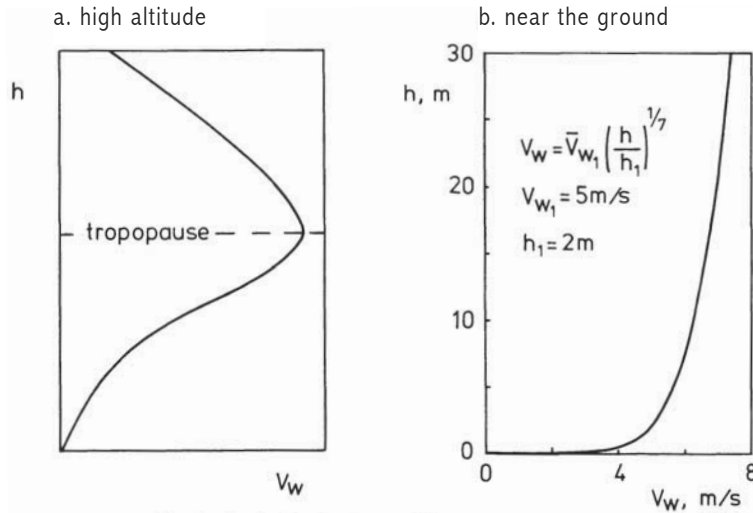


Figure 2.19 Typical wind velocity profiles

centrated within a narrow flow and follow a meandering path at particular latitudes. The increase in wind velocity with height in the surface boundary layer often is represented by power laws, according to the relationship

$$V_w = \bar{V}_{w1} \left(\frac{h}{h_1} \right)^n \quad (2.52)$$

where $\bar{V}_{w1}$ is the average wind velocity at a fixed reference height h . For wind blowing over a relatively smooth surface and in conditions of normal lapse rates, the exponent n is approximately equal to $1/7$ (Ref. 4). Fig. 2.19b displays the form of the wind profile according to Eq. 2.52, using $\bar{V}_{w1} = 5 \text{ m/s}$ at $H = 2 \text{ m}$.

When the wind blows over a rough surface or when the air flows in layers adjacent to each other at different speeds, irregular motions in the atmosphere may be induced. The type of small-scale motion which is superimposed on a basic flow is called *turbulence* or *gustiness*. A similar form is the convective turbulence which is produced in the case of unstable atmospheric conditions.

On an unclouded day the turbulence is not visible so that it will be felt by an airplane without any visual warning. Under these conditions the term *clear-air turbulence* is used. In general we can designate local wind shear at heights near the tropopause as being the most important cause of clear-air turbulence.

2.8. ATMOSPHERIC FRONTS

In the previous section we have observed that the circulation of the atmosphere is basically the migration of extensive air masses over long distances.

By air masses are meant far-reaching bodies of air, wherein the atmospheric conditions are approximately consistent at each level, and of which the physical properties originate from the character-

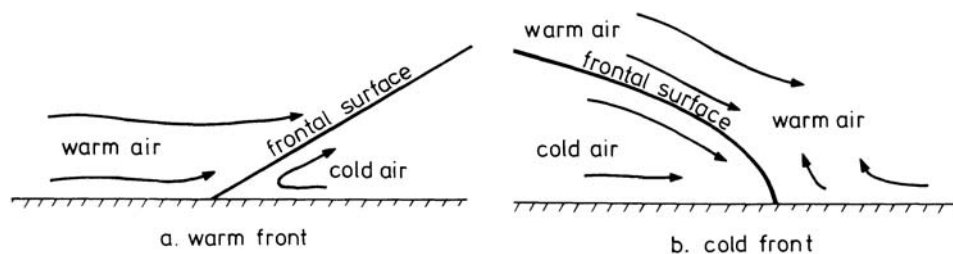


Figure 2.20 Vertical cross-section through atmospheric fronts

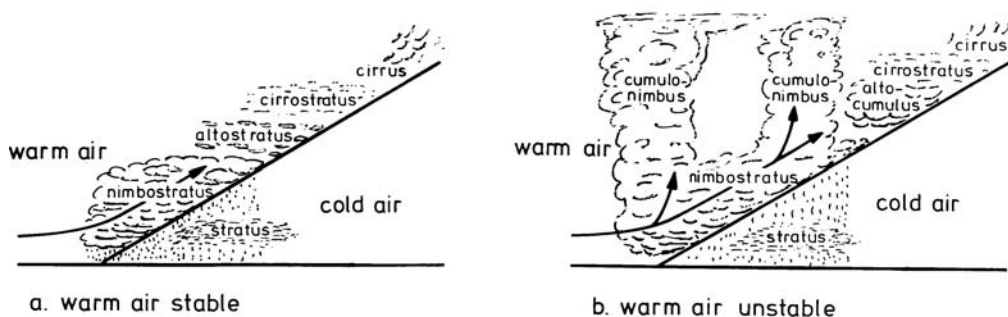


Figure 2.21 Warm front cloud systems

istics of their source regions on Earth.

During its motion, the air has a tendency to maintain its commencing properties, or else is modified somewhat by the nature of the ground surface over which it travels.

When air masses of different temperature meet each other, a rather thin transition layer or surface of discontinuity is formed between them. The colder, heavier air moves underneath the warmer light air, thereby forming a wedge of cold air under the action of gravity (Fig. 2.20). The dividing plane between the two air masses is called the frontal surface. The intersection of the frontal surface with the ground surface is called a front.

A front is designated by the relative temperature of the air mass, which moves toward the other. Thus, if warmer air is displacing colder air, it is called a *warm front* (Fig. 2.20a). In the same way, a cold front is a front along which colder air replaces warmer air (Fig. 2.20b).

Logically, a warm front causes higher temperatures at the places over which it proceeds, and a cold front brings lower temperatures. Each front has its own special quality of cloud, precipitation and wind conditions.

Fig. 2.21a shows the cloud system in a warm front with the warm air stable. In this case the air slowly advances over the sloping frontal surface and extensive cloud formation occurs. First cirrus clouds come into sight, and then cirrostratus and altostratus, in sequence. Ultimately, nimbostratus clouds are developed, and precipitation drops down. Low stratus clouds may cover the nimbostratus.

The humidity of the cold air is increased to near-saturation by the precipitation, through which

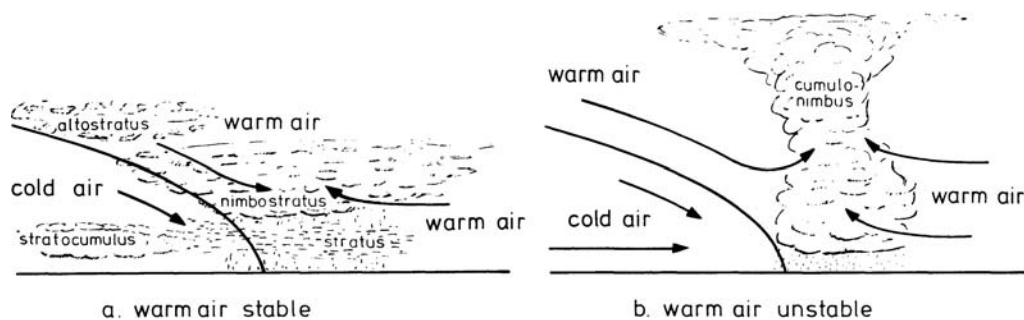


Figure 2.22 Fast-moving cold front cloud formation

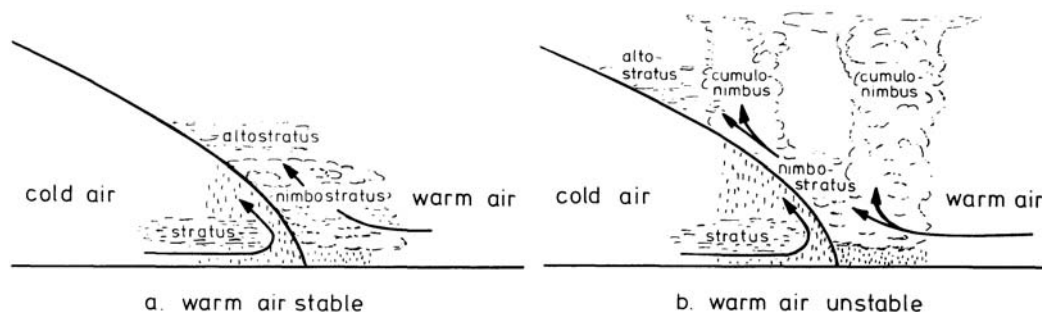


Figure 2.23 Vertical cross-section of clouds in slow moving cold fronts

further cooling during the night may produce fog over large areas. If the warm air is conditionally unstable, altocumulus and cumulonimbus clouds come after the cirrus forms and thunderstorm activeness may be encountered ahead of the front, together with convectional showers (Fig. 2.21b). The wind directions and velocities above and under the frontal surface commonly differ significantly. Two types of cold fronts are distinguished, fast-moving cold fronts and stationary or slow-moving cold fronts. Fig. 2.22a indicates that the motions in a fast-moving cold front consist of declining movements at both sides of the frontal surface, causing variable surface winds behind the front. In the warm air ahead of the front upward movements take place.

If the warm air is stable, the sky becomes overcast with altostratus and nimbostratus clouds, from which rain falls. An unstable condition of the warm air (Fig. 2.22b) leads to the development of cumulonimbus clouds, thunderstorm activity, and showers along and ahead of the front. The cloud formation in a slow-moving cold front is of the same kind as in a warm front (Fig. 2.23); warm air sloping upward delivers altostratus and nimbostratus clouds. Also, there may be sufficient upward movements in the cold air to produce low stratus clouds behind the front. When the warm air is conditionally unstable cumulonimbus clouds with thunderstorm activity may arise.

In the case that a cold front meets a warm front, we may have the situation of an occluded front. The manner in which the occlusion works out depends on the relative temperature of the cold air masses underlying the two frontal surfaces. In a so-called *cold front occlusion* (Fig. 2.24a), the air

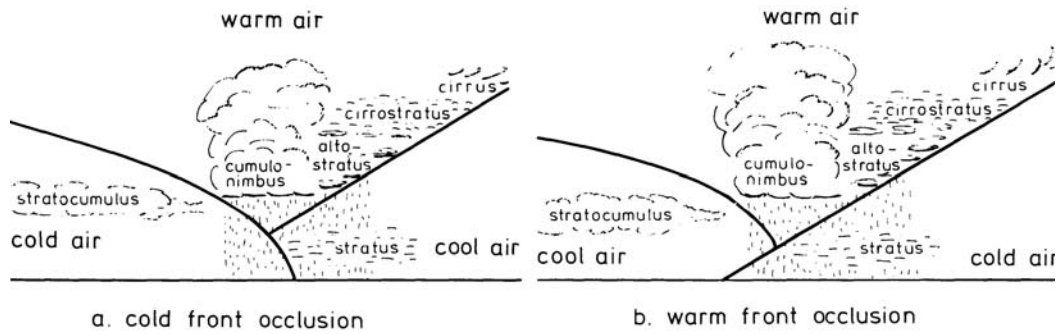


Figure 2.24 Occluded fronts

behind the cold front is the colder, and therefore displaces the cool air behind the warm front. On the other hand, as shown in Fig. 2.24b, in a warm front occlusion the air behind the cold front is less cold than the air beneath the warm front so that now the cold front climbs over the wedge of the warm front.

We end this section with the remark that, apparently, an appreciation of the boundaries between air masses of different characteristics is very important since their frontal disturbances involve special weather conditions which may cause serious aviation hazards in the form of gusts, low ceilings, poor visibilities, and ice accretion.

2.9. PROBLEMS

1. The volumetric percentage of CO_2 in the atmosphere near sea level is:
 - (a) Larger than 10%
 - (b) Between 1% and 10%
 - (c) Less than 1%
2. What are the names of the lowest two regions of the atmosphere?
3. Is the following statement true or false? The aerostatic equation is derived based on fundamental laws of physics.
4. Is the following statement true or false? The temperature lapse with altitude is based on experimental data.
5. The temperature gradient in the troposphere equals -0.0065 K/m . Find the values of the temperature, the pressure, the air density and the speed of sound at 5 km altitude. To solve this question, make use of the primary constants provided in Table 2.2 and equations 2.10 and 2.11.
6. In the lower stratosphere, the temperature is constant (the temperature gradient is zero). First calculate the values of the temperature, the pressure, the air density and the speed of sound at the base of the lower stratosphere (11 km). To solve this problem, make use of the

same information as provided in the previous question. Next, calculate the values of these variables at 16 km altitude.

7. On a specific day, the atmospheric conditions are such that the temperature is 8°C and the dew point is 5°C . Do you expect clouds to form at high or low altitude on this day?
8. Gliders can gain height by flying in ascending warm air masses (thermals). In a thermal, is the lapse rate
 - (a) smaller than,
 - (b) equal to or
 - (c) greater than the dry adiabatic rate?
9. Explain how glider pilots can identify thermals and name one potential cause of these thermals.
10. Is the following statement true or false? Due to the uneven distribution of solar heat over the Earth, a systemic circulation is present in the atmosphere. Combined with the Coriolis force as a result of the rotation of the Earth, this results in a certain wind pattern. This general wind pattern is represented in the International Standard Atmosphere.

3

EQUATIONS OF MOTION

Fundamental derivations of the expression of Newton's laws in vector form is presented in [Appendix A](#). In this chapter, those equations are specialized to the case of rigid airplanes of constant mass, and expressed in the aircraft body axis system. In the case of steady flight, they are conveniently expressed in the air-path axis system.

3.1. TRANSLATIONAL MOTION

Newton's second law of motion can be written as

$$\vec{F} = \frac{d(M\vec{V})}{dt} \quad (3.1)$$

where F is the resultant of all external forces applied to the body, M is its mass, and V is the linear velocity vector of the center of gravity of the body relative to an inertial frame of reference.

Starting from [Eq. 3.1](#), in [Appendix A](#) the derivation is given of the general equation of translational motion for an arbitrary deformable body of mass M (see [Eq. A.46](#) of [Appendix A](#)). Of course, all airplanes are flexible, that is, the relative positions of the various parts of the structure change somewhat under the influence of the forces acting in flight. However, it is very beneficial to the complexity of the problem to disregard these deformations. This simplification is generally justified and, as has been mentioned already in [Chapter 1](#), shall also be used here in analyzing the performance of airplanes.

Assuming a rigid body of constant mass, [Eq. 3.1](#) becomes the familiar form

$$\vec{F} = M \frac{d\vec{V}}{dt} = M\vec{a} \quad (3.2)$$

According to [Appendix A](#), the rotational motion of a rigid body is governed by

$$\vec{M}_{cg} = \frac{d\vec{B}_{cg}}{dt} \quad (3.3)$$

This equation says that the external moment applied to a body is equal to the time derivative of its angular momentum relative to the center of gravity of the body.

In this section the translational motion of rigid airplanes of constant mass will be described by using the body axis system. For this purpose the vector Eq. 3.2 is transformed analogously to Eq. A.20 of Appendix A. Then we have

$$\vec{F} = M \left(\frac{d\vec{V}}{dt} + \vec{\Omega} \times \vec{V} \right) \quad (3.4)$$

where $d\vec{V}/dt$ is the time derivative of the velocity vector with respect to the body axis system, and $\vec{\Omega}$ is the angular velocity of the airplane. These two terms clearly represent the change in magnitude and direction of the velocity vector with respect to aircraft body, and the fact that the aircraft body is rotating with respect to an inertial reference frame. If the unit vectors in our airplane fixed reference frame are $\vec{i}$, $\vec{j}$, $\vec{k}$ and if u , v , w and p , q , r are the components of $\vec{V}$ and $\vec{\Omega}$ along the body axes, respectively, then

$$\vec{V} = u\vec{i} + v\vec{j} + w\vec{k} \quad (3.5)$$

and

$$\vec{\Omega} = p\vec{i} + q\vec{j} + r\vec{k} \quad (3.6)$$

If further the corresponding components of the external force are given by

$$\vec{F} = F_x\vec{i} + F_y\vec{j} + F_z\vec{k} \quad (3.7)$$

we obtain from Eq. 3.4 the following three scalar equations:

$$\begin{aligned} F_x &= M \left(\frac{du}{dt} + wq - vr \right) \\ F_y &= M \left(\frac{dv}{dt} + ur - wp \right) \\ F_z &= M \left(\frac{dw}{dt} + vp - uq \right) \end{aligned} \quad (3.8)$$

The resultant external force F includes the aerodynamic force $\vec{R}$, originating from the interaction between airflow and airplane surfaces, the thrust $\vec{T}$ of the propulsive system, and the weight $\vec{W}$ of the airplane,

$$\vec{F} = \vec{R} + \vec{T} + \vec{W} \quad (3.9)$$

We also may consider the so-called *resultant aerodynamic force* A , being the vector sum of two constituents; the aerodynamic force $\vec{R}$ and the thrust $\vec{T}$,

$$\vec{A} = \vec{R} + \vec{T} \quad (3.10)$$

By reference to Fig. 3.1, we see that the components of the weight along the body axes are:

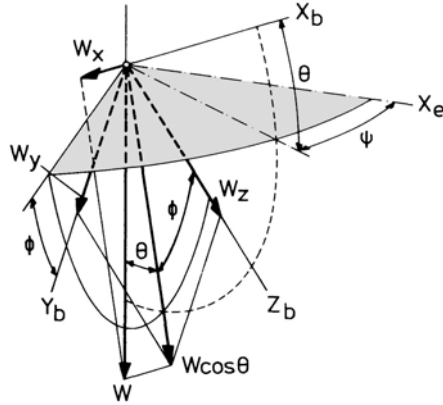


Figure 3.1 Components of airplane weight along body axes

$$\begin{aligned} W_x &= -W \sin \theta \\ W_y &= W \cos \theta \sin \phi \\ W_z &= W \cos \theta \cos \phi \end{aligned} \quad (3.11)$$

Now Eq. 3.8 for the translational motion may be written as

$$\begin{aligned} -W \sin \theta + A_x &= M \left(\frac{du}{dt} + wq - vr \right) \\ W \cos \theta \sin \phi + A_y &= M \left(\frac{dv}{dt} + ur - wp \right) \\ W \cos \theta \cos \phi + A_z &= M \left(\frac{dw}{dt} + vp - uq \right) \end{aligned} \quad (3.12)$$

where A_x , A_y and A_z are the scalar components of the resultant aerodynamic force $\vec{A}$.

3.2. ROTATIONAL MOTION

In order to derive similar expressions for the rotational motion, we will evaluate Eq. A.57 of Appendix A, which equation describes the total angular momentum relative to the center of gravity of the airplane as

$$\vec{B}_{cg} = \int_M \vec{r} \times (\vec{\Omega} \times \vec{r}) dM \quad (3.13)$$

where $\vec{r}$ is the position vector of a mass element with respect to the center of gravity of the airplane. Using the following basic law for the vector triple product,

$$\vec{r} \times (\vec{\Omega} \times \vec{r}) = \vec{\Omega} \times (\vec{r} \cdot \vec{r}) - \vec{r} \times (\vec{\Omega} \cdot \vec{r})$$

We can rewrite Eq. 3.13 as

$$\vec{B}_{cg} = \int_M \vec{\Omega} \times (\vec{r} \cdot \vec{r}) dM - \int_M \vec{r} \times (\vec{\Omega} \cdot \vec{r}) dM \quad (3.14)$$

If the coordinates of a mass element in the body axis system are x, y, z , then

$$\vec{r} = x \vec{i} + y \vec{j} + z \vec{k} \quad (3.15)$$

In terms of the coordinates x, y, z , the dot products in Eq. 3.14 become

$$\vec{r} \cdot \vec{r} = x^2 + y^2 + z^2$$

$$\vec{\Omega} \cdot \vec{r} = px + qy + rz$$

Substituting the latter relations into Eq. 3.14 yields

$$\vec{B}_{cg} = \vec{\Omega} \int_M (x^2 + y^2 + z^2) dM - \int_M \vec{r} (px + qy + rz) dM \quad (3.16)$$

If we write

$$\vec{B}_{cg} = B_x \vec{i} + B_y \vec{j} + B_z \vec{k} \quad (3.17)$$

the components of B_{cg} along the body axes are:

$$\begin{aligned} B_x &= p \int_M (x^2 + y^2) dM - q \int_M xy dM - r \int_M xz dM \\ B_y &= -p \int_M yx dM + q \int_M (x^2 + z^2) dM - r \int_M yz dM \\ B_z &= -p \int_M zx dM - q \int_M zy dM + r \int_M (x^2 + y^2) dM \end{aligned} \quad (3.18)$$

In Eq. 3.18, the so-called moments of inertia of the body appear:

$$\begin{aligned} I_x &= \int_M (y^2 + z^2) dM \\ I_y &= \int_M (x^2 + z^2) dM \\ I_z &= \int_M (x^2 + y^2) dM \end{aligned} \quad (3.19)$$

And the *products of inertia* as well:

$$\begin{aligned} I_{xy} &= I_{yx} = - \int_M xy dM \\ I_{yz} &= I_{zy} = - \int_M yz dM \\ I_{xz} &= I_{zx} = - \int_M xz dM \end{aligned} \quad (3.20)$$

Eq. 3.19 and Eq. 3.20 give the nine components of the *tensor of inertia* I of the body. Hence, we may write

$$\begin{aligned} B_x &= pI_x + qI_{xy} + rI_{xz} \\ B_y &= pI_{xy} + qI_y + rI_{yz} \\ B_z &= pI_{xz} + qI_{yz} + rI_z \end{aligned} \quad (3.21)$$

Apparently, Eq. 3.13 can also be expressed as the dot product of the tensor

$$\vec{B}_{cg} = \int_M \vec{r} \times (\vec{\Omega} \times \vec{r}) dM = \vec{I} \cdot \vec{\Omega} \quad (3.22)$$

Accordingly, the rotational Eq. A.58 of Appendix A can be expressed as

$$\vec{M}_{cg} = \frac{d\vec{B}_{cg}}{dt} = \vec{I} \cdot \frac{d\vec{\Omega}}{dt} + \vec{\Omega} \times \vec{B}_{cg} \quad (3.23)$$

where $\vec{M}_{cg}$ is the external (aerodynamic) moment on the airplane, acting about the center of gravity. If $\vec{M}_{cg}$ is resolved into its components along the body axes, the following three scalar equations are obtained:

$$\begin{aligned} M_x &= \frac{dp}{dt} I_x + \frac{dq}{dt} I_{xy} + \frac{dr}{dt} I_{xz} + qB_z - rB_y \\ M_y &= \frac{dp}{dt} I_{xy} + \frac{dq}{dt} I_y + \frac{dr}{dt} I_{yz} + rB_x - pB_z \\ M_z &= \frac{dp}{dt} I_{xz} + \frac{dq}{dt} I_{yz} + \frac{dr}{dt} I_z + pB_y - qB_x \end{aligned} \quad (3.24)$$

These equations are indicated as Euler's equations of rotational motion, where M_x is the rolling moment, M_y the pitching moment, and M_z the yawing moment. For most airplanes the simplification can be made that the distribution of the mass of the airplane is symmetric with respect to the XY plane. Then: $I_{yz} = I_{xy} = 0$, and the components of $\vec{M}_{cg}$ become:

$$\begin{aligned} M_x &= I_x \frac{dp}{dt} + (I_z - I_y) qr + I_{xz} \left(\frac{dr}{dt} + pq \right) \\ M_y &= I_y \frac{dq}{dt} + (I_x - I_z) pr + I_{xz} (p^2 - r^2) \\ M_z &= I_z \frac{dr}{dt} + (I_y - I_x) pq + I_{xz} \left(\frac{dp}{dt} - qr \right) \end{aligned} \quad (3.25)$$

3.3. UNSTEADY MOTION

The systems of Eq. 3.12 and Eq. 3.25, together with the kinematic relations Eq. 1.22, describe the motion of a rigid airplane with constant mass. The most general system of dynamic equations of motion for a rigid airplane of constant mass is expressed in the body axis system as in the following

Eq. 3.26.

$$\begin{aligned}
 -W \sin \theta + A_x &= M \left(\frac{du}{dt} + wq - vr \right) \\
 W \cos \theta \sin \phi + A_y &= M \left(\frac{dv}{dt} + ur - wp \right) \\
 W \cos \theta \cos \phi + A_z &= M \left(\frac{dw}{dt} + vp - uq \right) \\
 M_x &= I_x \frac{dp}{dt} + (I_z - I_y) qr + I_{xz} \left(\frac{dr}{dt} + pq \right) \\
 M_y &= I_y \frac{dq}{dt} + (I_x - I_z) pr + I_{xz} (p^2 - r^2) \\
 M_z &= I_z \frac{dr}{dt} + (I_y - I_x) pq + I_{xz} \left(\frac{dp}{dt} - qr \right)
 \end{aligned} \tag{3.26}$$

This is a non-linear, first-order system of Ordinary Differential Equations (ODEs) in the unknowns u, v, w, p, q, r . For it to be solvable, it must be complemented with an adequate set of kinematic relations, such as those of Eq. 1.22, to express the angular velocities in terms of the Euler angles, which also appear in the equations. Additionally, the external (aerodynamic and propulsive) forces and moments must also be expressed in terms of the kinematic and dynamic variables via another set of equations. The latter are usually referred to as the *aerodynamic and propulsive models* of the airplane, and can be obtained from theoretical principles or experiments in the real world or in simulated environments.

A significantly simplified version of Eq. 3.26 is obtained in the case of accelerated curved symmetric flight, for which the plane of symmetry of the airplane is continuously in the same vertical plane with respect to the Earth. In this common scenario, the aircraft flies with wings level, with no net external lateral force, and no net external roll and yaw moments. This is reflected by the following Eq. 3.27.

$$\phi = v = p = r = A_y = M_x = M_z = 0 \quad \Rightarrow \quad \frac{dv}{dt} = \frac{dp}{dt} = \frac{dr}{dt} = 0 \tag{3.27}$$

The motion is restricted to the $X_b Z_b$ plane according to the following system of dynamic and kinematic equations.

$$\begin{aligned}
 -W \sin \theta + A_x &= M \left(\frac{du}{dt} + wq \right) \\
 W \cos \theta + A_z &= M \left(\frac{dw}{dt} - uq \right) \\
 M_y &= I_y \frac{dq}{dt}
 \end{aligned} \tag{3.28}$$

In Appendix B, these equations are obtained in the air-path axis system using a bottom-up approach and the formalism of rotation matrices.

In a general sense, we have to consider accelerated motion of the airplane on the basis of a detailed knowledge of the force and moment components ($A_x, A_y, A_z, M_x, M_y, M_z$). Such studies make up the essence of the subject termed *flight dynamics*. Both, a number of problems in the field of stability and control, and airplane performance fall under the heading of flight dynamics. Concerning

airplane performance, for example, the prediction of takeoff and landing distances and the determination of optimum flight trajectories under circumstances in which the interchange between kinetic and potential energies is of importance to the computational results, pertain to this class of questions.

On the other hand, one should remember that during most of its flying time, an airplane can be assumed to be in quasi-steady motion. Therefore, as a topic of particular interest, in the following section the equations describing the most general motion of an airplane in steady flight are presented.

3.4. THE MOST GENERAL STEADY MOTION

In [Section 1.9](#), steady flight has been defined as the flight in which both magnitude and direction of forces and moments acting on the airplane remain constant.

Starting from this definition, we can examine the resulting motion, provided that the atmospheric conditions are independent of flight altitude (poor assumption in case of prolonged flight). Steady motion requires that the time derivatives of all the variables involved in [Eq. 3.12](#) and [Eq. 3.26](#) are zero:

$$\frac{du}{dt} = \frac{dv}{dt} = \frac{dw}{dt} = \frac{dp}{dt} = \frac{dq}{dt} = \frac{dr}{dt} = 0$$

and

$$\frac{d\theta}{dt} = \frac{d\phi}{dt} = 0 \quad (3.29)$$

These conditions lead to the following equilibrium equations:

$$\begin{aligned} -W \sin \theta + A_x &= M(wq - vr) \\ W \cos \theta \sin \phi + A_y &= M(ur - wp) \\ W \cos \theta \cos \phi + A_z &= M(vp - uq) \\ M_x &= (I_z - I_y)qr + I_{xz}pq \\ M_y &= (I_x - I_z)pr + I_{xz}(p^2 - r^2) \\ M_z &= (I_y - I_x)pq + I_{xz}qr \end{aligned} \quad (3.30)$$

It follows from the requirements (3.26) that only the angular velocity $\frac{d\psi}{dt}$ may have a finite value. Then, according to the definition of the angle of yaw in [Fig. 1.14](#), the resultant angular velocity of the airplane is about the vertical axis,

$$\Omega = \frac{d\psi}{dt}$$

For steady motion, the kinematic relations of [Eq. 1.22](#) reduce to (see [Fig. 1.20](#) or apply the method of [Appendix B](#)).

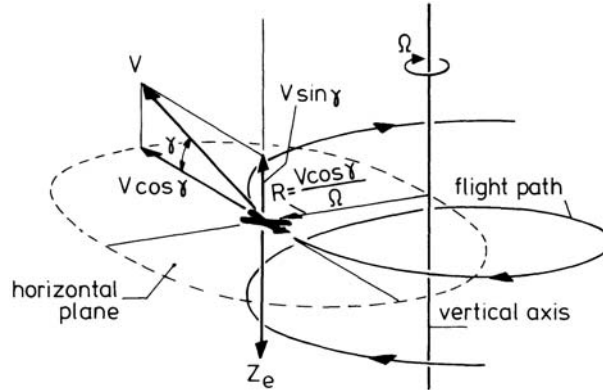


Figure 3.2 Helicoidal motion

$$\begin{aligned}
 p &= -\frac{d\psi}{dt} \sin \theta \\
 q &= \frac{d\psi}{dt} \cos \theta \sin \phi \\
 r &= \frac{d\psi}{dt} \cos \theta \cos \phi
 \end{aligned} \tag{3.31}$$

It is seen from the Eq. 3.31 that not only the direction, but also the magnitude of the resultant angular velocity remains unchanged. Expressed in terms of the angles defining the orientation of the air-path axes, we have

$$\Omega = \frac{d\chi}{dt}$$

and

$$\frac{d\gamma}{dt} = \frac{d\mu}{dt} = 0 \tag{3.32}$$

Evidently, the flight-path angle γ and the aerodynamic angle of roll μ are also independent of time. Consequently, the same holds true for the angle of attack α and the angle of sideslip β since at a given velocity the aerodynamic force solely depends on the attitude of the airplane relative to the velocity vector, and this orientation is fully determined by the angles α and β .

As shown in Fig. 3.2, the condition that velocity V , angle γ and angular velocity Ω are constants, implies that the most general steady motion of an airplane is a non-symmetric flight in which the center of gravity of the airplane travels at constant velocity along a helical path with vertical axis, having a constant radius and pitch (spiral climb).

In performance considerations, the forces in Eq. 3.30 are conveniently expressed in terms of their components along the air-path axes. In doing so, we derive for the steady helicoidal motion the following force equations (Fig. 3.3):

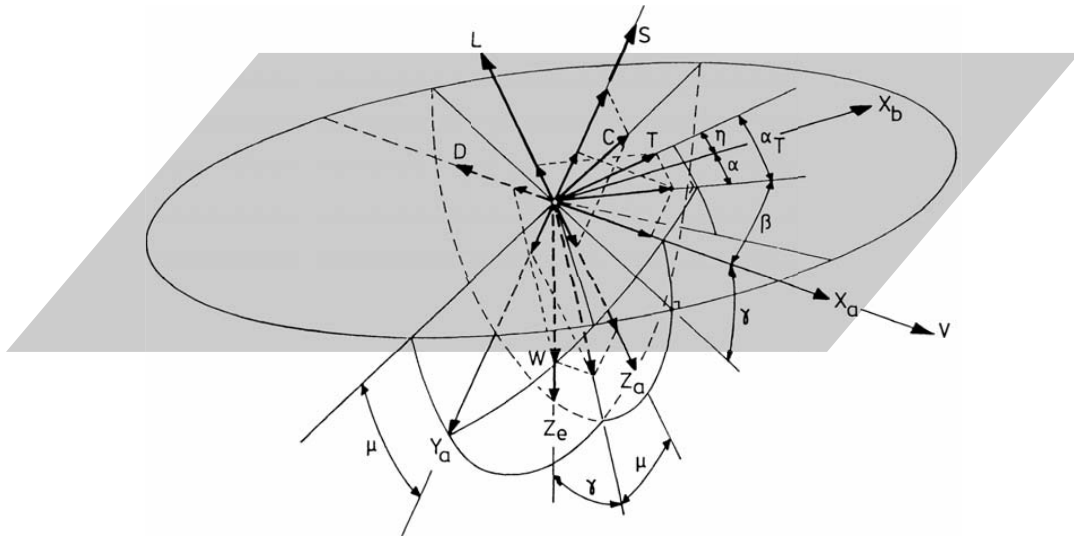


Figure 3.3 Forces acting on the airplane in steady helicoidal motion

$$\begin{aligned}
 -D + T \cos \alpha_T \cos \beta - W \sin \gamma &= 0 \\
 -S - T \cos \alpha_T \sin \beta + W \cos \gamma \sin \mu - C \cos \mu &= 0 \\
 -L - T \sin \alpha_T + W \cos \gamma \cos \mu - C \sin \mu &= 0
 \end{aligned}
 \tag{3.33}$$

These equations give the force components along the X_a , Y_a and Z_a axis, respectively. As can be seen from Fig. 3.3, the sideslip is toward the inner side of the curvilinear path ($\beta > 0$).

The thrust angle α_T in Eq. 3.33 includes the angle of attack and the fixed inclination η of the thrust vector to the X_b axis.

$$\alpha_T = \alpha + \eta \tag{3.34}$$

The force C is the horizontal centrifugal force, which is given by (see Eq. 1.16)

$$C = \frac{W}{g} V \Omega \cos \gamma = \frac{W}{g} \frac{V^2}{R} \cos^2 \gamma \tag{3.35}$$

Where R is the radius of curvature (Fig. 3.2). The side force S is the cross component of the aerodynamic force R due to the sideslipping motion, and acts along the negative Y_a axis at a positive angle of sideslip. The paramount contributions to the force S originate from the fuselage and the vertical tailplane. Also the propulsive system may produce a contribution to the side force.

3.5. SPECIAL TYPES OF STEADY FLIGHT

3.5.1. STEADY STRAIGHT NON-SIDESLIPPING FLIGHT

In this particular case all the lateral variables of the most general steady motion are zero: $\beta = 0$, $C = 0$, $S = 0$. Insertion of these conditions into Eq. 3.33 teaches us that also the aerodynamic angle of roll is zero ($\mu = 0$). The force equations (3.30) are then reduced to

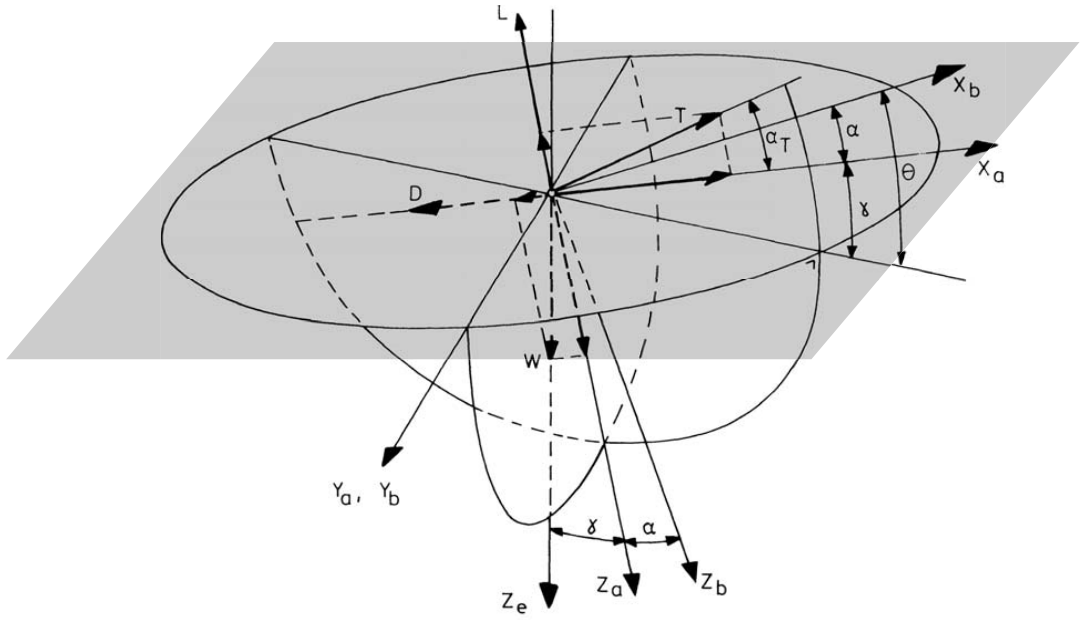


Figure 3.4 Steady straight non-sideslipping flight

$$\begin{aligned} -D + T \cos \alpha_T - W \sin \gamma &= 0 \\ -L - T \sin \alpha_T + W \cos \gamma &= 0 \end{aligned} \quad (3.36)$$

In addition, we have the requirement that the moments generated by the aerodynamic forces must be fully balanced by appropriate settings of the control surfaces (trimmed flight condition where $M_x = M_y = M_z = 0$). Use of the controls, of course, will affect the aerodynamic characteristics of the airplane. However, in considering particular flight types, we shall assume that the contributions from control surface deflections to lift, drag, and side force are sufficiently small in magnitude so that they can be neglected. Moreover, because we are primarily concerned with the translational motion of the airplane, we can usually limit ourselves to the application of the force equations only. The above-mentioned conclusion that $\mu = 0$ implies that the Y_a axis lies in the horizontal plane so that the plane of symmetry of the airplane coincides with one and the same vertical plane (Fig. 3.4). Consequently, the motion indicated here concerns steady symmetric flight, which is the basic type of flight in performance analyses (see also Fig. 1.29).

3.5.2. STEADY STRAIGHT SIDESLIPPING FLIGHT

In this case we have the condition $R = \infty$ and thus $C = 0$ in Fig. 3.3. Now the equilibrium Eq. 3.33 change into:

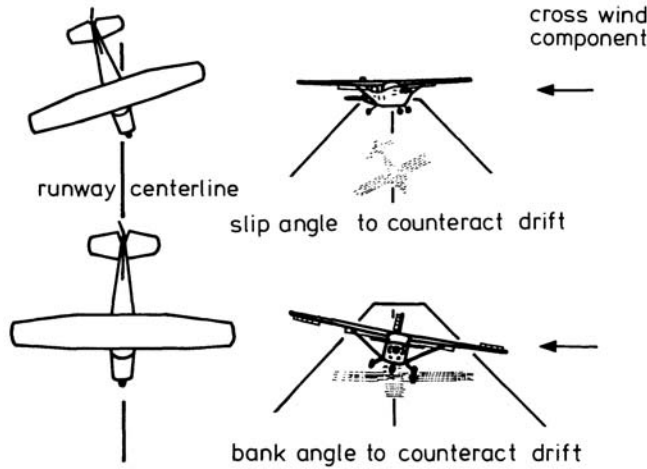


Figure 3.5 Landing in cross wind

$$\begin{aligned}
 -D + T \cos \alpha_T \cos \beta - W \sin \gamma &= 0 \\
 -S - T \cos \alpha_T \sin \beta + W \cos \gamma \sin \mu &= 0 \\
 -L - T \sin \alpha_T + W \cos \gamma \cos \mu &= 0
 \end{aligned} \tag{3.37}$$

In this flight type the side force S is mainly balanced by the lateral component of the weight of the airplane.

Normally, the pilot will always try to avoid sideslipping flight in order to minimize the drag of the airplane. The intentional application of an angle of sideslip is restricted to the approach prior to the landing in cross wind, where the combination of sideslip angle and bank angle is used to counteract the lateral drift of the airplane relative to the runway (Fig. 3.5).

Also during landing approaches of small propeller-driven airplanes and gliders in head wind or still air, the sideslip provides a means of losing height more rapidly than in the case of symmetric flight, due to increased drag at large β .

3.5.3. THE FLAT TURN

This type of non-symmetric flight concerns the steady, curved, sideslipping flight in a horizontal plane without angle of bank (Fig. 3.6). Since the plane of symmetry of the airplane is kept vertical, the centrifugal force produced by the circling motion is balanced by a component of the thrust and the side force S , acting along the positive Y_a axis. Therefore, in the flat turn, the nose of airplane lies to the right of the velocity vector ($\beta < 0$). From Fig. 3.7 we now get the following force equations:

$$\begin{aligned}
 -D + T \cos \alpha_T \cos \beta &= 0 \\
 -S - T \cos \alpha_T \sin \beta - C &= 0 \\
 -L - T \sin \alpha_T + W &= 0
 \end{aligned} \tag{3.38}$$

In the flat turn, the occupants of the airplane are submitted to annoying transversal accelerations.

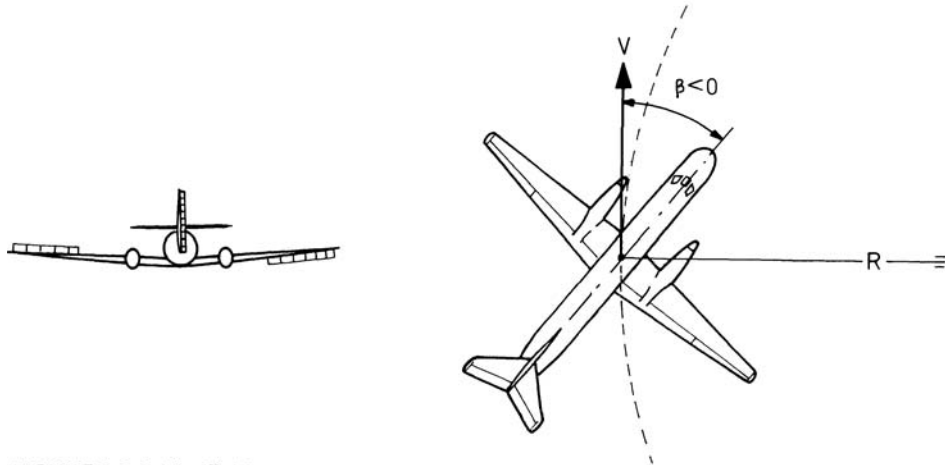


Figure 3.6 The flat turn

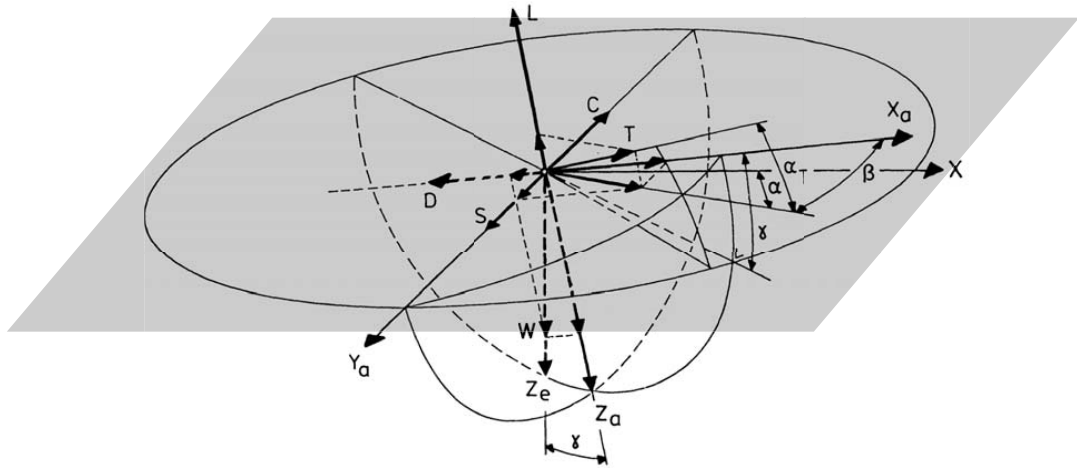


Figure 3.7 Forces in the flat turn

Moreover, it appears that the radius of curvature in the flat turn is relatively large. Because of this, the pilot will use this maneuver only to change his pathway over the Earth slowly (Ref. 5). In regular cases, however, the course of an airplane is always changed by executing a *banked turn* as will be discussed in the following. The technique to execute a flat turn is also called *skid to turn*. It is frequently used in missile control.

3.5.4. STEADY NON-SIDESLIPPING BANKED TURN

This type of flight is called the *true banked* or *coordinated turn*, and is the natural maneuver to change the pathway of an airplane. In a coordinated turn to the right, the pilot brings the airplane

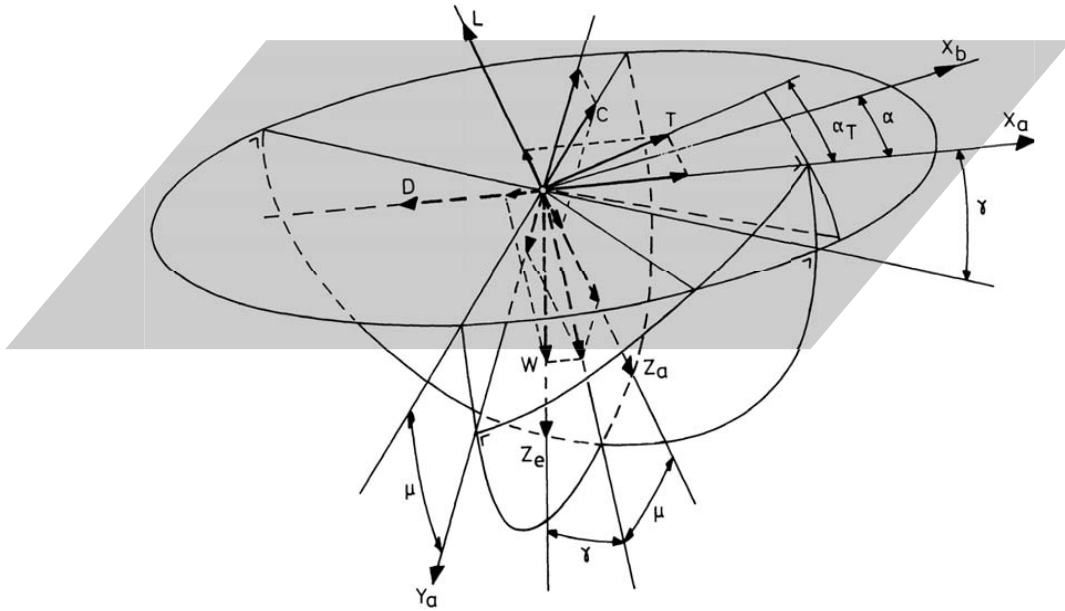


Figure 3.8 Forces in the coordinated turn

into an inclined position by banking it to the right. As the condition for a coordinated turn is that the airplane may not be yawed, the Y_a axis and the Y_b axis coincide. Then, analogous to Eq. 1.19, the relation between angle of bank Φ , aerodynamic angle of roll μ , and the flight-path angle γ is given by

$$\sin \Phi = \sin \mu \cos \gamma. \quad (3.39)$$

Owing to the absence of sideslip the side force S is zero so that the resultant aerodynamic force acts in the plane of symmetry of the airplane. Accordingly, also the vector sum of the weight W and the centrifugal force C lies in the plane of symmetry (Fig. 3.8).

The equilibrium equations now read:

$$\begin{aligned} T \cos \alpha_T - D - W \sin \gamma &= 0 \\ W \cos \gamma \sin \mu - C \cos \mu &= 0 \\ -T \sin \alpha_T - L + W \cos \gamma \cos \mu + C \sin \mu &= 0 \end{aligned} \quad (3.40)$$

The second equation of Eq. 3.40 shows that in the coordinated turn the component of the centrifugal force along the Y_a axis is balanced solely by a lateral component of the weight of the airplane. Consequently, the occupants experience only an additional force in a direction perpendicular to their seats, and there will be no tendency of sliding in a lateral direction.

Often, the system of Eq. 3.40 may be expressed as follows:

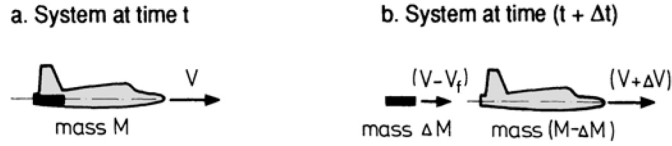


Figure 3.9 Ejection of airplane mass

3

$$\begin{aligned}
 T \cos \alpha_T - D - W \sin \gamma &= 0 \\
 -T \sin \alpha_T \sin \mu + L \sin \mu - C &= 0 \\
 -T \sin \alpha_T \cos \mu - L \cos \mu + W \cos \gamma &= 0
 \end{aligned} \tag{3.41}$$

The first of these equations gives again the equilibrium of forces along the X_a -axis. The second equation gives the summation of the radial forces in the horizontal plane, whilst the third equation gives the summation of the forces acting perpendicular to the X_a axis in the vertical plane.

3.6. TRANSLATIONAL EQUATION FOR VARIABLE MASS

In considering the motion of an airplane powered by conventional fuel, we have to allow for the fact that in powered flight the propulsion system consumes fuel, by which the mass of the airplane is decreasing continually. In case of battery powered electric flight, the mass remains constant. Note that some special battery types, such as the lithium air battery may even increase in mass during flight as a result of oxidation.

In order to formulate the equation for translational motion for a rigid airplane ejecting mass, we consider an airplane in horizontal straight flight that at time t has a mass M and a velocity V relative to an inertial frame of reference (Fig. 3.9a).

Suppose that at time $t + \Delta t$ the airplane has a mass $M - \Delta M$ and a velocity $V + \Delta V$.

Further, suppose that mass ΔM , ejected in the time Δt , has a velocity V_f relative to the airplane (Fig. 3.9b).

By Newton's second law of motion, the total external force acting on the complete mass system at time t is equal to the rate of change of linear momentum of the system. In the limit as Δt tends to zero we have

$$F = \lim_{\Delta t \rightarrow 0} \frac{(M - \Delta M)(V + \Delta V) + \Delta M(V - V_f) - MV}{\Delta t} = M \frac{dV}{dt} - V_f \frac{dM}{dt} \tag{3.42}$$

Thus for an airplane that is losing mass, the equation of motion can be written as

$$F + V_f \frac{dM}{dt} = M \frac{dV}{dt} \tag{3.43}$$

The term $\frac{dM}{dt}$ may be replaced by the fuel flow rate, $\dot{m}_f$

$$\frac{dM}{dt} = -\dot{m}_f \tag{3.44}$$

where the minus sign indicates that the airplane mass is decreasing. Substitution of Eq. 3.44 into Eq. 3.43 gives

$$F - \dot{m}_f V_f = M \frac{dV}{dt} \quad (3.45)$$

We conclude that Eq. 3.2 can be used to consider the motion of an airplane in powered flight, provided that the linear momentum of the fuel flow rate relative to the airplane is included in the entire external force.

3.7. PROBLEMS

1. Are the following statements true or false?
 - (a) The body axis system can be a rotating axis system, e.g. when the airplane is performing a pull-up maneuver or a turn.
 - (b) A rotating axis system can be considered an inertial frame of reference.
2. Euler's equations of rotational motion are a function of the moments of inertia (I_x , I_y and I_z) and the products of inertia (I_{xy} , I_{xz} and I_{yz}). Which of these six terms can be assumed zero for conventional airplanes?
3. Explain the difference between the field of aircraft performance and the field of stability and control.
4. Derive the equations of motion for steady horizontal straight sideslipping flight.
5. A large transport aircraft with turbofan engines is performing a cruise flight at constant altitude (11 km) and constant airspeed (250 m/s). At the start, the aircraft has a weight of 3500 kN. The jet velocity of the core of the turbofan equals 550 m/s. The distance flown in cruise is 7500 km. At the end of the cruise flight, the airplane weight has reduced to 2200 kN. Compute the external force resulting from the ejection of fuel mass that should be included when using Newton's second law of motion for rigid bodies with constant mass.

4

AERODYNAMIC BASIS

4.1. AERODYNAMIC COEFFICIENTS

The aerodynamic forces R and the moment M_{cg} , acting on a moving airplane are produced by pressure forces and viscous forces. The pressure forces happen due to the asymmetric pressure distribution about the wing and the other airplane component parts, whereas the viscous forces arise because of shear stresses at the outer surface of the airplane.

[Fig. 4.1](#) shows the pressure distribution over a wing section slanted at a normal (low) incidence angle to the free stream in a steady flow. According to Bernoulli's equation for compressible isentropic flow in [Appendix C](#), the variation of the static pressure p along a streamline is given by

$$p_t = p \left[1 + \frac{\gamma - 1}{2} \frac{1}{\gamma} \frac{\rho}{p} V^2 \right]^{\frac{\gamma}{\gamma - 1}} = \text{constant} \quad (4.1)$$

Along the streamline which follows the surface of the wing section, the velocity lowers from the free stream value ahead of the wing till zero at the stagnation point on the nose of the wing, where the static pressure becomes equal to the free stream total pressure p_t .

Following the streamline from the nose along the upper surface of the wing section, the velocity increases and the local static pressure decreases. At some point the velocity reaches its highest value and the static pressure its lowest value. Past this point the velocity decreases again and the local static pressure comes back to the free stream static pressure. Similar variations of local velocity and pressure occur along the lower surface. Owing to the difference between the amount of upper and lower surface camber, and also because the wing section is at an angle of incidence, the velocity of the air flowing over the upper surface is greater than the velocity along the lower surface. Consequently, the pressure on the upper surface will be lower than that acting on the lower surface. As a result, a resultant force is produced due to shape and angle of attack of the wing section. The surface shear stress τ_0 is the force per unit area acting tangentially on the surface of a body due to the frictional effects between body and surrounding air flow. [Fig. 4.2](#) illustrates the cause of the shear stress, namely, the fact that the fluid particles adjacent to a solid boundary are brought to rest and those close to it are slowed down markedly. This effect decays quickly across the flow so that always

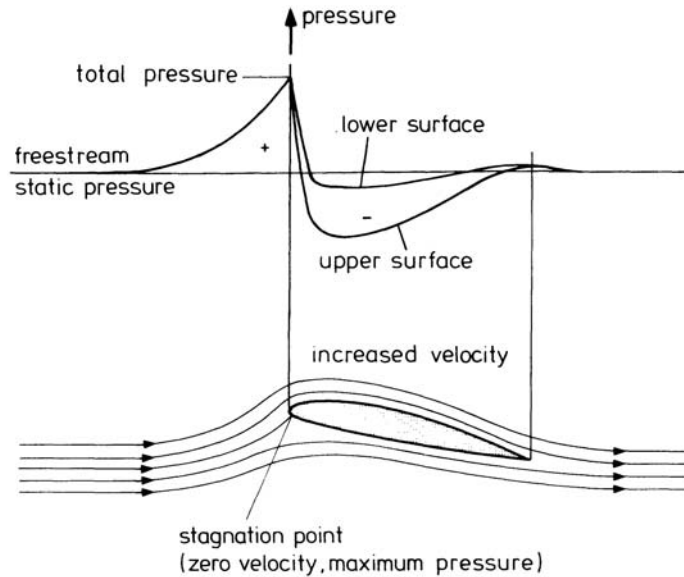


Figure 4.1 Pressure distribution over a wing section

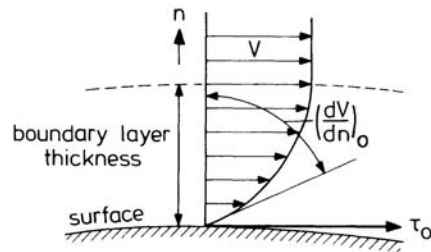


Figure 4.2 Velocity profile across the boundary layer

there is a velocity gradient in the flow adjacent to the surface of the body. The layer in which the velocity of the air particles increases from zero at the surface to the local velocity about the body is normally very thin (thickness < 1 cm).

The velocity differences between the laminae of air are fundamentally due to cohesion and interaction between fluid particles. It allows motion only by sliding action between adjacent layers which induces shear forces. The resultant effect of all these forces is the skin friction drag of the body. The layer of air adhering to the surface in which friction is essential is indicated as the boundary layer. As will be explained in [Section 4.3](#), the concept of boundary layer flow is a useful tool for the understanding of drag characteristics. Point of departure thereby, is the idea that viscosity manifests only in a restricted region and not throughout the main flow.

Hence the flow pattern around a body may be divided into two regions, that is, a thin boundary layer in which friction is important, and a region beyond this in which the air behaves as a friction-

less fluid.

Experimentally, it has been observed that the shear stress τ_0 is given by the product of the slope of the velocity profile at the surface and the coefficient of dynamic viscosity μ ,

$$\tau_0 = \left(\frac{dV}{dn} \right)_0 \mu \quad (4.2)$$

For the simple type of laminar flow where successive layers of air slide over one another in the form of parallel layers, the coefficient μ is a physical property, approximately proportional to the square root of the temperature, over the normal range of air temperatures (see [Chapter 2](#)). Clearly, for a given μ , the velocity gradient at the surface is the deciding factor in the determination of the skin friction drag.

From the preceding discussion we may expect that the aerodynamic force and moment are determined by the following quantities:

1. general shape of the airplane size of the airplane surface, S airplane condition
2. control surface deflections
3. attitude of the airplane relative to the free stream
4. airspeed, V
5. density of the air, ρ
6. coefficient of dynamic viscosity, μ .

To these variables should be added the speed of sound in air, c , which defines the free stream *Mach Number*, $M = V/c$. As we will see later, the Mach number is a convenient parameter for indicating the importance of the compressibility of the air on the pressure distribution over the airplane surface (see [Section 4.3](#)).

A working method to derive expressions for the aerodynamic force R and moment M_{cg} is the technique called *dimensional analysis*. This technique is based on the principle that in a physical equation the dimensions should be the same on both sides. Therefore, we state that the aerodynamic force on the airplane depends on S, V, ρ, c and μ ,

$$R = f(S, V, \rho, c, \mu) \quad (4.3)$$

Since R has dimensions of a force, the right side of [Eq. 4.3](#) must also have dimensions of a force. The only possibility to secure dimensional uniformity is writing the latter equation in the following manner,

$$R = K(S^a V^b \rho^d c^e \mu^f) \quad (4.4)$$

where a, b, d, e and f are unknown constants and K is a function of the remaining dimensionless variables, which cannot be brought into [Eq. 4.3](#). Then, in terms of mass $[M]$, length $[L]$ and time $[T]$, we have

$$\frac{ML}{T^2} = K (L^2)^a \left(\frac{L}{T}\right)^b \left(\frac{M}{L^3}\right)^d \left(\frac{L}{T}\right)^e \left(\frac{M}{LT}\right)^f \quad (4.5)$$

Clearly, the exponent of the mass on the left-hand side of Eq. 4.5 is 1, and on the right-hand side $d + f$. Thus,

$$1 = d + f \quad (4.6)$$

Similarly, for the length we get

$$1 = 2a + b - 3d + e - f \quad (4.7)$$

and for the time

$$-2 = -b - e - f \quad (4.8)$$

The latter three equations contain five unknowns. Assuming that S , V and ρ are of primary significance, we can solve the Eq. 4.6 to Eq. 4.8 for a , b and d in terms of e and f . We find

$$\begin{aligned} a &= 1 - f/2 \\ b &= 2 - e - f \\ d &= 1 - f \end{aligned} \quad (4.9)$$

Substitution of these exponents into Eq. 4.4 gives

$$R = K (S)^{1-f/2} (V)^{2-e-f} (\rho)^{1-f} c^e \mu^f \quad (4.10)$$

Grouping factors of particular exponents yields

$$R = K \rho V^2 S \left(\frac{c}{V}\right)^e \left(\frac{\mu}{\rho V S^{1/2}}\right)^f \quad (4.11)$$

Since the dimension of $S^{1/2}$ is correspondent to a length l , we may write

$$R = K \rho V^2 S \left(\frac{c}{V}\right)^e \left(\frac{\mu}{\rho V l}\right)^f \quad (4.12)$$

We note that the ratio V/c is the free stream Mach number. The quantity $\rho V l / \mu$, which is called the *Reynolds number* (denoted by the symbol Re), indicates the relative importance of the shear and inertia forces within the flow; the lower the value of Re the more relative important are the viscous forces. Hence,

$$R = K \rho V^2 S \left(\frac{1}{M}\right)^e \left(\frac{1}{Re}\right)^f \quad (4.13)$$

For convenience we set

$$K \left(\frac{1}{M}\right)^e \left(\frac{1}{Re}\right)^f = \frac{C_R}{2}$$

Now we can write

$$R = C_R \frac{1}{2} \rho V^2 S = C_R q S \quad (4.14)$$

Eq. 4.14 states that the aerodynamic force is determined by a coefficient C_R times the dynamic pressure $\frac{1}{2} \rho V^2 = q$ times an area S .

For airplanes the convention is to use the area of the wing planform as the surface of reference. This area is called wing area and is further explained in Section 4.2. Evidently, Eq. 4.14 represents also the lift, drag and side force components of the aerodynamic force:

$$\begin{aligned} L &= C_L \frac{1}{2} \rho V^2 S \\ D &= C_D \frac{1}{2} \rho V^2 S \\ S &= C_S \frac{1}{2} \rho V^2 S \end{aligned} \quad (4.15)$$

Here the coefficients C_L , C_D and C_S are known as the coefficients of lift, drag and side force, respectively. When the technique of dimensional analysis is applied to the moment M_{cg} , the following expression easily is found,

$$M_{cg} = C_M \frac{1}{2} \rho V^2 S \bar{c} \quad (4.16)$$

where C_M is the non-dimensional moment coefficient. According to universal practice, the length factor $\bar{c}$ is taken equal to the mean aerodynamic chord of the wing (see Section 4.2).

The way in which the coefficients C_L , C_D , and C_M are determined in aerodynamics is, of course, beyond the scope of this text. At this place, suffice it to say that these coefficients strongly depend on the precise shape of the airplane. And even for a given airplane, they are by no means constants, but rather dependent on airplane condition, control surface deflections, Mach number, Reynolds number, and attitude of each of the airplane components with respect to the local airflow.

The side force given in Eq. 4.15 occurs only when there is an angle of sideslip. However, sideslipping flight is virtually always an unwanted flight condition. Therefore, so-called coordinated flight conditions ($\beta = 0$) are of primary importance.

4.2. AIRFOIL AND WING CHARACTERISTICS

A cross-section of the wing parallel to the plane of symmetry of the airplane is called *airfoil* or *wing section*, and is so shaped as to generate lift without excessive drag. Fig. 4.3 provides an impression of the development of wing section shapes over the years. Of special significance is the supercritical airfoil developed for use on the modern high-subsonic transports. This advanced wing section has a flatter upper surface, a more convex underside, and an increased camber near the trailing edge. The improved shape gives a more evenly distributed pressure over the surface, permitting the section to be thicker without causing more drag at high-subsonic airspeeds than its predecessors. For example, the GAW-2 airfoil was designed for application on the low-subsonic general aviation airplanes. This airfoil type produces reduced drag coefficients and an increased maximum lift coefficient. Fig. 4.4 gives the nomenclature in defining the shape of an airfoil. The mean camber line determines the amount of curvature and is the line that is situated in

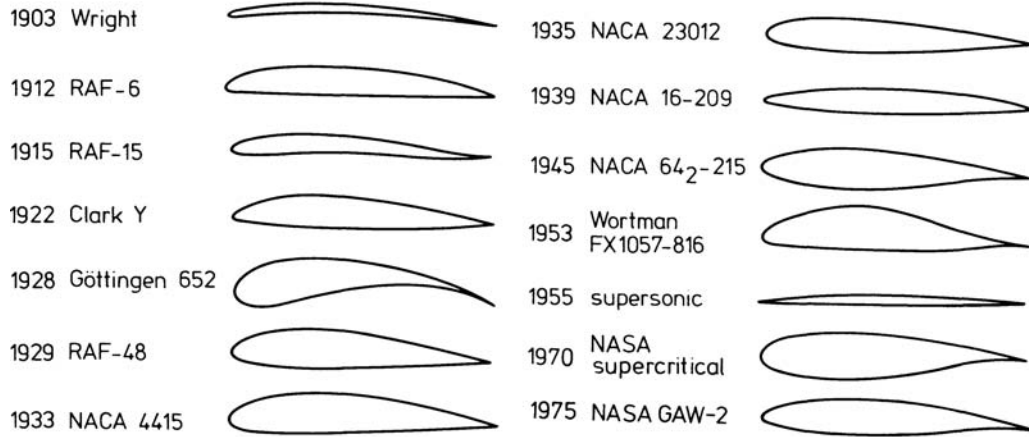


Figure 4.3 Historical review of airfoil shapes

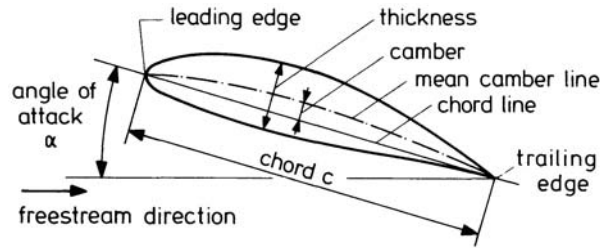


Figure 4.4 Airfoil geometry and nomenclature

the middle between upper and lower surfaces. The ends of the mean camber line are the leading edge and the trailing edge points. The chord line is the straight line joining the two ends of the mean camber line. The chord is the distance between leading edge and trailing edge points, measured along the chord line. The angle between the free stream direction and the chord line is the angle of attack α .

The two-dimensional lift, drag and moment coefficients are, according to Eq. 4.15 and Eq. 4.16,

$$c_l = \frac{l}{\frac{1}{2}\rho V^2 c} \quad (4.17)$$

$$c_d = \frac{d}{\frac{1}{2}\rho V^2 c} \quad (4.18)$$

$$c_m = \frac{m}{\frac{1}{2}\rho V^2 c} \quad (4.19)$$

where l , d and m are the Lift, drag and pitching moment of the aerodynamic force per unit width of the wing, respectively (Fig. 4.5). The moment m is usually specified in reference to the quarter-

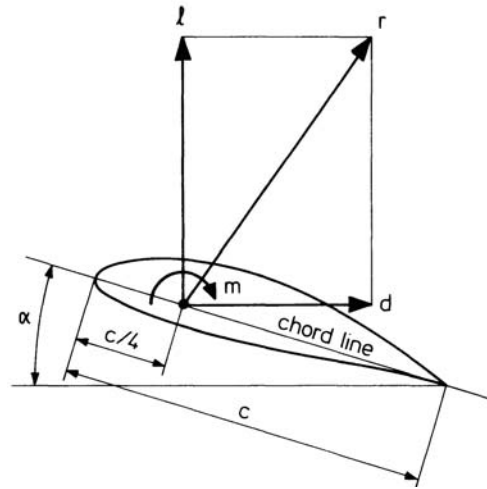


Figure 4.5 Aerodynamic force and moment on airfoil

chord point. At low velocities, this point is very close to the aerodynamic center of the airfoil. The latter point is the point about which the pitching moment for a given free stream velocity is essentially independent of the angle of attack. Characteristic curves are sketched in Fig. 4.6, showing the variations of lift, drag and moment coefficients with angle of attack.

Apparently, up to a large angle of attack, the c_l versus α curve may be represented by a straight line. Notice also that the moment coefficients have negative values. As the angle of attack is increased up to the stall point, c_{lmax} is reached. Beyond this critical angle of attack, the airflow separates from the upper surface, with the result that the lift coefficient is strongly reduced. Computational methods have been developed for the determination of the coefficients c , c_d and c_m . Also, a large amount of experimental airfoil data from wind tunnel tests is available in literature (see Ref. 6).

Fig. 4.7 shows the most important parameters specifying the geometry of an airplane wing. The wing span b is the length in Y -direction between the wing tips. The wing area S , is the area of the wing projected onto the XY plane, and may be written as

$$S = \int_{-b/2}^{b/2} c(y) dy \quad (4.20)$$

where c is the chord length, which often varies with the Y -coordinate. The ratio c_l/c_r is named the taper ratio. As illustrated in Fig. 4.8, the wing area, arbitrarily, comprises also the central part of the wing covered by the fuselage.

The mean geometric chord, c_{mg} , is the arithmetic mean of the chord lengths:

$$c_{mg} = \frac{S}{b} \quad (4.21)$$

The ratio of the wing span to the mean geometric chord is known as the aspect ratio and given the

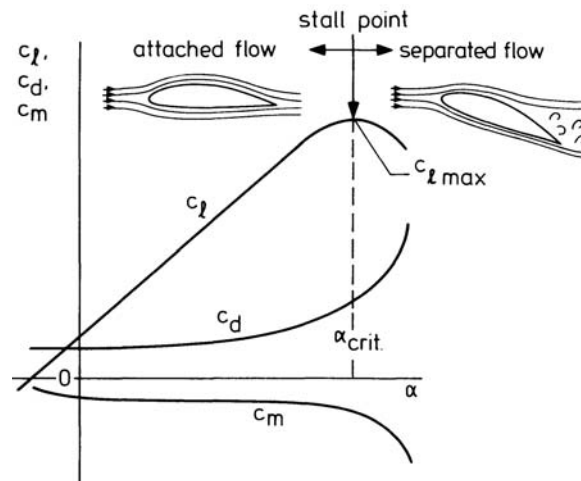


Figure 4.6 Typical $c_l - \alpha$, $c_d - \alpha$, $c_m - \alpha$ curves for cambered airfoil

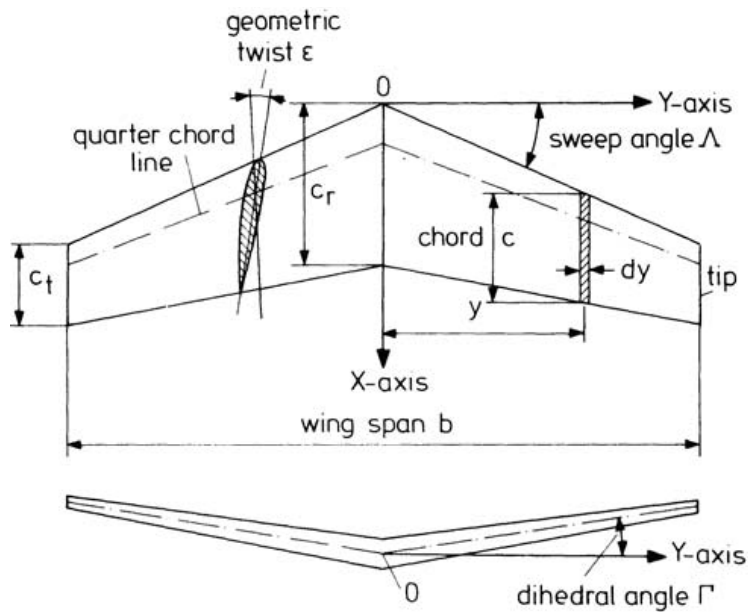


Figure 4.7 Wing geometry

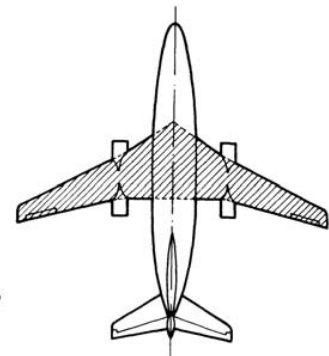


Figure 4.8 Wing area

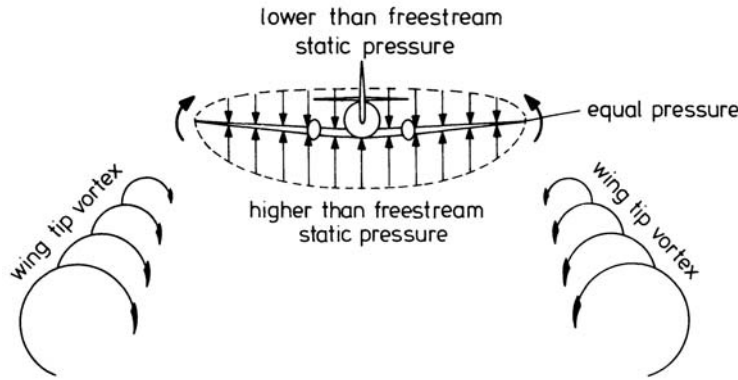


Figure 4.9 Finite wing flow

symbol A :

$$A = \frac{b}{c_{mg}} = \frac{b^2}{S} \quad (4.22)$$

A wing parameter of importance in quantifying the moment coefficient is the mean aerodynamic chord $\bar{c}$, which is defined as

$$\bar{c} = \frac{1}{S} \int_{-b/2}^{b/2} c^2(y) dy \quad (4.23)$$

As with wing area S , we usually specify $c(y)$ over the part of the wing occupied by the fuselage by extending the leading and trailing edges to the plane of symmetry of the airplane. Geometric twist ϵ , is the variation in direction of a section chord line relative to the direction of the chord line at the root section of the wing. We may modify the span-wise distribution of lift by twisting the wing to give a desired angle-of-attack variation along the span.

The dihedral angle Γ is the angle between the quarter-chord line and its projection on the XY plane. Dihedral is applied as a means to improve lateral stability. The last term denotes the ability of the airplane to restore to its original attitude after an unwanted displacement about the X_b axis, without pilot assistance.

We end our enumeration of wing geometrical parameters with the sweep angle Λ , which may be represented by the angle between the Y axis and the projection of the wing leading edge onto the XY plane. Sweeping the wing is an important measure to reduce the magnitude of the free stream velocity normal to the leading edge, which component determines the velocity and pressure distributions over the wing sections.

Next we have to consider the influence of the finite width of the wing on lift and drag coefficients, when using two-dimensional airfoil data. Since the pressure on the bottom surface is greater than that on the top surface, there will arise a circular motion of air around the wing tips, and consequently, a reduced lift coefficient at a given angle of attack (Fig. 4.9). In exchange for this loss of lift, we get from the span-wise inflow above the wing and the outflow below the wing, two discrete wing tip vortices in the flow downstream of the wing. A theoretical analysis yields the following approximate formula for the value of the wing lift curve slope at subsonic velocities (Ref. 7):

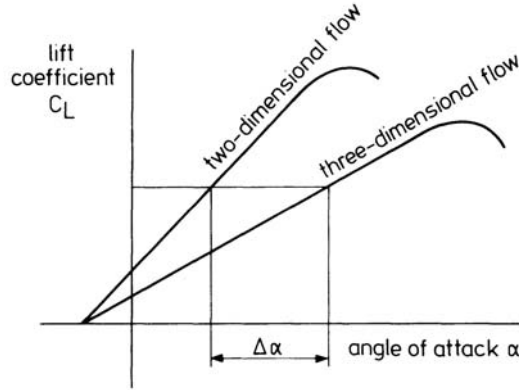


Figure 4.10 Wing lift coefficient as a function of angle of attack

$$\frac{dC_L}{d\alpha} = \frac{2\pi}{\frac{2}{A} + \sqrt{\left(\frac{2}{A}\right)^2 + \frac{1}{\cos^2 \Lambda} - M^2}} \quad (4.24)$$

Now we can examine the example where we want to achieve the same lift coefficient from a wing placed in a three-dimensional flow as predicted by the aerodynamic properties of the composing wing sections.

From Fig. 4.10, we see that this is obtained by increasing the angle of attack of the wing in the actual three-dimensional flow by a small value $\Delta\alpha$ over that for the wing in two-dimensional flow. The latter flow condition is the same as would prevail for a wing of infinite span. In terms of drag, the effect of the increased angle of attack is expressed as follows; the drag coefficient for the wing in the three-dimensional flow is equal to the two-dimensional drag coefficient C_{Dp} plus the induced drag coefficient C_{Di} :

$$C_D = C_{Dp} + C_{Di} \quad (4.25)$$

The coefficient C_{Dp} in Eq. 4.25 is called the profile drag coefficient (due to pressure drag and skin friction drag in the two-dimensional situation at the given lift coefficient C_L).

In order to raise the maximum lift coefficient C_{Lmax} during takeoff and landing, aerodynamic devices are affixed to the wing. The most usual devices to facilitate takeoff and landing are trailing-edge flaps, which may also extend the wing area. In particular, the increase in C_{Lmax} is obtained by a change in airfoil shape and/or by increased camber. The effects of the use of flaps is indicated in Fig. 4.11, where it is shown that the lift coefficients are increased over the whole range of angles of attack, and that the critical angle of attack may be slightly decreased from that of the wing with flaps up. Flaps also increase the wing drag.

Therefore, full flap deflection is applied to decelerate the airplane during the landing maneuver. The different types of trailing-edge flaps are shown in Fig. 4.12. The maximum lift coefficient may also be increased by use of a slot formed by an auxiliary device called slat, which is placed in front of the wing leading edge. The air flowing through the slot is accelerated, through which flow separation is delayed and so increasing the critical angle of attack and the maximum lift coefficient. The effect of the presence of a slot on the lift coefficient is illustrated in Fig. 4.13. Notice that a slot

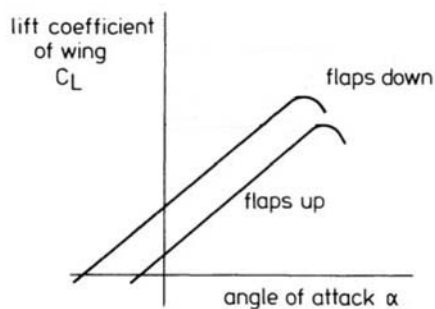


Figure 4.11 Effect of flap deflection on lift curve

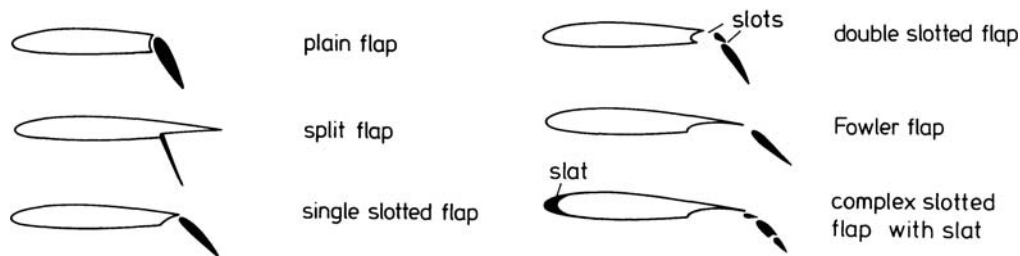


Figure 4.12 Types of wing flaps

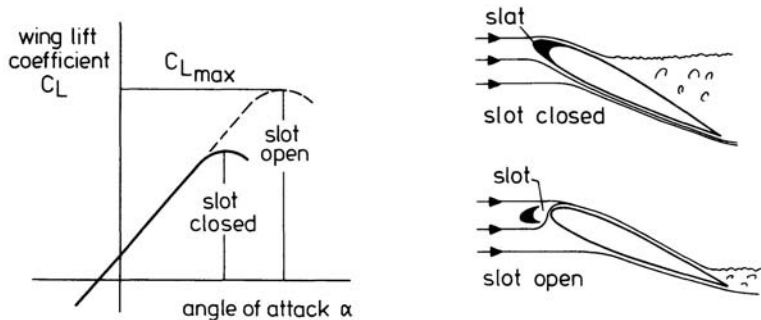


Figure 4.13 Effect of a slot on wing lift curve

extends C_{Lmax} without any shift of the lift curve. Detrimental to the view from the flight deck is the higher stall angle required.

4.3. THE LIFT-DRAG POLAR

Fig. 4.14 shows the lift and drag coefficients as a function of angle of attack for a low-subsonic airplane in clean configuration (fixed landing gear). Note that these curves have essentially the same form as for a wing section. At an angle of attack of about 16 deg, separation of the flow from

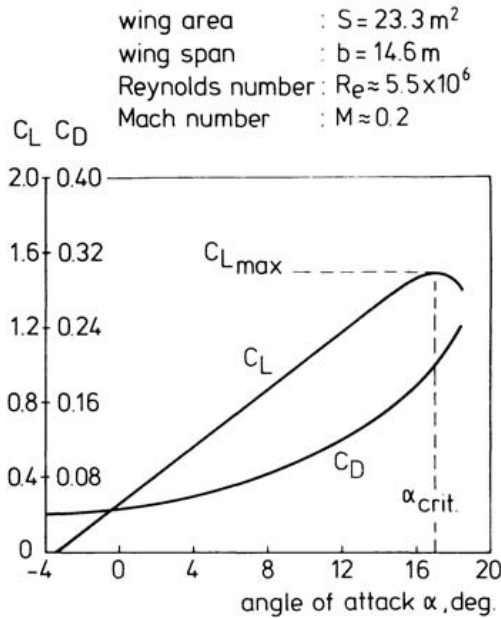


Figure 4.14 Aerodynamic characteristics of a low-subsonic airplane (estimated)

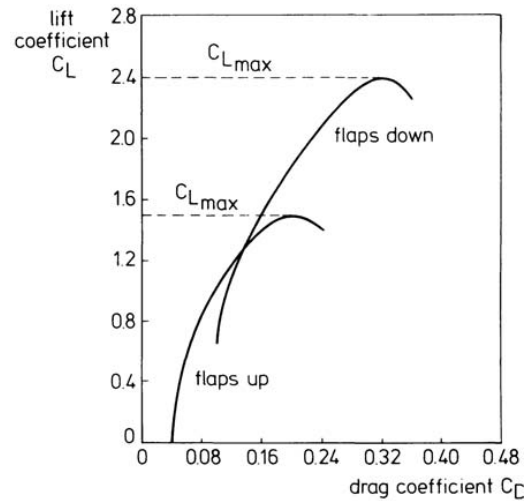


Figure 4.15 Lift-drag polar for a low subsonic airplane (estimated)

the wing begins, which leads to a substantial loss of lift and increase in airplane drag. Therefore, the airplane can only fly at an angle of attack below $\alpha_{crit.}$ By elimination of α from the relations $C_L = f(\alpha)$ and $C_D = f(\alpha)$, the lift-drag polar is obtained,

$$C_D = f(C_L) \quad (4.26)$$

The lift-drag polar which results from Fig. 4.14 is given in Fig. 4.15. In addition, the lift-drag polar is also plotted for the airplane with wing flaps down. Due to the deflection of the flaps, the maximum lift-coefficient is increased considerably. Using Eq. 4.26 we should remember that a lift-drag polar is only of significance if the following parameters are known:

1. actual shape of the airplane (control surface deflections and airplane condition)
2. Reynolds number
3. flight Mach number.

In most performance calculations, it turns out that drag increments due to control surface deflections are negligible. Therefore, throughout this text the effects of these trim forces on the lift-drag polar will be omitted. Concerning the airplane condition, typical configurations may be distinguished to be present in the various flight phases encountered by the airplane. This means that lift-drag polars will be used that are representative for the condition of the airplane during particular flight phases, such as:

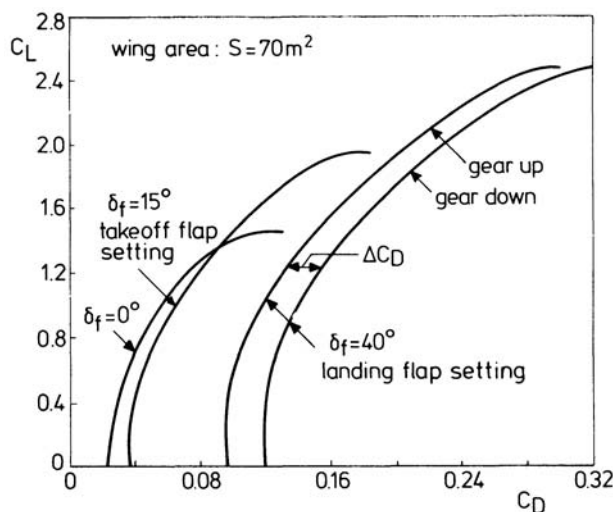


Figure 4.16 Typical lift-drag polars for propeller-driven transport airplane (estimated)

1. takeoff (flaps partly deflected and landing gear down)
2. cruise (flaps and landing gear retracted)
3. landing (flaps fully deflected and landing gear down).

From the remarks made above, it is evident that any presentation of a lift-drag polar should be accompanied by a record of the several associated conditions on which the curve depends. The lift-drag polars of a transport airplane with retractable landing gear, as given in Fig. 4.16, show that in addition to the increase of drag coefficient due to flap deflection, also the landing gear furnishes a considerable contribution to the total drag of the airplane.

As has previously been noted, the viscous effects in the flow manifest in the presence of a boundary layer. The Reynolds number has an important effect on the boundary layer. At low Reynolds numbers the flow in the boundary layer is laminar, i.e. streamline (see Fig. 4.2). At high Reynolds numbers, mostly turbulent flow prevails. In turbulent flow there are oscillations of air particles across the boundary layer, by which there is an exchange of kinetic energy among the laminae and a transfer of energy from the free stream to the boundary layer. Fig. 4.17 shows the velocity profiles across the boundary layer for both laminar and turbulent flow. Assuming the same flow conditions, the turbulent boundary layer is thicker than the laminar boundary layer.

Another important difference is that, near the surface, the velocity gradient of the turbulent layer is much greater than that of the laminar boundary layer. Then, Eq. 4.2 tells us that transition to turbulence must result in an increase in skin friction drag. Referenced to the wing chord, as characteristic linear measure, airplanes experience Reynolds numbers of 5×10^6 to 10^8 or higher. At these typical high Reynolds numbers, turbulent flow is present over a very large portion, let's say, 90% of the wing chord.

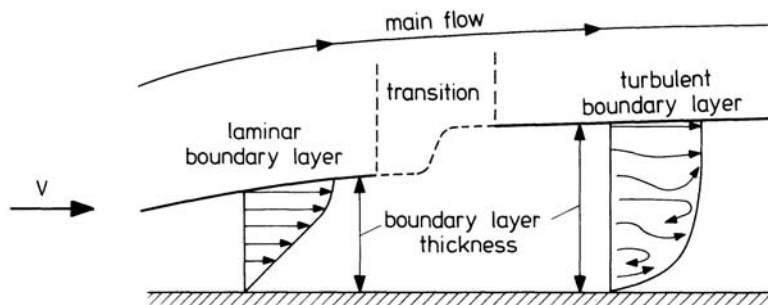


Figure 4.17 Typical laminar and turbulent boundary layer velocity profiles

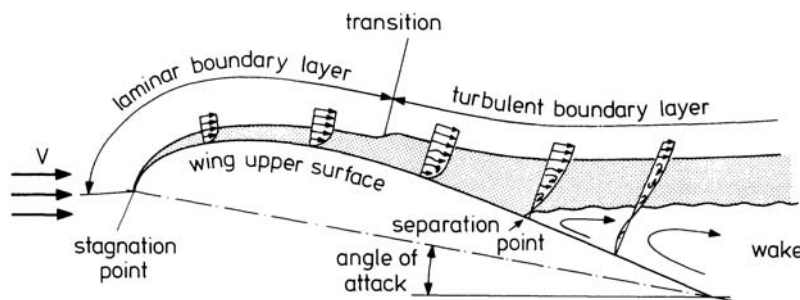


Figure 4.18 Development of the boundary layer over the wing

The development of the boundary layer over the upper surface of a wing is sketched in Fig. 4.18. Over the front portion, near the leading edge, there is always a laminar boundary layer. The thickness of this layer increases when the flow moves from the nose of the wing. Then very soon after the point for minimum local air pressure, transition to turbulence occurs which is accompanied by a drastic thickening of the boundary layer. The turbulent boundary layer goes on to grow in thickness with increasing downstream distance. When moving over the rear portion of the wing surface, the air particles must press against both the viscous forces and the increasing local pressures. At a certain point the flow collapses and a wake emanates from the flow separation.

At lower angles of attack, separation occurs generally close to the trailing edge. As the angle of attack is increased, the boundary layer thickness increases, the separation point shifts forward, and the drag coefficient builds up. Finally a complete break-away of the flow occurs, which sets an upper limit to the lift coefficient.

As the Reynolds number increases, the boundary layer becomes turbulent further upstream. At the same time, separation is delayed, resulting in a smaller wake. The size of the wake is a measure of the drag caused by the separation. The smaller the wake, the smaller the pressure drag component, and hence, the smaller the total drag coefficient. On the other hand, the maximum lift coefficient that can be obtained increases slightly with increasing Reynolds number.

At this point it is worth noting that in order to detect an approaching stall of an airplane, there must be an adequate stall warning, with flaps and landing gear in any normal position, in straight

and turning flight. The warning may be furnished either through the inherent behavior of the airplane or by an artificial stall warning device. The latter system generally consists of a pressure vent near the leading edge of the wing, located so that just prior to the stall point the stagnation pressure crosses the aperture and the pressure there varies quickly in consequence. This large pressure change is used to produce an acoustic signal or warning light to advise the pilot that the angle of attack is near the stall angle. The stall warning begins at a speed exceeding the stalling speed and continues until stall occurs.

The stall angle may also be determined by a small vane on the side of the fuselage near the nose. The vane can rotate freely so that it is aligned to the flight path, whereby the vane angle is converted into an electrical signal that is transmitted to an indicator in the cockpit.

Returning to the preceding discussion on the Reynolds number, we can summarize its effects as follows:

1. For a given condition of the wing (roughness of the surface) and shape of the wing sections (pressure distribution over the surface), the value of the Reynolds number determines the location of both the transition and the separation point.
2. With increasing Reynolds number, the transition point moves forward and the separation point moves backward over the wing. As a result, the general trends are a somewhat higher value of maximum lift coefficient and a lower profile drag coefficient when the Reynolds number becomes greater.

Concerning the variations of maximum lift coefficient and profile drag coefficient, it is important to note that these coefficients vary merely at a very small rate within the normal ranges of Reynolds numbers encountered in the various flight phases. This observation implies that, usually, it will be sufficient to consider in each flight phase a mean value of the Reynolds number.

Let us now look at the effects of flight Mach number on the lift-drag polar. For that we consider the pressure disturbances in the air produced by an airplane (Fig. 4.19). When the airplane is flying at a low airspeed, the air in front of the airplane is subjected to these disturbances amply before the airplane appears so that the air will flow smoothly about the airplane. This situation may be illustrated by Fig. 4.19a, where for convenience the airplane is represented by a point source with zero dimensions. The circles indicate the locations of the pressure disturbances which have been created by the source at certain moments and are transmitted at the speed of sound. Obviously, the disturbances are closer together in the direction of motion.

As the airspeed comes to the speed of sound, the pressure disturbances are confined to a smaller area ahead of the source, and the time between the arrival of the disturbances and the appearance of the source diminishes. This means that some adjustment must take place in a very short time (Fig. 4.19b).

As the airspeed equals the speed of sound, the pressure disturbances and the source move at the same speed (Fig. 4.19c). Now, the disturbances form a so-called *Mach wave*, which is the limiting case of an infinitely weak shock wave. Ahead of a source with finite dimensions, such as an airplane, a normal shock wave occurs (Fig. 4.19d). According to Appendix C, a shock wave is an almost sudden increase in pressure, temperature and density, and a decrease in velocity and total pressure. As a result, there is a change in pressure distribution over the surface from that experienced at low airspeeds, and hence, there is a change in the aerodynamic coefficients of the airplane. In Fig. 4.19e

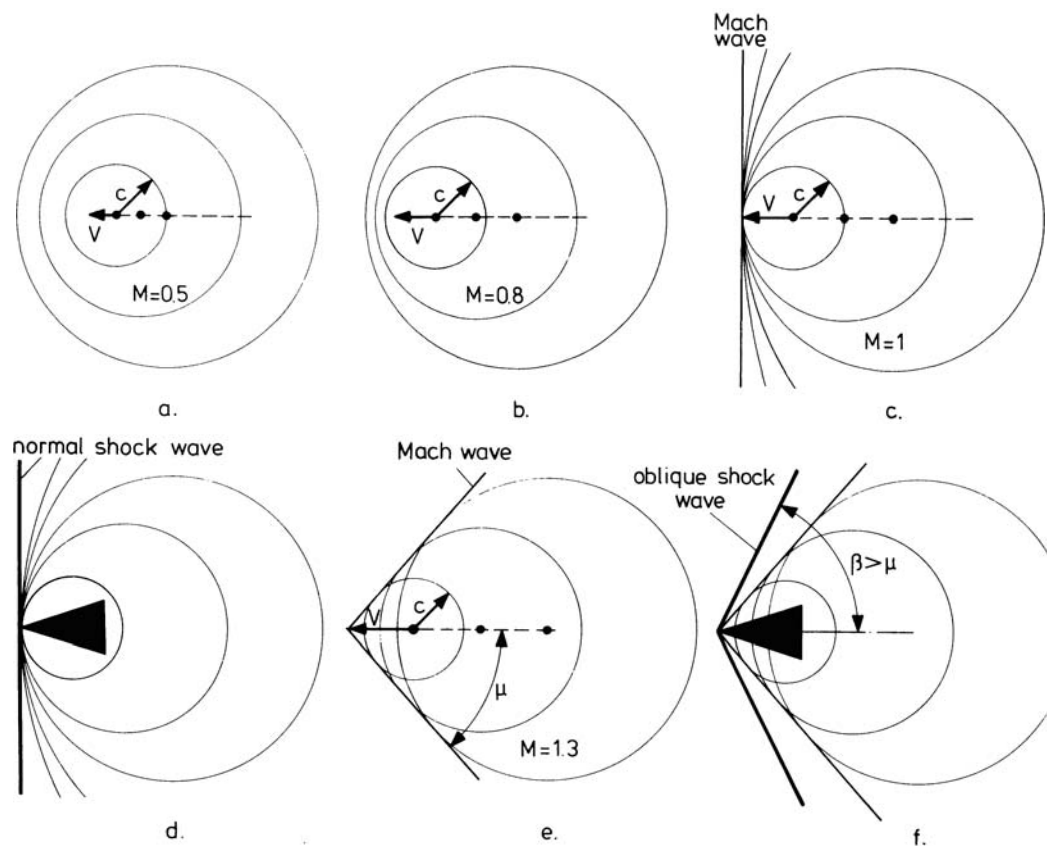


Figure 4.19 Pressure perturbations from a moving source

we see the condition in which the speed of the point source exceeds the speed of sound. Now, the Mach wave is the line tangent to all the circles of disturbances. From Fig. 4.19e we obtain

$$\mu = \sin^{-1} \left[\frac{c}{V} \right] = \sin^{-1} \left[\frac{1}{M} \right] \quad (4.27)$$

where the angle μ is the *Mach angle*, being the angle the Mach wave makes with the direction of the flight velocity. As shown in Fig. 4.19f, at the nose of a high-speed airplane, an oblique shock wave is produced, which is inclined at an angle, $\beta > \mu$ (see Appendix C).

In Fig. 4.20 the various flight regimes are classified in terms of Mach number. For Mach numbers smaller than approx. 0.5, we have low-subsonic flow, where in aerodynamics the air is treated as though it is incompressible (constant air density). For Mach numbers between 0.5 and 0.8, say, we have high-subsonic flow, where the compressibility of the air cannot be ignored. Transonic flow concerns the speed regime in which the flow pattern changes from subsonic to supersonic. This regime covers the Mach numbers between 0.8 and 1.2 approximately. For Mach numbers greater than 1.2, we have supersonic flow, where compressibility effects are of paramount importance.

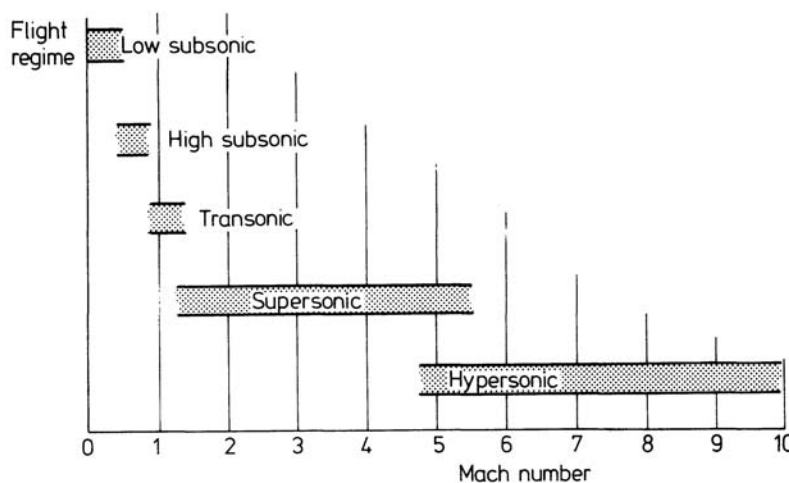


Figure 4.20 Fields of aerodynamics

Now the velocity of the main flow about the airplane in every place exceeds the speed of sound and oblique shock waves occur.

For Mach numbers exceeding 5, we speak about hypersonic flow. Owing to the high temperatures developed around the nose of a body in a hypersonic flow, dissociation and ionization processes occur, causing that the assumption of a perfect gas is no longer valid.

Fig. 4.21 illustrates the development of shock waves about an airfoil. Up to a flight Mach number of about $M = 0.5$ the flow is subsonic everywhere (Fig. 4.21a). Since the local Mach number M^* will be higher than the flight Mach number, a particular flight Mach number comes about at which locally sonic flow first occurs on the surface (Fig. 4.21b). The corresponding flight Mach number is termed the critical Mach number, M_{crit} .

As the flight Mach number increases further, regions of supersonic flow come forth, which end through the occurrence of normal shock waves (Fig. 4.21c and Fig. 4.21d).

The normal shock on the upper surface in Fig. 4.21d produces an increased static pressure behind the wave. Usually, the boundary layer is unable to withstand the large pressure rise across the wave. Then, separation of the boundary layer flow occurs, which causes an increase in wake thickness and so in section drag and a reduction of the maximum lift coefficient. This type of separation is known as *shock induced boundary layer separation*.

Fig. 4.21e shows the flow pattern at a flight Mach number close to $M = 1$, where large regions are supersonic. At supersonic airspeeds, finally, an oblique shock wave is present around the nose and at the trailing edge of the airfoil (Fig. 4.21f).

The actual variation of the drag coefficient at constant-lift coefficient versus Mach number for a supersonic airplane is illustrated by the curves in Fig. 4.22a. The corresponding lift-drag polars are plotted in Fig. 4.22b. The curves show that up to a Mach number of about 0.9, the lift-drag polar remains fairly the same. The slight decrease in drag coefficient at constant lift coefficient in Fig. 4.22a is caused by the circumstance that the effect of an increasing Mach number is to increase the slope of the $C_L - \alpha$ curve (Fig. 4.23). Note also that, on the other hand, an increasing Mach

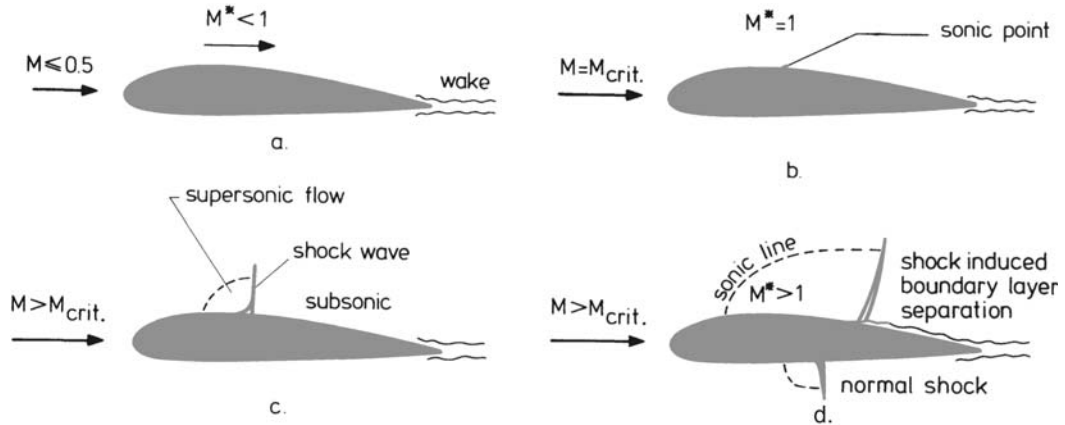


Figure 4.21 Shock wave formation about an airfoil

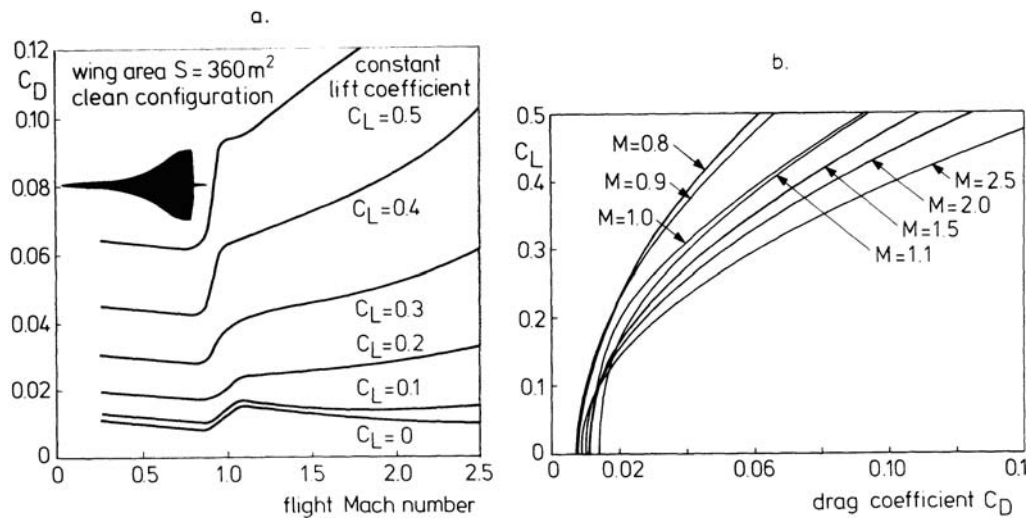


Figure 4.22 Aerodynamic properties of a supersonic airplane

number leads to a lower C_{Lmax} value.

The extra drag at transonic and supersonic flight Mach numbers in Fig. 4.22, is called wave drag and results from the formation of shock waves. The shock waves convert a substantial part of the free stream kinetic energy into heat, which results in airplane drag. In addition, the interaction between shock wave and boundary layer at high-subsonic and transonic speeds creates a further increase in the drag coefficients. The flight Mach number at which the drag coefficient at constant lift coefficient begins to rise sharply, is named the *drag-divergence Mach number*, M_d ($M_d > M_{crit}$). An effective means of increasing the drag-divergence Mach number of high-subsonic airplanes is the use of supercritical airfoils. Another adequate means is the application of wing sweep (Fig. 4.24),

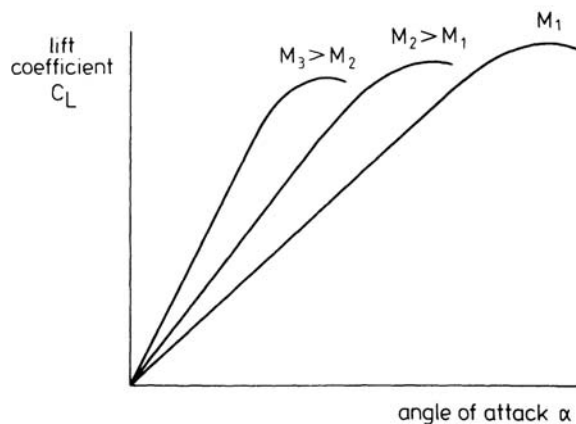


Figure 4.23 Effect of Increasing flight Mach number

4

which also delays the shock formation on the wing surface. As was mentioned earlier, this behavior is due to the fact that the velocity and pressure distribution around the wing sections is a function of the velocity perpendicular to the leading edge. From Fig. 4.24a it can be seen that, for a swept wing, the operative Mach number normal to the front edge of the wing, M_n , is related to the airspeed by

$$M_n = \frac{V_n}{c} = \frac{V}{c} \cos \Lambda \quad (4.28)$$

Hence, sweeping the wings of high-subsonic airplanes will, in principle, increase the critical Mach numbers by a factor $1/\cos \Lambda$.

The wave drag occurring in transonic and supersonic flight lessens markedly with the slenderness of the body. In consequence, supersonic airplanes show a slender fuselage and low aspect ratio wings with thin airfoils.

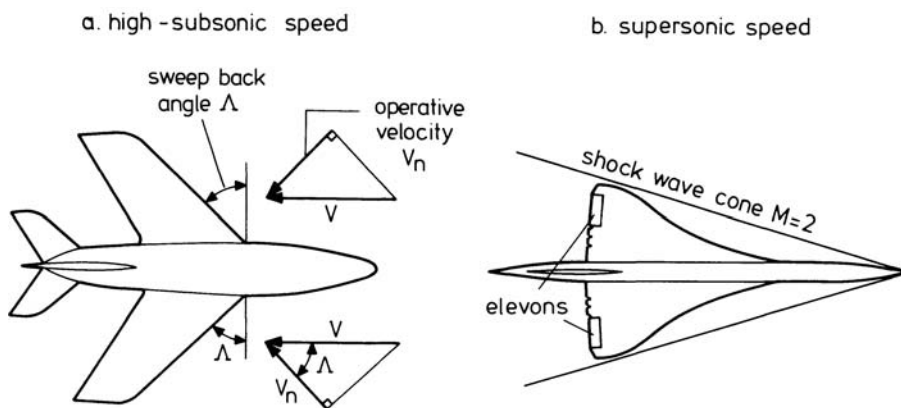


Figure 4.24 Effect of speed on the shape of an airplane

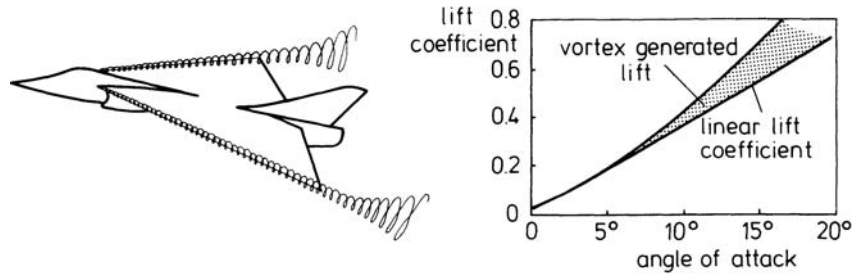


Figure 4.25 Excess lift due to delta-wing vortex flow from leading edges

4

The combination of a large sweep angle and a reduced aspect ratio may then result in a slender delta wing. Pitch and roll control may be provided by elevons on the trailing edges of the delta wing (Fig. 4.24b). Elevons work together as elevators and differentially as ailerons.

If the wing fits within the shock wave cone from the fuselage nose, as shown in Fig. 4.24b, the operative velocity at the wing leading edges is subsonic, which condition furnishes less wave drag. At low speeds and high angles of attack, the delta wing reveals a special flow condition as shown in Fig. 4.25. Because of the sharp leading edge and the large sweep angle, the flow over the delta wing forms leading edge vortices. The formation of these vortices create a high-lift effect and obviate total flow separation. As a result, a delta wing shows a very large stall angle.

4.4. PARABOLIC LIFT-DRAG POLAR

The total drag of an airplane may be divided into the drag of the wing D_w and the sum of the component drags D_n ,

$$D = D_w + D_n \quad (4.29)$$

Referring to Eq. 4.25, we can write the wing drag as the sum of the induced drag D_i and the profile drag D_p . With this, Eq. 4.29 becomes

$$D = D_i + D_p + D_n \quad (4.30)$$

The nature of the induced drag (or drag due to lift), has already been discussed in Section 4.2. The profile drag consists of pressure drag, skin friction drag and wave drag. The wave drag is zero for subsonic airspeeds below the critical Mach number. Pressure drag, skin friction drag and wave drag together, form also the drag of the airplane components. Since the drag coefficient of each component part, C_{Dn} , is based on a certain area S_n as the reference area, the total airplane drag is given by

$$C_D \frac{1}{2} \rho V^2 S = C_{Di} \frac{1}{2} \rho V^2 S + C_{Dp} \frac{1}{2} \rho V^2 S + (\sum C_{Dn} S_n) \frac{1}{2} \rho V^2 \quad (4.31)$$

Accordingly, the drag coefficient of an airplane is (see Fig. 4.26)

$$C_D = C_{Di} \frac{1}{2} + C_{Dp} + \frac{\sum C_{Dn} S_n}{S} \quad (4.32)$$

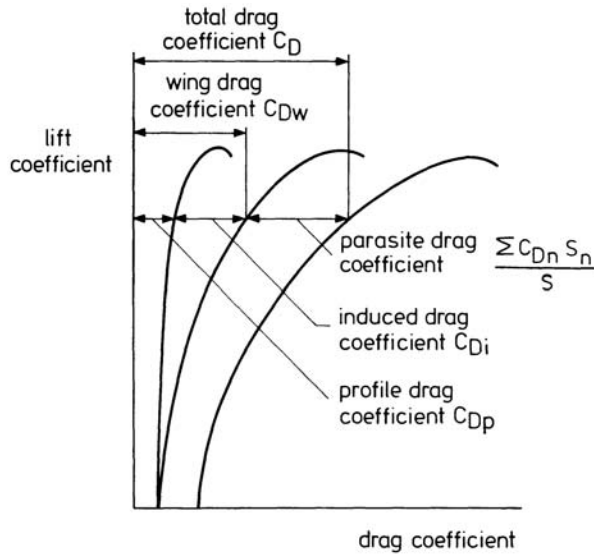


Figure 4.26 Components of drag coefficient

4

where the quantity $\frac{\sum C_{Dn} S_n}{S}$ is called the *parasite drag coefficient*. Theoretical aerodynamics predicts that the induced drag coefficient is directly proportional to the square of the lift coefficient C_L , and inversely proportional to the

$$C_{Di} = \frac{C_L^2}{\pi A \phi} \quad (4.33)$$

The factor ϕ depends primarily on the wing planform since it indicates how close the elliptic span-wise lift distribution is obtained. For an elliptic lift distribution $\phi = 1$ (minimum induced drag coefficient). In all other cases ϕ will be less than one. Thus, the drag coefficient of the airplane is

$$C_D = \frac{C_L^2}{\pi A \phi} + C_{Dp} + \frac{\sum C_{Dn} S_n}{S} \quad (4.34)$$

Since also the profile drag and parasite drag coefficients are dependent on the angle of attack, Eq. 4.34 may be written as

$$C_D = \frac{C_L^2}{\pi A \phi} + X C_L^2 + \left[C_{Dp} + \frac{\sum C_{Dn} S_n}{S} \right]_{C_L=0} \quad (4.35)$$

The term $X C_L^2$ represents the assumed parabolic change of the profile and parasite drag coefficients with lift coefficient. The quantity in parentheses is termed zero-lift drag coefficient and given the symbol C_{D0} .

Then, Eq. 4.35 can be transformed into

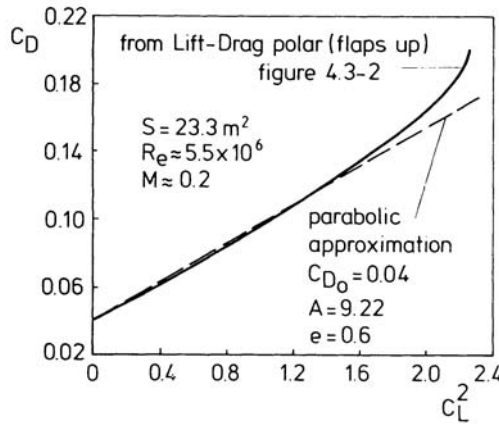


Figure 4.27 Parabolic approximation of lift-drag polar of low-subsonic airplane

$$C_D = C_{D0} + \frac{C_L^2}{\pi A e} \quad (4.36)$$

where the factor e follows from

$$\frac{1}{e} = X\pi A + \frac{1}{\phi} \quad (4.37)$$

and is called the *Oswald's efficiency factor*. Apparently, this factor accounts for the variation of the profile and parasite drag coefficients with lift coefficient, and the effect of the actual span-wise lift distribution on induced drag coefficient. For most airplane types the value of e varies between 0.6 and 0.9. Sometimes, Eq. 4.37 is expressed in the form

$$C_D = C_{D0} + kC_L^2 \quad (4.38)$$

where $K = 1/(\pi A e)$ is called the *induced drag factor*.

In Fig. 4.27, the drag coefficient of Fig. 4.15 is plotted against C_L^2 . The deviation from the parabolic form is represented by the divergence from the straight (dotted) line. We see that a considerable part of the lift-drag polar is indeed a parabola, but there is some extra drag at lift coefficients beyond about 1.0.

The parabolic lift-drag polar can be used not only at subsonic speeds, but also at both transonic and supersonic airspeeds, if in Eq. 4.38 the values of

C_{D0} and k are adjusted appropriately. Anticipating later discussions, it may here be noted that in many respects the performance of airplanes are determined by the following aerodynamic ratios: C_L/C_D , C_L^3/C_D^2 and C_L/C_D^2 . In particular the maximum values of these ratios are of importance.

For maximum C_L/C_D , we differentiate this ratio with respect to C_L and set the first derivative equal to zero, i.e.

$$\frac{d(C_L/C_D)}{dC_L} = \frac{C_D - C_L \frac{dC_D}{dC_L}}{C_D^2} = 0$$

Since $C_D \neq 0$, we have the condition

$$\frac{dC_D}{dC_L} = \frac{C_D}{C_L} \quad (4.39)$$

Using the parabolic lift-drag polar, Eq. 4.36, we obtain

$$\frac{2C_L}{\pi Ae} = \frac{C_{D0} + C_L^2/\pi Ae}{C_L} \quad \text{or} \quad C_L = \sqrt{C_{D0}\pi Ae} \quad (4.40)$$

Substitution of the latter result into Eq. 4.36 yields (see Fig. 4.28)

$$C_D = 2C_{D0} \quad \text{and} \quad (4.41)$$

$$\left(\frac{C_L}{C_D}\right)_{max} = \frac{\sqrt{C_{D0}\pi Ae}}{2C_{D0}} = \frac{1}{2} \sqrt{\frac{\pi Ae}{C_{D0}}} \quad (4.42)$$

For maximum C_L^3/C_D^2 in like manner, differentiation furnishes the general condition

$$\frac{dC_D}{dC_L} = \frac{3}{2} \frac{C_D}{C_L} \quad (4.43)$$

Making use of the parabolic lift-drag polar gives

$$\frac{2C_L}{\pi Ae} = \frac{3}{2} \left[\frac{C_{D0} + C_L^2/(\pi Ae)}{C_L} \right]$$

or

$$C_L = \sqrt{3C_{D0}\pi Ae} \quad (4.44)$$

Substitution of Eq. 4.44 into Eq. 4.36 yields

$$C_D = 4C_{D0} \quad (4.45)$$

and

$$\left(\frac{C_L^3}{C_D^2}\right)_{max} = \frac{3C_{D0}\pi Ae\sqrt{3C_{D0}\pi Ae}}{16C_{D0}^2} = \frac{3\sqrt{3}}{16} \pi Ae \sqrt{\frac{\pi Ae}{C_{D0}}} \quad (4.46)$$

Similarly, for maximizing C_L/C_D setting $\frac{d(C_L/C_D)}{dC_L} = 0$ yields the condition

$$\frac{dC_D}{dC_L} = \frac{1}{2} \frac{C_D}{C_L} \quad (4.47)$$

Then in case of a parabolic lift-drag polar, we find

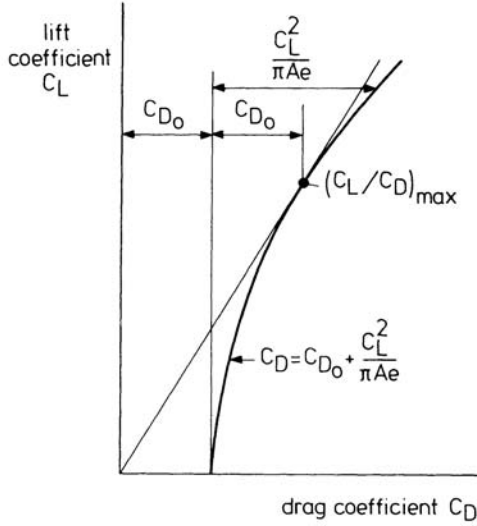
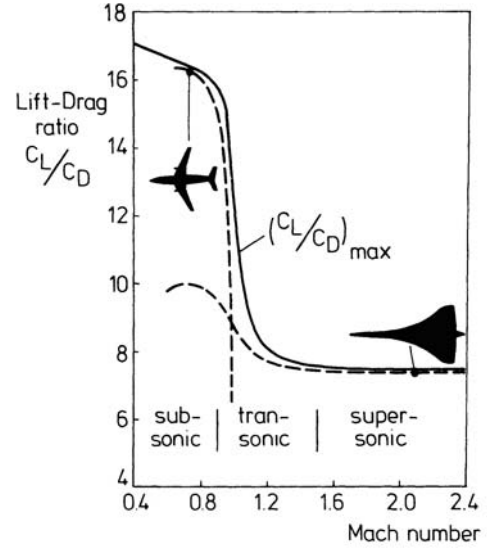
Figure 4.28 Maximum value of C_L/C_D 

Figure 4.29 Maximum lift-to-drag ratios

$$C_L = \sqrt{\frac{1}{3} C_{D0} \pi A e} \quad (4.48)$$

$$C_D = \frac{4}{3} C_{D0} \quad (4.49)$$

and

$$\left(\frac{C_L}{C_D} \right)_{max} = \frac{\sqrt{\frac{1}{3} C_{D0} \pi A e}}{\frac{16}{9} C_{D0}^2} = \frac{3\sqrt{3}}{16} \sqrt{\frac{\pi A e}{C_{D0}^3}} \quad (4.50)$$


We end this subject by remarking that, especially, the maximum lift-to-drag ratio, $(C_L/C_D)_{max}$, is a significant aerodynamic quantity of an airplane. The order of magnitude curves of this ratio are depicted for transport airplanes in Fig. 4.29.

The curve of Fig. 4.29 shows that the attainable value of $(C_L/C_D)_{max}$ is about 16 at subsonic velocities. The maximum lift-to-drag ratio falls off abruptly in the transonic region and approaches to a value of approximately 7.5 in the supersonic region.

4.5. PROBLEMS

1. A general aviation airplane flies at 1000 m pressure altitude and Mach 0.2. Incompressible flow conditions may be assumed. Calculate the total pressure at the stagnation point of the wing of this airplane.
2. List at least five quantities that determine the aerodynamic force and moment of an airplane.

3. Consider a commercial airplane operating at some representative cruise conditions (pressure altitude 11 000 m and Mach 0.85) and a scale model of this airplane in a wind tunnel at sea level conditions. The wind tunnel has a maximum airspeed of 100 m/s. Is the following statement true or false? In comparison to the real airplane, the relative importance of the viscous forces compared to inertia forces is smaller for the scale model in the wind tunnel.
4. In the figure below, the lift curve of an airplane is given as a function of angle of attack. Assume that this airplane is flying at 5000 m with an airspeed V of 200 m/s. The air density ρ at this altitude is equal to 0.7361 kg/m^3 . The aircraft has wing surface area S of 35.5 m^2 and a weight W of 450 kN. To perform a flight at constant speed and altitude, the lift must balance the airplane weight. Calculate the required lift coefficient and the corresponding angle of attack.

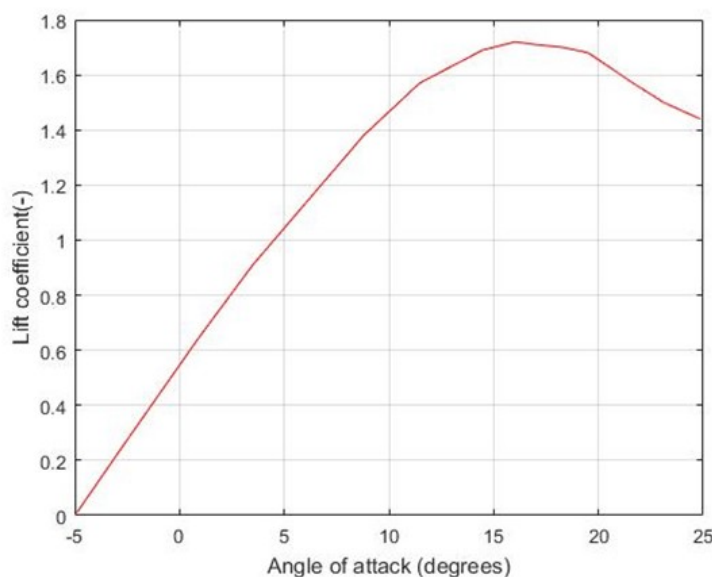

5. The aircraft described in question 4 continues to fly at this specific airspeed and altitude. Over time, the weight reduces by 50 kN because fuel is burnt. Calculate the lift coefficient and corresponding angle of attack for the new situation.
6. For the airplane described in the previous questions, estimate the maximum lift coefficient.
7. An aircraft wing has a root chord c_r of 3 m, a tip chord c_t of 2 m, a sweep angle Λ of 30 deg, a dihedral Γ of 5 deg and a span b of 20 m. Calculate the wing area S , the aspect ratio A and the mean aerodynamic chord.
8. Why does a wing generate wing tip vortices when generating lift?
 - (a) Because of the engine accelerating the air.

- (b) Because of the pressure difference between the upper and the lower surface, together with the fact that the wing is infinite.
 - (c) Because of the pressure difference between the upper and the lower surface, together with the fact that the wing is finite.
 - (d) Because the air has to move out of the way of the aircraft.
9. Based on the calculated aspect ratios in the previous question, which aircraft do you expect to have the largest induced drag coefficient?
 10. Consider a large commercial airplane and a glider. Assume the commercial airplane has a wing span b of 70 m and a wing area S of 550 m², and that the glider has a wing span b of 18 m and a wing area S of 11.8 m². What are the corresponding aspect ratios for these aircraft?
 11. Estimate the lift curve slope $\frac{dC_L}{d\alpha}$ of the wing defined in question 4 when operating at Mach 0.6.
 12. What is the main function of a trailing edge flap?
 13. List at least three types of trailing edge flaps.
 14. Is the following statement true or false? A laminar boundary layer is present at a large portion of the wing chord of large commercial airplanes.
 15. Indicate a typical Mach number for each of the following flight regimes: low subsonic, high subsonic, transonic and supersonic.
 16. Define the critical Mach number M_c and the drag-divergence Mach number M_d .
 17. The aerodynamic characteristics of a low subsonic airplane can be accurately represented with a parabolic lift-drag polar. The airplane has a zero-lift drag coefficient C_{D0} of 0.04, an aspect ratio A of 10 and an Oswald efficiency factor e of 0.8. Calculate the maximum lift to drag ratio $\left(\frac{C_L}{C_D}\right)_{max}$ and the lift coefficient at which this maximum ratio is achieved.

5

AIR DATA INSTRUMENTS

5.1. INTRODUCTION

The instrument panel in the cockpit may consist of a large number of indicators, which provide essential data on the flight condition and the orientation of the airplane relative to the Earth. Likewise, these readings present to the pilot complex information for control and guidance of the airplane. Generally, the various instruments and flight systems can be divided into four categories, namely:

- *Air data instruments*, which include the altimeter, the vertical-speed indicator, the airspeed indicator, the Machmeter, and the air thermometer.
- *Engine instruments*, like tachometers (engine-speed indicators), temperature and pressure gauges, and fuel-flow meters.
- *Blind flying instruments*, under which fall for example the turn and slip indicator, the direction indicator, and the artificial horizon.
- *Avionics systems*, such as applied for communication, navigation, flight control, and flight management.

In the light of the aim of this course book, however, only the air data instruments are inside the scope of our inquiry. This means that the principles of the engine instruments and the gyroscopic devices of the third category, will not be discussed here. Also, for any explanation of the avionics systems, the interested reader is referred to the literature dealing with these special topics.

5.2. THE ALTIMETER

The altimeter indicates the vertical distance of the airplane above ground level. As shown schematically in [Fig. 5.1](#), the instrument is simply a pressure measuring device since it is actuated by the static pressure of the atmosphere.

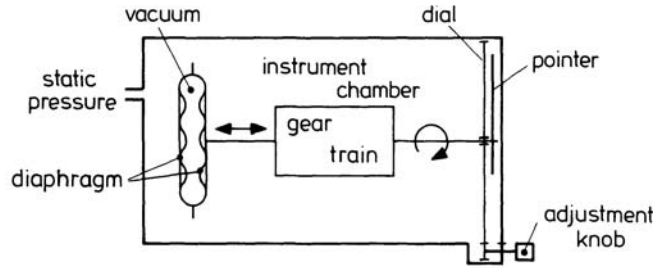


Figure 5.1 Principle of altimeter

Essentially, the altimeter is made up of an air-tight case, where a differential pressure capsule is placed. The capsule is made up of two diaphragms which are connected and sealed at their edges to form a hollow room.

The instrument chamber is connected to a static pressure tapping on the airplane so that the interior of the case is at the ambient air pressure. The diaphragm unit is evacuated, with the result that it will expand when the air pressure decreases. A linkage structure conveys the displacement of the capsule to the indicator pointer.

To provide an indication of height instead of pressure, the scale is calibrated according to the pressure-height relationship in the International Standard Atmosphere (I.S.A.). Then, for use in the troposphere, the calibration equation in terms of *geopotential pressure height* is (see Section 2.4)

$$H_p = \left[\left(\frac{p}{p_0} \right)^{-\frac{R\lambda}{g_0}} - 1 \right] \frac{T_0}{\lambda} \quad (5.1)$$

where the pressure at sea level $p_0 = 101\,325 \text{ N/m}^2$, the temperature at sea level $T_0 = 288.15 \text{ K}$, the gas constant $R = 287.05 \text{ J/(kg} \cdot \text{K)}$, the temperature gradient $\lambda = -0.0065 \text{ K/m}$, the acceleration of gravity at sea level $g_0 = 9.80665 \text{ m/s}^2$.

Naturally, in the stratosphere and mesosphere calibration equations different from Eq. 5.1 must be used. For example, an altimeter which is to be used up to an altitude of 20 km will have to be calibrated according to Eq. 5.1 up to 11 000 m and thereafter will have to use the following calibration equation, where the subscript “s” denotes tropopause ($H_s = 11\,000 \text{ m}$).

$$H_p = H_s - \frac{RT_s}{g_0} \ln \frac{p}{p_s} \quad (5.2)$$

Noteworthy is the fact that, although in the International Standard Atmosphere height is defined in terms of meter, the altimeter scale almost always uses the foot as a measure of altitude. On the other hand, horizontal length such as range of vision and takeoff and landing distances are normally expressed in SI-units (meter or km).

As we have pointed out already in Chapter 2, the pressure occurring at the geopotential pressure height H_p , as measured by the altimeter in any atmosphere is equal to the pressure at the same geopotential height H in the International Standard Atmosphere. It will be clear that when the atmospheric conditions depart from the values assumed in the International Standard Atmosphere

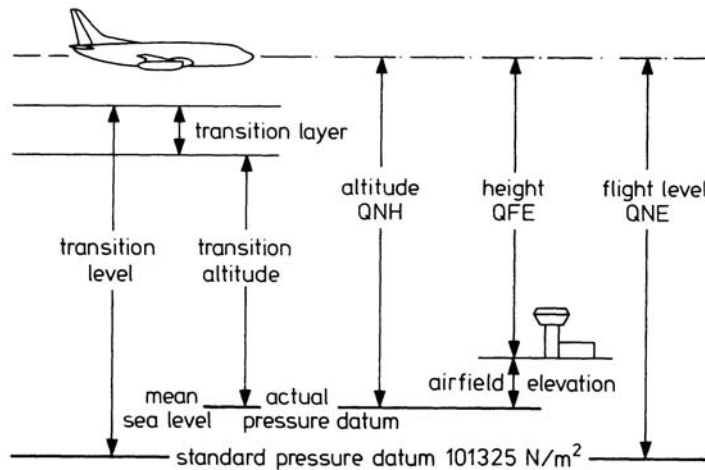


Figure 5.2 Definition of altimeter settings

an altimeter is in error, that is, the geopotential pressure altitude differs from the actual geopotential height.

Thus, the quantity geopotential pressure height provides the actual air pressure but furnishes only an approximation of the geometric or true height above the ground.

The greatest error is caused by the influence of the sea-level pressure p_0 . In order to correct the altimeter reading for the occurring pressure at ground level, the altimeter is provided with a subsidiary scale. Now the datum pressure at which the altimeter will read zero altitude can be set on this subscale. This may be accomplished by means of a manually operated adjustment knob on the instrument (Fig. 5.1). The adjustment knob can be turned until the altimeter reads the elevation of the airport above mean sea level (MSL) or zero height at the airport level.

Three settings of the datum pressure on the subscale can be distinguished, which are designated by the following codes (Fig. 5.2):

QNE Setting the standard sea-level pressure of $101\,325\text{ N/m}^2$.

QNH Pressure setting such that the altimeter reads altitude above mean sea level at the airport level.

QFE Pressure setting such that the altimeter reads zero height at the airport level.

The QNH and QFE settings are applied for takeoff and landing maneuvers and for low-level flights at or below transition altitude. Due to variations in weather conditions, airplanes originating from different airports may have a significantly different pressure setting after take-off. The QNE setting is therefore used for normal flight operations above a prescribed transition altitude. Then the altimeter is a pressure measuring apparatus and a means to reliably secure the vertical separation of airplanes, hence ensuring safety.

It will be clear from the foregoing that the vertical position of an airplane during climb after takeoff is expressed in terms of altitude (ft) until it arrives at the transition altitude above which the vertical

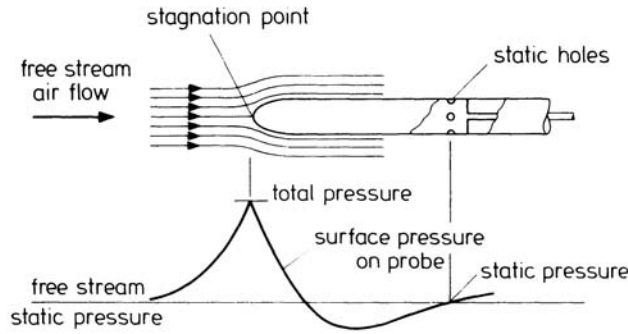


Figure 5.3 Static probe and pressure distribution (subsonic speed)

position is given in terms of pressure level, usually called *flight level* (FL). For example, FL100 means that the altimeter indicates a geopotential pressure height of 10 000 ft.

Likewise, on approach the vertical position is given in terms of flight level until the airplane reaches the transition level below which the vertical position is expressed again in terms of altitude.

The reading of the altimeter may also be subject to inaccuracies in the instrument itself. Permissible limits of this instrumental error are maintained by a current calibration procedure.

The free stream static pressure which is fed to the altimeter is measured by means of a static pressure probe, or alternatively by a set of static vents in the side of the fuselage of the airplane. The probe is directed forward and may be mounted on the forebody, wing, or vertical tail.

Fig. 5.3 shows the static probe and the pressure distribution along the streamlines following the surface of the probe. According to Appendix C, the variation of the static pressure along a streamline may be described by Bernoulli's equation for compressible isentropic flow,

$$p_t = p \left[1 + \frac{\gamma - 1}{2\gamma} \frac{\rho}{p} V^2 \right]^{\frac{\gamma}{\gamma - 1}} = \text{const} \quad (5.3)$$

where p_t is the total pressure and p , ρ and V are the local values of static pressure, air density, and flow velocity, respectively.

From Fig. 5.3, we see that ahead of the probe the local static pressure equals the free stream static pressure. There, the local velocity is equal to the free stream velocity. Approaching the nose of the probe the velocity decreases and the static pressure increases. At the stagnation point the velocity is zero and the local static pressure equals the total pressure.

Moving from the nose along the surface of the probe, the velocity increases again and the local static pressure decreases. At some point behind the nose of the probe the velocity and pressure return to their free stream values. At that point there are static holes which are connected with the altimeter.

The pressure at the instrument and at the measurement point may be different due to system lag during alterations of height or speed. Moreover, the presence of the airplane and/or the positioning of the probe in the pressure field may cause a local pressure at the measurement point which differs from the free stream value. To avoid or minimize this so-called position error, the free stream static pressure must be measured outside the pressure field of the airplane.

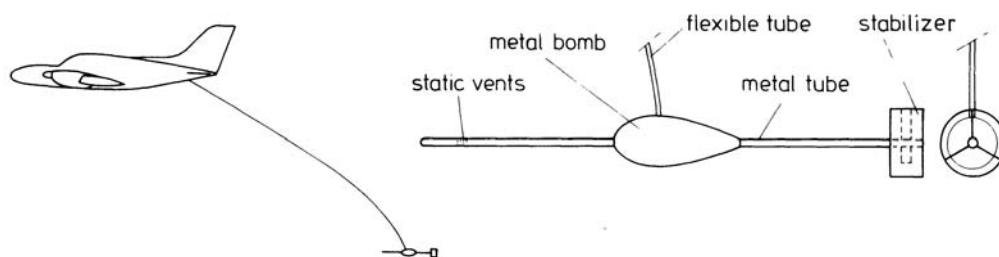


Figure 5.4 Trailing static tube

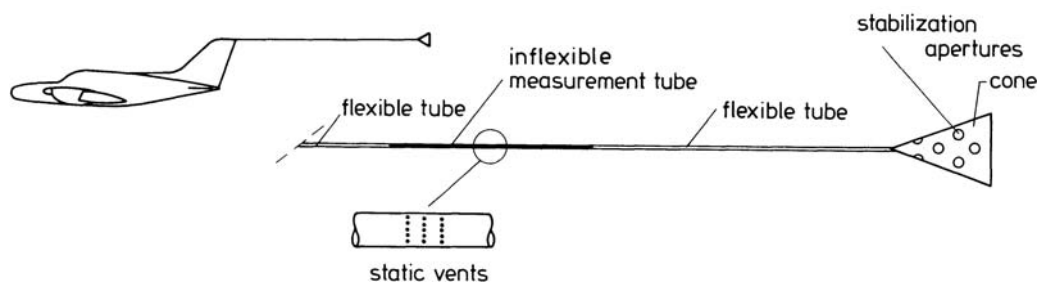


Figure 5.5 Trailing static cone

When executing flight-test work, a usual way of obtaining the proper static pressure is to trail a static tube at some distance below the airplane (Fig. 5.4). Since this device is limited to a maximum airspeed of approximately 450 km/h, as an alternative, a static cone can be trailed behind the airplane (Fig. 5.5). Position error is dependent on altitude and airspeed so that it differs all through the entire operating range of the airplane. Therefore, a convenient method of measurement of position error corrections is to fly in formation with a reference airplane having a well-calibrated static system. Then immediate comparison of the indicated altitude can be made between the two altimeter readings.

For a detailed discussion on the determination of error corrections, the reader is referred to Ref. 8.

5.3. THE VERTICAL-SPEED INDICATOR

The vertical-speed indicator displays whether the airplane is continuing level flight, or measures the rate of climb or descent.

As sketched in Fig. 5.6, in the vertical-speed indicator the static pressure source is connected directly to the diaphragm capsule and to the instrument chamber via a capillary tube.

When level flight is maintained, the pressure inside the capsule equals the pressure in the casing and the instrument reading is zero.

During climb or descent, the pressure led into the instrument changes continuously. However, the capillary tube controls the rate of air flow into or out of the instrument chamber and so the pressure surrounding the capsule. Due to the restrained choke, the pressure change in the instrument chamber is delayed relative to the pressure in the diaphragm capsule. In other words, the

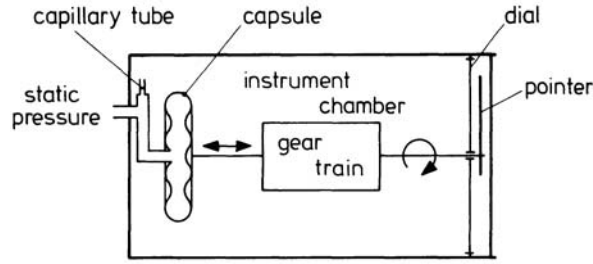


Figure 5.6 Principle of vertical-speed indicator

diaphragm unit contracts or expands in terms of a rate of change of pressure. This deflection of the capsule is calibrated to yield an indication of vertical speed.

For test work, almost always, use is made of the altimeter reading to establish the rate of climb or descent by measuring the time interval Δt to cover a certain vertical distance ΔH .

In the absence of vertical wind, the rate of climb, RC , at the mean height between two successive measurement points may be approximated by

$$RC = \frac{\Delta H}{\Delta t} \quad (5.4)$$

In calculating the rate of climb, we must take into account that the (true) height interval ΔH in Eq. 5.4 differs from the indicated height interval ΔH_p when the actual atmosphere does not conform to the standard reference conditions. Generally, from the aerostatic equation (Eq. 2.1) and the equation of state $p/\rho = RT$,

$$dp = -\frac{p}{RT} g_0 dH = -\frac{p}{RT_{ISA} g_0} dH_p \quad (5.5)$$

or

$$dH = dH_p \frac{T}{T_{ISA}} \quad (5.6)$$

In Eq. 5.6, T_{ISA} is the temperature in the International Standard Atmosphere and T is the prevailing temperature at the same altitude H_p . Combining Eq. 5.4 and Eq. 5.6 yields the following expression,

$$RC = \frac{\Delta H}{\Delta t} = \frac{T}{T_{ISA}} \frac{\Delta H_p}{\Delta t} \quad (5.7)$$

where ΔH_p is the measured height interval, and T and T_{ISA} are the temperatures at the mean geopotential pressure altitude.

5.4. THE AIRSPEED INDICATOR

The determination of airspeed is based on the measurement of the differential pressure,

$$p_t - p = q_c \quad (5.8)$$

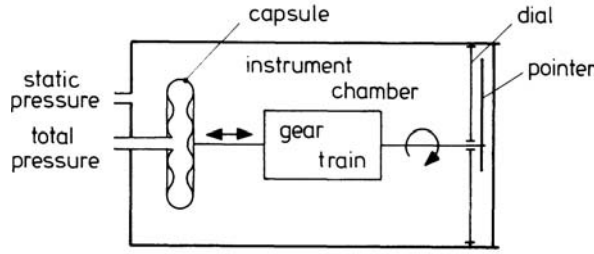


Figure 5.7 Principle of airspeed indicator




Figure 5.8 Pitot probe

where p_t is the total pressure and p is the free stream static pressure. The difference between these pressures, q_c , is termed *impact pressure*.

As depicted in Fig. 5.7, the pressures p_t and p are fed separately into the instrument and the pressure difference is measured by employing an air-tight case in which a diaphragm unit is placed. The total pressure is sensed by a pitot probe, which has an orifice at the stagnation point on the nose (Fig. 5.8). Often, the pitot probe is combined with the static probe, which assembly is called a pitot-static probe or pressure head (Fig. 5.9). The relationship between the impact pressure q_c and the airspeed V is obtained by substitution of Eq. 5.3 into Eq. 5.8. This gives

$$q_c = p_t - p = p \left[\left(1 + \frac{\gamma - 1}{2\gamma} \frac{\rho}{p} V^2 \right)^{\frac{\gamma}{\gamma - 1}} - 1 \right] \quad (5.9)$$

which leads to

$$V = \sqrt{\frac{2\gamma}{\gamma - 1} \frac{p}{\rho} \left[\left(1 + \frac{p_t - p}{p} \right)^{\frac{\gamma - 1}{\gamma}} - 1 \right]} \quad (5.10)$$

The latter relation returns an ideal measure of the so-called *true airspeed* (T.A.S.) of the airplane. Since both the air pressure p and density ρ appear in the equation, determining the true airspeed (T.A.S.) would require measuring these quantities in addition to the pressure difference given by Eq. 5.8. The resulting airspeed measure, for a given value of $(p_t - p)$, would therefore be a function of altitude. To make the airspeed measurement independent of altitude and derive a unique calibration equation for the airspeed indicator, the concept of *calibrated airspeed* (C.A.S) V_c is used. By definition, V_c is obtained by making the assumptions that in Eq. 5.10 $p = p_0$ is the pressure sea-level reference value of $101\,325 \text{ N/m}^2$ and $\rho = \rho_0$ is the density sea-level reference value of 1.225 kg/m^3 . Thus, airspeed indicators are calibrated to the equation

$$p_t - p = p_0 \left[\left(1 + \frac{\gamma - 1}{2\gamma} \frac{\rho_0}{p_0} V_c^2 \right)^{\frac{\gamma}{\gamma - 1}} - 1 \right] \quad (5.11)$$

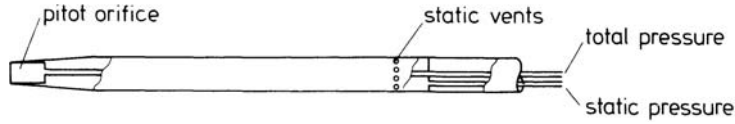


Figure 5.9 Pitot-static probe

Evidently, the calibrated airspeed V_c is only equal to the *true airspeed* V , when the actual atmospheric conditions match the standard sea-level reference conditions. From Eq. 5.10 and Eq. 5.11, we see that the true airspeed can be determined from its relation to calibrated airspeed and the prevailing values of pressure and density.

$$V = \sqrt{\frac{2\gamma}{\gamma-1} \frac{p}{\rho} \left[\left(1 + \frac{p_0}{p} \left[\left(1 + \frac{\gamma-1}{2\gamma} \frac{\rho_0}{p_0} V_c^2 \right)^{\frac{\gamma-1}{\gamma}} - 1 \right] \right)^{\frac{\gamma-1}{\gamma}} - 1 \right]} \quad (5.12)$$

5

Consequently, the computation of true airspeed from calibrated airspeed requires the measurement of geopotential pressure altitude and air temperature.

At low subsonic airspeeds, a simplified procedure for the determination of the true airspeed can be established by assuming that the measured pressure difference is related to the airspeed by Bernoulli's equation for incompressible isentropic flow (see Appendix C).

$$p_t - p = \frac{1}{2} \rho V^2 \quad \text{or} \quad V = \sqrt{\frac{2}{\rho} (p_t - p)} \quad (5.13)$$

In this case, the measured airspeed is called *equivalent airspeed* (E.A.S.), V_e . This quantity satisfies Eq. 5.13 at sea level for standard sea-level density.

$$p_t - p = \frac{1}{2} \rho_0 V_e^2 \quad \text{or} \quad V = \sqrt{\frac{2}{\rho_0} (p_t - p)} \quad (5.14)$$

From Eq. 5.13 and Eq. 5.14, we also find the following relation, which shows that the equivalent airspeed is always lower than (or equal to) true airspeed.

$$V = V_e \sqrt{\frac{\rho_0}{\rho}} \quad (5.15)$$

Equivalent airspeed is a particularly useful quantity from an engineering point of view, as it does not depend on altitude (just like calibrated airspeed), and results in the same dynamic pressure of its corresponding true airspeed at the given altitude. This is convenient when relating the aerodynamic forces and moments on the airplane to their non-dimensional coefficients. On the other hand, the equivalent airspeed does not have information about the actual flow regime around the airplane, and is therefore of limited value for the analysis of flight physics.

An insight into the accuracy of the true airspeed when calculated by means of Eq. 5.15 instead of Eq. 5.12 can be obtained by comparing these equations for a given instrument reading. Thus, from Eq. 5.11 to Eq. 5.13

$$\frac{V_{\text{compr}}}{V_{\text{inc}}} = \sqrt{\frac{\frac{\gamma}{\gamma-1} \left[1 + \frac{p_0}{p} \left[\left(1 + \frac{\gamma-1}{2\gamma} \frac{p_0}{p_0} V_c^2 \right)^{\frac{\gamma-1}{\gamma}} - 1 \right] \right]^{\frac{\gamma-1}{\gamma}} - 1}{\frac{p_0}{p} \left[\left(1 + \frac{\gamma-1}{2\gamma} \frac{p_0}{p_0} V_c^2 \right)^{\frac{\gamma-1}{\gamma}} - 1 \right]}} \quad (5.16)$$

This equation shows that the ratio between the resulting compressible and incompressible airspeeds varies with the calibrated airspeed and the static pressure. The effect of compressibility is visualized in Fig. 5.10, where the ratio from Eq. 5.16 is plotted as functions of calibrated airspeed and geopotential pressure altitude. The curves confirm that the relevance of the equivalent airspeed is limited to low subsonic airspeeds.

At supersonic speeds, a normal shock will appear ahead of the pitot probe as shown in Fig. 5.11. With the relations $M = V/c$, $c = \sqrt{\gamma RT}$, and $p/\rho = RT$ we get

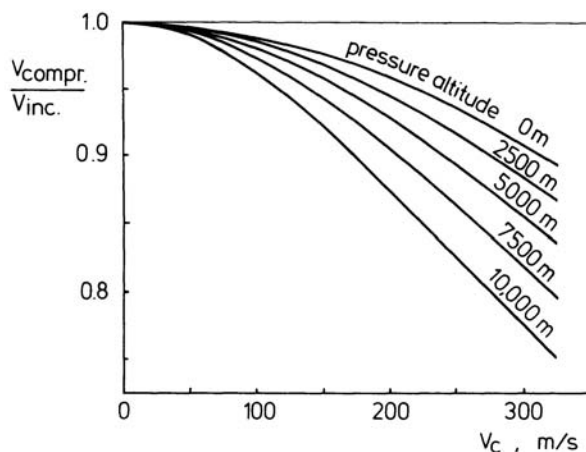


Figure 5.10 Compressibility correction to airspeed

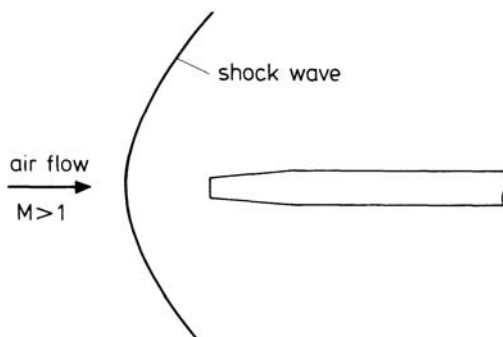


Figure 5.11 Pitot probe In supersonic flow

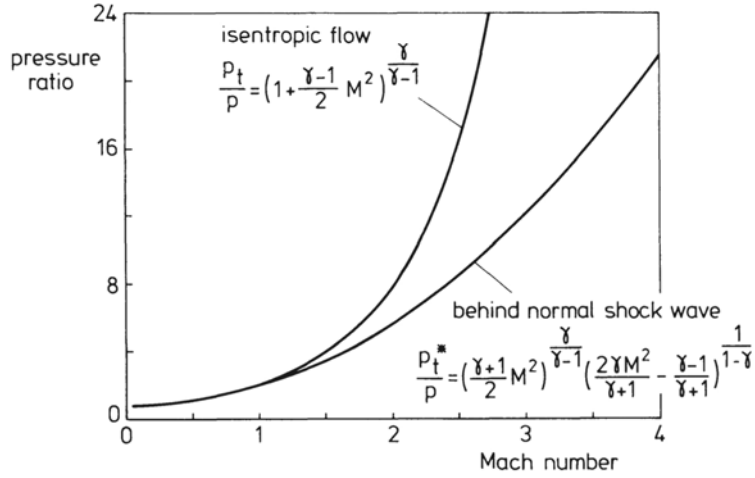


Figure 5.12 Total pressure for isentropic flow and behind normal shock wave ($\gamma = 1.4$)

$$M = \frac{V}{\sqrt{\gamma \frac{p}{\rho}}} \quad (5.17)$$

Substitution of Eq. 5.17 into Eq. 5.9 yields the free stream total pressure in terms of static air pressure and flight Mach number.

$$p_t = p \left(1 + \frac{\gamma-1}{2} M^2 \right)^{\frac{\gamma}{\gamma-1}} \quad (5.18)$$

The shock wave causes that the total pressure p_t^* measured at the stagnation point on the probe is less than the free stream total pressure p_t . As derived in Appendix C, the ratio of the total pressure behind the shock to the free stream static pressure is related to the flight Mach number by the following equation, which is called the Rayleigh formula.

$$\frac{p_t^*}{p} = \left(\frac{\gamma+1}{2} M^2 \right)^{\frac{\gamma}{\gamma-1}} \left(\frac{2\gamma M^2}{\gamma+1} - \frac{\gamma-1}{\gamma+1} \right)^{\frac{1}{1-\gamma}}. \quad (5.19)$$

The ratios p_t/p and p_t^*/p versus Mach number are plotted in Fig. 5.12. The curves show that the difference between the total pressure for isentropic flow and behind a normal shock grows larger as the free stream (supersonic) Mach number becomes greater. For example, the ratio p_t^*/p decreases from 1.0 at $M = 1$ to 0.721 at $M = 2$ ($\gamma = 1.4$).

Since also at supersonic speeds the free stream static pressure can be obtained by applying a pitot-static probe or via a static source located on the surface of the fuselage of the airplane, we find that the measured impact pressure difference is given by

$$p_t^* - p = p \left[\left(\frac{\gamma+1}{2} M^2 \right)^{\frac{\gamma}{\gamma-1}} \left(\frac{2\gamma M^2}{\gamma+1} - \frac{\gamma-1}{\gamma+1} \right)^{\frac{1}{1-\gamma}} - 1 \right] \quad (5.20)$$

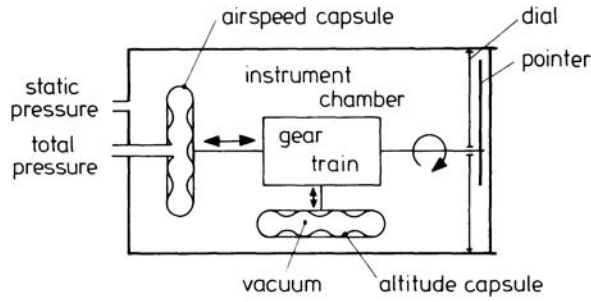


Figure 5.13 Principle of Machmeter

Using the sea-level reference values $p = p_0$ and $\rho = \rho_0$, we obtain the following relationship from Eq. 5.17 and Eq. 5.20.

$$p_t^* - p = p \left[\left(\frac{\gamma + 1}{2\gamma} \frac{\rho_0}{p_0} V_c^2 \right)^{\frac{\gamma}{\gamma-1}} \left(\frac{2}{\gamma + 1} \frac{\rho_0}{p_0} V_c^2 - \frac{\gamma - 1}{\gamma + 1} \right)^{\frac{1}{1-\gamma}} - 1 \right] \quad (5.21)$$

5

This is the calibration equation of the airspeed indicator for supersonic flight.

The reading of the airspeed indicator is called the indicated airspeed V_i . Possible inaccuracies emanating from instrument errors and from the pitot-static system constitute the difference between indicated airspeed and calibrated airspeed. Finally, the various airspeeds considered in this section are summarized below:

- V true airspeed, T.A.S.
- V_c calibrated airspeed, C.A.S.
- V_e equivalent airspeed, E.A.S.
- V_i indicated airspeed, I.A.S.

We close this section with the observation that airspeed indicator scales almost always use the knot (nautical mile per hour) as a measure of airspeed.

5.5. THE MACHMETER

The *Machmeter* is the instrument which measures the flight Mach number, $M = V/c$. Eq. 5.18 and Eq. 5.20 indicate that in both the supersonic and subsonic speed regime, the flight Mach number can be determined by measuring the pressure ratio $(p_t - p)/p$. Fig. 5.13 shows that the Machmeter is a compound flight instrument which consists of an airspeed indicator and an altimeter. The pressure difference $p_t - p$ is measured by means of the airspeed capsule and the static pressure is obtained from the movement of the altitude capsule. The deflections of the two mechanisms are combined and then transmitted to the indicator pointer.

The result of the previous section also show that the flight Mach number can be computed from known values of V_c and H_p . Fig. 5.14 gives the subsonic flight Mach number as a function of the calibrated airspeed for various geopotential pressure altitudes, calculated from Eq. 5.11 and Eq. 5.18.

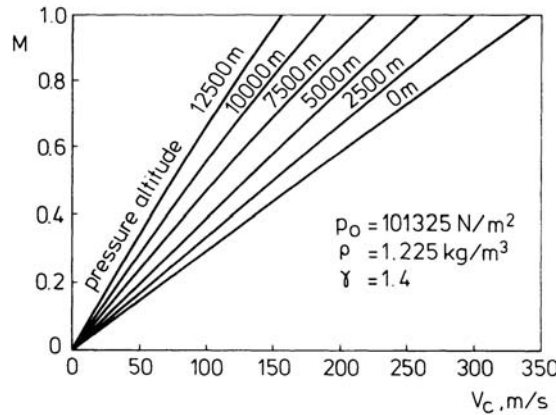


Figure 5.14 Mach number versus calibrated airspeed for various geopotential pressure altitudes

5

5.6. AMBIENT AIR TEMPERATURE MEASUREMENT

The prediction of airplane performance and the operation of airplanes requires that the free-air static pressure and the total pressure are known. In addition, the ambient or free-air static temperature at the flight altitude is needed for getting the true airspeed or to compute the density of the air for instance.

The air thermometer on an airplane commonly is made up of a temperature probe attached to the outer surface of the airplane and an indicator in the cockpit.

Mostly, the temperature sensed by the temperature probe is higher than the ambient air temperature because of the adiabatic heating effect of the air flow on the temperature sensing element.

If the air at the measurement point could be brought to rest by an adiabatic process, the total temperature, T_t , would be registered, which quantity is a direct function of the ambient temperature and the flight Mach number in both subsonic and supersonic flow (see [Appendix C](#)),

$$T_t = T \left(1 + \frac{\gamma - 1}{2} M^2 \right) \quad (5.22)$$

In actual circumstances, however, the instrument usually displays a temperature which is somewhat less than the total temperature. This phenomenon, which is due to a heat flow from the sensor to the surrounding body, is conveniently expressed by the ratio

$$K = \frac{T_i - T}{T_t - T} \quad (5.23)$$

where T_i is the indicated temperature and K is the recovery factor of the probe, denoting the relative amount of the adiabatic temperature rise which is accomplished by the thermometer. If the recovery factor is included in [Eq. 5.22](#), we obtain

$$T_i = T \left(1 + K \frac{\gamma - 1}{2} M^2 \right) \quad (5.24)$$

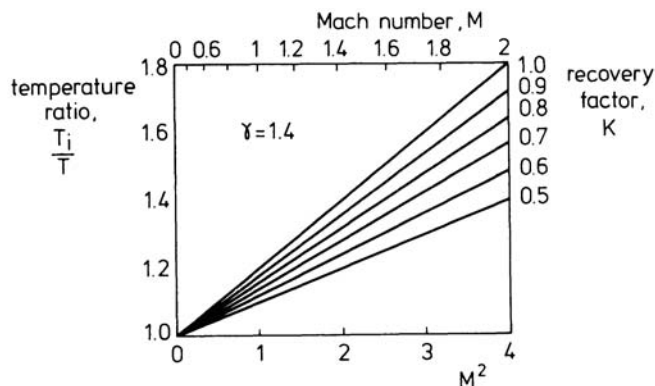


Figure 5.15 Relationship between measured and ambient temperature

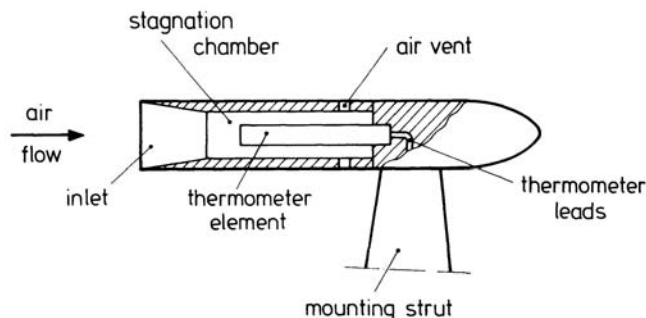


Figure 5.16 Sketch of the total temperature probe

A graphic representation of Eq. 5.24 is given in Fig. 5.15, where the variation of the ratio T_i/T versus M^2 is shown for six K -values. As used in this diagram, the recovery factor of typical installations ranges from 0.5 to 1.0.

The value of K for a particular thermometer can be determined from calibration tests in a wind tunnel or by the execution of flight tests. For example, from flight runs at a constant altitude, the relationship between T_i and M^2 can be established by direct measurement of flight Mach number and indicated temperature. Then, as may be seen from Fig. 5.15, extrapolation to $M = 0$ of the curve through the test data gives the ambient temperature at the measurement height, whilst the slope of the curve furnishes the associated value of K .

Present-day installations for measuring the air temperature are virtually always total temperature probes, having a tube shaped stagnation chamber in which a sensing element is placed (Fig. 5.16). The thermometer element usually consists of a temperature sensitive resistor included in a electrical bridge circuit. These electric thermometers supply a current arising from the bridge unbalance. This current is a function of the resistance and, thus, a measure of the prevailing temperature (Ref. 9 and Ref. 10).

5.7. PROBLEMS

1. The standard sea-level pressure of $101\,325\text{ N/m}^2$ is used above a prescribed transition altitude as pressure datum for the altimeter. In case the atmospheric conditions differ from those defined in the International Standard Atmosphere (I.S.A.), the altimeter is in error, that is, the geopotential pressure altitude differs from the actual geopotential height. Furthermore, the ground may not be at sea level altitude. Explain why the standard sea-level pressure is used even though it often results in incorrect altitude readings.
2. Select the correct answer. The vertical speed indicator can be classified as
 - (a) air data instrument
 - (b) engine instrument
 - (c) blind flying instrument
 - (d) avionics system
3. List the differences between true airspeed, calibrated airspeed, indicated airspeed, and equivalent airspeed.
4. An airplane performs a climbing flight at a constant calibrated airspeed of 150 m/s in the International Standard Atmosphere (I.S.A.). Calculate the true airspeed and the ratio of true airspeed over calibrated airspeed expressed in a percentage, at the following three pressure altitudes: 0 m , 5000 m , and $10\,000\text{ m}$.
5. Consider two aircraft, one flying at flight level 50 and the other at flight level 100. Both have an indicated airspeed of 150 m/s . You may assume that there are no instrument errors or inaccuracies in the pitot-static system. Furthermore, incompressible flow conditions may be assumed. Calculate the true airspeeds of these two aircraft.
6. Explain the working principle of a Machmeter and highlight which air data parameters are required as input to the instrument.
7. An airplane is flying at a pressure altitude of 8000 m in the International Standard Atmosphere (I.S.A.). The Mach number indicated by the Machmeter equals 0.7 . Compute the total air pressure and the calibrated airspeed.
8. The air thermometer on an airplane measures the outside air temperature. Explain why the outside air temperature is needed in the context of operational flight.

6

PROPULSION

6.1. TYPES OF AIRPLANE PROPULSION SYSTEMS

The five types of main propulsion systems to be considered here are the reciprocating piston engine with propeller, the turbojet, the turboprop (the turbo-engine and propeller combination), the turbofan and the battery-powered electric motor with propeller. Except for the battery-powered electric motor with propeller, these are all named air-breathing engines because of the fact that they employ the oxygen from atmospheric air to burn the fuel. The electric motor converts electro-chemical energy stored in the batteries into mechanical power. Note that there are alternative sources for electric power. Besides storage in batteries, it can be generated on-board by means of fuel cells, solar panels or a generator powered by conventional fuel. Propulsion systems in which both a fueled power source and an electric motor are combined are designated hybrid-electric propulsion systems.

All these devices also have the common property that they generate a propulsive force through the application of Newton's third law (action = reaction), by accelerating air backwards with respect to the airplane. In accordance with Newton's second law of motion (see [Appendix A](#)), the magnitude of the thrust supplied is equal to the time rate of change of linear momentum given to the mass of air or gas (air mixed with combustion products).

The piston engine plus propeller is used nowadays small general aviation airplanes and small unmanned aerial vehicles only. These engines have four or six cylinders, are air-cooled and operate on the four-stroke cycle principle. The cylinders are virtually always arranged in horizontally opposed pairs ([Fig. 6.1](#)). Fuel may be supplied by individual injection to each cylinder or by a carburetor which mixes the fuel and air to the right proportions and leads this mixture to the cylinders via the inlet manifold. Each cylinder has an intake valve and an exhaust valve and inside the cylinder is a piston moving up and down by the high gas pressures obtained from burning the mixture of fuel and air. The pistons drive the crankshaft via connecting rods, which change the reciprocating motion of the pistons to the rotational motion of the crankshaft.

The power delivered to the crankshaft is called shaft brake power, which designation has as its origin the measurement of the engine output by coupling the crankshaft to a brake system (dynamometer). On the other hand, it is also possible to determine the shaft power in flight by means

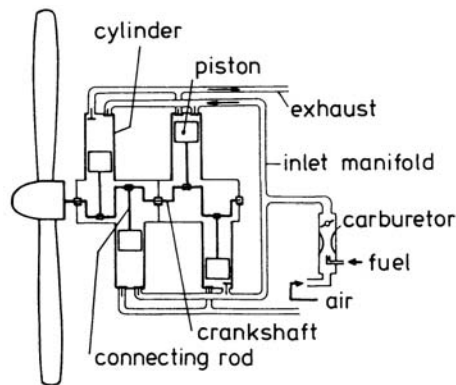


Figure 6.1 Four-cylinder piston engine with propeller

of a torque meter (Ref. 9). The crankshaft, in turn, drives the propeller, which device produces the thrust by accelerating atmospheric air with respect to the airplane.

The useful power available for propulsion is given by the product of thrust T and airspeed V . This quantity is called *power available* and denoted by the symbol P_a . The ratio of power available to shaft brake power is the propulsive efficiency of the propeller,

$$\eta_j = \frac{TV}{P_{br}} = \frac{P_a}{P_{br}} \quad (6.1)$$

We shall discuss the subject of propeller efficiency further in Chapter 7. It is sufficient here to realize that the piston engine converts the heat energy in the fuel to shaft brake power and that this power then is used by the propeller to effectuate power available. There are, thus, two separate and different conversion processes involved; an *energy conversion* process and a *power conversion process*.

The usefulness of the piston engine and propeller combination is limited to low subsonic airspeeds. The development of the turbojet in the thirties and forties of the twentieth century came as an answer to the demand for higher flight speeds. In this engine, a mass flow of air is heated by burning fuel and ejected rearward as a blast of hot gas at high velocity. The basic layout of the turbojet is sketched in Fig. 6.2. It consists of five distinct components; air intake, compressor, combustor, turbine and exhaust nozzle. The core of the engine comprising the compressor, combustor and turbine may be termed the *gas generator*. A picture of the typical changes in pressure, temperature and velocity of the air or gas flowing through the engine is also shown in Fig. 6.2. The changes in intake and nozzle are only effectuated by way of the form of the passages through which the fluid flows.

Due to external compression, the air enters the intake at a velocity, which is somewhat lower than the flight speed. In the intake the air is slowed down further, giving a substantial pressure and temperature rise of the air.

Two types of compressor may be found; centrifugal and axial (Fig. 6.3). In the centrifugal compressor the air is taken in near the center of an impeller, which flings the air in the direction of the circumference. This gives a high pressure at the compressor exit.

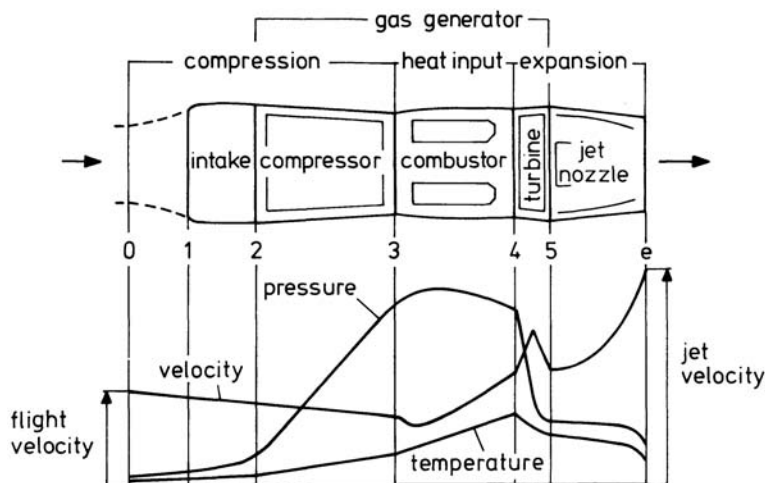


Figure 6.2 Typical layout of the turbojet

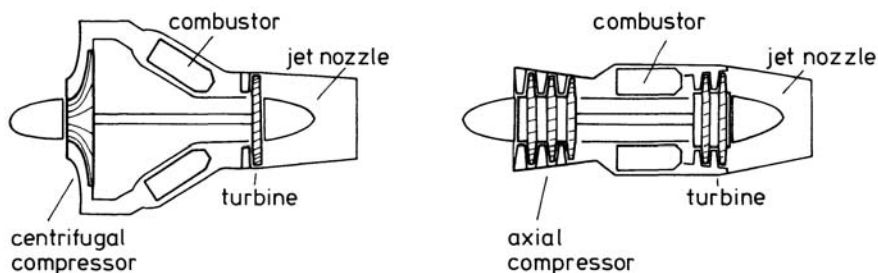


Figure 6.3 Typical compressor types

In modern gas turbine engines, mostly the axial flow compressor is found, which consists of a series of rotating many-bladed fans. These fans rotate between sets of fixed stator blades. Each set of fixed and rotating blades forms a compressor stage and delivers a certain increase in pressure. Therefore, in the compressor which may incorporate a large number of stages, the passing air obtains a very high pressure rise. This is accompanied by a considerable increase in temperature.

In the combustor, heat energy of fuel is released in the airflow, providing a high turbine entry temperature. Normally, there is a maximum turbine entry temperature because of the critical thermal load of the blades of the turbine. To keep the gas temperature at the turbine inlet within acceptable limits, much more air is used in the turbojet than is required for combustion. This large mass flow is also needed to get a high thrust.

In passing through the turbine, energy is extracted from the gas flow in order to drive the compressor. This is coupled with a drop in pressure and temperature in the turbine. Most turbojets have two compressors, one after the other, each driven by an independent turbine through concentric unconnected shafts (Fig. 6.4). As each rotating assembly, consisting of a turbine, a drive shaft and a

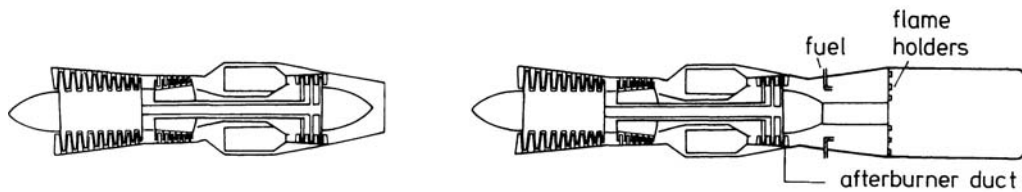


Figure 6.4 Two-spool turbojet without and with afterburner

compressor or fan is a spool, the arrangement shown in Fig. 6.4 is called a *two-spool engine*. The remaining energy from the gas generator is expanded in the nozzle and exhausted as a high-velocity jet. If the turbojet is designed for use at subsonic airspeeds, the nozzle is convergent. In the case of an engine aimed to fly at supersonic velocities, a convergent-divergent exhaust nozzle is used to obtain maximum jet velocity.

Gas turbine engines may be equipped with a reheat system or *afterburner*. In the case of afterburning, supplementary fuel is injected into the exhaust nozzle as is also illustrated in Fig. 6.4. Burning of extra fuel is possible because the exhaust gas entering the nozzle comprises an excess of unburned oxygen. Afterburning is a method to achieve a temporary increase in thrust for takeoff and climb or for transition from subsonic to supersonic flight velocities.

In contrast to the piston engine, the various processes in the turbojet are continuous. In combination with the absence of reciprocating parts, the turbojet runs smoother and enables more heat energy to be released.

Another essential difference between jet and propeller propulsion is the nature of the rearward mass flow. In the case of the propeller a large mass flow of cold air is transported at a relatively low speed, whereas the turbojet produces a thrust by accelerating a relative small amount of hot gas to a very high velocity. This implies, as will be explained in subsequent sections, that the turbojet is only effective at high flight speeds, whereas the propeller is an efficient means of producing thrust at low-subsonic airspeeds.

The problem of the inefficiency of the turbojet at low flight speeds can be solved through extracting most of the power from the hot gases by means of an enlarged turbine, and then to supply the power to a propeller. This arrangement is called a *turboprop*. Fig. 6.5 shows the layout of a single-shaft engine, where the turbine, compressor, and propeller are all mechanically connected. A reduction gear is present between the compressor and the propeller since the propeller must rotate at a much lower speed than the gas generator in order to avoid extreme tip speeds. Normally it will be possible to use the residual energy after the turbine to eject the gases from an exhaust nozzle at a rather high speed and so to generate some extra thrust.

A compromise between the turboprop and the turbojet is the *turbofan*, which engine type operates efficiently in the high subsonic speed range. In this case, a ducted fan takes the place of the propeller of the turboprop. As sketched in Fig. 6.6, usually, the fan is placed at the front of the engine, where it is an integral part of the low-speed compressor. This arrangement is designated as front fan. Part of the air impelled by the fan passes through the bypass duct and is discharged as a cold jet. The rest of the fan flow goes through the engine and forms the hot flow. A characteristic design figure for a turbofan is the bypass ratio, which is the ratio of the mass flow rate of the cold (secondary) flow passing through the bypass duct to the mass flow rate of the hot (primary) flow

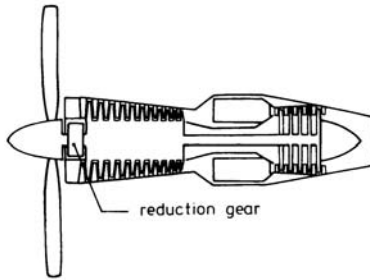


Figure 6.5 Turboprop

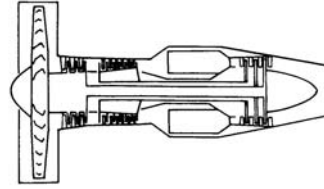


Figure 6.6 Two-spool turbofan

passing through the gas generator. In formula

$$B = \frac{m_c}{\dot{m}_h} \quad (6.2)$$

where B denotes the bypass ratio and m_c and $\dot{m}_h$ are the mass flow rates of the cold and hot stream, respectively. Since $m = m_c + m_h$, we also have the relationships in Eq. 6.3.

$$\frac{m_c}{m} = \frac{B}{B+1} \quad \text{and} \quad \frac{\dot{m}_h}{m} = \frac{1}{B+1} \quad (6.3)$$

Today's turbofan engines have a bypass ratio between 9 and 12. Advanced propulsion systems with a bypass ratio beyond the current values are called ultra-high bypass ratio (UHBR) engines.

To accelerate the cold stream, a large percentage of the energy available from the gas generator is supplied as shaft power to the fan. Therefore, in principle, the turbofan is similar to the turboprop except that its bypass ratio is much lower. Nevertheless, in addition to the thrust produced by the hot jet, the fan also accelerates such a large mass of cold air that it supplies a generous contribution to the total thrust. An added benefit of bypassing of air is reduced jet-generated noise.

Evidently, the primary purpose of airplane propulsion systems is to convert energy into power available for propulsion. However, other systems such as the landing gear, the environmental control system, the flight control systems and fuel systems also require power during flight. Power for these systems is extracted from the engine and provided by means of electrical, pneumatic and hydraulic power. On commercial airplanes, mechanical power is converted into electrical power by a generator driven by an accessory gearbox connected to the engine. Hydraulic power is most often generated by engine-driven pumps also connected to the accessory gearbox. Finally, bleed air from the engine is used to supply pneumatic power. The industry is currently in the process of adopting the "more-electric" aircraft in which various aircraft systems (pneumatic and hydraulic) are replaced by electric systems. For airplanes equipped with high-bypass ratio turbofan engines, this is a more efficient form of power extraction Ref. 11.

Over the past decades there has been a strong increase in the usage of unmanned aerial vehicles (UAVs). Small UAVs are often equipped with a propeller and an electric motor powered by batteries. This propulsion system has a low complexity and it has advantages in terms of noise. A typical layout with a brushless direct current (DC) electric motor used regularly on small remotely controlled airplanes is presented in Fig. 6.7. Just like the piston engine and propeller combination, the

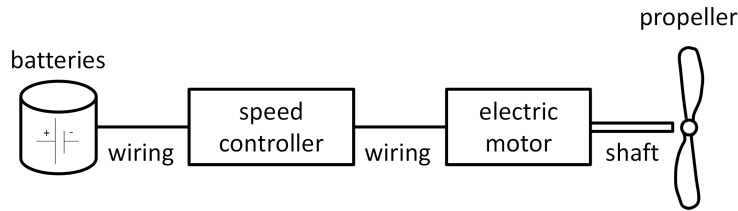


Figure 6.7 Battery-powered brushless DC electric motor with propeller

usefulness of the battery-powered electric motor propeller combination is limited to low subsonic airspeeds. The fundamental challenge in using batteries as an energy source for airplane propulsion is the low specific energy of batteries compared to the high specific energy of conventional jet-fuel. In other words, for a given amount of available power that they are capable to generate, batteries are very heavy compared to fuel. The effect of weight on airplane performance is treated in [Chapter 11](#). The specific energies of state-of-the-art batteries at the time of writing are in the order of 100 to 200 W·hr/kg at cell level, whereas gasoline has a specific energy of approximately 13000 W·hr/kg. Lithium-air batteries, however, show great promise with a theoretical specific energy of 11680 W·hr/kg [Ref. 12](#). Many significant challenges have to be overcome before even a small part of this theoretical value can be achieved in reality.

It should be noted that the efficiency of the elements of the battery-powered electric motor is relatively high compared to the efficiency of the various components in an air-breathing propulsion system. Due to the high weight of batteries, the use of batteries as energy source is at the moment only feasible for small aircraft, which have a low weight and are intended for a limited flight distance or flight time. Currently, a significant effort is placed in the development of manned full-electric general aviation airplanes. Various flying demonstrators have already been introduced over the past 10 years, and serial production for electric motor gliders has commenced. Unlike air-breathing engines, the performance of an electric motor is largely independent from the flight altitude and airspeed.

6.2. THE PISTON ENGINE

The working cycle of the four-stroke piston engine requires two revolutions of the crankshaft; two strokes down and two strokes up. The four events are illustrated in [Fig. 6.8](#) in the form of a plot of pressure versus volume:

- **The intake stroke (1).** The piston travels from the cylinder head (top dead center) to the bottom of the cylinder (bottom dead center). An amount of fuel and air is sucked into the cylinder through the open intake valve.
- **The compression stroke (2).** The piston moves upward to the top of the cylinder, and the charge is almost isentropically compressed from the inlet-manifold pressure p_2 to a pressure p_3 . When the piston approaches the top of the stroke, the mass of gas confined in the cylinder is ignited by the ignition system. Between points 3 and 4, combustion takes place at approximately constant volume and the pressure increases to p_4 .

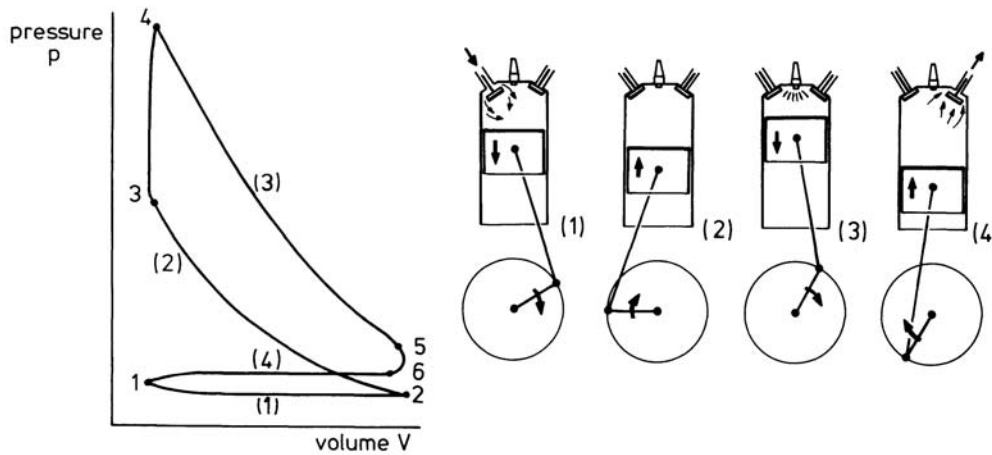


Figure 6.8 Working cycle of the four-stroke piston engine

- **The power stroke (3).** The high pressure pushes the piston downward and the burning gas expands more or less isentropically to the pressure p_5 . Just before the piston reaches the bottom of the stroke the exhaust valve opens and the pressure inside the cylinder drops to the value p_6 ($p_6 = p_1$).
- **The exhaust stroke (4).** The piston again moves upward and the burned gases in the cylinder are forced out through the exhaust valve.

6

The compression ratio of the piston engine is the volume of space in the cylinder when the piston is at the bottom dead center divided by the volume when the piston is at the top dead center. The cycle or thermal efficiency is the ratio of the power developed in the engine and the heat release per unit time or thermal input,

$$\eta_{\text{th}} = \frac{NP_i}{Q} = \frac{NP_i}{\dot{m}_f H} \quad (6.4)$$

where N is the number of cylinders and P_i is the indicated power, which is the power developed in one cylinder. The thermal input Q can be written as the product of the fuel mass flow rate $\dot{m}_f$ and the heating value of the fuel H . For aviation fuels the heating value is about 4.3×10^7 J/kg.

The conversion of the heat energy released during combustion to mechanical power, usually, is analyzed by considering the *Otto-cycle*, which consists of four ideal processes (Fig. 6.9). Point 2 in Fig. 6.9 stands for the mixture of air and fuel in the cylinder at the inlet-manifold pressure that is compressed isentropically along the line 2-3. From 3 to 4 heat is added to the charge by burning the fuel at constant volume, thereby considerably increasing the pressure. Then, the gases are expanded isentropically along the line 4-5 to the pressure p_5 . Finally, from 5 to 2, the cycle is completed by the discharge of the gases at constant volume. When making use of the Poisson relations between p , T and ρ (see Appendix C), the highest thermal efficiency is easily obtained as

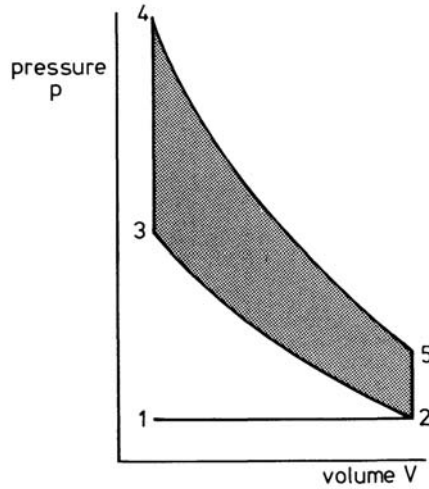


Figure 6.9 The Otto-cycle

$$\eta_{th} = 1 - \frac{1}{\epsilon^{\gamma-1}} \quad (6.5)$$

where ϵ is the compression ratio of the engine and γ is the ratio of the specific heats of the fuel-air mixture. Depending on the composition of the gas, the value of γ varies between 1.2 and 1.4. It should be noted that due to heat and friction losses, the actual value of the thermal efficiency is lower than that forecasted by Eq. 6.5.

The net work per cylinder done during one cycle, W_i , is represented by the hatched area in Fig. 6.9 since this work is given by

$$W_i = \oint p dV \quad (6.6)$$

At an engine speed n (revolutions per second), the number of power strokes in one second is $n/2$. Hence,

$$P_i = W_i \frac{n}{2} \quad (6.7)$$

When we neglect the friction losses between the moving parts of the engine, the power delivered to the shaft, P_{br} , may be set equal to the total indicated power,

$$P_{br} = NP_i \quad (6.8)$$

Combination of Eq. 6.7 and Eq. 6.8 yields

$$P_{br} = NW_i \frac{n}{2} \quad (6.9)$$

The power P_i and the work W_i are habitually related to each other by means of the mean effective pressure, p_e , which quantity is defined by

$$p_e = \frac{W_i}{\frac{\pi}{4} D^2 S} \quad (6.10)$$

where D is the diameter of the piston (the bore) and S is the length of the displacement of the piston (the stroke). Clearly, the pressure p_e in Eq. 6.10 is a fictitious parameter, which is broadly used as an index in determining the shaft brake power. Insertion of Eq. 6.10 into Eq. 6.9 yields

$$P_{br} = p_e \frac{\pi}{4} D^2 S \frac{2}{2} N \quad (6.11)$$

where the quantity $\frac{\pi}{4} D^2 S N$ is the total volume displaced by the piston during one stroke (the total piston displacement of the engine).

Apparently, the shaft brake power delivered by a given engine is a function of mean effective pressure and engine speed,

$$P_{br} = P_{br}(p_e, n) \quad (6.12)$$

Further thermodynamic analysis learns that the pressure p_e varies proportional to the quotient of pressure and temperature of the fuel-air mixture at the beginning of the compression stroke (point 2 in Fig. 6.9). This means that p_e depends on the density of the atmospheric air and the throttle setting δ ($0 \leq \delta \leq 1.0$). Accordingly, we have

$$P_{br} = P_{br}(H, \delta, N) = P_{br}(H, \Gamma) \quad (6.13)$$

where $\Gamma = \Gamma(\delta, n)$ is the engine control setting.

The charts as generally supplied by the engine manufacturers are of the form sketched in Fig. 6.10. In this so-called *standard power diagram* the shaft brake power in International Standard Atmosphere is given, assuming a mixture control which furnishes maximum power.

In the left-hand diagram is given the power at sea level: $P_{br} = P_{br0}(\delta, n)$. The throttle setting is expressed in terms of inlet manifold pressure p_z . The power is limited by the maximum permissible engine speed and maximum inlet manifold pressure, which corresponds to the full-throttle condition (fully opened throttle valve; $\delta = 1.0$). The effect of altitude on full-throttle power is shown in the right-hand diagram of Fig. 6.10, $P_{br0} = P_{br0}(H, n)$. The chart gives also the prevailing inlet manifold pressures. In the full-throttle condition and for a given engine speed the shaft brake power decreases with increasing height due to the decreasing air density.

An empirical relationship often used to account for the effect of altitude is:

$$\frac{P_{br}}{P_{br0}} = 1.132 \frac{\rho}{\rho_0} - 0.132,$$

where the subscript “0” denotes sea-level condition. In order to determine the power at altitude for a part-throttle condition for given values of altitude, engine speed, inlet manifold pressure, and air temperature, the following procedure is employed:

1. Locate point A on sea-level curve for the known values of inlet manifold pressure and engine speed and transfer to B.

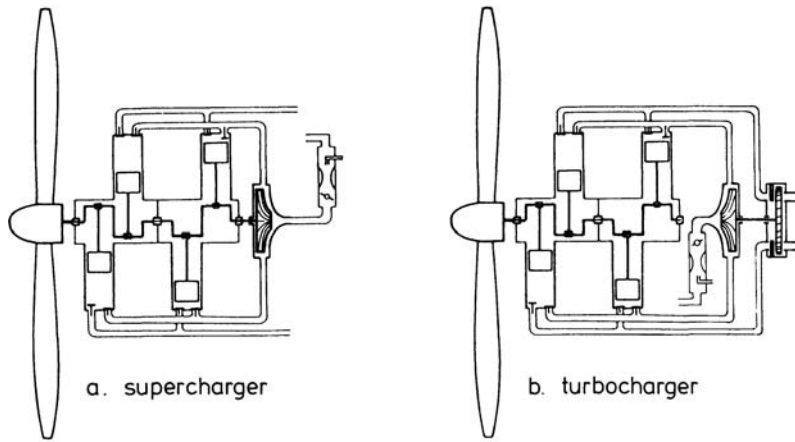


Figure 6.11 Supercharging

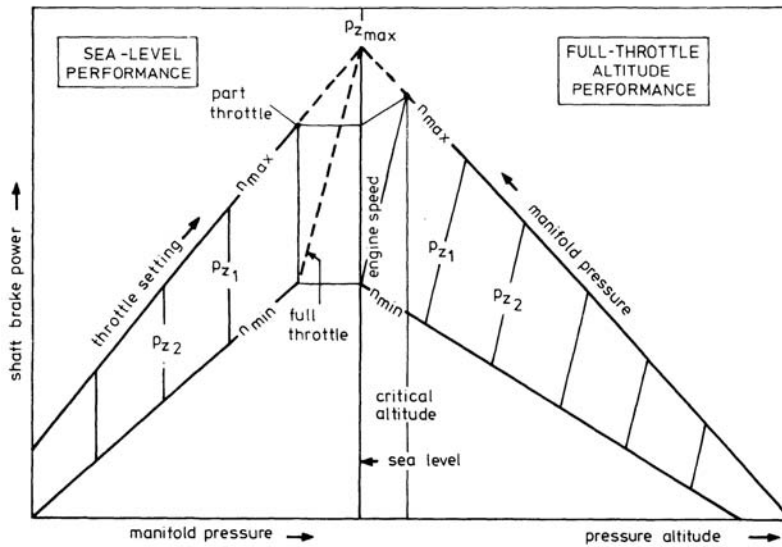


Figure 6.12 Standard power diagram (supercharged)

The altitude at which the throttle becomes fully open is termed the critical altitude of the engine for the given engine speed and inlet manifold pressure. Above the critical altitude, the power output decreases with increasing height due to the reduction of air density as in the case of an aspirated engine. An important engine characteristic is the amount of fuel required to generate the shaft brake power. This may be expressed as the fuel weight flow rate, F , divided by shaft brake power,

$$c_p = \frac{F}{P_{br}} = \frac{\dot{m}_f g}{P_{br}} \quad (6.15)$$

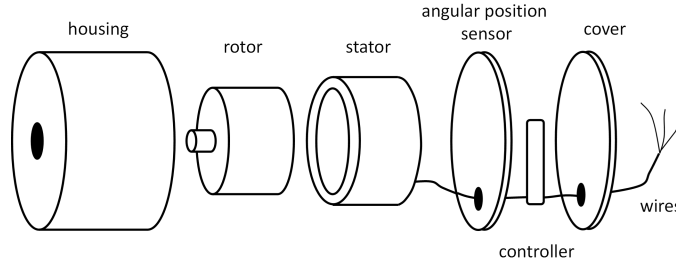


Figure 6.13 Layout of a brushless DC electric motor

where c_P is the specific fuel consumption, which has the dimensions N/Whr or N/kWhr. A comparison of Eq. 6.15 with Eqs. 6.4 and 6.8 reveals that the specific fuel consumption is an inverse criterion of thermal efficiency,

$$c_P = \frac{g}{H\eta_{th}} \quad (6.16)$$

The working cycle of the piston engine gives a high thermal efficiency over a wide range of inlet manifold pressures, engine speeds, and flight altitudes. A cruising thermal efficiency of 35% ($c_P = 2.4$ N/kWhr) is fairly representative of airplane piston engines. The thermal efficiency, however, is only half the problem since the conversion of shaft brake power into power available is also coupled with losses. The overall efficiency of the complete propulsion process can be written as

$$\eta_{tot} = \frac{TV}{\dot{m}_f H} = \frac{TV}{P_{br}} = \frac{P_{br}}{\dot{m}_f H} = \eta_j \eta_{th} \quad (6.17)$$

where, according to Eq. 6.1, $\eta_j = TV/P_{br}$ is the propulsive efficiency.

6.3. THE ELECTRIC MOTOR

Electric motors are used to convert electric power into mechanical power. A wide variety of electric motors exists. The most commonly used type of electric motor for small UAVs is the brushless direct current (DC) motor because it has both a relatively high efficiency and a high power to weight ratio. A typical layout of such an electric motor is presented in Fig. 6.13. The main elements of the brushless DC electric motor are the stator, to which electric power is supplied, and the rotor, a rotating element based on a permanent magnet. In addition, a sensor is required in combination with an electronic controller. Within the stator, a magnetic field is created by an electrical current. According to the Biot-Savart law, a current element of intensity I within a wire of length $d\vec{l}$ contributes $d\vec{B}$ to a magnetic field at a position defined by the vector $\vec{r}$.

$$d\vec{B} = \frac{\mu_0}{4\pi} \frac{I d\vec{l} \times \vec{r}}{r^3} \quad (6.18)$$

In this equation, μ_0 is a constant that represents the magnetic permeability of vacuum. If a long wire is used to form a coil, a strong magnetic field with a uniform direction can be produced

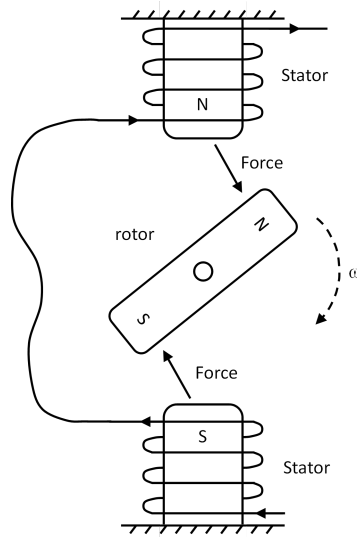


Figure 6.14 Working principle of a brushless DC electric motor

through the centre of the coil. The magnetic force on an element of a wire carrying a current in the presence of a magnetic field can be computed using the law of Lorentz.

$$d\vec{F} = I d\vec{l} \times \vec{B} \quad (6.19)$$

If a permanent magnet is present in the magnetic field created by wire carrying a current, a magnetic force is exerted on it. This basic principle is applied in brushless DC motors.

When a permanent magnet is allowed to rotate freely in between two coils as represented in Fig. 6.14, the magnetic forces generated by the coil create a torque which will rotate the permanent magnet. In this arrangement, the coils are not moving and are therefore called the stators. The permanent magnet is designated as rotor. It is important to note that the magnitude and direction of the torque depends on the angle of rotor. Once the rotor has rotated by 180 deg, the current should change direction in order to keep the torque in the same direction. Furthermore, in its upright position, there is no torque present. Therefore, in practical applications multiple coils are used to ensure there is always a net torque present. In an arrangement with multiple coils and possibly multiple magnets, the angle between the rotor and the active coils is relatively small and thus there is much less torque variation. A commonly used arrangement is the three-phase DC motor, which has three sets of coils. Its working cycle is represented in Fig. 6.15. Two assumptions are made in this figure. The torque variation with rotor angle for a pair of stator coils is neglected. Also, the current cannot change instantaneously from zero to its maximum value. This effect is not represented in the simplified working cycle. By continuously switching the current, it can be ensured that there are always two sets of coils creating a torque on the rotor. As a result, the total torque acting on the rotor, which is the summation of the torques created by each set of coils, is constant as a function of rotation (Fig. 6.16). In reality, there will be small torque variations due to the effects mentioned before. These variations are very small if the motor is carefully designed.

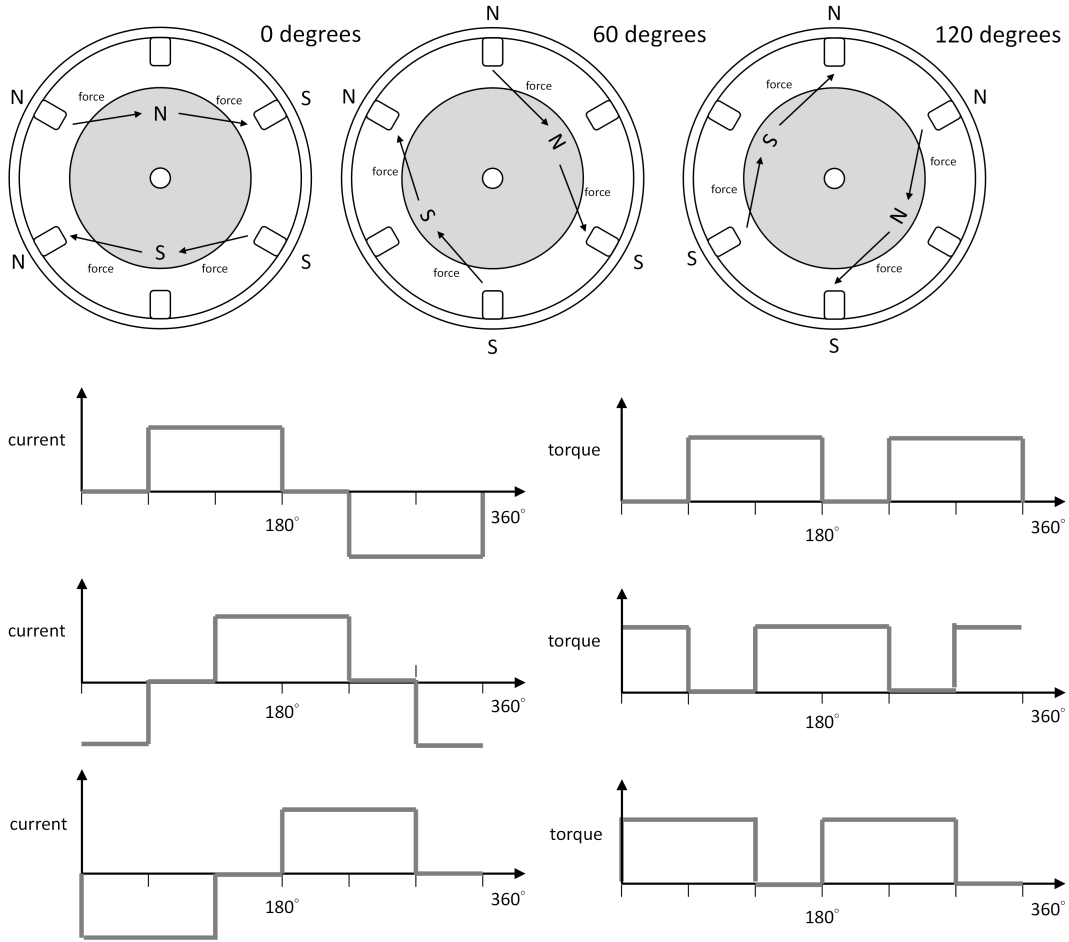


Figure 6.15 Working cycle of a three-phase synchronous brushless DC motor

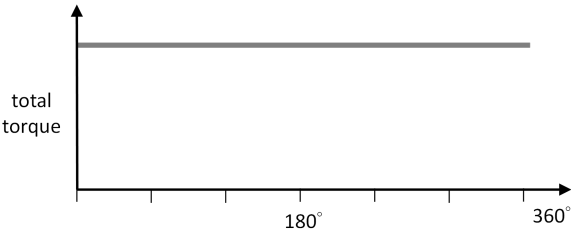


Figure 6.16 Total torque of a three-phase synchronous brushless DC motor

Brushed DC motors also exist. These have an arrangement in which the coils are rotating and the permanent magnet is static. The rotating coil needs to make contact with the stationary power supply and this is done by means of brushes. A disadvantage of brushed motors is that the brushes wear down and require frequent replacement. Furthermore, they are less suited for high torque applications because the friction of the brushes increases with rotational speed. The efficiency of brushed DC motors is less than that of brushless DC motors. On the positive side, they do not require sensors and an electronic controller. This results in a simple and thus low cost design. In practical applications, a total efficiency of 85 to 90% is typically achieved for brushless DC motors compared to an efficiency in the range of 75 to 80% for brushed DC motors. For small remotely controlled UAVs, the brushless DC motor described in this paragraph is the preferred choice. For larger UAVs, an out-runner configuration of a brushless DC motor is often used [Ref. 13](#). This means that the rotor is placed around the stators. Apart from that, it has the same working principle. A detailed treatment of the working principles and design of brushless DC motors can be found in [Ref. 14](#).

A basic procedure to determine the performance characteristics of a brushless DC motor is provided next, in combination with a propeller-based propulsive system. While a detailed treatment of propeller performance is provided in the next chapter, it is relevant to know that variable-speed, fixed-pitch propellers are often used in combination with brushless DC motors. The thrust (T) and associated torque (Q) of a propeller are functions of the rotational speed (ω) of the propeller, the forward airspeed of the airplane (V) and the air density (ρ). In equilibrium flight, the thrust generated through the propeller(s) should match the aerodynamic drag of the airplane. The thrust can be adjusted by modifying the rotational speed of the propeller. The required shaft power to drive the propeller is determined by rotational speed and propeller torque.

$$P_{\text{br}} = Q\omega \quad (6.20)$$

The electric motor delivers this required shaft power. The electronic speed controller converts the voltage of the battery pack to a three-phase alternating signal, as explained in [Fig. 6.15](#). For a given required shaft power and rotational speed, the energy consumption can be computed. Assuming constant battery voltage, the energy consumption follows by the next equation.

$$E = V_{\text{bat}} \int I_{\text{bat}} \, dt \quad (6.21)$$

Hence, the energy consumption depends on the current delivered by the battery, which in turn depends on the flight phase. The capacity of a battery is commonly expressed in Ampere-hours, and there is an upper limit to the discharge rate (commonly referred to as the C rating of a battery). In a simple approach, the efficiency of the complete system driving the propeller can be expressed as follows.

$$\eta = \frac{P_{\text{br}}}{V_{\text{bat}} I_{\text{bat}}} \quad (6.22)$$

In a more comprehensive approach, the different elements of the propulsion system driving the propeller can be modelled as equivalent electric circuits. The current delivered by the batteries is supplied to the electronic speed controller(s) (ESC) and possibly other systems that use electric power such as the flight controller.

$$I_{\text{bat}} = I_{\text{ESC}} + I_{\text{systems}} \quad (6.23)$$

Typically, the current required for the other systems can be assumed constant. The current supplied to the electronic speed controller is subject to a limit value, which cannot be exceeded for safe operation. The electronic speed controller creates current pulses to regulate the motor speed. Therefore, the motor current is only a percentage of the current supplied to the electronic speed controller. This percentage is called the duty cycle, indicated with σ .

$$I_{\text{ESC}} = \sigma I_{\text{motor}} \quad (6.24)$$

The duty cycle is a function of the battery voltage (V_{bat}), the electric motor voltage (V_{motor}) and current (I_{motor}) and the resistance of the electronic speed controller (R_{ESC}).

$$\sigma = \frac{V_{\text{motor}} + I_{\text{motor}} R_{\text{ESC}}}{V_{\text{bat}}} \quad (6.25)$$

In practical terms it can be interpreted as the ratio of the time that the signal by the electronic speed controller is active divided by the total time. The voltage and current supplied to the motor are functions of the propeller torque and rotational speed, and of a wider set of motor parameters.

$$I_{\text{motor}} = \frac{QK_{V,0}V_{\text{motor},0}}{9.55(V_{\text{motor},0} - I_{\text{motor},0}R_{\text{motor}})} + I_{\text{motor},0} \quad (6.26)$$

$$V_{\text{motor}} = R_{\text{motor}} I_{\text{motor}} + \left(\frac{V_{\text{motor},0} - I_{\text{motor},0}R_{\text{motor}}}{K_{V,0}V_{\text{motor},0}} \right) N \quad (6.27)$$

Here, $K_{V,0}$ is the no-load motor speed constant (rpm/V), R_{motor} is the internal resistance of the motor and $V_{\text{motor},0}$ is the nominal no-load voltage of the motor. A more extensive treatment of this calculation procedure, including derivations of the different equations is provided in Appendix B of Ref. 15. This reference also includes example parameters for a limited number of small UAVs. Note that various databases with information about batteries, electric motors and electronic speed controllers are also available in the public domain.

6.4. DEFINITION OF THRUST FOR JET PROPULSION

In order to explain the customary definition of thrust for jet propulsion, a nacelle-mounted turbojet engine is considered in Fig. 6.17. Since the resultant force in a steady flow is conveniently established by the application of the momentum equation (see Appendix C), in Fig. 6.17 a control volume is specified around the engine, which extends far upstream where the pressure and velocity have their free stream values p_0 and V_0 . The side boundaries are parallel to the velocity V_0 and are, just like the aft control surface, sufficiently far removed from the engine so that the local pressures are equal to the free stream pressure p_0 . The air flows passing through and around the engine duct are also distinguished in Fig. 6.17.

The air mass flow rate of the internal flow crossing the boundary at the front is given by $\dot{m} = \rho_0 V_0 A_0$. The mixture of air and combustion products crosses the aft plane through an area A_j with a velocity w_j .

The force obtained as a result from the time rate of change of linear momentum of the fluid that passes through the engine, and by assuming uniform flow over the area A_j , is given by Eq. 6.28.

$$F_1 = T_{\text{oi}} + T_{\text{int}} + T_{\text{ej}} = (\dot{m} + \dot{m}_f) w_j - \dot{m} V_0 \quad (6.28)$$

Conventionally, the net force acting on the airplane in its flight direction is divided into thrust and drag.

Such division is a matter of definition. If we define $-F_2$ as nacelle (or airplane) drag, then Eq. 6.31 tells us that the thrust is given by the force F_1 . This means that the thrust is defined as the time rate of change of momentum of the flow through the engine between stations 0 and j in Fig. 6.17.

However, there is an inconvenience in this definition of the thrust due to the difficulty which is encountered when we want to determine the velocity w_j . Certainly, for a convergent nozzle, there is in fact hardly a physical post-exit stream tube because of the exchange of energy between internal and external flows.

In order to avoid this complication, engine manufacturers normally express the thrust as the rate of increase of momentum between the stations o and e in Fig. 6.17,

$$T = T_{oi} + T_{int} = (\dot{m} + \dot{m}_f)w_e - \dot{m}V_0 + A_e(p_e - p_0) \quad (6.32)$$

The thrust so defined depends on the conditions in the undisturbed stream and at the nozzle exit, which both are known or determinable. When applying the momentum equation for the jet

$$A_e(p_e - p_0) + T_{ej} = (\dot{m} + \dot{m}_f)(w_j - w_e) \quad (6.33)$$

we readily find the following expression for the net engine force

$$F = (\dot{m} + \dot{m}_f)w_e - \dot{m}V_0 + A_e(p_e - p_0) - (T_{oi} - T_{ext}) \quad (6.34)$$

Apparently, using Eq. 6.32 for the calculation of the thrust requires that the drag is defined by the last term of the right-hand side of Eq. 6.34. Clearly, the physical complexity of the problem is now confined to the determination of T_{ext} and T_{oi} as the components of the drag force. Anyway, Eq. 6.32 will form the basis for our evaluations of engine thrust throughout this book. According to our discussion in Section 3.6 the linear momentum of the fuel flow rate relative to the engine can be omitted in Eq. 6.32. We thus obtain

$$T = \dot{m}(w_e - V_0) + A_e(p_e - p_0) \quad (6.35)$$

A convenient form for the thrust equation is obtained when we introduce the equivalent jet velocity, $(w_e)_{eq}$, defined by

$$(w_e)_{eq} = w_e + \frac{A_e}{\dot{m}}(p_e - p_0) \quad (6.36)$$

Using this definition we get

$$T = \dot{m}[(w_e)_{eq} - V_0] \quad (6.37)$$

An important measure for the relationship between the thrust and the size of the engine is the thrust per unit air weight flow rate or *specific thrust*

$$\psi_T = \frac{T}{\dot{m}g} = \frac{(w_e)_{eq} - V_0}{g} \quad (6.38)$$

With this definition the specific thrust has the dimension of second. If the nozzle exit pressure equals the ambient pressure, then we obtain

$$\psi_T = \frac{T}{\dot{m}g} = \frac{w_e - V_0}{g} \quad (6.39)$$

Expressing the thrust as the product of weight flow rate of the air through the engine and specific thrust, will be useful for our subsequent discussions on turbojet performance.

6.5. IDEAL TURBOJET CYCLE

The working cycle of the turbojet is different from that of the piston engine in Fig. 6.9 insofar that the combustion process in the gas turbine engine is very nearly isobaric with an increase in volume of the gas.

In examining the thermodynamic behavior of the fluid as it flows through the turbojet, we will consider here the *ideal turbojet cycle* or *Brayton-cycle*. The idealization implies that the following assumptions are made:

- The working fluid behaves as a perfect gas with constant specific heats, which are equal to those of air;
- All compression and expansion processes are isentropic;
- Combustion takes place at constant total pressure;
- In the exhaust nozzle the flow is expanded to the free stream static pressure.

The resulting cycle is shown in Fig. 6.18 in terms of pressure versus specific volume. Specific volume, v , is the volume per unit mass of the working fluid and hence the inverse of the density, $v = 1/\rho$. The various engine components are assigned by numerical engine stations as defined in Fig. 6.2.

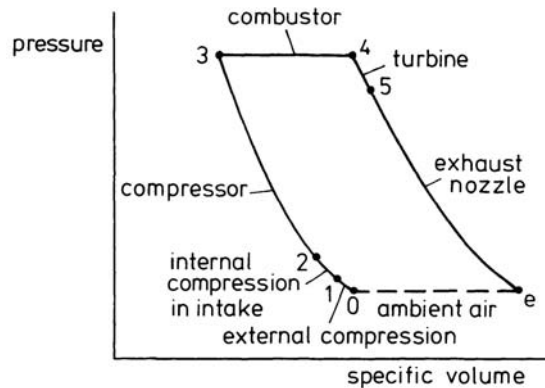


Figure 6.18 Ideal cycle for gas turbine engine (Brayton-cycle)

As shown in [Appendix C](#), static pressure and temperature and velocity of an airstream are equivalent to the total pressure and temperature. Hence, in studying the conditions of the flow through the engine, the kinetic energy is taken into account implicitly by using the total properties. If p_t denotes the total pressure, p the static pressure, and M the flow Mach number, we have for isentropic compression or expansion,

$$p_t = p \left[1 + \frac{\gamma - 1}{2} M^2 \right]^{\frac{\gamma}{\gamma - 1}} \quad (6.40)$$

For adiabatic and isentropic compression or expansion the total temperature is given by

$$T_t = T \left[1 + \frac{\gamma - 1}{2} M^2 \right] \quad (6.41)$$

where again subscript t denotes the stagnation state.

Starting from the free stream conditions p_0 , T_0 and M_0 or V_0 in point 0 of [Fig. 6.18](#), the air passes successively through the following engine components:

1. The intake (0-2). The pressure rises from p_0 to about $p_{t2} = p_{t0}$ at the inlet of the compressor. The increase in pressure is due to the external and internal deceleration of the air relative to the engine, and is called the ram pressure rise,

$$p_{t2} = p_{t0} = p_0 \left[1 + \frac{\gamma - 1}{2} M_0^2 \right]^{\frac{\gamma}{\gamma - 1}} \quad (6.42)$$

Likewise, the temperature at engine station 2 equals the free stream total temperature

$$T_{t2} = T_{t0} = T_0 \left[1 + \frac{\gamma - 1}{2} M_0^2 \right] \quad (6.43)$$

2. The compressor (2-3). From [Eq. 6.40](#) and [Eq. 6.41](#) we obtain

$$\frac{T_t}{T} = \left[\frac{p_t}{p} \right]^{\frac{\gamma - 1}{\gamma}} \quad (6.44)$$

But, according to [Appendix C](#), $T/(p)^{\frac{\gamma - 1}{\gamma}} = \text{constant}$ for an isentropic process so that [Eq. 6.44](#) becomes

$$\frac{T_t}{(p_t)^{\frac{\gamma - 1}{\gamma}}} = \text{constant} \quad (6.45)$$

Applying [Eq. 6.45](#) to the isentropic compression process, we have the compressor outlet temperature given by

$$T_{t3} = T_{t2} \varepsilon_c^{\frac{\gamma - 1}{\gamma}} \quad (6.46)$$

where $\varepsilon_c = p_{t3}/p_{t2}$ is the pressure ratio of the compressor.

3. The combustor (3-4). As a consequence of the simplification that the drop in total pressure during combustion is zero, we get

$$p_{t4} = p_{t3} \quad (6.47)$$

From the steady flow energy equation in [Appendix C](#), we find for the heat added to the flow per unit time

$$Q = \dot{m}_f H = \dot{m} c_p (T_{t4} - T_{t3}) \quad (6.48)$$

where H is the heating value of the fuel, T_{t4} the turbine entry temperature, and c_p is the specific heat of air at constant pressure.

4. The turbine (4-5). The temperature at the turbine exit is found from the condition that turbine power equals compressor power. In formula

$$\dot{m} c_p (T_{t4} - T_{t5}) = \dot{m} c_p (T_{t3} - T_{t2}), \text{ or} \quad (6.49)$$

$$T_{t5} = T_{t4} - (T_{t3} - T_{t2}) \quad (6.50)$$

The pressure at the turbine outlet is given by

$$p_{t5} = p_{t4} \left[\frac{T_{t5}}{T_{t4}} \right]^{\frac{\gamma}{\gamma-1}} \quad (6.51)$$

5. The exhaust nozzle (5-e). If we assume that in flowing through the nozzle the pressure of the gas falls to ambient pressure, the Mach number at the nozzle exit can be found from [Eq. 6.40](#),

$$\frac{p_{te}}{p_e} = \frac{p_{t5}}{p_0} = \left[1 + \frac{\gamma-1}{2} M_e^2 \right]^{\frac{\gamma}{\gamma-1}}, \text{ or} \quad (6.52)$$

$$M_e = \sqrt{\frac{2}{\gamma-1} \left[\left(\frac{p_{te}}{p_0} \right)^{\frac{\gamma-1}{\gamma}} - 1 \right]} \quad (6.53)$$

Referring to [Eq. 6.40](#) and [Eq. 6.41](#), we see that the temperature T_e can be written as

$$T_e = \frac{T_{te}}{1 + \frac{\gamma-1}{2} M_e^2} = \frac{T_{te}}{\left[\frac{p_{te}}{p_0} \right]^{\frac{\gamma-1}{\gamma}}} \quad (6.54)$$

Using [Eq. 2.20](#) for the speed of sound, the jet velocity becomes

$$w_e = M_e \sqrt{\gamma R T_e} = \sqrt{\frac{2\gamma R}{\gamma-1} T_{te} \left[1 - \left(\frac{p_0}{p_{te}} \right)^{\frac{\gamma-1}{\gamma}} \right]} \quad (6.55)$$

An expression for the specific thrust is obtained by substituting Eq. 6.55 into Eq. 6.39

$$\psi_T = \frac{1}{g} \left\{ \sqrt{\frac{2\gamma R}{\gamma-1} T_{te} \left[1 - \left(\frac{p_0}{p_{te}} \right)^{\frac{\gamma-1}{\gamma}} \right]} - V_0 \right\} \quad (6.56)$$

The thermal efficiency of the working cycle of the turbojet is defined as the increase in kinetic energy of the gas stream in unit time divided by the heat energy added to the flow in unit time,

$$\eta_{th} = \frac{\frac{1}{2} \dot{m} (w_e^2 - v_0^2)}{\dot{m}_f H} \quad (6.57)$$

The energy equation in terms of total temperature reads (Appendix C)

$$T_t = T + \frac{V^2}{2c_p} \quad (6.58)$$

Substitution of Eq. 6.58 into Eq. 6.57 yields

$$\eta_{th} = 1 - \frac{1}{\varepsilon^{\frac{\gamma-1}{\gamma}}} \quad (6.59)$$

where ε is the overall pressure ratio of the cycle,

$$\varepsilon = \frac{p_{t3}}{p_0} = \frac{p_{t3}}{p_{t2}} \frac{p_{t2}}{p_0} = \varepsilon_c \left[1 + \frac{\gamma-1}{2} M_0^2 \right]^{\frac{\gamma}{\gamma-1}} \quad (6.60)$$

A graphic representation of Eq. 6.59 is given in Fig. 6.19. This chart emphasizes the importance of applying a high overall pressure ratio, that is, a high flight Mach number and a high engine speed in order to accomplish a satisfactory thermal efficiency.

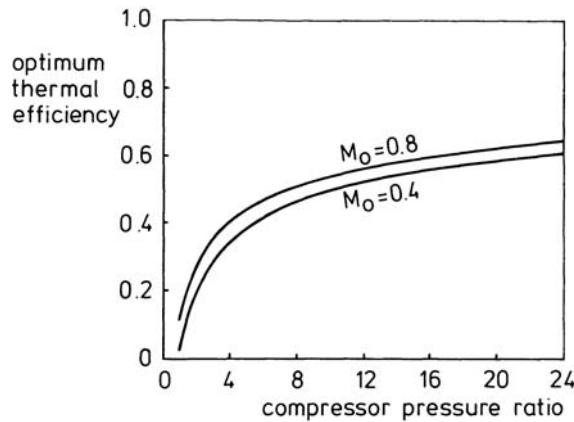


Figure 6.19 Thermal efficiency for Brayton-cycle

The optimum thermal efficiency as given by Eq. 6.59 is independent of the temperature to which the gas stream is raised in the burner. It should be realized, however, that the compression of the air goes together with an increase in temperature. The higher the overall compression ratio, the less the amount of fuel which can be supplied to the combustion chamber without going beyond the bounds of the turbine entry temperature. Thus, the maximum pressure ratio increases with increasing turbine entry temperature and with that the maximum attainable thermal efficiency. The propulsive efficiency of the turbojet engine is defined as the ratio of power available to the increase in kinetic energy of the gas stream,

$$\eta_j = \frac{P_a}{P_j} = \frac{TV}{\frac{1}{2}\dot{m}(w_e^2 - V_0^2)} \quad (6.61)$$

Substituting Eq. 6.35 into Eq. 6.61 yields ($p_e = p_0$)

$$\eta_j = \frac{\dot{m}(w_e - V_0)V_0}{\frac{1}{2}\dot{m}(w_e^2 - V_0^2)} = \frac{2}{1 + \frac{w_e}{V_0}} = \frac{2}{2 + \frac{T}{\dot{m}V_0}} \quad (6.62)$$

The overall efficiency of the entire propulsion process is given by

$$\eta_{\text{tot}} = \frac{TV_0}{\dot{m}_f H} = \frac{TV_0}{\frac{1}{2}\dot{m}(w_e^2 - V_0^2)} \frac{\frac{1}{2}\dot{m}(w_e^2 - V_0^2)}{\dot{m}_f H} = \eta_j \eta_{\text{th}} \quad (6.63)$$

In the case of jet propulsion, the fuel consumption is related to the thrust,

$$F = c_T T \quad (6.64)$$

where F is the fuel weight flow rate and c_T is the thrust specific fuel consumption, or in short specific fuel consumption (SFC), which has the dimensions of N/Ns or N/Nhr.

The specific fuel consumption is related to the overall efficiency by

$$c_t = \frac{F}{T} = \frac{g}{H} \frac{V_0}{\eta_{\text{tot}}} \quad (6.65)$$

Specific fuel consumption is an important engine characteristic since it is a measure of the efficiency of the engine. A low value of c_T means a high overall efficiency.

We conclude this section with presenting Fig. 6.20, which shows typical results of a series of design point calculations related to a subsonic flight condition of $H = 11\,000\text{ m}$ (I.S.A.) and $M_0 = 0.80$.

In Fig. 6.20, specific fuel consumption is plotted against specific thrust for a range of compressor pressure ratios and turbine entry temperatures. The curves indicate that specific thrust and specific fuel consumption increase with increasing turbine entry temperature. At a constant T_{t4} , however, an increase in pressure ratio ε_c causes a reduction in specific fuel consumption.

6.6. COMPONENT EFFICIENCIES

In Section 6.5 we saw that for a given flight condition of altitude and airspeed, both specific thrust and specific fuel consumption of the ideal turbojet cycle were completely determined by compressor pressure ratio and turbine entry temperature.

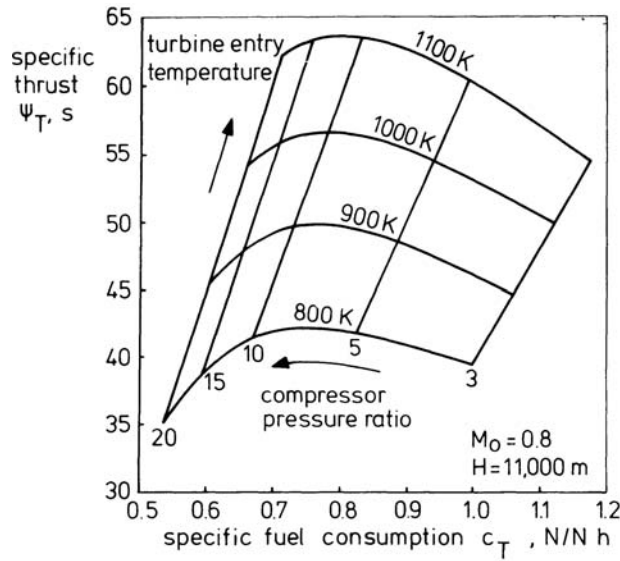


Figure 6.20 Ideal turbojet cycle performance

6

The actual performance, however, will also depend on the efficiencies of the engine components. Deviations from the ideal behavior arise mainly from the effects of friction and turbulence in the flow, through which for example we have non-isentropic compression in the intake and compressor, and non-isentropic expansion in the turbine. In the following, a short description of most of the imperfections is given.

In the intake, the air is decelerated to a very low velocity before it flows into the compressor. Because, at least in principle, there is no heat transfer, the total temperature remains constant as the flow velocity reduces from the flight speed ahead of the intake to the low velocity at the compressor inlet. In the case of subsonic intakes, viscous effects result in a reduction of total pressure, whilst for supersonic intakes a further cause for total pressure loss is the occurrence of shock waves.

To describe the efficiency of the intake, the ratio of total pressure at the compressor inlet to the free stream total pressure may be used,

$$\eta_r = \frac{p_{t2}}{p_{t0}} \quad (6.66)$$

The quantity η_r is termed the *pressure recovery factor* of the intake.

A typical variation of η_r with flight Mach number for well-designed intakes is shown in Fig. 6.21.

Alternatively, the *intake adiabatic efficiency* may be employed, which is defined by

$$\eta_d = \frac{(T_{t2})_{is} - T_0}{T_{t2} - T_0} \quad (6.67)$$

where T_{t2} is the actual temperature at the compressor inlet and $(T_{t2})_{is}$ is the total temperature that would have been reached after isentropic compression from p_0 to p_{t2} . Since $T_{t2} = T_{t0}$, we find from Eq. 6.40 and Eq. 6.41 that

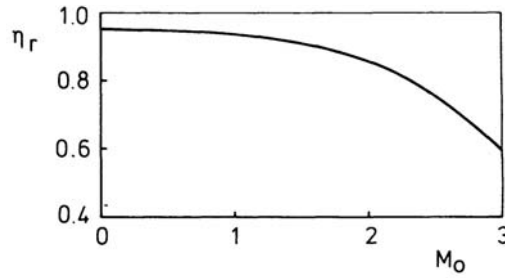


Figure 6.21 Typical variation of Intake pressure recovery factor

$$\eta_d = \frac{\left[\frac{p_{t2}}{p_0} \right]^{\frac{\gamma-1}{\gamma}} - 1}{\frac{\gamma-1}{2} M_0^2} \quad \text{or} \quad \frac{p_{t2}}{p_0} = \left[1 + \eta_d \frac{\gamma-1}{2} M_0^2 \right]^{\frac{\gamma}{\gamma-1}} \quad (6.68)$$

Combination of Eq. 6.66 and Eq. 6.68 produces the relationship:

$$\eta_d = \frac{\eta_r^{\frac{\gamma-1}{\gamma}} \left[1 + \frac{\gamma-1}{2} M_0^2 \right] - 1}{\frac{\gamma-1}{2} M_0^2} \quad (6.69)$$

For subsonic intakes, both η_r and η_d are experienced to be virtually constant with flight Mach number. At supersonic airspeeds, it is most common to specify the intake losses by means of the intake pressure recovery factor as a function of Mach number M_0 .

The efficiency of the compressor may be expressed in terms of the compressor isentropic efficiency, which is the ratio of the ideal and actual compressor powers,

$$\eta_c = \frac{\dot{m} c_p ((T_{t3})_{is} - T_{t2})}{\dot{m} c_p (T_{t3} - T_{t2})} = \frac{(T_{t3})_{is} - T_{t2}}{T_{t3} - T_{t2}} \quad (6.70)$$

Eq. 6.70 expresses that for a given compressor pressure ratio, the actual total temperature rise exceeds the isentropic value so that the actual compression process requires more power than the ideal process.

The temperature rise for a given compressor pressure ratio ϵ_c , from Eq. 6.70, is found as follows,

$$T_{t3} - T_{t2} = \frac{T_{t2}}{\eta_c} \left[\epsilon_c^{\frac{\gamma-1}{\gamma}} - 1 \right] \quad (6.71)$$

A disadvantage of the isentropic efficiency is the fact that it is dependent on the magnitude of the compressor pressure ratio. For this reason, we may use the concept of polytropic efficiency, which is the isentropic efficiency of an infinitely small pressure change such that it has a fixed value throughout the entire process. Then

$$\eta_{pol} = \frac{(dT_t)_{is}}{dT_t} = \text{const} \quad (6.72)$$

Also, from Eq. 6.45, we have for an isentropic process

$$\frac{(dT_t)_{is}}{T_t} = \frac{\gamma - 1}{\gamma} \frac{dp_t}{p_t} \quad (6.73)$$

Combination of Eq. 6.72 and Eq. 6.73 gives

$$\eta_{pol} \frac{dT_t}{T_t} = \frac{\gamma - 1}{\gamma} \frac{dp_t}{p_t} \quad (6.74)$$

Integrating between the limits 2 and 3 furnish

$$\eta_{pol} = \frac{\ln(p_{t3}/p_{t2})^{\frac{\gamma-1}{\gamma}}}{\ln(T_{t3}/T_{t2})}, \quad \text{or} \quad (6.75)$$

$$\frac{T_{t3}}{T_{t2}} = \varepsilon_c^{\frac{\gamma-1}{\eta_{pol}\gamma}} \quad (6.76)$$

Substitution of Eq. 6.76 into Eq. 6.71 produces the following relation between the polytropic and the isentropic efficiency of the compression process,

$$\eta_c = \frac{\varepsilon_c^{\frac{\gamma-1}{\gamma}} - 1}{\varepsilon_c^{\frac{\gamma-1}{\eta_{pol}\gamma}} - 1} \quad (6.77)$$

Non-isentropic expansion in the turbine makes that for a given turbine pressure ratio the gas comes out at a higher temperature than in the ideal case. This behavior may be expressed by the *turbine isentropic efficiency*, which is defined as the ratio of the actual and ideal turbine powers,

$$\eta_t = \frac{\dot{m}c_p(T_{t4} - T_{t5})}{\dot{m}c_p(T_{t4} - (T_{t5})_{is})} = \frac{T_{t4} - T_{t5}}{T_{t4} - (T_{t5})_{is}} \quad (6.78)$$

Combining Eq. 6.51 and Eq. 6.78 results in an expression for the turbine pressure ratio at a given temperature drop,

$$\frac{p_{t5}}{p_{t4}} = \left[1 - \frac{T_{t4} - T_{t5}}{\eta_t T_{t4}} \right]^{\frac{\gamma}{\gamma-1}} \quad (6.79)$$

Similarly, since for an expansion $\eta_{pol} = dT_t/(dT_t)_{is}$, it follows that

$$\frac{p_{t5}}{p_{t4}} = \left[\frac{T_{t5}}{T_{t4}} \right]^{\frac{\gamma}{\eta_{pol}(\gamma-1)}} \quad (6.80)$$

Consequently,

$$\eta_t = \frac{1 - \left[\frac{p_{t5}}{p_{t4}} \right]^{\frac{\eta_{pol}(\gamma-1)}{\gamma}}}{1 - \left[\frac{p_{t5}}{p_{t4}} \right]^{\frac{\gamma-1}{\gamma}}} \quad (6.81)$$

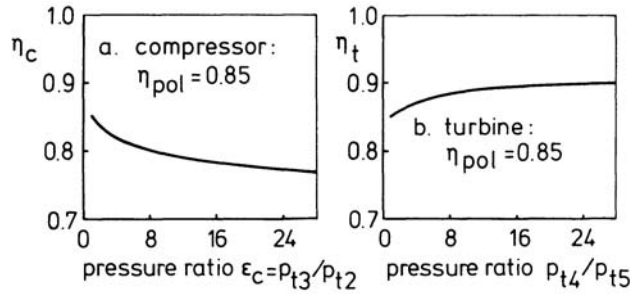


Figure 6.22 Isentropic efficiencies

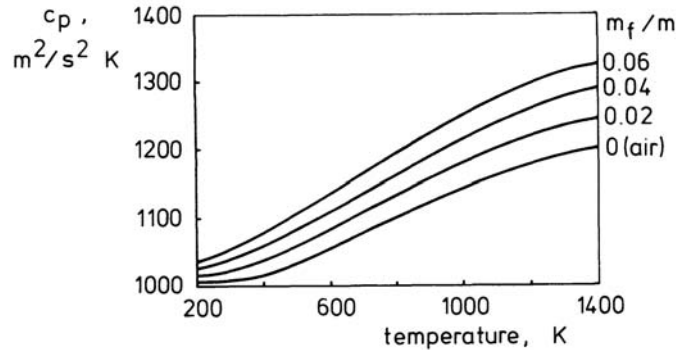


Figure 6.23 Dependence of specific heat on temperature

Typical variations of η_c and η_t as functions of pressure ratio are given in Fig. 6.22 for a polytropic efficiency of 0.85. The curves show that η_c decreases and η_t increases with increasing pressure ratio.

Another factor that can affect the output of the actual turbojet cycle is the variation of specific heat c_p with the conditions of the gas. Under normal working conditions, generally, c_p is a function of temperature alone. Fig. 6.23 shows the variation of c_p with temperature for air and typical combustion gases (Ref. 16). The curves indicate that c_p rises somewhat with increasing temperature and with increasing fuel-air ratio. The opposite is true of the specific heat ratio, $\gamma = c_p/c_v$, since this quantity is given by (see Chapter 2)

$$\frac{1}{\gamma} = 1 - \frac{R_a}{Mc_p} \quad (6.82)$$

where R_a is the universal gas constant and M the molecular mass of the gas.

It is important to note that the molecular mass of combustion gases is approximately equal to that of air so that γ is related to c_p by Eq. 6.82 with $R = R_a/M = 287 \text{ m}^2/(\text{Ks}^2)$. For design calculations, it is common practice to use the following mean values of c_p and γ for the compression and expansion processes, intake and compressor (air): $c_p = 1005 \text{ m}^2/(\text{Ks}^2)$, $\gamma = 1.4$, turbine and nozzle (gas): $c_p = 1147 \text{ m}^2/(\text{Ks}^2)$, $\gamma = 1.333$.

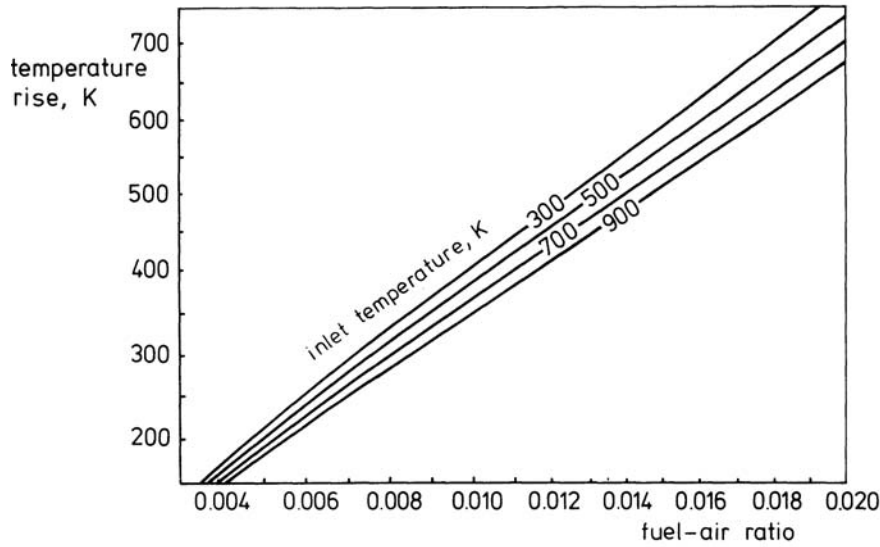


Figure 6.24 Temperature rise for standard fuel

6

In order to establish the fuel consumption for given values of T_{t3} and T_{t4} , it is essential to match the heat energy, that is, to balance the sum of the heat energy in the air mass flow rate at the inlet of the combustion chamber and the fuel mass flow rate at the fuel temperature to that in the combustion gas at the turbine entry temperature. The required computations may be facilitated by applying a chart as given in Fig. 6.24, which shows the temperature increase ($T_{t4} - T_{t3}$) as a function of fuel-air ratio for a number of initial temperatures T_{t3} (from Ref. 16). These data concern the complete burning of a reference fuel. When making use of Fig. 6.24, the fuel mass flow rate is easily obtained from the product of fuel-air ratio and air mass flow rate.

The combustion process involves two losses, a loss due to imperfect conversion of fuel to heat energy and a drop in total pressure. A discussion of these subjects, however, is left to the more advanced studies of propulsion.

Finally, it should be mentioned that some refinement of the ideal performance may be obtained by taking into consideration the design of the exhaust nozzle. In this connection, it is important to recognize that a gas turbine engine designed for subsonic flight speeds, usually, has a convergent nozzle (Fig. 6.25).

Since the expansion process in the exhaust nozzle is nearly isentropic, we can make use of Eq. 6.40 to write

$$p_{t5} = p_{te} = p_e \left[1 + \frac{\gamma - 1}{2} M_e^2 \right]^{\frac{\gamma}{\gamma - 1}} \quad (6.83)$$

According to Appendix C, in the case of a convergent nozzle a critical pressure ratio is distinguished, which yields sonic velocity at the nozzle exit. Insertion of $M_e = 1$ into Eq. 6.83 yields

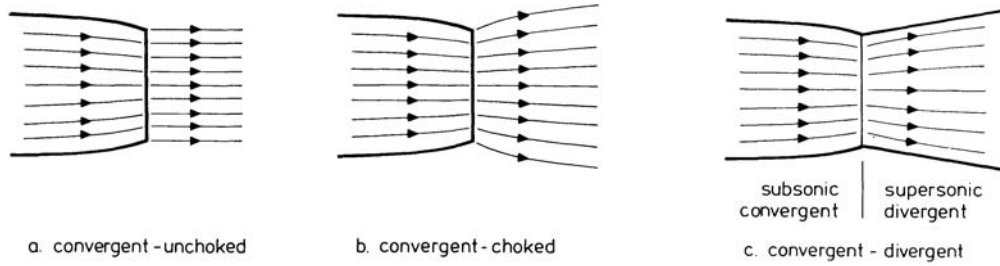


Figure 6.25 Exhaust nozzles

$$\left[\frac{p_{te}}{p_e} \right]_{cr} = \left[\frac{\gamma + 1}{2} \right]^{\frac{\gamma}{\gamma - 1}} \quad (6.84)$$

For air, taking $\gamma = 1.4$, the critical pressure ratio is 1.893; for gas, using $\gamma = 1.333$, $(p_{te}/p_e)_{cr}$ equals 1.851. These values apply of course only to the case of isentropic expansion in the nozzle. For pressure ratios below the critical value, the pressure p_e in Eq. 6.83 may be set equal to p_0 . Then

$$\frac{p_{te}}{p_0} < \left[\frac{\gamma + 1}{2} \right]^{\frac{\gamma}{\gamma - 1}} \quad (6.85)$$

When the latter condition exists, we have *unchoked flow*. This implies that $M_e < 1$ and $p_e = p_0$ so that the jet flows out as a cylindrical stream (Fig. 6.25a). Because of the equality $p_e = p_0$ the pressure term in Eq. 6.35 for the thrust is zero, and the nozzle exit Mach number is given by Eq. 6.53.

When the actual nozzle pressure ratio is greater than the critical value, we have

$$\frac{p_{te}}{p_0} > \left[\frac{\gamma + 1}{2} \right]^{\frac{\gamma}{\gamma - 1}} \quad (6.86)$$

Now we speak of *choked flow* since the mass flow rate has its maximum value. The Mach number is unity at the exit plane, and the static pressure at the nozzle exit becomes

$$\frac{p_{te}}{p_0} = \left[\frac{\gamma + 1}{2} \right]^{\frac{\gamma}{\gamma - 1}} \quad (6.87)$$

where $p_e > p_0$.

For most control settings and flight conditions of interest to gas turbine engines the flow at the nozzle exit will be choked so that the flow behind the exit plane will expand further (Fig. 6.25b).

To achieve optimum thrust under such conditions, clearly, the nozzle would have to be convergent-divergent (Fig. 6.25c). Especially at supersonic flight speeds, where high-pressure ratios occur, it is essential to use a convergent-divergent nozzle in order that the pressure p_e matches the ambient pressure p_0 .

Fig. 6.26 presents again the thermal efficiencies of turbojet cycles, but now with typical efficiency values for intake, compressor and turbine, and with application of convergent nozzles. As assumed in Fig. 6.20, the flight Mach number is 0.8 and the flight altitude 11000 meters (I.S.A.). To simplify

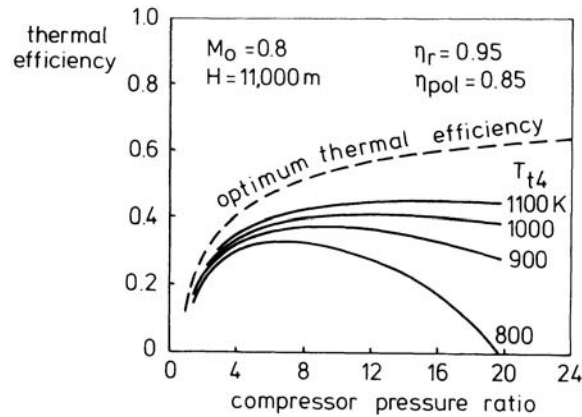


Figure 6.26 Thermal efficiency

matters, it is adopted that the working fluid behaves throughout the engine as a perfect gas with fixed thermodynamic properties, which are equal to those of air. Also the assumptions are made of perfect combustion and isentropic expansion of the flow in the exhaust nozzle.

It is seen from Fig. 6.26 that as the compressor pressure ratio is enlarged for a given turbine entry temperature the thermal efficiency is increased until a peak value is achieved. Further increase in pressure ratio then diminishes the thermal efficiency. Apparently, there is a maximum pressure ratio corresponding to some given turbine entry temperature.

In order to demonstrate how the specific fuel consumption and specific thrust are affected by the efficiencies of intake, compressor and turbine, results of design point calculations are presented in Fig. 6.27, using the same basic figures and assumptions as in Fig. 6.26. Looking at the actual and ideal performance in Fig. 6.27 and Fig. 6.20, we see that the picture is largely the same, except that noticeable performance penalties arise from the imperfections.

6.7. TYPICAL TURBOJET PERFORMANCE

The reader is reminded that in Section 6.5 and Section 6.6 we have been considering the design point performance. This term indicates the performance when the engine is running at the particular compressor pressure ratio, turbine entry temperature, atmospheric conditions and forward speed for which the components are designed. For a given engine the remaining problem is then to provide the *off-design performance*, being the performance over the entire operating range of control settings, airspeeds and atmospheric conditions.

The methods of attaining such data are wholly beyond the scope of this book. Here we will merely illustrate the typical effects of the operational variables on the performance of the turbojet.

The engine speed is controlled by the fuel flow rate. However, for a given supply of fuel, thrust and specific fuel consumption are affected by the conditions of the air entering the intake. These conditions are defined by four variables: (1) airspeed V_0 or flight Mach number M_0 , (2) ambient pressure p_0 or geopotential pressure altitude H_p , (3) ambient temperature T_0 , and (4) humidity q . Thus we can write

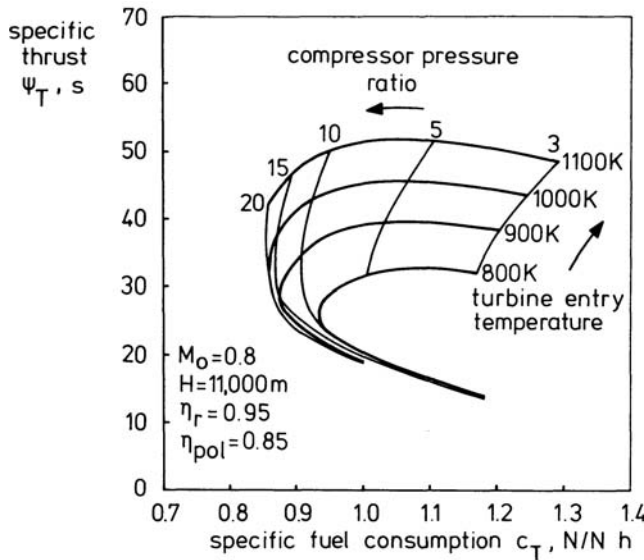


Figure 6.27 Turbojet cycle performance

$$\begin{aligned} T &= T(\Gamma, M_0, H_p, T_0, q) \\ c_T &= c_T(\Gamma, M_0, H_p, T_0, q) \end{aligned} \quad (6.88)$$

The symbol Γ in these equations is used for the engine control setting, which, usually, is represented by compressor rpm (revolutions per minute) instead of fuel flow rate.

When standard atmospheric conditions are assumed, the state of the incoming airstream is completely described by flight Mach number and altitude, and the relations in Eq. 6.88 reduce to

$$\begin{aligned} T &= T(\Gamma, M_0, H) \\ c_T &= c_T(\Gamma, M_0, H) \end{aligned} \quad (6.89)$$

Fig. 6.28 depicts how static thrust, air mass flow rate and specific fuel consumption vary with control setting. The three quantities show a strong dependence on compressor speed, owing to the increase of compressor pressure ratio and air mass flow rate with increasing compressor rpm. It should be noticed that the engine rating *full power* in Fig. 6.28 can be used only for a limited duration (for example, five minutes) in order to avoid a risk of damage to the engine. Therefore, the manufacturer designates a number of ratings at which the engine may be running for short periods and at which the engine may be operated continuously. For example, the maximum thrust permitted for continuous operation, which is often named *maximum except takeoff (METO-)power*. The maximum control setting permitted in the cruise portion of the flight may be called *maximum cruise*.

Typical variations in thrust and specific fuel consumption are shown in Fig. 6.29 with respect to changes in engine control setting and Mach number for a turbojet operating at a fixed altitude. It is seen that thrust increases significantly with increasing engine rating for any given Mach number.

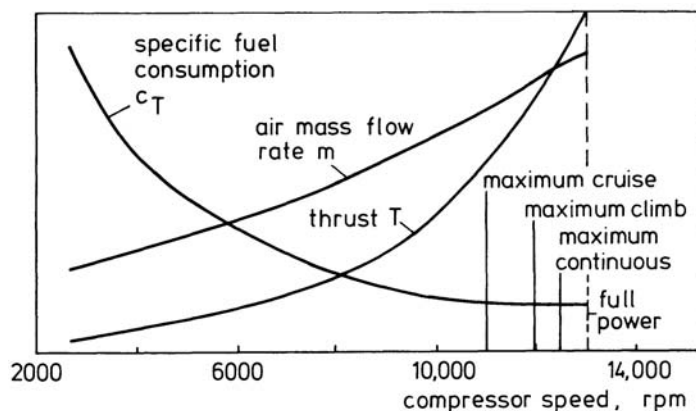


Figure 6.28 Typical static performance of turbojet

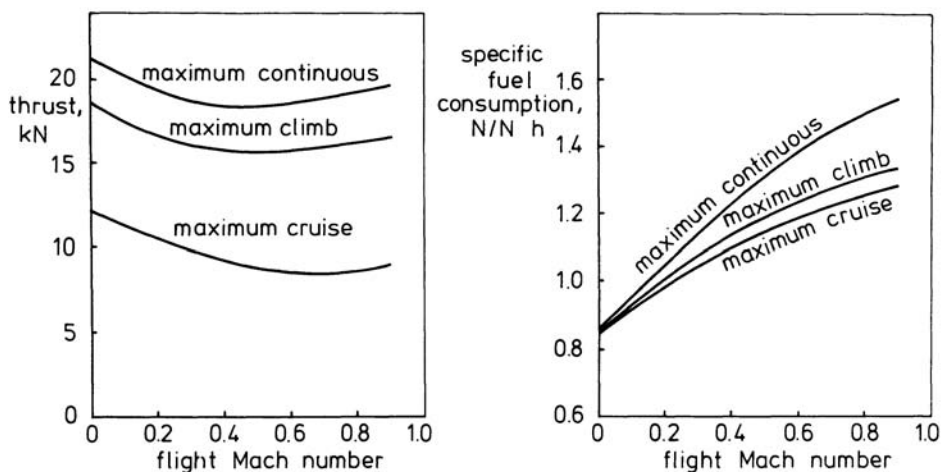


Figure 6.29 Sea-level performance of typical turbojet engine

As Mach number increases from static, thrust at constant rotational speed decreases because the increase of jet velocity with flight speed is relatively small. Hence, the difference between w_e and V_0 goes down as airspeed increases so that according to Eq. 6.38 the specific thrust will become less. At higher airspeeds, a beneficial effect of an increasing mass rate of airflow through the system more than balances, and thrust starts to rise. As a result, in the subsonic speed regime the thrust is more or less constant with airspeed.

Fig. 6.29 also shows how specific fuel consumption varies with Mach number. Apparently, some change for the worse occurs with increasing airspeed.

With respect to the observation that the thrust is approximately independent of airspeed, mention must be made of the circumstance that at supersonic airspeeds the air mass flow rate becomes so large that a substantial increase in thrust takes place. The curves in Fig. 6.30 illustrate the strong

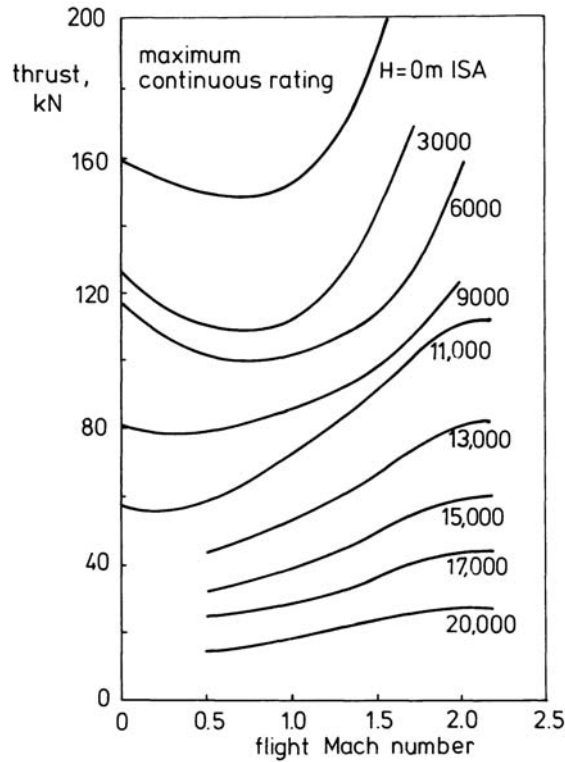


Figure 6.30 Typical performance of turbojet designed for use at supersonic speeds

dependence of turbojet thrust on airspeed at Mach numbers greater than one.

It is also seen from Fig. 6.30 that thrust decreases markedly with increasing altitude. As shown in Fig. 6.31, the same influence of altitude on thrust is found for a typical subsonic turbojet. Specific fuel consumption, however, manifests some improvement as the airplane gains altitude. The minimum value of the specific fuel consumption occurs in the stratosphere (I.S.A.).

The effect of altitude on thrust can be explained by considering the separate influences of atmospheric pressure and temperature. Looking back to the cycle analysis in Section 6.5, it may be understood that specific thrust is not dependent on the magnitude of the ambient pressure, but only on pressure ratio and the ambient temperature. Thereby, it appears that specific thrust increases as the ambient temperature becomes less. This means that as height is gained in the troposphere, the reduction of temperature will cause an increase in specific thrust. On the contrary, at a given engine control setting and flight Mach number the mass flow rate decreases with increasing altitude due to the decreasing air density. Owing to this opposing influence of altitude on specific thrust and mass flow, the variation of thrust with altitude may be written as

$$\frac{T}{T_0} = \left[\frac{\rho}{\rho_0} \right]^n \quad (6.90)$$

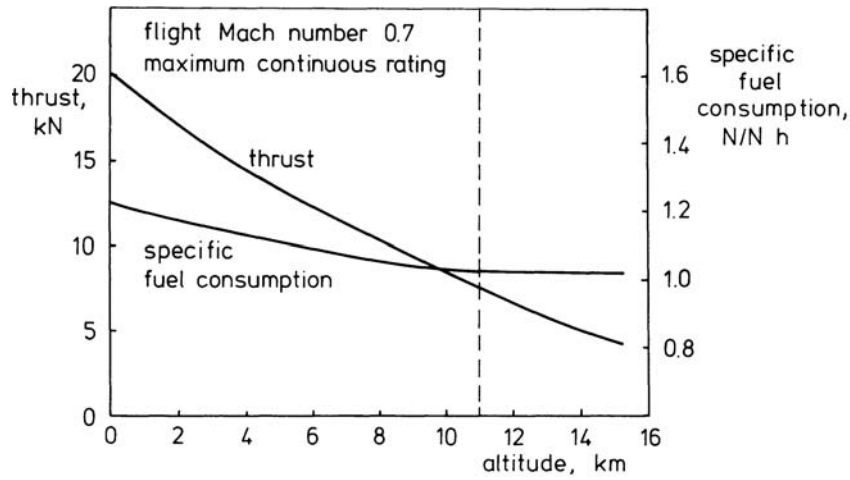


Figure 6.31 Altitude performance of typical turbojet engine

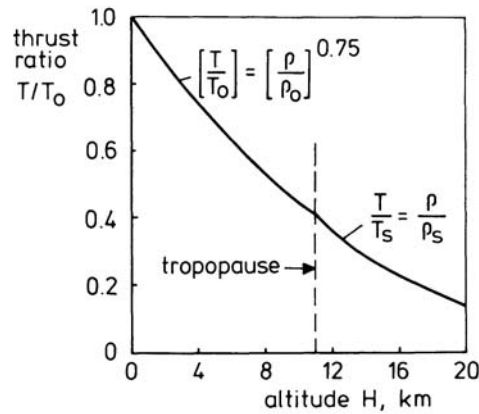


Figure 6.32 Variation of thrust with altitude

where the subscript “0” designates sea-level condition. For turbojet thrust, in the troposphere (I.S.A.), the power n is about 0.75, giving a thrust at the tropopause which is approximately 40% of its sea-level value (Fig. 6.32).

In the lower stratosphere (I.S.A.), where the air temperature is constant, the thrust varies in proportion to the density of the air,

$$\frac{T}{T_s} = \frac{\rho}{\rho_s} \quad (6.91)$$

where the subscript “s” denotes the condition at the tropopause.

At a given geopotential pressure altitude, a significant variable in the thrust equations is the temperature. From previous discussions we know that when the air temperature increases, air mass

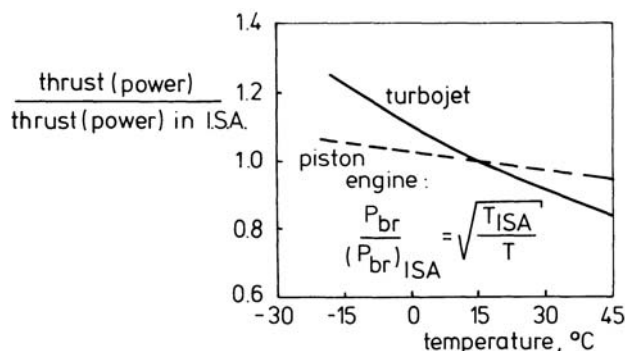


Figure 6.33 Effect of air temperature on thrust and power

flow rate and specific thrust decrease. Consequently, less thrust will be delivered by the engine. Calculation results for the ratio of thrust in standard and off-standard atmosphere are plotted in Fig. 6.33 against air temperature. It is also shown that the power of the piston engine is less sensitive to temperature variations than turbojet thrust.

Clearly, during warm days it may be necessary to restore the thrust. A temporary increase in thrust can be obtained by liquid injection, through which the air entering the engine is cooled by means of vaporization of a mixture of water and methanol. Addition of the coolant to the flow is usually achieved by spraying the liquid into the compressor inlet or directly into the combustion chamber. Finally, the effect of the presence of humidity in the atmosphere must be mentioned. Investigations in Ref. 17 indicate, however, that the effect of humidity on turbojet performance is generally small. The test results for which the static performance data of a turbojet at sea level were determined at constant engine speed and air temperature, show a decrease of about 5 percent in thrust for the large variation in specific humidity from 0 to 0.04 (Fig. 6.34). In order to illustrate the humidities that might be encountered in the operation of airplanes, the calculated variation of saturation specific humidity with altitude is also presented in Fig. 6.34.

The effect of humidity on the shaft power of the piston engine is depicted in Fig. 6.34 for comparison (Ref. 18). It is clearly seen that there is a much greater effect of atmospheric humidity on piston engine power.

6.8. THE TURBOPROP ENGINE

Fig. 6.35 shows a two-spool configuration of the turboprop. This arrangement has a separate high-pressure compressor/turbine system, which is mechanically independent of the low-pressure compressor/turbine system. The low-pressure turbine extracts from the gas flow the useful power to drive the propeller.

We proceed with an examination of the thermodynamic processes in the gas generator. For simplicity's sake, we shall assume that the pressure of the gas falls completely to ambient pressure in going through the turbines.

Working through the cycle the points will be numbered as in Fig. 6.35. Thus, the total temperature at the compressor inlet comes from

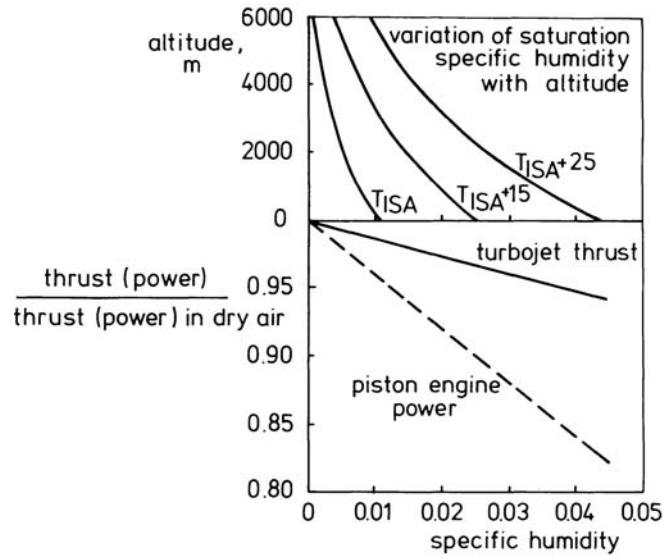


Figure 6.34 Effect of humidity on engine performance

6

$$T_{t2} = T_0 \left[1 + \frac{\gamma-1}{2} M_0^2 \right] \quad (6.92)$$

where T_0 is the ambient temperature and M_0 the flight Mach number. Likewise, the total pressure at station 2 is given by

$$p_{t2} = p_0 \left[1 + \eta_d \frac{\gamma-1}{2} M_0^2 \right]^{\frac{\gamma}{\gamma-1}} \quad (6.93)$$

where η_d is the adiabatic efficiency of the intake. By inserting Eq. 6.76 into Eq. 6.49, we obtain the turbine power required to drive the compressor per unit air weight flow rate as

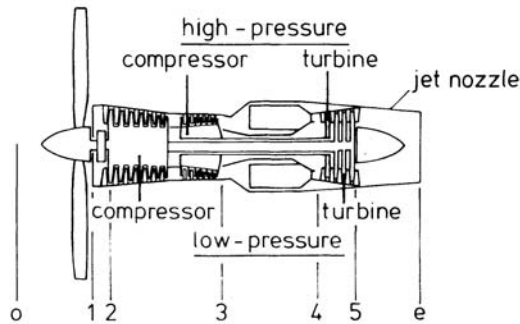


Figure 6.35 Two-spool turboprop

$$\frac{P_c}{\dot{m}g} = \frac{c_p}{g} T_{t2} \left[\varepsilon_c^{\frac{\gamma-1}{\eta_{\text{pol}}\gamma}} - 1 \right] \quad (6.94)$$

where $\varepsilon_c = p_{t3}/p_{t2}$ is the compressor pressure ratio and η_{pol} the polytropic efficiency of the compressor. Note that in deriving Eq. 6.94 use is made of the assumption that c_p is constant throughout the engine. The quantity $P_c/\dot{m}g$ may be called *specific compressor power*. We can use Eq. 6.80 to solve for the total specific turbine power

$$\frac{P_t}{\dot{m}g} = \frac{c_p}{g} T_{t4} \left[1 - \left(\frac{p_{t5}}{p_{t4}} \right)^{\frac{\eta_{\text{pol}}(\gamma-1)}{\gamma}} \right] \quad (6.95)$$

where now η_{pol} is the polytropic efficiency of the turbine. Admitting here the simplification of assuming that in the turbine the flow expands to ambient pressure, the specific output of the engine from Eq. 6.94 and Eq. 6.95 then turns out to be

$$\psi_P = \frac{P_{\text{br}}}{\dot{m}g} = \frac{c_p}{g} \left\{ T_{t4} \left[1 - \left(\frac{p_0}{p_{t4}} \right)^{\frac{\eta_{\text{pol}}(\gamma-1)}{\gamma}} \right] - T_{t2} \left[\varepsilon_c^{\frac{\gamma-1}{\eta_{\text{pol}}\gamma}} - 1 \right] \right\} \quad (6.96)$$

As in the case of the piston engine, the specific fuel consumption of the turboprop is expressed as the fuel weight flow rate divided by shaft brake power. Using Eq. 6.48 produces the following expression

$$c_P = \frac{F}{P_{\text{br}}} = \frac{\dot{m}_f g}{\psi_P \dot{m}g} = \frac{c_p (T_{t4} - T_{t3})}{H \psi_P} \quad (6.97)$$

where c_P has the dimensions N/Whr or N/kWhr.

Specific shaft power and specific fuel consumption of the gas generator for matched expansion in the power turbine ($p_{t5} = p_e = p_0$) are presented in Fig. 6.36. These have been calculated for a range of turbine entry temperatures and compressor pressure ratios and apply to a flight Mach number of $M_0 = 0.4$ and an altitude of 4000 m (I.S.A.). Used is the assumption that c_p and γ have everywhere the same values as in ambient air.

It is seen again that in a gas turbine engine an increase in turbine entry temperature results in a considerable increase in specific output. The curves in Fig. 6.36 also show that there is for any given turbine entry temperature, an optimal compressor pressure ratio producing maximum specific power. Increase in pressure ratio beyond this optimum reduces specific power, but provides an improvement of specific fuel consumption. The curves also make clear that for any given turbine entry temperature there exists an optimal value of compressor pressure ratio yielding the minimum specific fuel consumption.

Comparison of the curves in Fig. 6.36 and in Fig. 6.27 shows a complete similarity, only that at a given pressure ratio, the specific fuel consumption in the turboprop tends to improve somewhat with increasing turbine entry temperature, whereas in the turbojet there is an associated increase in specific fuel consumption. The actual turboprop performance differs from the gas generator output in Fig. 6.36 in that some of the useful power becomes available as jet thrust. This is due to the fact that when designing a turboprop, the pressure of the gas at the turbine exit is always chosen greater than ambient pressure in order to use the pressure drop after the turbines to eject the gases

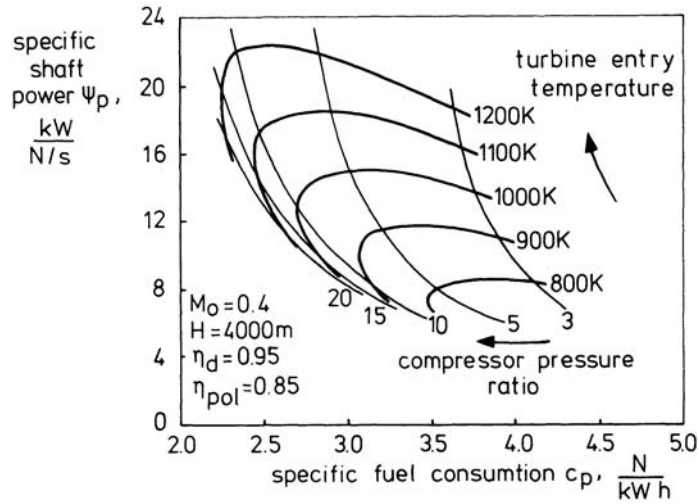


Figure 6.36 Gas generator cycle performance

from a jet nozzle (Fig. 6.35). In cruise the power produced from the exhaust thrust may amount to 10-20 percent of the useful power. The contribution of the jet thrust, T_j , to the power output is usually expressed in terms of an apparent increase in shaft power. The definition of the so-called *equivalent shaft power*, P_{eq} follows from

$$P_a = TV_0 = \eta_j P_{br} + T_j V_0 \quad (6.98)$$

where P_a is the power available for propulsion, and η_j the propulsive efficiency. Hence,

$$P_{eq} = \frac{P_a}{\eta_j} = P_{br} + \frac{T_j V_0}{\eta_j} \quad (6.99)$$

When the airplane is not moving, it is assumed that the propeller generates a fixed amount of thrust per unit shaft power. Thus, the static equivalent shaft power can be expressed as

$$P_{eq} = P_{br} + \frac{T_j}{K} \quad (6.100)$$

For an average propeller, the factor K is approximately 15 N/kW. Although the output of the turbo-prop often is specified in terms of equivalent shaft power, it might be worthwhile for any analysis to detail both shaft power and jet thrust.

From the above discussion, it may be clear that the performance of a turboprop is dependent on the same parameters as those used for turbojet performance. When the restriction is made of operation in the International Standard Atmosphere, we can write

$$\begin{aligned} P_{br} &= P_{br}(\Gamma, M_0, H) \\ T_j &= T_j(\Gamma, M_0, H) \\ c_T &= c_T(\Gamma, M_0, H) \end{aligned} \quad (6.101)$$

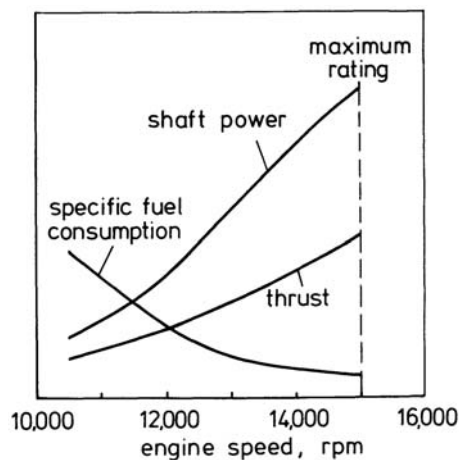


Figure 6.37 Static performance at sea level of turboprop

Fig. 6.37 shows schematically the static performance of the turboprop at sea level as a function of control setting.

The typical variations of shaft power, jet thrust, and specific fuel consumption with flight Mach number are illustrated by the curves in Fig. 6.38a. The shaft power and specific fuel consumption show some improvement with increasing forward speed, whereas the thrust strongly decreases as the airspeed increases. The qualitative effect of altitude on turboprop performance is sketched in Fig. 6.38b. It can be seen that there is a loss of power and thrust and an improvement in specific fuel consumption with increasing altitude. Like the thrust of the turbojet, also the equivalent shaft power of the turboprop at any given altitude may be related to its sea-level value by the relationship

$$\frac{P_{eq}}{(P_{eq})_0} = \left[\frac{\rho}{\rho_0} \right]^n \quad (6.102)$$

where again in the troposphere, the exponent n has a value of approximately 0.75. At a given pressure altitude, the effect of an increase in air temperature is a loss of shaft power and jet thrust, and a worsening of specific fuel consumption (see also Fig. 6.33).

6.9. THE TURBOFAN

In the turbofan engine, the available energy from the gas generator is converted to one of greater mass flow rate and lower exhaust velocity, than it was directly expanded in the hot nozzle. As sketched in Fig. 6.6, this is accomplished by combining the ideas of the turbojet and the turboprop. In the two-spool layout of Fig. 6.6, the fan is driven by a low-pressure turbine. This configuration is suitable for mediate compressor pressure ratios and bypass ratios. At very high values of these parameters, the three-spool system of Fig. 6.39 may be required to keep the fan rotational speed within acceptable bounds. To understand the workings of gas turbine engines it will be useful to follow a numerical example of the method of calculating turbofan specific thrust and specific fuel consumption. Therefore we shall determine the design point performance of a hypothetical two-

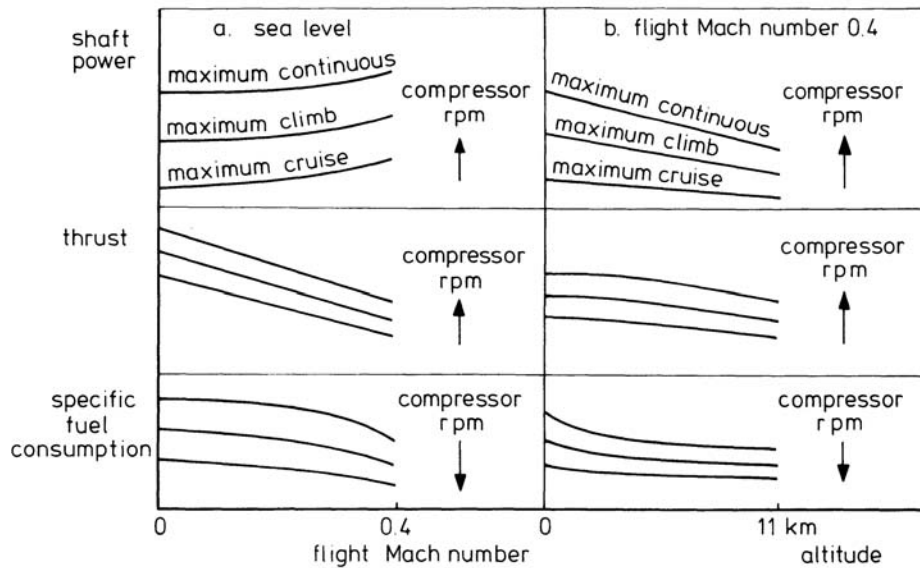


Figure 6.38 Typical turboprop performance

6

spool turbofan engine with convergent nozzle, for a flight Mach number of 0.8 and an altitude of 11 000 m (I.S.A.).

The four design parameters for the engine are:

- bypass ratio 3.5
- total compressor pressure ratio 20
- fan pressure ratio 1.7
- turbine entry temperature 1300 K

Using the engine stations as numbered in Fig. 6.40, we have at the fan inlet with $T_0 = 217\text{ K}$ and $\gamma = 1.4$

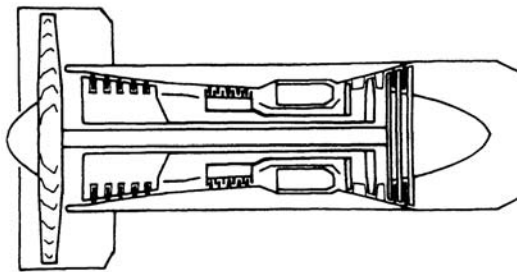


Figure 6.39 Three-spool turbofan

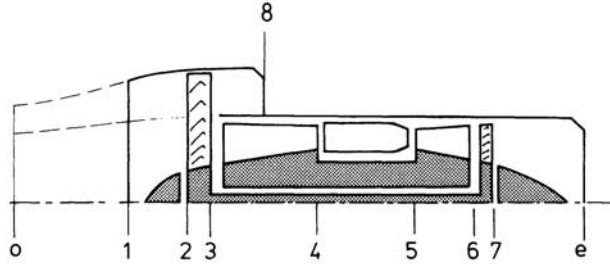


Figure 6.40 Turbofan station designations

$$T_{t2} = T_0 \left[1 + \frac{\gamma - 1}{2} M_0^2 \right] = 217 \times (1 + 0.2 \times 0.64) = 245 \text{ K}$$

If the pressure recovery factor of the intake is 0.95, the pressure ratio at station 2 has the following value:

$$\frac{p_{t2}}{p_0} = \eta_r \left[1 + \frac{\gamma - 1}{2} M_0^2 \right]^{\frac{\gamma}{\gamma - 1}} = 0.95 (1 + 0.2 \times 0.64)^{3.5} = 1.448$$

At the fan exit we have

$$T_{t3} = T_{t2} \left[\frac{p_{t3}}{p_{t2}} \right]^{\frac{\gamma - 1}{\eta_{\text{poly}} \gamma}} = 245 (1.7)^{0.336} = 293 \text{ K},$$

where for the polytropic efficiency a value of 0.85 is used. The related pressure ratio is

$$\frac{p_{t3}}{p_0} = \frac{p_{t3}}{p_{t2}} \frac{p_{t2}}{p_0} = 1.7 \times 1.448 = 2.462$$

Thus, the cold nozzle pressure ratio is

$$\frac{p_{t3}}{p_0} = 2.462$$

When the expansion processes in the nozzles are accepted to be 100% efficient, the critical pressure ratio, from Eq. 6.84 is

$$\frac{p_{t3}}{p_8} = \left[\frac{\gamma + 1}{2} \right]^{\frac{\gamma}{\gamma - 1}} = (1.2)^{3.5} = 1.893$$

Since $p_{t3}/p_0 > p_{t3}/p_8$ the cold nozzle is choked so that $M_8 = 1.0$ and $p_8 > p_0$. Hence,

$$T_8 = T_{t3} \left(\frac{2}{\gamma + 1} \right) = 293 \left(\frac{1}{1.2} \right) = 244 \text{ K},$$

$$\frac{p_8}{p_0} = \frac{p_8}{p_{t3}} \frac{p_{t3}}{p_0} = \frac{2.462}{1.893} = 1.301$$

The cold nozzle outlet velocity is

$$w_8 = M_8 \sqrt{\gamma R T_8} = 1 \sqrt{1.4 \times 287 \times 244} = 313 \text{ m/s}$$

The contribution of the cold stream to the specific thrust of the engine is given by

$$\frac{T_c}{\dot{m}g} = \frac{\dot{m}_c (w_8 - V_0)}{\dot{m}g} + \frac{A_8 (p_8 - p_0)}{\dot{m}g},$$

where $V_0 = M_0 \sqrt{\gamma R T_0} = 0.8 \sqrt{1.4 \times 287 \times 217} = 236 \text{ m/s}$.

Using the familiar relationships $\dot{m}_c = \rho_8 w_8 A_8$, $\rho_8 = \frac{p_8}{R T_8}$ and $\frac{\dot{m}_c}{\dot{m}} = \frac{B}{B+1}$ it readily follows that

$$\frac{T_c}{\dot{m}g} = \frac{B}{B+1} \frac{1}{g} \left[(w_8 - V_0) + \sqrt{\frac{R T_8}{\gamma}} \left[1 - \frac{p_0}{p_8} \right] \right]$$

Putting in numerical values yields

$$\frac{T_c}{\dot{m}g} = \frac{3.5}{(3.5+1)} \frac{1}{9.81} \left[(313 - 236) + \sqrt{\frac{287 \times 244}{1.4}} \left[1 - \frac{1}{1.301} \right] \right] = 10.2 \text{ s}$$

The pressure ratio of the high-pressure compressor is

$$\frac{p_{t4}}{p_{t3}} = \frac{p_{t4}}{p_{t2}} \frac{p_{t2}}{p_{t3}} = \frac{20}{1.7} = 11.765$$

The total temperature at the outlet from the high-pressure compressor comes from

$$T_{t4} = T_{t3} \left[\frac{p_{t4}}{p_{t3}} \right]^{\frac{\gamma-1}{\eta_{\text{pol}} \gamma}} = 293 (11.765)^{0.336} = 671 \text{ K},$$

where a polytropic efficiency of 85% ($\eta_{\text{pol}} = 0.85$) is adopted again.

The high-pressure turbine temperature drop follows from the equality of compressor and turbine powers. Admitting the assumption that throughout the engine the specific heats of the working fluid have the same values as in atmospheric air ($c_p = 1005 \text{ m}^2/(\text{Ks}^2)$, $\gamma = 1.4$, $R = 287 \text{ m}^2/(\text{Ks}^2)$), we obtain

$$T_{t5} - T_{t6} = \frac{1}{\eta_m} (T_{t4} - T_{t3}),$$

where η_m is the mechanical efficiency. This factor takes into account the losses that occur when power is transmitted from the turbine to the compressor. Setting $\eta_m = 0.98$ we find the temperature behind the high-pressure turbine to be

$$T_{t6} = T_{t5} - \frac{1}{\eta_m} (T_{t4} - T_{t3}) = 1300 - \frac{1}{0.98} (671 - 293) = 914 \text{ K}$$

The low-pressure turbine temperature drop follows from the power demand of the low-pressure compressor,

$$\dot{m}_h (T_{t6} - T_{t7}) = \frac{1}{\eta_m} \dot{m} (T_{t3} - T_{t2})$$

Remembering that $\dot{m}/\dot{m}_h = B + 1$, and using $\eta_m = 0.98$

$$T_{t7} = T_{t6} - \frac{(B+1)}{\eta_m} (T_{t3} - T_{t2}) = 914 - \frac{(3.5+1)}{0.98} (293 - 245) = 694 \text{ K}$$

To calculate the hot nozzle pressure ratio we write

$$\frac{p_{t7}}{p_0} = \frac{p_{t7}}{p_{t5}} \frac{p_{t5}}{p_{t4}} \frac{p_{t4}}{p_{t3}} \frac{p_{t3}}{p_0}$$

The total turbine pressure ratio is given by

$$\frac{p_{t7}}{p_{t5}} = \left[\frac{T_{t7}}{T_{t5}} \right]^{\frac{\gamma}{\eta_{\text{pol}}(\gamma-1)}}$$

With a turbine polytropic efficiency of 85% we get

$$\frac{p_{t7}}{p_{t5}} = \left[\frac{694}{1300} \right]^{4.118} = 0.07544$$

The pressure loss in the combustor is assumed to be 5% of the compressor delivery pressure, so that

$$\frac{p_{t5}}{p_{t4}} = 0.95$$

With the substitution of these numbers, the nozzle pressure ratio becomes

$$\frac{p_{t7}}{p_0} = 0.07544 \times 0.95 \times 11.765 \times 2.462 = 2.076$$

It appears that also the hot nozzle is choked so that $M_e = 1.0$ and $p_e > p_0$. Accordingly,

$$T_e = T_{t7} \left(2 \frac{2}{\gamma+1} \right) = 694 \left(\frac{1}{1.2} \right) = 578 \text{ K},$$

$$\frac{p_e}{p_0} = \frac{p_e}{p_{t7}} \frac{p_{t7}}{p_0} = \frac{2.076}{1.893} = 1.097$$

The jet velocity of the hot stream is

$$w_e = M_e \sqrt{\gamma R T_e} = 1 \sqrt{1.4 \times 287 \times 578} = 482 \text{ m/s}$$

The contribution of the hot stream to the specific thrust of the engine is given by

$$\frac{T_h}{\dot{m}g} = \frac{\dot{m}_h (w_e - V_0)}{\dot{m}g} + \frac{A_e (p_e - p_0)}{\dot{m}g}$$

Recalling that $\dot{m}_h / \dot{m} = 1 / (B+1)$, we find

$$\begin{aligned}\frac{T_h}{\dot{m}g} &= \frac{1}{B+1} \frac{1}{g} \left[(w_e - V_0) + \sqrt{\frac{RT_e}{\gamma}} \left[1 - \frac{p_0}{p_e} \right] \right] \\ &= \frac{1}{(3.5+1)} \frac{1}{9.81} \left[(482 - 236) + \sqrt{\frac{287 \times 578}{1.4}} \left[1 - \frac{1}{1.097} \right] \right] = 6.3\text{s}.\end{aligned}$$

The total specific thrust is

$$\psi_t = \frac{T_c}{\dot{m}g} + \frac{T_h}{\dot{m}g} = 10.2 + 6.3 = 16.5\text{s}.$$

The specific fuel consumption comes by dividing the fuel weight flow rate by the thrust

$$c_T = \frac{\dot{m}_f g}{T}$$

The fuel flow equation may be written as

$$\eta_b \dot{m}_f H = \dot{m}_h c_p (T_{t5} - T_{t4}),$$

where H is the heating value of the fuel ($H = 4.31 \times 10^7$ J/kg) and η_b is the combustion efficiency, which is introduced to take into account the incomplete burning of the fuel flow. Combining the latter two equations leads to

$$c_T = \frac{1}{B+1} \frac{c_p}{H\eta_b} \frac{(T_{t5} - T_{t4})}{\psi_T}$$

Assuming $\eta_b = 0.95$, we obtain

$$c_T = \frac{1005(1300 - 671)3600}{(3.5+1)4.31 \times 10^7 \times 0.95 \times 16.5} = 0.76\text{N/Nh}$$

The above calculations indicate that bypassing of air results in a low specific thrust compared with the turbojet (see Fig. 6.27). On the other hand, the figure obtained for the specific fuel consumption illustrates that at a flight Mach number $M_0 = 0.8$ the efficiency of the turbofan is markedly better than that of the turbojet.

To explain the principal flight regimes for application of a specific engine type, particularly, the propulsive efficiency may be used. According to Eq. 6.61, the propulsive efficiency is given by the ratio of power available to the increase in kinetic energy of the flow. In terms of the equivalent jet velocity, we have

$$\eta_j = \frac{2}{1 + \frac{(w_e)_{eq}}{V_0}} \quad (6.103)$$

and also

$$\eta_j = \frac{2}{2 + \frac{T}{\dot{m}V_0}} \quad (6.104)$$

Clearly, propulsive efficiency increases with increasing flight speed and mass flow rate, and decreases with decreasing jet velocity. A comparison of propulsive efficiency values for the various

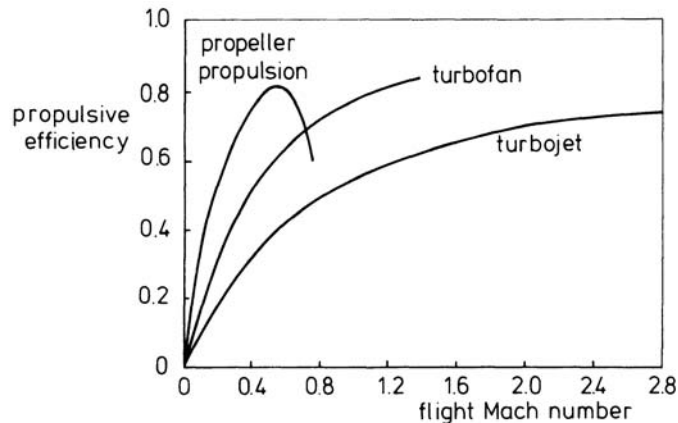


Figure 6.41 Typical trends of propulsive efficiency

types of engines is sketched in Fig. 6.41. Since turbojet thrust is produced at high jet velocities, the higher the flight speed, the higher is its propulsive efficiency. Due to the increased mass flow rate and reduced mean exhaust velocity of the turbofan, this engine type is best in the high-subsonic speed range. At low-subsonic flight speeds, the propeller remains much to be preferred to the other forms of propulsion.

Of course, the ultimate basis on which the engine types must be compared is the overall efficiency, which follows from the product of propulsive efficiency and thermal efficiency.

The thermal efficiency is determined by the parameters defining the thermodynamic cycle of the flow, through which it is mainly within the control of the engine designer. Obviously, measures to improve the propulsive efficiency are only valuable if there is a resultant increase in overall efficiency.

The way in which thrust and specific fuel consumption vary with bypass ratio for a turbofan with a given gas generator is sketched in Fig. 6.42. Two flight conditions are shown: takeoff and cruise at the tropopause (I.S.A.). The main features are that thrust increases and specific fuel consumption decreases by application of a greater bypass ratio.

The typical variation of thrust and specific fuel consumption with flight Mach number and control setting, is explained by the curves in Fig. 6.43. Compressor speed, expressed as percentage of maximum, is used to specify the engine control setting. From these plots we may see that in comparison with the turbojet there are vital reductions in specific fuel consumption (cf. Fig. 6.29). On the other hand, the turbofan thrust shows a significant decrease with airspeed.

The variation of turbofan thrust with altitude may also be represented by Eq. 6.90. Now, the value of the exponent depends on bypass ratio, and because of the large mass flow rates involved, n is usually near one.

Finally, it should be realized that the calculations made in this section concern the bare engine. The airplane performance equations, of course, require the use of the installed thrust and specific fuel consumption, which include both the detrimental effects associated with the integration of engine and airplane structure and the losses owing to bleeding compressed air and power extraction.

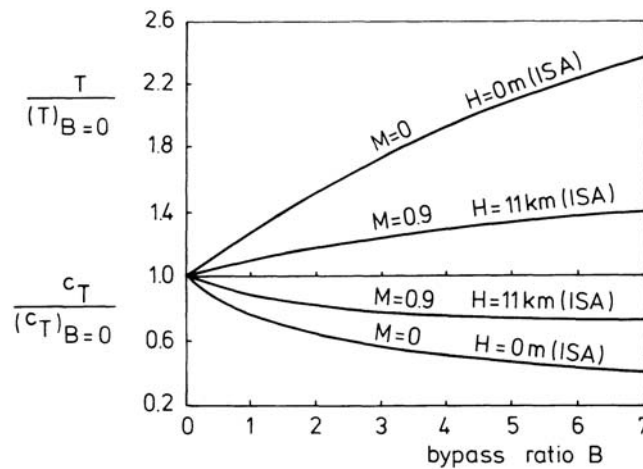


Figure 6.42 Effect of bypass ratio on performance of turbofan

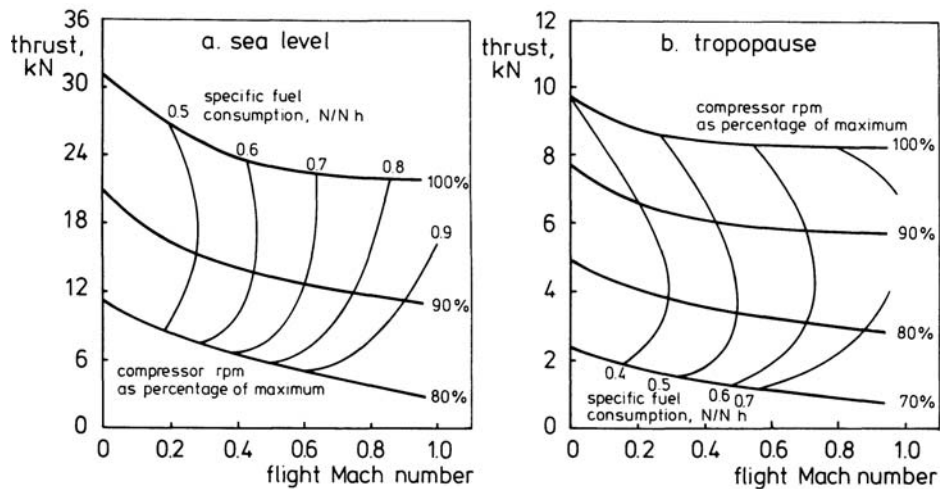


Figure 6.43 Typical turbofan engine performance

However, a detailed analysis of all these effects is not simple and certainly beyond the scope of this text.

6.10. HYBRID-ELECTRIC PROPULSION ARCHITECTURES

Propulsion systems in which both a fueled power source and an electric motor are combined are designated hybrid-electric propulsion systems. These propulsion systems have been introduced widely in the automotive industry since the late 1990s. They are designed primarily to reduce fuel consumption. In addition, noise emissions are also reduced. The main factor that has prevented

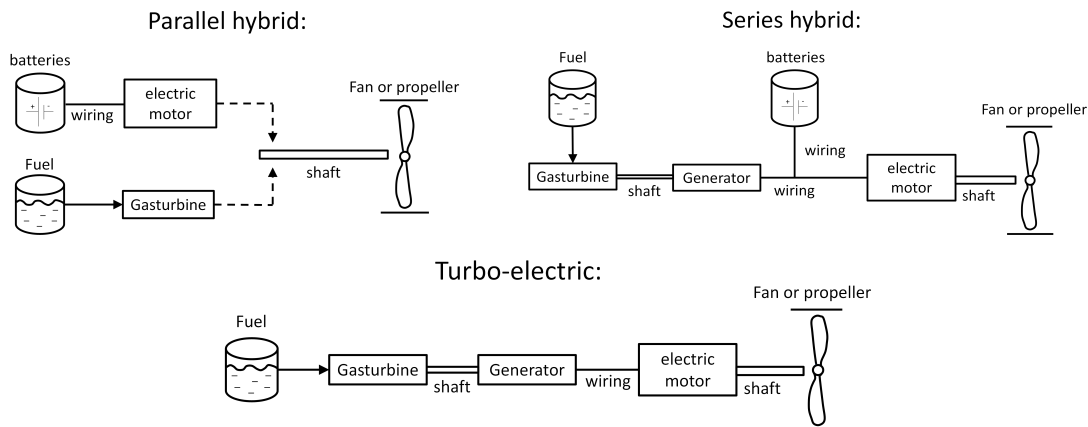


Figure 6.44 Hybrid-electric propulsion system architectures

the introduction of hybrid-electric propulsion systems within commercial aviation is the relatively high weight of these systems. As will be explained in detail in [Chapter 11](#), weight has a considerable effect on airplane performance. This effect is much larger for airplanes than for ground vehicles. Airplanes have to create a lift force which balances the weight. In simple terms, an airplane design with a higher weight requires more lift and needs larger wings. This results in more aerodynamic drag which needs to be compensated by more powerful engines. The larger wings and more powerful engines in turn also cause a weight increase of the design. This cycle is called “the snowball effect”. Altogether, a higher weight leads to more fuel consumption. Thus the introduction of a potentially more efficient propulsion system may in fact cause an increase in fuel consumption if the weight increase is too large. In addition to this main factor, airplanes have a relatively long development time (in the order of 10 years). Because of the high costs involved in the development of a new airplane and the stringent safety standards, the aviation industry is quite conservative. At present, the use of hybrid-electric propulsion systems for commercial passenger airplanes is being investigated in various research programs and private companies. Even if these programs and initiative are going to be successful, these airplanes will most likely not be introduced before the year 2035. A successful introduction will also largely depend on the development of battery technology, especially in terms of the energy density ratio. Nevertheless, airplanes designed for a small flight range and a limited number of passengers, are adopting hybrid-electric and all-electric propulsion systems at a much faster pace.

Five main types of (hybrid-)electric propulsion system architectures can be defined. The first three architectures in the list are schematically represented in [Fig. 6.44](#). For sake of brevity, various components such as power inverters are omitted from the picture.

1. Turbo-electric
2. Series hybrid
3. Series-Parallel or combined hybrid
4. All electric

5. Parallel hybrid

In the parallel hybrid architecture, two separate systems are driving the shaft connected to the propulsive device (a fan or propeller). The first system is a gas turbine, powered by fuel. The second system is an electric motor powered by batteries. The advantage of this architecture is that the gas turbine can be designed specifically for the cruise condition, and electric power can be used when there is a peak power demand such as during take-off. During the descent phase, batteries can be recharged. On the longer term, when the energy density of batteries is increased by orders of magnitude compared to present day batteries, there is an additional advantage: part of the fuel may then be replaced by batteries in this architecture.

The turbo-electric approach is one where a turbo-shaft engine is coupled to a generator which delivers electrical power. The electrical power is used to drive multiple fans or propellers. All the energy in this configuration originates from conventional fuel. However, it enables the use of multiple fans distributed over the airframe. These fans do not have to be at the same location as the turbo-shaft engine. With many small fans, a large effective bypass ratio can be achieved, which improves the propulsive efficiency. By carefully integrating small fans with the wings and or fuselage, the aerodynamic efficiency (lift over drag ratio) and maximum lift coefficient can both be improved (Ref. 19).

In the series hybrid architecture, a turbo-shaft engine powered by fuel delivers mechanical power to a generator, which converts it into electrical power. Additional electric power is provided by batteries. The electric power is used by electric motors which drive multiple distributed fans (or propellers). In terms of advantages, the series hybrid architecture is similar to the parallel architecture. For road vehicles, the series hybrid architecture is claimed to have a lower fuel consumption (Ref. 20). However, it has a higher weight than the parallel architecture. For aerospace applications, it may therefore be more beneficial to employ a parallel architecture (Ref. 21).

Evidently, it is also possible to create combinations of parallel and series hybrid electric architectures in a single airplane. This is called series-parallel or combined hybrid.

Finally, it is possible to have an all-electric architecture. The working principle of an all-electric propulsion system was already described in Sections 6.1 and 6.3. The interested reader is referred to Ref. 22 for a more thorough introduction to the different types of hybrid-electric propulsion system architectures.

6.1.1. PROBLEMS

1. List the four main types of air-breathing propulsion systems used in aviation.
2. Describe the working principle of a four-stroke piston engine.
3. Name at least one advantage and one disadvantage of brushed DC motors compared to brushless DC motors.
4. An airplane equipped with turbojet engines has a flight speed of 200 m/s at sea level conditions. The engines provide a total thrust of 100 kN. The jet velocity of the engines equals 300 m/s. Compute the propulsive efficiency and the mass flow of air through the engines. It can be assumed that the pressure at the nozzle exit equals the atmospheric pressure.

5. Assume that the airplane described in the previous question has a higher flight speed and all other parameters (thrust, mass flow, jet velocity) remain exactly the same. For this hypothetical situation, will the propulsive efficiency increase or decrease compared to the previous situation?
6. Complete the empty space in the following sentence. The exhaust flow of a turbojet engine is _____ (choked/unchoked) in case the pressure at the nozzle exit equals the atmospheric pressure.
7. The sea-level static thrust of a specific turbojet engine is 12 kN. It can be assumed that the maximum thrust is independent of the airspeed. The variation of thrust with altitude for this engine may be written as the following two equations:

$$\frac{T}{T_0} = \left(\frac{\rho}{\rho_0} \right)^n \quad \text{and} \quad \frac{T}{T_s} = \frac{\rho}{\rho_s}$$

where n equals 0.7 for the troposphere and 1 for the lower stratosphere. Calculate the maximum thrust at 12 km altitude.

8. The Concorde was a supersonic passenger airplane designed to cruise at 18 km altitude and Mach 2. Isentropic flow can be assumed. Calculate the temperature at the nose of this airplane.
9. Which of the following propulsion systems has the highest propulsive efficiency at low subsonic flight speeds:
 - (a) Propeller propulsion
 - (b) Turbofan
 - (c) Turbojet
 - (d) Ramjet
10. Which type of air-breathing propulsion system has the highest propulsive efficiency at high subsonic Mach numbers (approximately $M = 0.8$)?
11. List four types of hybrid-electric propulsion system architectures.
12. Describe the main potential advantages of using a parallel hybrid-electric propulsion system architecture compared to the use of conventional turbofan engines.
13. Make a schematic drawing of the working principle of a turbo-electric propulsion system.

7

PROPELLER PERFORMANCE

7.1. PROPELLER THRUST AND EFFICIENCY

As illustrated in Fig. 7.1, an airplane propeller consists of two or more blades of which the blade sections are airfoil shaped. The propeller blades convert the shaft power of the engine into a thrust by pushing air backward, whereby the propeller thrust is given by the time rate of change of momentum of the air that passes through the propeller. The control surface 0 in Fig. 7.1 is far upstream of the propeller where air pressure and flow velocity have their free stream values p_0 and V_0 . The aft plane e is sufficiently far downstream that the local pressure equals the free stream pressure p_0 . Then

$$T = m(w_e - V_0) \quad (7.1)$$

where w_e is the final slipstream velocity.

Eq. 7.1 defines the thrust which is obtained in the absence of the airframe. Therefore, this force may be called the *free air thrust*.

The work done by the thrust per unit time is the power available P_a , and the ratio of P_a to shaft power P_{br} is the propulsive efficiency of the propeller (see also Eq. 6.1),

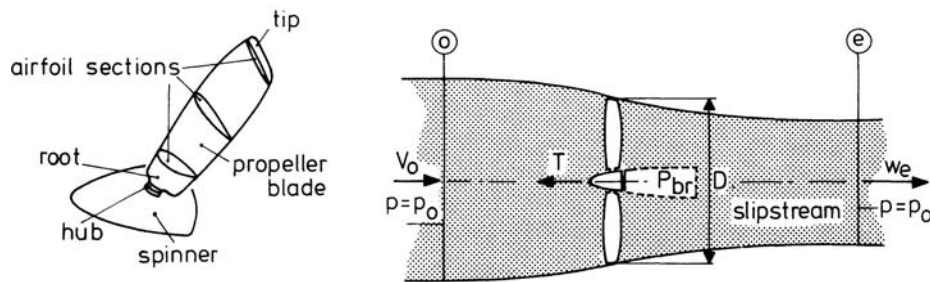


Figure 7.1 Shape and propulsive action of airplane propeller

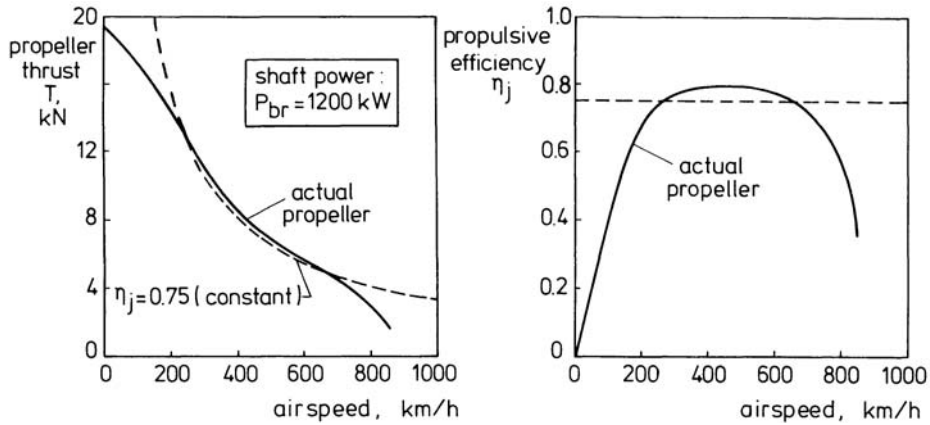


Figure 7.2 Typical propeller performance

$$\eta_i = \frac{P_a}{P_{br}} = \frac{TV_0}{P_{br}} \quad (7.2)$$

Consequently, the variation of thrust with airspeed is given by

$$T = \eta_j \frac{P_{br}}{V_0} \quad (7.3)$$

From our discussion in Chapter 6 we know that at a given altitude and engine control setting, it is a good approximation to assume that the shaft power is independent of forward velocity. If we also assume that η_j has a constant value, the thrust predicted by Eq. 7.3 will strongly diminish as airspeed increases. This strong dependence of thrust on airspeed holds also for an actual propeller, as sketched in Fig. 7.2.

At zero velocity the actual propeller generates a finite thrust, which is called static thrust. Under this condition, the propulsive efficiency from Eq. 7.2 is zero. In the first instance η_j increases considerably with airspeed, but beyond 200 km/hr the propulsive efficiency remains more or less constant until, at about 700 km/hr, the efficiency is seriously impaired as the blade tips approach the speed of sound.

Essentially, the speed of the propeller blade tip relative to the air is the vector sum of the forward velocity V_0 in the direction of the propeller axis and the rotational velocity ωR , directed perpendicular to the propeller axis (Fig. 7.3). The magnitude of the propeller tip speed is thus given by

$$V_t = \sqrt{V_0^2 + (\omega R)^2} = \sqrt{V_0^2 + (\pi n_p D)^2} \quad (7.4)$$

where R is the blade radius, ω is the angular velocity and n_p is the number of revolutions per second of the propeller ($\omega = 2\pi n_p$). On the small airplanes with piston-engine, the propeller may be connected directly with the engine crankshaft. In this case the propeller speed n_p equals the engine speed n . On turboprop airplanes there is always a gearbox, which makes that the propeller turns much more slowly than the turbine shaft that drives it so that the ratio n_p/n is less than one.

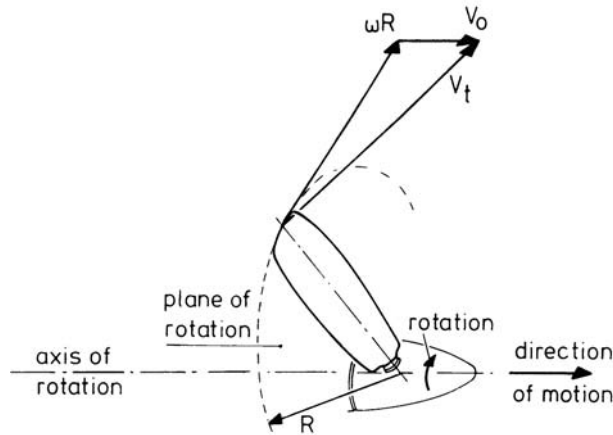


Figure 7.3 Propeller tip speed

As the tip speed V_t approaches the speed of sound, the compressibility effects will dramatically reduce the propulsive efficiency of the propeller. This factor limits the use of the current propellers to a maximum flight Mach number of about 0.6 (see Fig. 7.2 and Fig. 6.41). Some further insight into the fundamental relationship between thrust, shaft power, propulsive efficiency and airspeed can be obtained from a classic treatment which is known as the *momentum theory*. As depicted in Fig. 7.4, the assumption is made that the flow passing through the propeller forms a well-defined stream tube, where the propeller is replaced by an actuator disk. Furthermore, this theory assumes that the pressures and velocities are evenly distributed over the disk area and that the flow is incompressible and irrotational. By the action of the propeller, the free stream velocity V_0 is increased to the slipstream velocity $(V_0 + V_{a3})$, and a certain contraction of the air flow passing through the disk occurs.

As the flow approaches the disk, the free stream velocity V_0 increases to a value $(V_0 + V_a)$ at the disk. At the same time the static pressure p_0 falls to p_1 just in front of the disk. In the slipstream behind the disk the velocity rises to a value $(V_0 + V_{a3})$. The pressure increases to p_2 on passing through the disk and decays to the free stream value p_0 in the slipstream.

Since the thrust is given by the time rate of change of axial momentum, we get

$$T = \rho \frac{\pi}{4} D^2 (V_0 + V_a) V_{a3} \quad (7.5)$$

where ρ is the ambient density and D is the diameter of the disk. The thrust acting on the disk is also given by

$$T = \frac{\pi}{4} D^2 (p_2 - p_1) \quad (7.6)$$

Application of Bernoulli's equation (Appendix C) on each side of the actuator disk yields

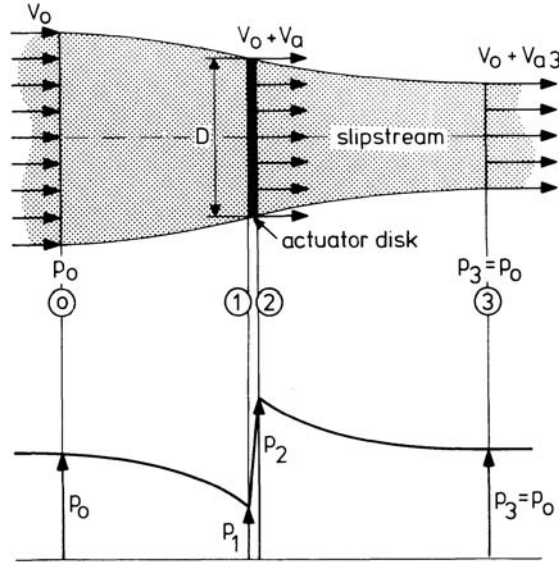


Figure 7.4 Velocities and pressures of the momentum theory

$$p_0 + \frac{1}{2} \rho V_0^2 = p_1 + \frac{1}{2} \rho (V_0 + V_a)^2 \quad (7.7)$$

$$p_2 + \frac{1}{2} \rho (V_0 + V_a)^2 = p_0 + \frac{1}{2} \rho (V_0 + V_{a3})^2$$

From Eq. 7.6 and Eq. 7.7, we find

$$T = \rho \frac{\pi}{4} D^2 (V_0 + \frac{1}{2} V_{a3}) V_{a3} \quad (7.8)$$

Comparing Eq. 7.5 and Eq. 7.8, we obtain

$$V_a = \frac{1}{2} V_{a3} \quad (7.9)$$

The latter equality shows that half the total increment in velocity occurs in front of the disk. The shaft power may be expressed as the increase in kinetic energy of the air mass flow rate,

$$P_{br} = \frac{1}{2} \rho \frac{\pi}{4} D^2 (V_0 - V_a) [(V_0 + V_{a3})^2 - V_0^2] = \rho \frac{\pi}{4} D^2 (V_0 - V_a)^2 V_{a3} \quad (7.10)$$

By combining Eq. 7.5 and Eq. 7.10 we get the following expression for the propulsive efficiency (cf. Eq. 6.62)

$$\eta_j = \frac{T V_0}{P_{br}} = \frac{V_0}{V_0 + V_a} = \frac{1}{1 + \frac{V_a}{V_0}} \quad (7.11)$$

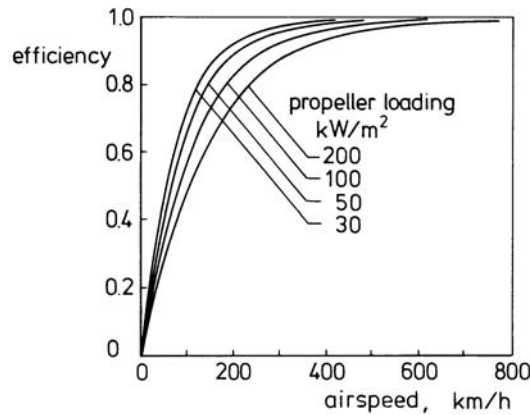


Figure 7.5 Variation of propulsive efficiency with airspeed

or

$$\eta_j = \frac{2}{2 + \frac{V_{a3}}{V_0}} \quad (7.12)$$

Evidently, the propulsive efficiency can also be expressed in terms of the thrust,

$$\eta_j = \frac{2}{1 + \sqrt{1 + \frac{T}{\frac{1}{2}\rho \frac{\pi}{4} D^2 V_0^2}}} \quad (7.13)$$

Emphasis is made that Eq. 7.12 and Eq. 7.13 represent the theoretical upper limit of the attainable propulsive efficiency since the underlying theory does not include rotational kinetic energy in the slipstream and assumes that the axial velocity is uniform over the disk.

Clearly, the value of the momentum theory lies especially in providing a qualitative appreciation of the way in which propellers are likely to act under different design and operating conditions. For example, Eq. 7.12 indicates that at a given airspeed the propulsive efficiency increases as the slipstream velocity decreases.

Further, Eq. 7.13 tells us that in order to achieve this improvement of η_j at a constant value of the thrust, the propeller diameter must be enlarged.

Another result of the momentum theory is illustrated by Fig. 7.5, where the propulsive efficiency is plotted as a function of airspeed for various values of the loading of the propeller, $P_{br}/\frac{\pi}{4}D^2$. It is seen that lower efficiencies may be expected as this quantity increases.

The values of $P_{br}/\frac{\pi}{4}D^2$ considered in Fig. 7.5 represent the loading of propellers which are currently in service. The order of magnitude of these loadings is such that all existing propellers may be typified as lightly loaded. This term is used to indicate that their performance may be effectively examined to the neglect of the rotational kinetic energy in the slipstream. Under this condition the propulsive efficiency, especially, is determined by losses owing to the profile drag of the blades.

A second category of losses comes about in consequence of the fact that the propeller blades are also subject to induced drag. The general cause of losses is of course that not all kinetic energy in the slipstream can be recovered and converted into thrust. The portion that axial and rotational

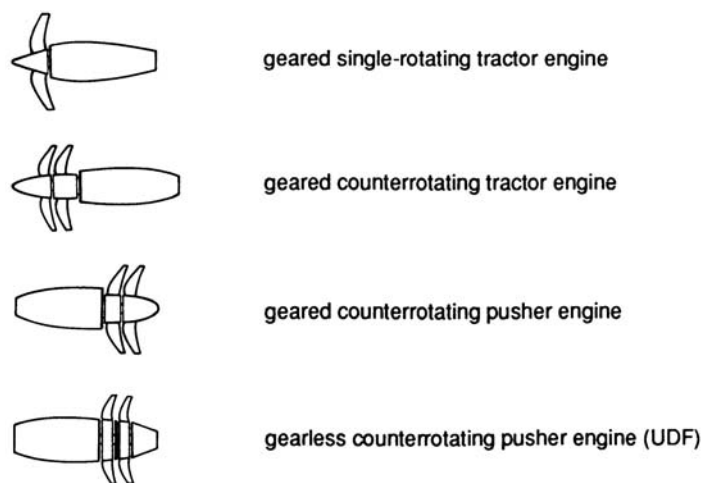


Figure 7.6 Advanced turboprop systems

kinetic energy contributes to the total losses is dependent on the number of blades, tip speed and propeller loading. Because of the need to conserve fuel, in the last decades of the twentieth century the propeller has been considered again as a propulsor for large commercial air transports (Ref. 23). Fig. 7.6 shows schematically the various advanced turboprop concepts which have been proposed for future application at high-subsonic airspeeds. The power plants incorporate a sophisticated gas generator and one or two multi-bladed small-diameter propellers known as *prop-fans*. To reduce compressibility losses, the thickness-to-chord ratios of the blades are roughly half those of the modern conventional propeller blades. In addition, the blade tips show a large angle of sweep. The development programs were directed toward tractor and pusher configurations and concerned single-rotating prop-fans and counter-rotating systems. The counter-rotating prop-fan consists of two rows of blades rotating in opposite directions. These systems have the potential of a recovery of the swirl losses because the rotational velocities of the front row may be removed by the rear half. Both single and counter-rotating prop-fans have advanced gearboxes capable of transmitting high engine powers and pitch-change mechanisms capable of governing the eight to ten highly loaded fan blades (Fig. 7.7). Of importance was also the program for a gearless counter-rotating pusher engine, the un-ducted fan (UDF), where the prop-fans are directly connected to counter-rotating turbine stages. From aerodynamic and acoustic considerations, there is a strong need to limit the tip speed of the blades. This requirement explains the relative small fan diameters, which together with the high engine powers involved cause a propeller loading of about three times that of the conventional turboprops. This implies correspondingly high torque forces that are responded by imparting a large amount of angular momentum to the slipstream. The resulting high rotational kinetic energy in the airflow contributes directly to the reduced losses of the system and leads to the indication “highly loaded” for this class of propellers.

Flight tests have shown that very significant improvements in propulsive efficiency can be achieved. However, interior and exterior noise problems seem to introduce prohibitive objections for practical applications.

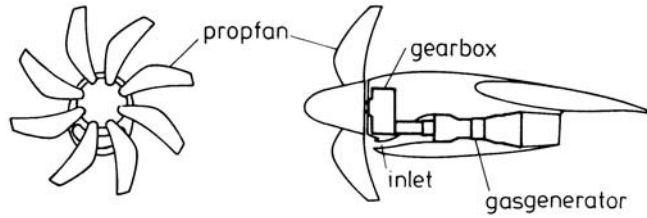


Figure 7.7 Prop-fan power plant

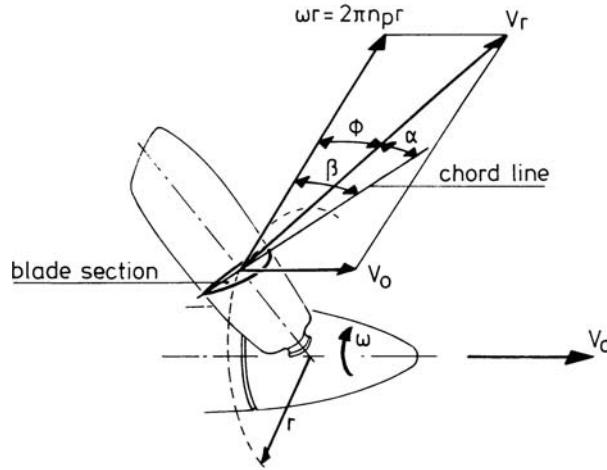


Figure 7.8 Motion of a propeller blade section

7.2. PROPELLER GEOMETRY

Under normal flight conditions the direction of the propeller axis may be considered as coinciding with the direction of the flight velocity (Fig. 7.8). If induced velocities in the flow through the propeller are neglected, then, as in Eq. 7.4, the velocity of a blade section relative to the air is composed of a translation with airspeed V_0 and a simultaneous rotation about the propeller axis with rotational speed ωr :

$$V_r = \sqrt{V_0^2 + (\omega r)^2} = \sqrt{V_0^2 + (2\pi n_p r)^2} \quad (7.14)$$

Evidently, the component V_0 has the same value at each blade section, whilst the rotational speed is proportional to the distance r from the propeller axis to the blade section.

The angle between the relative velocity V_r and the plane of propeller rotation is called the *advance angle*, from Fig. 7.8 we find

$$\tan \phi = \frac{V_0}{\omega r} = \frac{V_0}{2\pi n_p r} \quad (7.15)$$

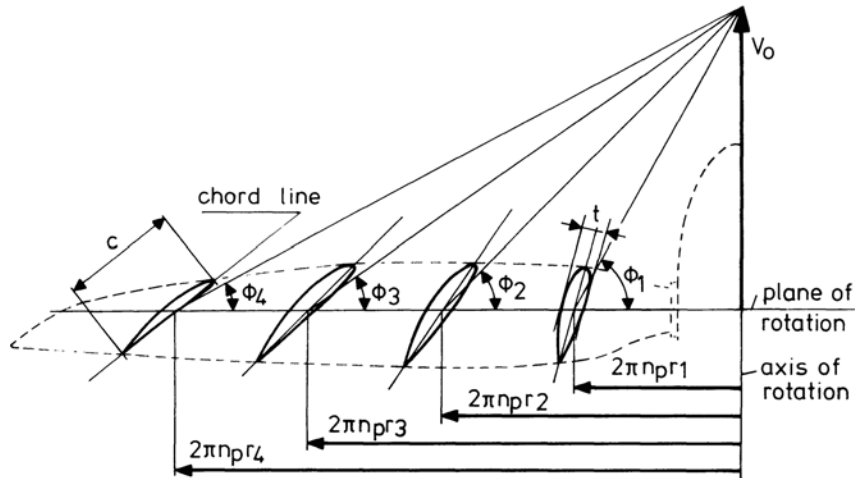


Figure 7.9 Variation of advance angle and blade angle from hub to tip

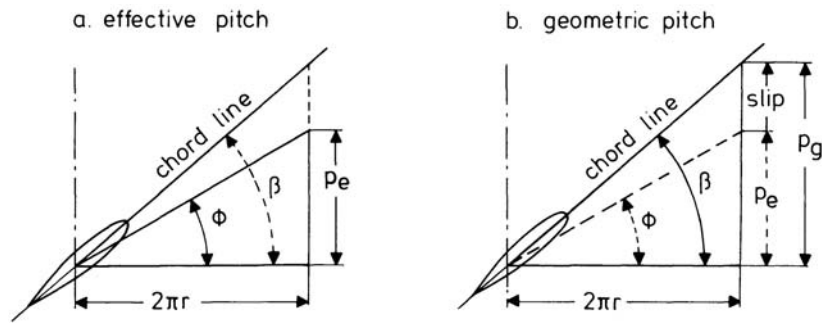


Figure 7.10 Effective and geometric propeller pitch

For given values of airspeed V_0 and angular velocity ω , the advance angle decreases from the root to the tip of the blade since the root sections are revolving slower than the tip sections (Fig. 7.9). The advance angle of the tip section is given by

$$\tan \phi_t = \frac{V_0}{\omega r} = \frac{V_0}{\pi n_p D} \quad (7.16)$$

The dimensionless quantity $V_0 / (\pi n_p D)$ is called the *advance ratio* and given the symbol J

$$J = \frac{V_0}{\pi n_p D} = \pi \tan \phi_t \quad (7.17)$$

After one revolution of the propeller axis, the propeller has advanced a certain distance in the direction of flight. This length is called the *effective pitch*, p_e , of the helical motion performed by each point on the propeller (Fig. 7.10a).

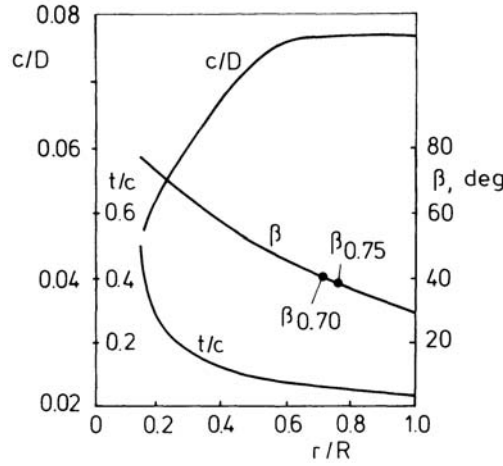


Figure 7.11 Geometric data of a propeller blade

The effective pitch of the propeller is related to the advance angle and propeller speed by

$$p_e = 2\pi r \tan \phi = 2\pi r \frac{V_0}{2\pi n_p r} = \frac{V_0}{n_p} \quad (7.18)$$

It can be further seen that

$$J = \frac{V_0}{n_p D} = \frac{p_e}{D} \quad (7.19)$$

Hence the advance ratio is a measure of the effective pitch. A low value of J implies a fine pitch and a high J a coarse pitch.

The angle from the plane of propeller rotation to the well-defined chord line of the blade section is the *blade angle* (see Fig. 7.8). The angle β is the sum of the advance angle and the angle of attack,

$$\beta = \phi + \alpha \quad (7.20)$$

At this point we state that a low drag behavior of the propeller requires that the angle of attack at each blade radius has approximately the same value as will be explained in the next section. For that reason, the propeller blades always appear to be twisted with the smallest blade angle at the tip and the greatest at the hub, owing to the increase in advance angle (see Fig. 7.9).

Fig. 7.11 shows for a given propeller the variation of the blade angle along the blade radius, which, customarily, is designated by specifying β at 75% or 70% of the radial distance. The higher the airspeed for which a propeller is designed, the greater the angle $\beta_{0.75}$ or $\beta_{0.70}$ and thus all blade angles at which the blade sections are set.

The blade angles are often given in terms of the geometric pitch p_g . This parameter is obtained from the geometry of Fig. 7.10b. When expressed in terms of $\beta_{0.75}$ we get

$$p_g = 2\pi r \tan \beta = 2\pi \frac{3}{4} R \tan \beta_{0.75} \quad (7.21)$$

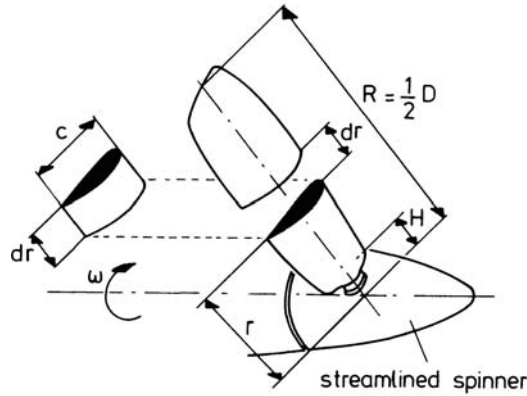


Figure 7.12 Blade element

$$\beta_{0.75} = \tan^{-1} \left[\frac{4}{3} \frac{p_g}{\pi D} \right] \quad (7.22)$$

Geometric pitch is the distance that the propeller would travel per complete turning if it were rotated in a solid medium. The difference between the geometric pitch and the effective pitch is called *propeller slip*.

Fig. 7.11 shows also the typical distribution of maximum blade thickness-to-chord ratio, t/c , and relative chord length, c/D . Especially, structural requirements make that near the root the thickness of the blade sections is relatively large. Also, for structural reasons the chord lengths over the outer part of the blade radius is kept constant.

7.3. BLADE ELEMENT THEORIES

The calculation of propeller characteristics from experimental airfoil data is known as the blade element theory. In order to determine the forces at any blade radius, the blades are divided into radial elements of width dr and chord length c (Fig. 7.12).

The method requires that the blade elements can be considered individually. In other words, the blade element theory assumes that there are no forces acting in radial direction so that each element is subjected to two-dimensional flow.

The velocity and force diagram of a blade element at a radius r is depicted in Fig. 7.13. Under the influence of the forces produced by the propeller, an extra velocity V_i is induced at the blade element, which shifts the relative velocity V_r through an angle δ .

The axial component $V_a = V_i \cos \phi_a$ is related to the thrust generated by the blade element while the presence of the component $V_t = V_i \sin \phi_a$ represents the rotation imparted to the slipstream.

Apparently, the effect of V_i is to lower the angle of attack α to the effective angle of attack α_e .

The effective velocity V_e experienced by the blade element is obtained by the relative velocity V_r and the induced velocity V_i . As indicated in Fig. 7.13, the induced velocity is approximately perpendicular to V_e , giving

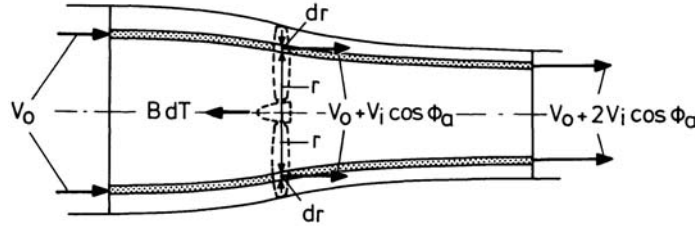


Figure 7.14 Annular stream tube

$$dP_p = \frac{1}{2} \rho V_e^2 \omega r c (c_\ell \sin \phi_a + c_d \cos \phi_a) dr \quad (7.29)$$

Emphasis is made that the coefficients c and c_d are functions of angle of attack α_e , helical Mach number $M_e = V_e/c$, and Reynolds number (Chapter 4),

$$c_l = c_l(\alpha_e, M, Re) \quad (7.30)$$

$$c_d = c_d(\alpha_e, M, Re) \quad (7.31)$$

Essentially, the difficulty in determining thrust and propeller power at given propeller operating conditions is to find the value of α_e at each radial station. This angle, in turn, is dependent on the induced velocity. Although V_i is normally relatively small, it is essential to account for its effect when the aim is to obtain accurate results.

We may attack the problem by using the simple momentum theory of Section 7.1, which predicts that the axial component of the induced velocity at the propeller plane has a value of one-half the final velocity in the slipstream. This enables us to express the propulsive force produced by all blade elements located at a radial distance r from the propeller axis as (cf. Fig. 7.14 and Eq. 7.8)

$$B dT = 2\pi r dr \rho (V_0 + V_i \cos \phi_a) 2V_i \cos \phi_a \quad (7.32)$$

where B represents the number of propeller blades. In deriving Eq. 7.32 the assumption is made that the total thrust $B dT$ is given by the average time rate of change of axial momentum of the air flowing through an annular stream tube, which at the propeller plane has a radius r and is dr wide. The preceding system of equations can now be solved to obtain the value of the effective angle of attack. Once the angle α_e has been found, the propeller thrust and propeller power are obtained by integrating Eq. 7.28 and Eq. 7.29 between $r = H$ (propeller hub) and $r = R$ (propeller tip). Thus

$$T = B \int_H^R dT = B \int_H^R \frac{1}{2} \rho V_e^2 c (c_\ell \cos \phi_a - c_d \sin \phi_a) dr \quad (7.33)$$

$$P_p = B \int_H^R dP_p = B \int_H^R \frac{1}{2} \rho V_e^2 \omega r c (c_\ell \sin \phi_a - c_d \cos \phi_a) dr \quad (7.34)$$

The above combination of theories is called momentum blade element theory. This technique furnishes a rapid method for calculating the performance of propellers of known design. However,

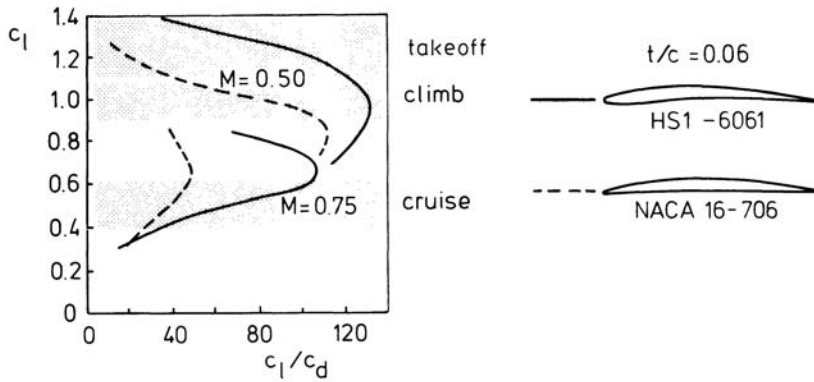


Figure 7.15 Typical lift/drag ratios of propeller blade section airfoils

such factors as non-uniform flow, blade interference effects, and tip losses are ignored by this approach. For that, other blade element theories are available of which most elements are based on treatments enunciated in the first half of the previous century (see Ref. 24–30). A detailed discussion of these so-called vortex theories, however, is rather complicated and certainly beyond the intended scope of this course book. Momentum blade element theory requires the input of airfoil aerodynamic data for the calculation of thrust and power. The last fifty years, the airfoils employed for propellers have been largely restricted to the NACA 16-series sections (Fig. 7.15). These airfoil types were developed in the late nineteen-thirties by the National Advisory Committee for Aeronautics (NACA) in the U.S.A., and found exclusive use in propellers. We note that in 1958 a new name was given to the NACA research agency: National Aeronautics and Space Administration (NASA).

More recently, two new series of blade sections became available. These were developed in the U.K. and in the U.S.A. for use on modern generation turboprop airplanes (Ref. 31 and Ref. 32). Their increased performance characteristics are illustrated in Fig. 7.15, where a comparison is made between the lift-to-drag ratios of a conventional section and an advanced propeller blade section airfoil (from Ref. 31).

Notice also that significantly higher values of maximum lift/drag ratio are obtained on a propeller blade section than are achieved in the case of an airplane wing section. This phenomenon might be explained by considering the effect of reduced boundary layer thickness due to the centrifugal field in which the blade sections are operating.

At this point, let us return to our discussion on propeller geometry of the preceding section in order to make a few remarks about the necessity for twisting the propeller blades. According to its definition, the propulsive efficiency of the propeller is given by

$$\eta_j = \frac{TV_0}{P_{br}} = \frac{TV_0}{P_p} \quad (7.35)$$

The blade element theory uses a similar notion, the blade element efficiency,

$$\eta_j = \frac{dT V_0}{dP_p}. \quad (7.36)$$

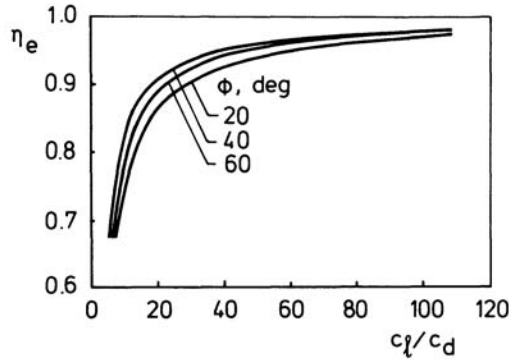


Figure 7.16 Propeller blade element efficiency versus lift/drag ratio

Through insertion of Eq. 7.28 and Eq. 7.29 into Eq. 7.36, and by making use of the relationship $V_0 = \omega r \tan \phi$ (see Fig. 7.13), we obtain

$$\eta_e = \left[\frac{c_\ell \cos \phi_a - c_d \sin \phi_a}{c_\ell \sin \phi_a + c_d \cos \phi_a} \right] \tan \pi \quad (7.37)$$

We gain further insight by adopting in Eq. 7.37 the approximation that the induced velocity at the blade section is sufficiently small so that ϕ_a may be replaced by ϕ . Now Eq. 7.37 can readily be manipulated into the following form:

$$\eta_e = \frac{\tan \phi}{\tan(\phi + \delta)}, \quad (7.38)$$

where $\tan \delta = c_d / c_\ell$.

Fig. 7.16 shows the relationship of blade element efficiency with lift/drag ratio and advance angle. Apparently, the magnitude of the angle ϕ has only a relatively small influence on the efficiency of the blade element. Therefore, we may consider a mean curve in Fig. 7.16. This unique relation between η_e and c_ℓ / c_d reveals that the optimum angle of attack is that angle for which the lift/drag ratio attains its maximum value. Hence, if the propeller blade has the same airfoil section throughout its entire length, the optimum angle of attack must be uniform along the blade, which results in a decreasing blade angle from hub to tip. Though, mostly, the blade sections are not shaped equally, it continues in force that propeller blades are twisted strongly (Fig. 7.11). The results of the blade element theory may also be used to explain the term activity factor, or shortly AF, which evaluates the distribution of the blade area along the radius and expresses the ability of a propeller blade to absorb power. The factor AF may be defined by

$$AF = \frac{10^5}{D^5} \int_{0.2R}^R cr^3 dr = \frac{10^5}{16} \int_{0.2}^{1.0} \frac{c}{D} \left[\frac{r}{R} \right]^3 d\left(\frac{r}{R}\right) \quad (7.39)$$

where the lower limit of integration represents the outer radius of the hub. The meaning of Eq. 7.39 can be explained by examining Fig. 7.13. When neglecting again the induced velocity, the power required to rotate the blade element may be expressed as (cf. Eq. 7.29)

$$dP_p = \frac{1}{2} \rho V_r^2 \omega r c (c_\ell \sin \phi + c_d \cos \phi) dr \quad (7.40)$$

Using the relationship $V_r = \omega r \sec \phi$, Eq. 7.40 can be written as

$$dP_p = \left(\frac{1}{2} \rho \omega^3 \sec^2 \phi \right) (c_\ell \sin \phi + c_d \cos \phi) c r^3 dr \quad (7.41)$$

For given working conditions and blade section shape, the factors between brackets are constants so that for the whole blade the power absorption capacity is proportional to $\int_{0.2R}^R c r^3 dr$. To make this quantity dimensionless, it is divided by D^5 . The constant 10^5 in Eq. 7.39 is only used to give the activity factor a convenient magnitude.

Thus, for a given propeller and operating at given conditions, the ability to absorb power is directly correlated to the activity factor, so that

$$P_p = \text{constant} \times B \times \text{AF}$$

where the product $B \times \text{AF}$ is called the total activity factor, TAF. For a blade having a constant chord length, we find from Eq. 7.39, $\text{AF} = 1560c/D$. For the propeller blade considered in Fig. 7.11 the activity factor becomes $\text{AF} = 121$. The thrust producing capability of a propeller blade is characterized by the integrated design lift coefficient,

$$C_{Li} = 4 \int_{0.2}^{1.0} c_{\ell i} \left[\frac{r}{R} \right]^3 d\left(\frac{r}{R} \right) \quad (7.42)$$

where $c_{\ell i}$ is the design lift coefficient of a blade element at zero incidence, defining the sectional camber. A propeller blade with a high C_L -value is able to generate more thrust for the same chord length distribution.

7.4. PROPELLER CHARTS

From the preceding discussions it may be appreciated that for a propeller with a given number of blades and given blade shape, the thrust will be determined by the density of air, the propeller speed, the propeller diameter, the free stream velocity, the blade setting, the speed of sound, and the viscosity of the air. Therefore,

$$T = T(\rho, n_p, D, V_0, \beta_{0.75}, c, \mu) \quad (7.43)$$

Utilizing the technique of dimensional analysis as described in Chapter 4 we may write

$$T = K(\rho^a n_p^b D^d V_0^e c^f \mu^g) \quad (7.44)$$

Then, in term of the units mass $[M]$, length $[L]$ and time $[T]$, we have

$$\frac{ML}{T^2} = K \left[\frac{M}{L^3} \right]^a \left[\frac{1}{T} \right]^b [L]^d \left[\frac{L}{T} \right]^e \left[\frac{L}{T} \right]^f \left[\frac{M}{LT} \right]^g \quad (7.45)$$

By equating exponents we obtain

$$\begin{array}{rclclclcl}
 1 & = & a & & & & +g \\
 1 & = & -3a & +d & +e & +f & -g \\
 -2 & = & & -b & & -e & -f & -g.
 \end{array} \quad (7.46)$$

When we solve the three equations for the exponents a, b and d in terms of e, f and g , we get

$$\begin{aligned}
 a &= 1 - g \\
 b &= 2 - e - f - g \\
 d &= 4 - e - f - 2g.
 \end{aligned} \quad (7.47)$$

Using these powers in Eq. 7.44 yields

$$T = K \rho n_p^2 D^4 \left[\frac{V_0}{n_p D} \right]^e \left[\frac{c}{V_0} \right]^f \left[\frac{\mu}{p V_0 D} \right]^g \quad \text{or} \quad (7.48)$$

$$T = K \rho n_p^2 D^4 J^e \left[\frac{1}{M_0} \right]^f \left[\frac{1}{Re} \right]^g \quad (7.49)$$

If we set

$$K J^e \left[\frac{1}{M_0} \right]^f \left[\frac{1}{Re} \right]^g = C_T$$

we can write Eq. 7.49 as

$$T = C_T \rho n_p^2 D^4 \quad (7.50)$$

where C_T is the dimensionless thrust coefficient of which the value may vary with blade angle $\beta_{0.75}$, advance ratio J , flight Mach number M_0 and Reynolds number Re . Carrying out a similar dimensional analysis on propeller power, we find

$$P_p = C_P \rho n_p^3 D^5 \quad (7.51)$$

where C_P is the power coefficient. Hence for a given propeller it follows that

$$C_T = C_T(\beta_{0.75}, J, M_0, Re) \quad (7.52)$$

$$C_P = C_P(\beta_{0.75}, J, M_0, Re) \quad (7.53)$$

Now, as shown in Fig. 7.17, the propeller chart may give the values of C_T and C_P as functions of $\beta_{0.75}$ and J . Here, the points on the various curves C_P versus J for constant value of $\beta_{0.75}$ that correspond to the same value of C_T are connected.

The data in this figure represent experimental results obtained at fixed values of Mach number and Reynolds number. By making use of Eq. 7.50 and Eq. 7.51 we can express the propulsive efficiency in the form

$$\eta_j = \frac{TV_0}{P_p} = \frac{C_T \rho n_p^2 D^4 V_0}{C_P \rho n_p^3 D^5} = \frac{C_T}{C_P} \quad (7.54)$$

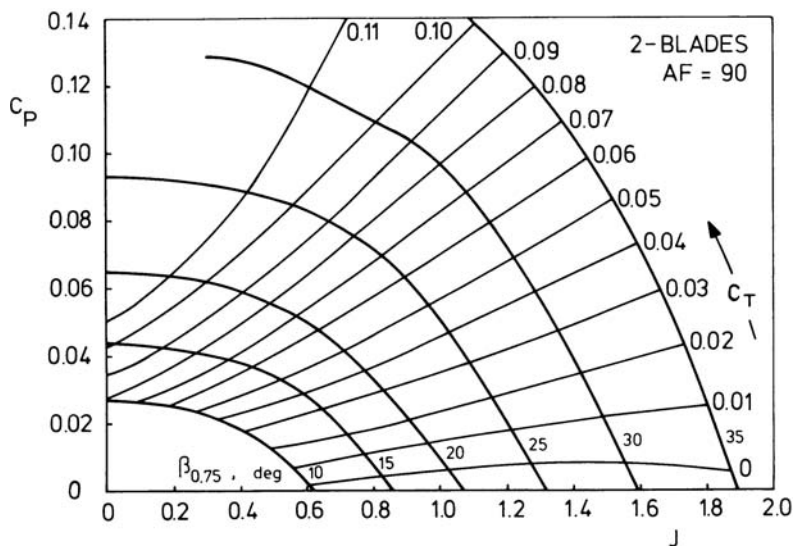


Figure 7.17 Propeller chart (NACA 16 blade section series)

Fig. 7.18 gives the propeller performance in terms of η_j , J and $\beta_{0.75}$. The optimum performance curve is indicated by the dashed line, joining the points of maximum propulsive efficiency. Notice that the graph refers to the same propeller as considered in Fig. 7.17. Inspection of Fig. 7.18 shows that the blade setting has a marked influence on the propulsive efficiency. On a so-called fixed-pitch propeller the blade angle $\beta_{0.75}$ has one particular value so that optimum efficiency occurs for a given design condition of V_0 and n_p . It is also seen that for this type of propeller a high efficiency is gained in only a very narrow range of advance ratios. For example, low efficiencies are obtained at take-off and climb if the propeller is designed for cruising conditions. On the other hand, the airplane may be equipped with a climb propeller, which has a smaller blade angle or lower pitch. This increases performance during take-off and climb, but decreases performance during cruise. Apparently, for optimum propulsive efficiency it would be of advantage to provide a pitch-change mechanism to change the blade setting as the advance ratio varies.

This requirement has resulted in a solution which is known as the *variable-pitch propeller*. As can be seen from the curves in Fig. 7.18, the variable-pitch propeller furnishes improved performance over a broad range of operating conditions. This explains that nowadays fixed-pitch propellers only are used on the small single-engine airplanes. An airplane equipped with a variable-pitch propeller has an engine throttle control for the engine output and a pitch control to regulate the propeller speed. A so-called constant speed propeller is equipped with a governor, which changes the blade angles in response to any departure in propeller speed from the value selected by the pilot. Constant speed propellers on most of the larger modern airplanes have the possibility for full feathering in flight, that is, the blades can be turned edge-on to the oncoming air to prevent the occurrence of high windmilling-drag in case of engine failure (Fig. 7.19). Also, the pitch-change mechanism may be designed to permit the selection of a large negative blade angle after landing, thus creating reverse thrust for rapid deceleration of the airplane during ground run. The governor

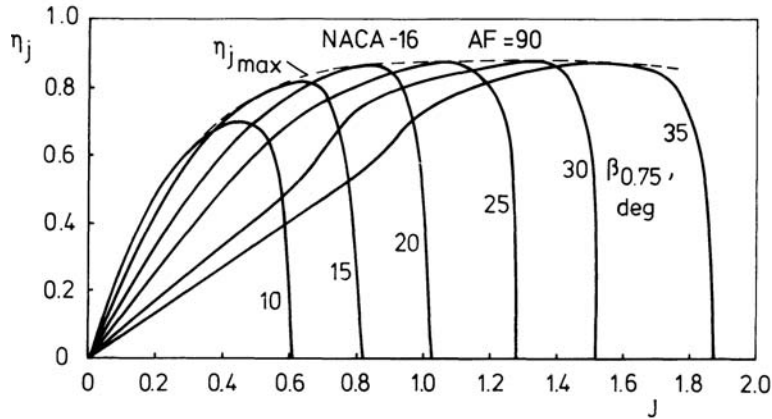


Figure 7.18 Propulsive efficiency

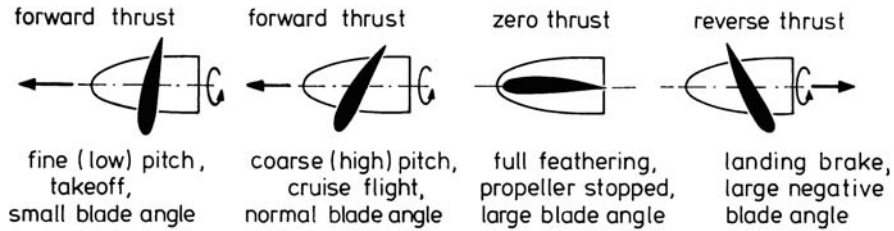


Figure 7.19 Application of pitch control

adjusts the propeller speed by changing the blade setting to ensure that the power required by the propeller equals the shaft power at the selected rotational speed:

$$P_p = P_{br} \quad (7.55)$$

For given values of ρ , V_0 , D , n_p , and P_{br} the power coefficient and the advance ratio follow from

$$C_P = \frac{P_{br}}{\rho n_p^3 D^5} \quad (7.56)$$

$$J = \frac{V_0}{n_p D} \quad (7.57)$$

Now the blade angle $\beta_{0.75}$ and the thrust coefficient C_T are known from the propeller chart in Fig. 7.17. The thrust, finally, is found from Eq. 7.50. It is worth mentioning that the piston-engine generates its shaft power evenly over a wide range of engine speeds (Fig. 7.20). For airborne operation, a piston engine uses approximately 40% of the rpm-range in which the propeller blade angle varies between about 20 deg at flight idle to 45 deg at maximum airspeed. The turboprop, on the contrary, operates within a narrow range of high rotational speeds in order to achieve its low specific fuel consumption characteristics.

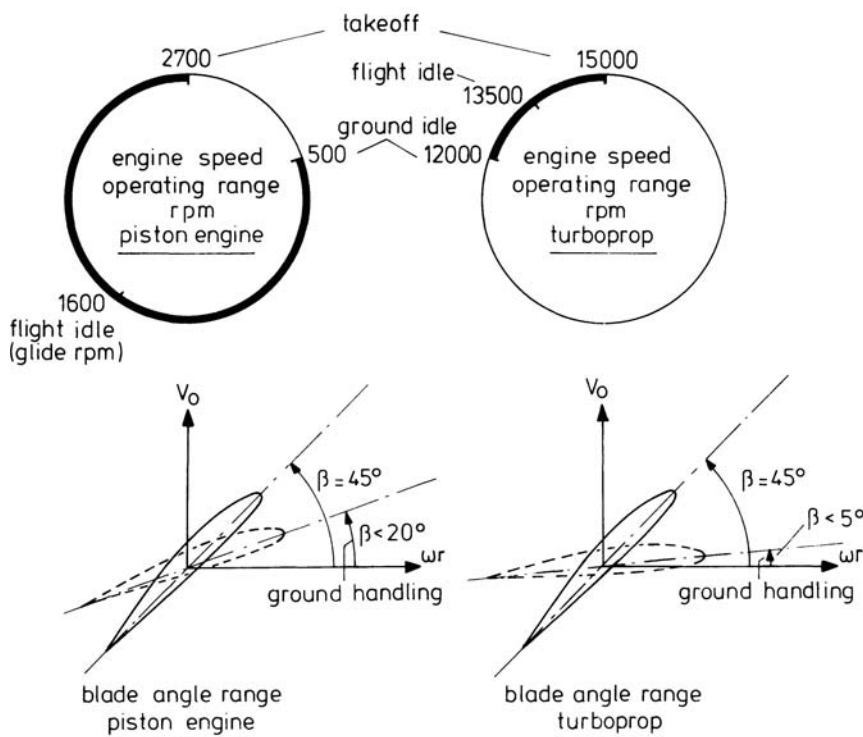


Figure 7.20 Engine and propeller operating range

Consequently, the turboprop-propeller blade angle during a glide at minimum power is smaller than that of a piston-engine propeller. The blade angle of a turboprop propeller therefore changes from about 5 to 45 in only 10% of the flight range of engine speeds so that the blades change angle at a much faster rate than the blades of a piston-engine propeller. This implies that the turboprop provides a better thrust response to control lever movement than a piston-engine.

We close this section with remarking that also the control of the turboprop may differ from that of the reciprocating engine since the pilot of a turboprop airplane, generally, has the disposal of only one control lever, which regulates the fuel flow to the engine. In this case, the fuel control operates in conjunction with the pitch control in the flight range of the engine speeds to ensure that the operating limits of the engine will not be exceeded. It is convenient to specify the output of such a turboprop system in terms of compressor speed (see [Chapter 6](#)). When the engine is operating at rotational speeds below flight idle, it is said to be in the ground-handling or beta-range ([Fig. 7.20](#)). In this low-power region, the propeller blade angle is controlled directly by the pilot's control lever and may be varied progressively from forward thrust through zero to reverse for braking and taxiing.

7.5. INSTALLED PROPELLER PERFORMANCE

From the existing methods on propeller performance prediction, generally, the free air thrust is obtained. However, the installation of propeller and engine in the airplane leads naturally to a flow through the propeller disk which differs from the isolated behavior. The mutual interference of propeller slipstream and airframe results in two important installation effects:

- The presence of nacelle and wing or fuselage behind the propeller causes a retardation of the air flow through the propeller disk.
- The airframe parts which are immersed in the slipstream deliver a higher drag than the free stream value, because of the higher local flow velocities.

In order to take account of these effects when executing airplane performance calculations, the effective thrust, T_{eff} is used. This is the thrust of the isolated propeller corrected for all effects emanating from the presence of airframe parts in the slipstream. Since the drag of a propeller-driven airplane is defined for zero thrust, the actual or propeller efficiency becomes

$$\eta_p = \frac{T_{\text{eff}} V_0}{P_{\text{br}}} \quad (7.58)$$

We may simplify the problem by looking only at the increment in profile drag of the airframe parts that are exposed to the propeller slipstream. From Eq. 7.5 and Eq. 7.9, the free air thrust is

$$T = \rho \frac{\pi}{4} D^2 \left(V_0 + \frac{\Delta V}{2} \right) \Delta V \quad (7.59)$$

where ΔV is the increase in velocity in the slipstream. The increase in dynamic pressure of the flow through the propeller disk is given by

$$\Delta q = \frac{1}{2} \rho [(V_0 + \Delta V)^2 - V_0^2] \quad (7.60)$$

Combining Eq. 7.59 and Eq. 7.60 yields

$$\Delta q = \frac{T}{\frac{\pi}{4} D^2} \quad (7.61)$$

If the airframe parts immersed in the slipstream of one propeller have a parasite drag area $\Sigma (C_{Ds} S_s)$, the increase in airplane drag per propeller can be expressed in the form

$$\Delta D = \Delta q \Sigma (C_{Ds} S_s) = \frac{T}{\frac{\pi}{4} D^2} \Sigma (C_{Ds} S_s) \quad (7.62)$$

Now we are able to relate the propeller efficiency and the propulsive efficiency as follows

$$\eta_p = \frac{(T - \Delta D) V_0}{P_{\text{br}}} = \frac{T V_0}{P_{\text{br}}} \left(1 - \frac{\Delta D}{T} \right) = \eta_j \left[1 - \frac{\Sigma (C_{Ds} S_s)}{\frac{\pi}{4} D^2} \right]. \quad (7.63)$$

In practice, the drag coefficient in Eq. 7.63 usually is treated as a constant, irrespective of the operating conditions. Based on wetted area, $C_{Ds} = 0.004$ may be used (Ref. 7). Propeller efficiencies given in propeller charts may be derived from wind tunnel tests on the propeller with spinner mounted

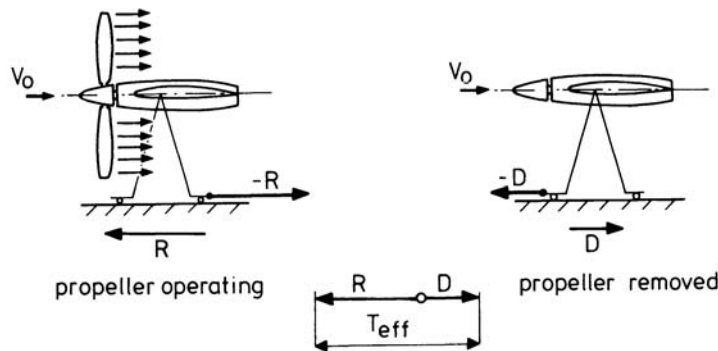


Figure 7.21 Measurement of effective thrust in wind tunnel

in front of the proper nacelle-wing combination (Fig. 7.21). In this case the effective thrust is the measured resultant force of the propeller-body combination plus the drag of the body measured without the propeller.

7.6. PROBLEMS

1. An advanced turboprop airplane equipped with two engines is flying in cruise at Mach 0.56 and 7500 m altitude. The propeller rpm equals 1000 and the radius is 2 m. Calculate the tip speed of the propeller, ignoring the effect of the induced velocity created by the propeller on the tip speed.
2. Describe which main assumptions are made when momentum theory is applied to evaluate the performance of a propeller.
3. Consider the turboprop airplane and flight condition described in question 1. The propulsive efficiency equals 0.85 in this condition. Calculate the thrust delivered by each propeller.
4. For the calculated thrust value in the previous question, compute the induced axial velocity at the propeller disc and far behind the propeller disc. The theory to be used for this calculation is momentum theory.
5. Repeat exercise 1 with the induced axial velocity determined in exercise 4.
6. Calculate the advance ratio of the propeller described in question 1.
7. The Spirit of St. Louis was the first airplane to successfully fly across the Atlantic Ocean. It was equipped with a fixed-pitch propeller which had a radius of 1.4 m. The optimum airspeed to achieve maximum flight distance was approximately 30 m/s when fully loaded and flying at sea-level conditions. The power available in this condition was approximately 45 kW. Calculate theoretical attainable propulsive efficiency for this airplane in the given condition, based on momentum theory.
8. Propellers used on modern regional airplanes can be idealized as having constant power available with airspeed. Why is this the case?

- (a) the rotational velocity of the propeller can be changed in flight
 - (b) the engine produces the same (shaft) power, independent of airspeed
 - (c) the propulsive efficiency does not change with airspeed
 - (d) the propeller pitch can be changed in flight
9. Consider an airplane equipped with a variable-pitch propeller. A fine (low) pitch setting is used at which of the following flight condition(s)?
- (a) take-off
 - (b) climb
 - (c) cruise
 - (d) descent
 - (e) landing
 - (f) flight with one engine inoperative

8

THE AIRPLANE IN SYMMETRIC FLIGHT

8.1. FUNDAMENTAL EQUATIONS

In view of the importance of symmetric flight in airplane performance considerations, it is appropriate to extend the analyses of [Chapter 3](#) to this type of flight. In this section, we shall devote our attention to examining the fundamental equations that govern the accelerated motion of the center of gravity of a rigid airplane along a curved flight path. As depicted in [Fig. 8.1](#), at a given point on the trajectory, the X_a axis and the Z_a axis of the air-path axis system and the X_b axis of the body axis system are set up.

The X_a axis is tangent to the flight path and the Z_a axis lies in the vertical plane through the X_a axis, perpendicular to the local flight direction. The flight condition at one instant along the trajectory is characterized by the following kinematic and geometric parameters:

- Airspeed V , which is the velocity vector of the center of gravity of the airplane. The velocity vector coincides with the X_a axis and lies in the plane of symmetry of the airplane.
- Angle α_T , which defines the inclination of the thrust vector to the X_a axis.
- Flight-path angle γ , which is the angle between the X_a axis and its projection on the horizontal plane. The angle γ is positive if the airplane climbs relative to the air, and negative if the airplane descends. Thus, from vertical climb to vertical dive, the flight-path angle varies from $\pi/2$ to $-\pi/2$ ([Fig. 8.2](#)).
- Angle of attack α , which is the angle between the X_b axis of the body axis system and the X_a axis. The angle of attack represents the attitude of the airplane relative to the oncoming air, and is positive if the X_b axis is turned in positive sense to the X_a axis.
- Angle of pitch θ , which is the angle between the X_b axis and the horizontal. According to the sign convention for the flight-path angle, the angle θ has a positive value if the X_b axis lies above the horizontal plane, and negative when it is below this plane.

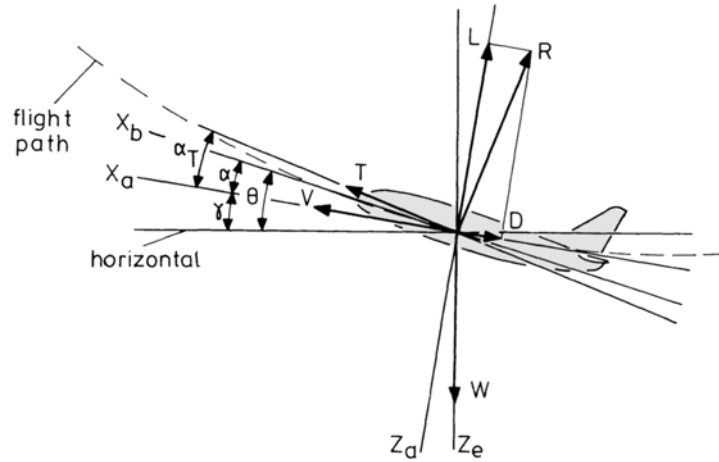


Figure 8.1 Airplane in symmetric flight.

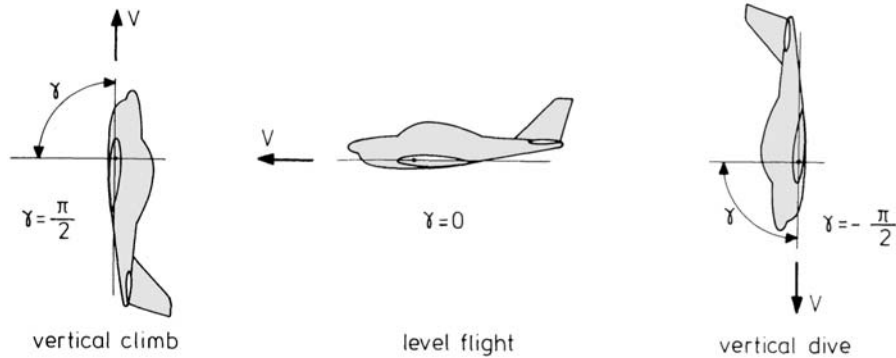


Figure 8.2 Sign of flight-path angle.

In symmetric flight, the angle of pitch, the angle of attack, and the flight-path angle are related by

$$\theta = \alpha + \gamma \quad (8.1)$$

Also indicated in Fig. 8.1 are the three principal forces acting on the airplane that determine its performance. These forces are:

- Airplane weight W , which acts vertically downward.
- Thrust T , which is assumed to make an angle α_T with the X_a axis.
- Aerodynamic force R , and its components lift L and drag D . The forces L and D act along the negative Z_a axis and negative X_a axis, respectively.

Applying Newton's second law of motion along the X_a axis yields the equation

$$\frac{W}{g} \frac{dV}{dt} = T \cos \alpha_T - D - W \sin \gamma \quad (8.2)$$

where dV/dt is the acceleration tangent to the flight path. Along the Z_a axis, we have

$$\frac{W}{g} \frac{V^2}{R} = T \sin \alpha_T + L - W \cos \gamma \quad (8.3)$$

where R is the local radius of curvature of the flight path.

The left-hand side of Eq. 8.3 is the centrifugal force due to the curvilinear motion (see Section 1.3).

With the familiar relationship $V = R d\gamma/dt$, the centrifugal force can also be expressed as

$$\frac{W}{g} \frac{V^2}{R} = \frac{W}{g} V \frac{d\gamma}{dt} \quad (8.4)$$

The lift can be written as (see Chapter 4)

$$L = C_L q S = C_L \frac{1}{2} \rho V^2 S \quad (8.5)$$

where C_L is the lift coefficient, $q = \frac{1}{2} \rho V^2$ is the dynamic pressure and S is the wing area. Similarly, we have

$$D = C_D q S = C_D \frac{1}{2} \rho V^2 S \quad (8.6)$$

where C_D is the drag coefficient. Consequently, the equations of motion for an airplane in symmetric flight are found to be

$$\frac{W}{g} \frac{dV}{dt} = T \cos \alpha_T - C_D \frac{1}{2} \rho V^2 S - W \sin \gamma \quad (8.7)$$

$$\frac{W}{g} \frac{V^2}{R} = \frac{W}{g} V \frac{d\gamma}{dt} = T \sin \alpha_T - C_L \frac{1}{2} \rho V^2 S - W \cos \gamma \quad (8.8)$$

Since the weight of the airplane decreases continuously due to the consumption of fuel by the engine(s), we have the relationship

$$F = - \frac{dW}{dt} \quad (8.9)$$

where F denotes the fuel weight flow rate. In this connection, it should be remarked that in principle the motion of the airplane must be determined for the case of a body with variable mass. From our discussion in Section 3.6, we know that Eq. 8.7 and Eq. 8.8 are correct if the rate of increase of linear momentum of the fuel flow relative to the airplane is included in the expression for the thrust. For air-breathing engines, however, this contribution to the entire time rate of change of linear momentum is so small that we may ignore the effect of a variable mass in Eq. 8.7 and Eq. 8.8. In the absence of wind, the variation of true altitude per unit time is the rate of climb RC of the airplane, which is equal to the vertical component of the airspeed V

$$RC = \frac{dh}{dt} = V \sin \gamma \quad (8.10)$$

The rate of climb is positive when the airplane ascends relative to the air, and negative when the airplane descends. When we consider an airplane that flies in the International Standard Atmosphere (I.S.A.), the atmospheric conditions are completely determined by the geopotential altitude H . Also, we will use the approximation that $h = H$ in Eq. 8.10. Further, we make the assumption that at each point of time the aerodynamic forces in accelerated flight equate the air loads in steady flow with the momentary values of angle of attack, airspeed and altitude. Then, from the discussions in Section 4.1, we know that for an airplane with given configuration, the coefficients C_L and C_D in Eq. 8.7 and Eq. 8.8 are functions of angle of attack, flight Mach number and Reynolds number,

$$C_L = C_L(\alpha, M, Re) \quad (8.11)$$

$$C_D = C_D(\alpha, M, Re) \quad (8.12)$$

Since $M = M(V, H)$ and $Re = Re(V, H)$, it follows that

$$C_L = C_L(\alpha, V, H) \quad (8.13)$$

$$C_D = C_D(\alpha, V, H) \quad (8.14)$$

Similarly, from Chapter 6, we have

$$T = T(\Gamma, V, H) \quad (8.15)$$

$$F = F(\Gamma, V, H) \quad (8.16)$$

Finally, the angle α_T in the equations of motion is a function of the angle of attack,

$$\alpha_T = \alpha_T(\alpha) \quad (8.17)$$

From the foregoing it is thus evident that Eq. 8.7 and Eq. 8.8 contain the following variables:

$$t, W, \alpha, V, H, \gamma, \Gamma$$

If we take the time t as independent variable, the other six are the dependent variables, which define the flight condition at each point of time. To find these six unknowns, four equations (Eq. 8.7 to Eq. 8.10) are available so that the course of the flight is fully determined if two dependent variables are prescribed as a function of time. The two variables which can be chosen freely, are called *control variables*, and the remaining four variables are the state variables. The functions which describe the time history of the control variables are called *control laws*, for example,

$$\alpha = \alpha(t) \quad \text{or} \quad \Gamma = \Gamma(t) \quad (8.18)$$

With these two control laws, we have a system of six equations to solve the six unknowns. The two basic controls on the airplane about which the pilot has the disposal in symmetric flight, namely, the elevator to adjust the angle of attack (pitch control) and the engine control lever to select the power output (engine control), allow the realization of the prescribed control laws (Fig. 8.3).

The name given to the combination of the two control laws in Eq. 8.18 is flight technique or flight program. To the preceding system of equations describing the translational motion in symmetric flight, we can add Eq. 3.24 for the rotational motion. Since in symmetric flight we are concerned with longitudinal motion only, this moment equation reduces to

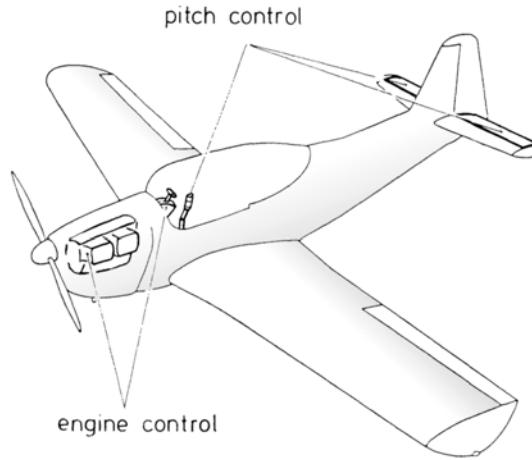


Figure 8.3 Controls in symmetric flight.

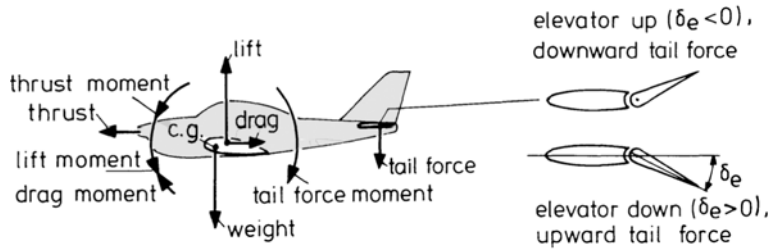


Figure 8.4 Pitch control.

$$M_y = \frac{dq}{dt} I_y = \frac{d^2\theta}{dt^2} I_y \quad (8.19)$$

The longitudinal control about the lateral axis is provided by the tail load carried by the horizontal stabilizer (Fig. 8.4). The magnitude of the tail force depends on the elevator deflection. This tail force is, in addition to aerodynamic force R , thrust T and weight W , the fourth force acting on the airplane in symmetric flight. The tail force must be counteracted by the lift when it is directed downward. Clearly, the higher the downward tail load the higher the total lift, which implies more drag. This means that in symmetric flight the lift and drag coefficients in general have the following functional relationships:

$$\begin{aligned} C_L &= C_L(\alpha, V, H, \delta_e) \\ C_D &= C_D(\alpha, V, H, \delta_e). \end{aligned} \quad (8.20)$$

Thus, by inserting Eq. 8.19 into the system of equations we are faced with only one extra variable so that the number of control variables continues to be two. Though the use of Eq. 8.19 may be needed, it is often possible to assume that the elevator deflection δ_e is instantly reactive to the

prescribed control law $\alpha = \alpha(t)$. Eq. 8.19 can then be omitted. This simplification implies that the effect of elevator deflection on the resultant aerodynamic force is neglected.

8.2. INTEGRAL AND POINT PERFORMANCE

Eq. 8.7 to Eq. 8.19 describe the unsteady airplane motion along a curvilinear path. They can be applied to determine the so-called *path performance* or *integral performance* values, which are related to the course of the flight. Examples of integral performance values are time to climb to a certain altitude, range and endurance in cruise, and takeoff and landing distances. On the other hand, we distinguish the *point performance* of an airplane. This name identifies the study of performance parameters which occur at a given point of time or at a given point on the flight path.

Hence, the designation “point performance” refers to instantaneous quantities such as maximum and minimum speed in level flight, maximum climb angle and rate of climb, and minimum radius of turn. Studies of integral performance and point performance both may fall within the category of flight dynamics. Recall from Chapter 3 that this term classifies the study of performance problems in which the exchange between kinetic and potential energies is of significance. In particular, the integral and point performance achieved when flying along optimum trajectories, but also the unsteady motion during takeoff and landing belong to the class of dynamic performance.

Generally, Eq. 8.7 and Eq. 8.8, which form a system of nonlinear differential equations, are not very suitable for analytical integration. To make these equations amenable to treatment, several simplifications and approximations are generally introduced. In this light, as an engineering approach, integral performance values from general translational motion of an airplane in accelerated flight are often determined by the use of the simplifying assumption that the airplane executes a quasi-steady flight. In this text, we are interested mainly in the last-mentioned case where the acceleration can be assumed to be zero. The airplane’s performance concerning such steady-state flight conditions are called *static performance*. This last type of performance analysis leads in many applications to sufficient accurate computations of the parameters which define the performance capabilities of an airplane. On the other hand, when predicting the integral performance of airplanes, the variations of airplane weight and/or altitude may be neglected. For example, these assumptions may be reasonable in the case that the time passed in a specific flight phase is very short, such as in takeoff and landing maneuvers.

8.3. AIR LOADS

All loads applied to an airplane that is airborne are produced through accelerations of the vehicle as a result of a control action by the pilot (maneuvering loads) or by encountering atmospheric turbulence (gust loads). To enter into the details of the idea of air load we consider an instant along a horizontal flight path (Fig. 8.5a). When symmetric flight is maintained at constant airspeed and altitude, all forces are in balance. For this condition, the flight-path angle γ in Eq. 8.7 and Eq. 8.8 is zero. Then, the left-hand sides of these equations are zero, yielding

$$0 = T \cos \alpha_T - C_D \frac{1}{2} \rho V^2 S \quad (8.21)$$

$$0 = T \sin \alpha_T - C_L \frac{1}{2} \rho V^2 S - W \quad (8.22)$$

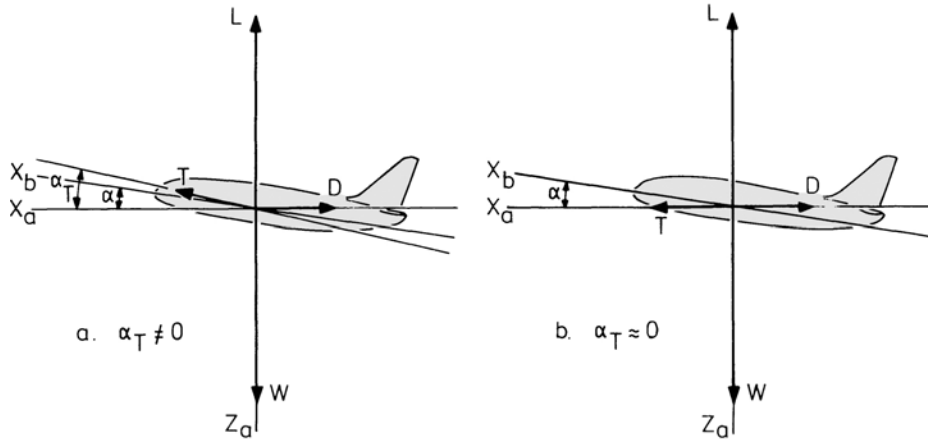


Figure 8.5 Equilibrium of forces in quasi-steady level symmetric flight.

Since for most conventional airplane types the angle α_T is very small, we have also assumed that $\cos \alpha_T = 1$ and $\sin \alpha_T = 0$. Then, from Eq. 8.21 and Eq. 8.22, we find that, at each instant during the flight, the thrust is equal to the drag and the weight is equal to the lift (Fig. 8.5b).

$$T = D = C_D \frac{1}{2} \rho V^2 S \quad (8.23)$$

$$W = L = C_L \frac{1}{2} \rho V^2 S \quad (8.24)$$

Now assume that, starting from the quasi-steady level flight condition in Fig. 8.6a, the pilot moves the elevator in the negative direction. From Fig. 8.4 this results in a positive pitching (clockwise) motion of the airplane through which, at the given flight speed, the angle of attack is suddenly increased by $\Delta\alpha$. Consequently, equilibrium of forces no longer exists and an acceleration will take place, which causes a curvature of the flight path (Fig. 8.6b). The increased values of lift and drag may be expressed as

$$L' = L + \Delta L = (C_L + \Delta C_L) \frac{1}{2} \rho V^2 S \quad (8.25)$$

$$D' = D + \Delta D = (C_D + \Delta C_D) \frac{1}{2} \rho V^2 S \quad (8.26)$$

To describe the air load, the *load factor* is used. This parameter is defined as the ratio between the resultant external non-weight force and the weight of the airplane,

$$\vec{n} = \frac{\vec{A}}{W} \quad (8.27)$$

where $\vec{n}$ denotes the load factor and $\vec{A}$ is the vector sum of the aerodynamic force $\vec{R}$ and the thrust $\vec{T}$. In this example, as portrayed in Fig. 8.6b, the increase in lift is of prime significance, and so are

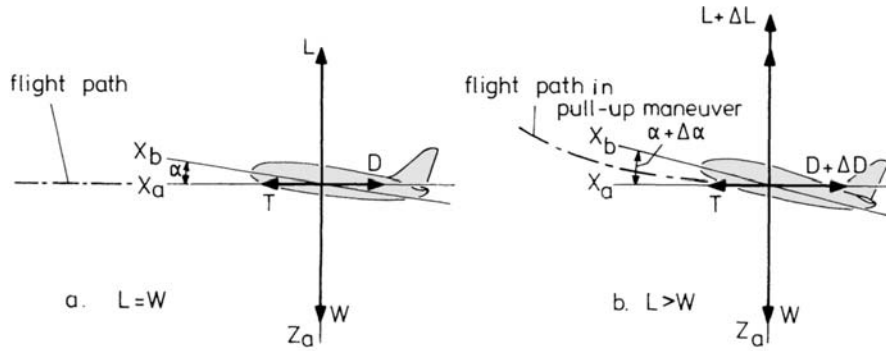


Figure 8.6 Lift in steady and accelerated flight.

the loads from accelerations normal to the X_a axis. Consequently, the *normal* load factor in its usual (and approximated) form is obtained by simply dividing the lift by the weight.

$$n = \frac{L'}{W} = 1 + \frac{\Delta C_L}{C_L} \quad (8.28)$$

The equation of motion along the Z_a axis can be written as

$$\frac{W}{g} a_n = L' - W \quad (8.29)$$

where a_n is the acceleration toward the center of curvature (centripetal acceleration). Eq. 8.28 and Eq. 8.29 give for this acceleration normal to flight path,

$$a_n = g(n - 1) \quad (8.30)$$

In quasi-steady level symmetric flight a_n is zero, meaning that the lift equals the weight of the airplane and that the normal load factor is equal to one. As pointed out already, a normal load factor other than one may occur as a result of a maneuver or due to an external cause in the form of a gust.

Obviously, the greatest maneuvering load factors will occur if the maximum amount of lift is generated at a given airspeed. In other words, if the angle of attack is increased up to the critical angle of attack. Hence

$$n = \frac{C_{L\max} \frac{1}{2} \rho V^2 S}{W} \quad (8.31)$$

As will be explained in the next section, the maximum lift coefficient is related to the minimum stalling speed V_{MS} , in equilibrium flight, by

$$W = C_{L\max} \frac{1}{2} \rho V_{MS}^2 S \quad (8.32)$$

Thus from Eq. 8.31 and Eq. 8.32, the value of n that can be achieved from maneuvering, can be expressed as

$$n = \frac{V^2}{V_{MS}^2} \quad (8.33)$$

Eq. 8.33 shows that the obtainable load factor strongly increases with increasing airspeed.

8.4. STALLING SPEEDS

Most performance requirements are specified in reference to the *minimum stalling speed*, V_{MS} . The minimum stalling speed is defined in the airworthiness requirements as the minimum speed reached during a prescribed stall maneuver with the airplane in a given configuration. In conducting the stall maneuver, the following procedure is utilized (Fig. 8.7): first, the airplane is flown at a steady speed 20% to 40% above the anticipated V_{MS} with the engine(s) at idle; the flight speed is reduced by increasing the angle of attack with elevator control until the speed is slightly above the estimated V_{MS} ; the altitude also slowly decreases, as aerodynamic drag increases and there is typically not enough thrust to maintain straight flight; then, the elevator control is pulled back so that the airplane is slowed down at a constant deceleration dV/dt (stall entry rate) until the actual V_{MS} is reached. This speed is recognized by uncontrollable downward pitching motions, owing to breaking away of flow from the upper surface of the wing. As sketched in Fig. 8.7, in approaching the stall, the load factor first remains roughly constant, and the lift coefficient gradually increases according to the equation

$$\frac{W}{g} a_n = C_L \frac{1}{2} \rho V^2 S - W \quad (8.34)$$

or, using Eq. 8.30,

$$C_L = \frac{nW}{\frac{1}{2} \rho V^2 S} \quad (8.35)$$

Immediately after the instant at which the maximum lift coefficient occurs, the load factor drops considerably, indicating that stalling phenomena are advancing quickly. As soon as the airplane is stalled, the pilot recovers the motion by pitching down the nose, producing an increase in airspeed. Since the resulting minimum stalling speed depends strongly on the magnitude of the stall entry rate, a sufficient number of stall maneuvers are executed to obtain enough data points to define the minimum stalling speed at a prescribed value of $dV/dt = -1 \text{ kts/s}$ (Fig. 8.8a). The stall entry rate is defined as the slope of the line connecting the minimum stalling speed and a value 10% above V_{MS} . That is:

$$\frac{dV}{dt} = \frac{V_{MS} - 1.1V_{MS}}{\Delta t} \quad (8.36)$$

Furthermore, minimum stalling speeds are determined for every flap and landing gear position that is used in the various flight phases. Besides V_{MS} , also the minimum speed at which the lift equals the weight of the airplane can be deduced from the measurement data,

$$V_S = \sqrt{\frac{W}{S} \frac{2}{\rho C_{L_{\max}}}} \quad (8.37)$$

The speed V_S is called the *one-g stalling speed* or simply *stalling speed*, and is thus the minimum steady speed in free air under one-g conditions at minimum engine control setting. Typically, V_{MS} may be as low as $0.94 V_S$ at $dV/dt = -1 \text{ knot/s}$. In Fig. 8.7, the minimum stalling speed has also

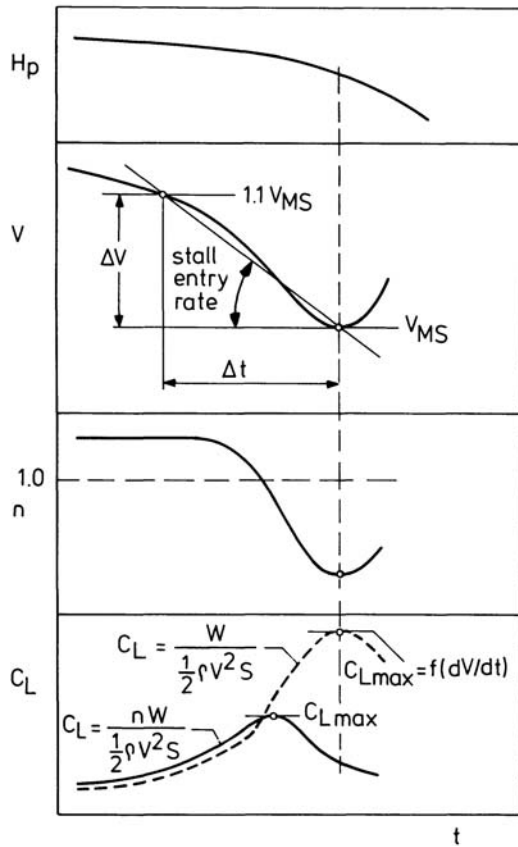


Figure 8.7 Determination of minimum stalling speed.

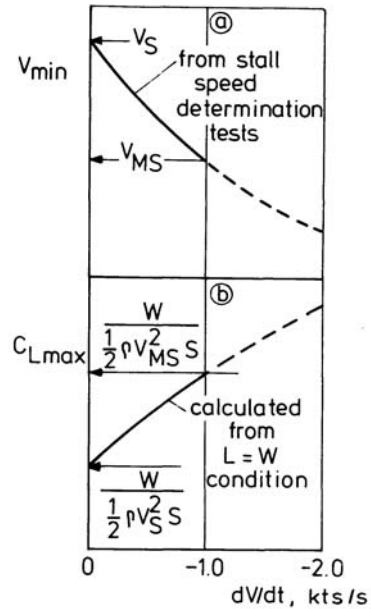


Figure 8.8 Effect of stall entry rate.

been reduced to an apparent maximum lift coefficient by using the $L = W$ condition,

$$C_{L\max} = \frac{W}{\frac{1}{2}\rho V_{MS}^2 S} \quad (8.38)$$

It is evident that the $C_{L\max}$ value thus obtained is a function of the stall entry rate (Fig. 8.8b). Using $V_{MS} = 0.94 V_S$, we find that the latter maximum lift coefficient may be quoted at a value some 13% higher than the $C_{L\max}$ obtained by calculation methods or wind tunnel tests. Whenever appropriate in this text, a tacit enlargement of the “physical” $C_{L\max}$ value in this manner will be supposed.

8.5. LOAD FACTOR ENVELOPES

All existing airworthiness requirements prescribe that the airframe, the load-carrying structure of the airplane, is strong enough to withstand certain *limit load factors* on the boundaries of a representative flight envelope. The basic maneuvering envelope, which defines the symmetrical flight maneuvering loads for which the airframe is constructed, is shown in Fig. 8.9a. The various design

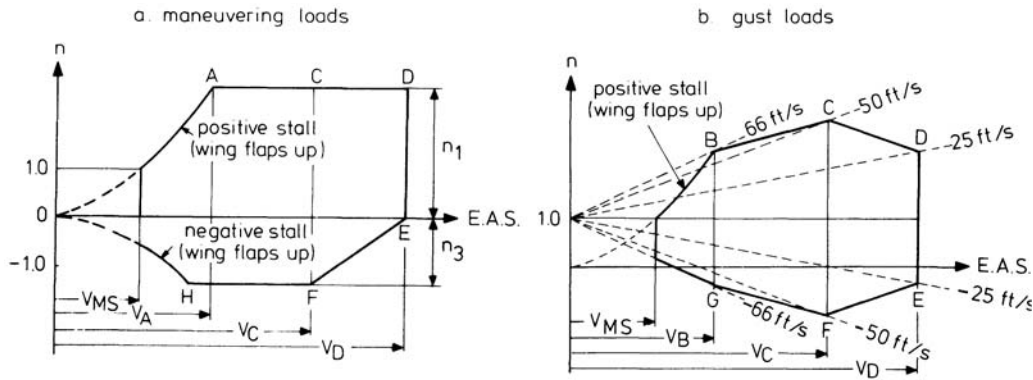


Figure 8.9 Basic load factor envelopes.

speeds, as selected by the airplane designer, are given in terms of equivalent airspeeds (E.A.S.) (see Section 5.4) so that they do not depend on altitude or compressibility effects. The curve OA is the stall line and represents the load factor according to Eq. 8.33. The speed V_C is the design cruising speed, V_D is the design diving speed, and V_F is the design speed with flaps fully deflected. The design maneuvering speed V_A is obtained at the positive limit maneuvering load factor n_1

$$V_A = V_{MS} \sqrt{n_1} \quad (8.39)$$

where V_{MS} is the minimum stalling speed with wing flaps retracted.

A pull-down maneuver, a sudden decrease of the angle of attack, yields a load factor less than one and can even cause a negative load factor. Since the negative value of $C_{L_{\max}}$ is generally less than the positive $C_{L_{\max}}$, the negative limit maneuvering load factor n_3 in Fig. 8.9a is lower than its positive counterpart. Values of the limit maneuvering load factors as used for strength requirements are roughly as follows:

$$n_1 = 2.5 \quad \text{and} \quad n_3 = -1.0 \quad \text{for civil transport airplanes}$$

$$n_1 = 8.0 \quad \text{and} \quad n_3 = -3.5 \quad \text{for military airplanes}$$

The airplane is also assumed to be subjected to symmetrical vertical gusts when flying through turbulent air. As sketched in Fig. 8.10, in the simplest case there may be a sudden sharp-edged gust with speed U . Then, the alteration of the lift coefficient is

$$\Delta C_L = \frac{dC_L}{d\alpha} \Delta\alpha = \pm \frac{dC_L}{d\alpha} \frac{U}{V} \quad (8.40)$$

where the minus sign refers to a downward gust.

Substitution of Eq. 8.40 into Eq. 8.28 and using Eq. 8.24 yields the following expression for the gust load factor

$$n = 1 \pm \frac{dC_L}{d\alpha} \frac{\frac{1}{2} \rho_0 U_e V_e}{W/S} \quad (8.41)$$

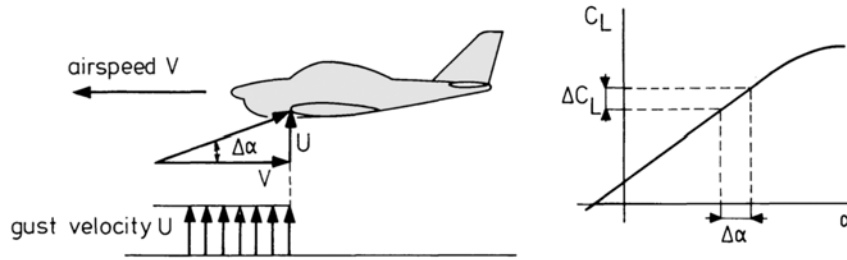


Figure 8.10 Effect of vertical gust on angle of attack.

where U_e is the gust velocity expressed in terms of an equivalent speed as well. Conform the airworthiness requirements listed at the end of this section, the gust load factors must be computed from

$$n = 1 \pm K \frac{dC_L}{d\alpha} \frac{\frac{1}{2} \rho_0 U_e V_e}{W/S} \quad (8.42)$$

in which K is an adjusting factor, referred to as gust alleviation factor. This factor takes account of the fact that actual gust velocity profiles will never be sharp-edged but will have a more uniform shape so that, depending on airplane size and weight, there will be some response by the airplane. Eq. 8.41 and Eq. 8.42 clearly demonstrate that gust load factors are of special importance to high-speed airplanes having low wing loadings. Hence, in the presence of high gust velocities the flight will be executed at a much slower speed than in still air.

The limit gust load factor, according to the current airworthiness standards, must correspond to particular positive and negative values of U_e . An example of a basic gust load factor envelope is given in Fig. 8.9b. The dashed lines show the gust load factors for given gust velocities. The gust velocities used at the design cruising speed are assumed to be 50 ft/s (15.24 m/s) equivalent speed at altitudes between sea level and 20000 ft (6096 m). These gust velocities may be reduced linearly from 50 ft/s at 20000 ft to 25 ft/s (7.62 m/s) at 50000 ft (15240 m). Also positive and negative gusts of 25 ft/s at the design diving speed V_D must be considered at altitudes between sea level and 20000 ft. Above 20000 ft this value may be reduced linearly to 12.5 ft/s (3.81 m/s) at 50000 ft. Furthermore, rough air gusts of ± 66 ft/s (20.12 m/s) must be considered at altitudes between sea level and 20000 ft. This maximum gust velocity may be reduced linearly from 66 ft/s at 20000 ft to 38 ft/s at 50000 ft.

At given altitude and airplane weight, the maximum gust velocity determines the speed V_B in Fig. 8.9b. This is the speed at which the assumed gust velocity causes the airplane to stall. The speed V_B is called the design speed for maximum gust velocity or rough airspeed.

The limit load factors considered in this section represent the maximum air loads which might be expected in normal operation. Airworthiness requirements are also specified in terms of ultimate load factors, being the limit load multiplied by a factor of safety. This measure provides that the structure does not fail before the ultimate load is reached. Normally, a factor of safety of 1.5 must be applied to the prescribed limit load factors. Finally, it is worth noting that the airworthiness standards encompass much more items than the requirements on design strength as described above. "Airworthiness" has to do generally with a chain of involvements contributing to an overall aviation safety level. This is achieved by controlling the various stages in the life of an airplane; reaching

from its design phase via type certification to its operation by the airline and specification of maintenance standards. Airworthiness requirements are promulgated by national authorities and are based primarily on experience. All existing rules remain subject to continuous updating as a consequence of implementation of new experience and advanced developments. For conventional civil airplanes, the two codes of current requirements most frequently cited are:

- FAR: Federal Aviation Regulations issued by the Federal Aviation Administration (FAA) of the United States of America.
- EASA regulations: a set of regulations produced and published by the European Aviation Safety Agency.

Moreover, there exist similar codes of requirements published for military airplanes.

8.6. PROBLEMS

1. Name the two basic controls which the pilot has available to control the motion of an airplane in symmetric flight
2. Explain the difference between “point performance” and “path performance”
3. An airplane has a true airspeed of 150 m/s and a climb rate of 10 m/s. The pitch attitude θ observed by the pilot equals 10 deg. Calculate the angle of attack α for this flight condition.
4. An aerobatic airplane is performing a display at 100 m altitude and at a true airspeed of 60 m/s. The weight of the airplane is 10 kN. It has a maximum lift coefficient of 1.5 and the wing surface area is 11 m². The propulsion system is a piston engine with a four bladed propeller. The maximum power available at this specific flight condition is 200 kW. The pilot would like to perform a pull-up to impress the audience. Calculate the maximum instantaneous load factor that can be obtained in a symmetrical pull-up at the prescribed flight condition
5. Explain the difference between the minimum stalling speed V_{MS} and the minimum speed V_S .
6. Calculate the minimum speed V_S of the airplane of problem 5 at a flight altitude of 1000 m.
7. Provide typical limit maneuvering load factors for civil transport airplanes.
8. A turboprop airplane is flying at 6000 m altitude and Mach 0.45. Characteristics of this airplane are provided in the following table.

Parameter	Value
Weight	140 kN
Wing surface area	70 m ²
Wing aspect ratio	12
Oswald's efficiency factor	0.76
Zero-lift drag coefficient	0.013
Lift-curve slope	5.1/rad

The airplane encounters an upward gust with (true) speed 10 m/s. The gust can be assumed to be “sharp-edged”.

- (a) Calculate the resulting gust load factor.
- (b) In reality gusts are not “sharp-edged”. Do you expect the gust load factor for this situation in real-life to be larger, smaller or the same as the gust load factor calculated in question a? Why?

9

PERFORMANCE IN STEADY SYMMETRIC FLIGHT

9.1. BASIC RELATIONS

Consider an instant along the flight path of an airplane in steady symmetric climbing flight, as shown in Fig. 9.1a. Summing forces parallel to the flight path, we have

$$T \cos \alpha_T - D - W \sin \gamma = 0 \quad (9.1)$$

and perpendicular to the flight path, we get

$$T \sin \alpha_T + L - W \cos \gamma = 0 \quad (9.2)$$

For most airplane types and in normal flight conditions, the component $T \sin \alpha_T$ in Eq. 9.2 is relatively small in comparison with the other terms. Therefore, it is useful to ignore this force and to assume that the thrust line inclination from the flight path is zero so that the propulsive force T points into the direction of the velocity V (Fig. 9.1b). Then, Eq. 9.1 and Eq. 9.2 reduce to

$$T - D - W \sin \gamma = 0 \quad (9.3)$$

$$L - W \cos \gamma = 0 \quad (9.4)$$

Although not essential, it is often convenient to multiply Eq. 9.3 with airspeed V ,

$$TV - DV - WV \sin \gamma = 0 \quad (9.5)$$

Eq. 9.5 expresses the work per unit time done by the forces in the direction of flight, and is frequently used in this form. By introduction of the rate of climb RC of the airplane,

$$RC = V \sin \gamma \quad (9.6)$$

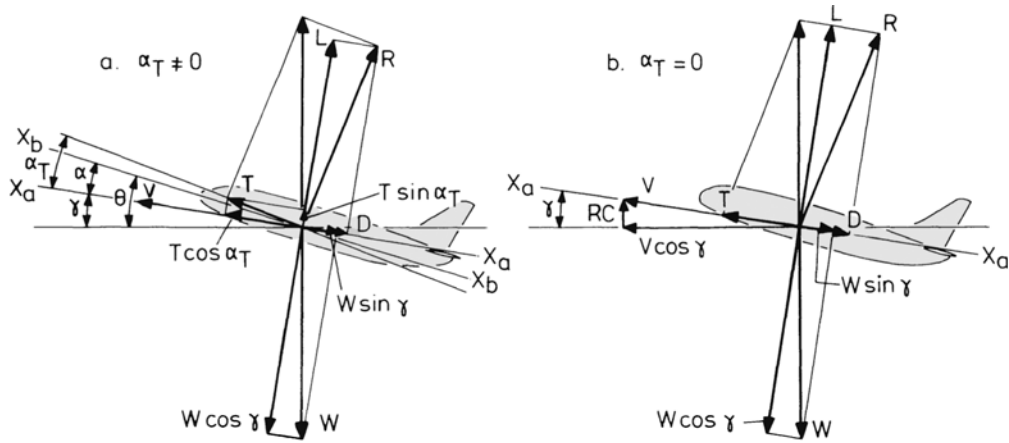


Figure 9.1 airplane in steady symmetric flight

Eq. 9.5 becomes

$$TV = DV + W(RC) \quad (9.7)$$

The left-hand side of Eq. 9.7 is the power delivered by the power plant at the airspeed V . This quantity is called power available P_a ,

$$P_a = TV \quad (9.8)$$

The term DV on the right-hand side of Eq. 9.7 is the power required for flight at velocity V or shortly power required P_r ,

$$P_r = DV. \quad (9.9)$$

The difference between power available and power required is the excess power,

$$P_c = P_a - P_r \quad (9.10)$$

Thus, the excess power P_c refers to the power that in steady flight is used to climb

$$P_c = W(RC) \quad (9.11)$$

In Chapter 8, we demonstrated that at a given point of time (given airplane weight and altitude) the flight condition depends on the following four variables:

- angle of attack, α
- airspeed, V
- flight-path angle, γ
- engine control setting, Γ

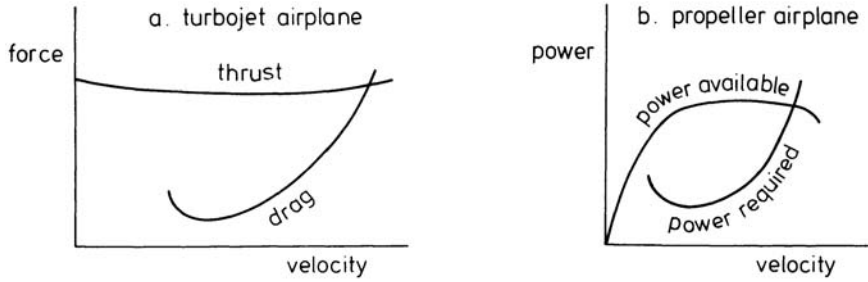


Figure 9.2 Performance Diagram

When α (elevator stick position) and Γ (control lever position) are chosen, then the flight-path angle and airspeed can be obtained from the Eq. 9.3 to Eq. 9.5.

To solve these equations, the performance diagram or Pénau diagram may be used, where, for a given altitude, airplane weight, configuration and engine control setting, the drag or power required and the maximum thrust or maximum power available are plotted against airspeed.

Fig. 9.2 shows typical shapes of performance curves in terms of both force and power. Putting together the two curves of thrust and drag is useful when analyzing turbojet and turboprop powered airplanes since their engines are rated in terms of thrust (Fig. 9.2a). On the other hand, piston and turboprop engines are rated in terms of shaft power. Then, it is more convenient to examine their performance by combining the curves of power required and power available rather than force curves (Fig. 9.2b). Before discussing the deductions which can be made from the performance diagram, let us first consider the nature of the power and force curves separately as their variations with flight velocity are essential to the resultant performance.

9.2. DRAG AND POWER REQUIRED

From Eq. 9.4 and Eq. 9.9, and using the relationships $L = C_L \frac{1}{2} \rho V^2 S$ and $D = C_D \frac{1}{2} \rho V^2 S$, we easily find that

$$V = \sqrt{\frac{W}{S} \frac{2}{\rho} \frac{1}{C_L} \cos \gamma} \quad (9.12)$$

$$D = \frac{C_D}{C_L} W \cos \gamma \quad (9.13)$$

$$P_r = W \sqrt{\frac{W}{S} \frac{2}{\rho} \frac{C_D^2}{C_L^3} \cos^3 \gamma} \quad (9.14)$$

These expressions show that for a low-subsonic airplane with a given weight and flying at a given altitude (given air density), the airspeed V , drag D and power required P_r , are functions of angle of attack α and flight-path angle γ . In its turn, the flight-path angle depends via the thrust term in Eq. 9.3 on the engine control setting Γ . In climbing flight, of course, the flight-path angle is unequal to zero. Nevertheless, performance analyses are customarily simplified by neglecting the effect of γ on V , D and P_r . Also in this book, we shall assume that the flight-path angle is sufficiently small

Table 9.1 Drag and power required for a low-subsonic airplane. Airplane weight $W = 20000$ N, wing area $S = 25 \text{ m}^2$, flight altitude $H = 0$ m (I.S.A.)

C_L	C_D	C_L/C_D	$V, \text{m/s}$	$V, \text{km/hr}$	D, N	P_r, kW
1.5	0.210	7.14	29.5	106.2	2801	82.63
1.4	0.164	8.54	30.5	109.8	2342	71.43
1.3	0.143	9.09	31.7	114.1	2200	69.74
1.2	0.124	9.68	33.0	118.8	2066	68.18
1.0	0.097	10.31	36.1	130.0	1940	70.03
0.8	0.076	10.53	40.4	145.4	1899	76.72
0.6	0.061	9.84	46.7	168.1	2033	94.94
0.4	0.049	8.16	57.1	205.6	2451	139.95
0.3	0.045	6.67	66.0	237.6	2999	197.93
0.2	0.042	4.76	80.8	290.9	4202	339.52

so that its cosine may be replaced by unity, unless otherwise stated. The approximation $\cos \gamma = 1$ means that at a given height, the lift and drag coefficients and thus the drag and power required are functions of airspeed only. In other words, these relationships are given by single curves which apply to all engine control settings.

A main point to note is that, although $\cos \gamma = 1$, the sine of the flight-path angle remains unequal to zero. With this conventional assumption, Eq. 9.12 to Eq. 9.14 reduce to

$$V = \sqrt{\frac{W}{S} \frac{2}{\rho} \frac{1}{C_L}} \quad (9.15)$$

$$D = \frac{C_D}{C_L} W \quad (9.16)$$

$$P_r = W \sqrt{\frac{W}{S} \frac{2}{\rho} \frac{C_D^2}{C_L^3}} \quad (9.17)$$

As a first example, let us consider a propeller-driven small airplane of 20000 N weight with a wing area of 25 m^2 . Calculated drag and power required values, starting from chosen values of lift coefficient C_L , are displayed in Tab. 9.1. For each C_L the airspeed V is calculated from Eq. 9.15, using $\rho_0 = 1.225 \text{ kg/m}^3$ (see Appendix D). Since our example concerns an airplane designed for low-subsonic airspeeds, the corresponding values of C_D follow directly from the known lift-drag polar (Fig. 9.3). Now, from Eq. 9.16 the drag is determined. Finally, power required is calculated from Eq. 9.17. The results of Tab. 9.1 are plotted as a function of airspeed in Fig. 9.4. On the two curves, special points can be distinguished which correspond to particular points on the lift-drag polar:

- Minimum airspeed in steady flight (point A). From Eq. 9.15, we see that the airspeed decreases as the lift coefficient increases so that the minimum airspeed is obtained for maximum lift coefficient, $C_{L\max}$. Then, according to Eq. 8.37, the minimum airspeed is the stalling speed V_S .

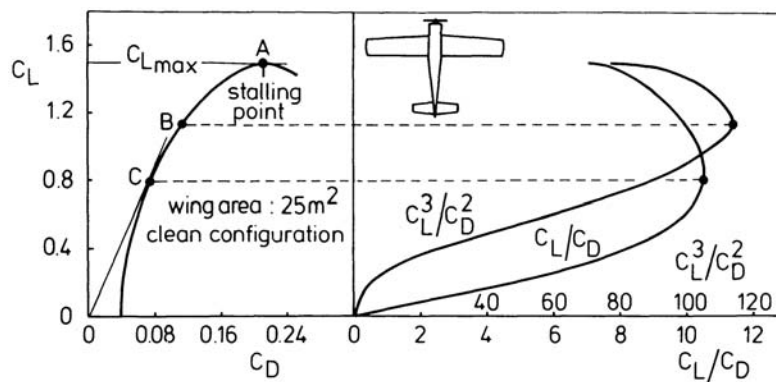


Figure 9.3 Typical lift-drag polar of a propeller-driven airplane

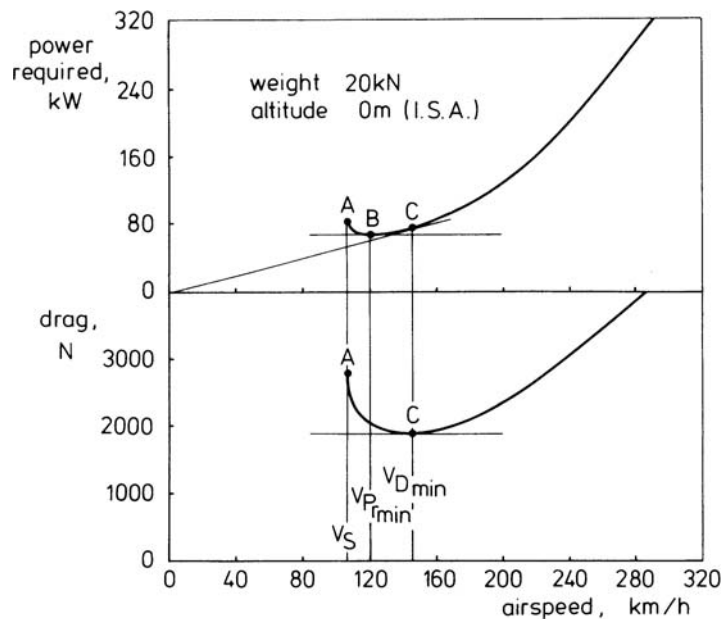


Figure 9.4 Drag and power required for low-subsonic airplane

- Minimum power required (point B). Fig. 9.4 shows clearly that the power required curve reaches a minimum value at an airspeed greater than the stalling speed V_S . From Eq. 9.17 we see that minimum power required occurs at an angle of attack for maximum climb factor, $(C_L^3/C_D^2)_{max}$
- Minimum drag (point C). The angle between any radius from the origin to a point on the power required curve in Fig. 9.4 is a measure for Pr/V and so for the drag (see Eq. 9.9). The

point C on the power required curve that corresponds to minimum drag is thus found by drawing a straight line from the origin tangent to the P_r curve, as shown in Fig. 9.4. Hence, minimum drag is always obtained at a higher airspeed and a lower lift coefficient (smaller angle of attack) than minimum power required. Eq. 9.16 tells us that minimum drag will be obtained when the airplane is flying at an angle of attack for which C_L/C_D is the maximum.

An analytical representation of drag and power required curves can be obtained by using the parabolic approximation for the lift-drag polar,

$$C_D = C_{D0} + \frac{C_L^2}{\pi A e} \quad (9.18)$$

where C_{D0} is the zero-lift drag coefficient, A is the wing aspect ratio and e is the Oswald's efficiency factor (see Section 4.4). Introducing the parabolic drag equation, we can write Eq. 9.13 as

$$D = C_{D0} \frac{1}{2} \rho V^2 S + \frac{C_L^2}{\pi A e} \frac{1}{2} \rho V^2 S \quad (9.19)$$

From the basic equation $L = W$, we have

$$C_L = \frac{W}{\frac{1}{2} \rho V^2 S} \quad (9.20)$$

Substituting Eq. 9.20 into Eq. 9.19 yields

$$D = C_{D0} \frac{1}{2} \rho V^2 S + \frac{W^2}{\pi A e \frac{1}{2} \rho V^2 S} = D_0 + D_i \quad (9.21)$$

In Eq. 9.21, D_0 is the zero-lift drag and D_i is the induced drag of the airplane. Examination of this expression indicates that at a given altitude the zero-lift drag increases with V , while the induced drag decreases with increasing flight velocity. These two contributions to the total drag D are sketched as separate functions of airspeed in Fig. 9.5. The speed for minimum drag corresponds to the condition $dD/dV = 0$. Differentiating Eq. 9.21 with respect to V and setting the derivative equal to zero, we readily obtain

$$V_{D\min} = \sqrt{\frac{W}{S} \frac{2}{\rho} \frac{1}{\sqrt{C_{D0} \pi A e}}} \quad (9.22)$$

Insertion of this expression into Eq. 9.21 produces

$$D_0 = D_i = W \sqrt{\frac{C_{D0}}{\pi A e}} \quad (9.23)$$

$$D_{\min} = 2W \sqrt{\frac{C_{D0}}{\pi A e}} \quad (9.24)$$

Eq. 9.23 shows that at the velocity for minimum airplane drag, corresponding to $C_D = 2C_{D0}$ and $C_L = \sqrt{C_{D0} \pi A e}$, zero-lift and induced drags are equal (see Fig. 9.5). Notice that Eq. 9.24 can also be derived by combining the expression for maximum lift-to-drag ratio, Eq. 4.42, with Eq. 9.16,

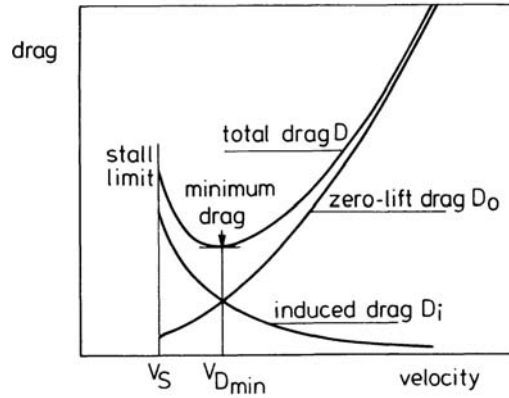


Figure 9.5 Drag components in level flight

$$D_{\min} = \frac{W}{(C_L/C_D)_{\max}} = 2W \sqrt{\frac{C_{D0}}{\pi A e}} \quad (9.25)$$

Similarly, using Eq. 9.18 and Eq. 9.20 leads to the following expression for the power required

$$P_r = C_D \frac{1}{2} \rho V^3 S = C_{D0} \frac{1}{2} \rho V^3 S + \frac{W^2}{\pi A e \frac{1}{2} \rho V S} \quad (9.26)$$

For minimum power required, $dP_r/dV = 0$. Taking the derivative of Eq. 9.26 with respect to V , equating it to zero, leads to the following expression for the speed for minimum power required

$$V_{P_{\min}} = \sqrt{\frac{W}{S} \frac{2}{\rho} \frac{1}{\sqrt{3 C_{D0} \pi A e}}} \quad (9.27)$$

Substituting Eq. 9.27 into Eq. 9.26 furnishes the expression for minimum power required. Thus

$$P_{r_{\min}} = \frac{4}{3} W \sqrt{\frac{W}{S} \frac{2}{\rho} \frac{1}{\sqrt{3 C_{D0} \pi A e}}} \quad (9.28)$$

Note that substitution of the expression for maximum climb factor, Eq. 4.46, into Eq. 9.17 also will produce Eq. 9.28.

By combining Eq. 9.22 and Eq. 9.27, we find the relationship,

$$V_{D_{\min}} = \sqrt[4]{3} V_{P_{\min}} \quad (9.29)$$

Apparently, based on the parabolic lift-drag polar, the minimum drag speed is 1.32 times the speed for minimum power required. As we shall see later on in this text, $V_{D_{\min}}$ and $V_{P_{\min}}$ represent very important flight conditions because of operational as well as economic reasons.

Fig. 9.6a displays the parabolic approximation of the lift-drag polar of our illustrative propeller-driven small airplane. The values of C_{D0} and e are determined by drawing the parabola that fits

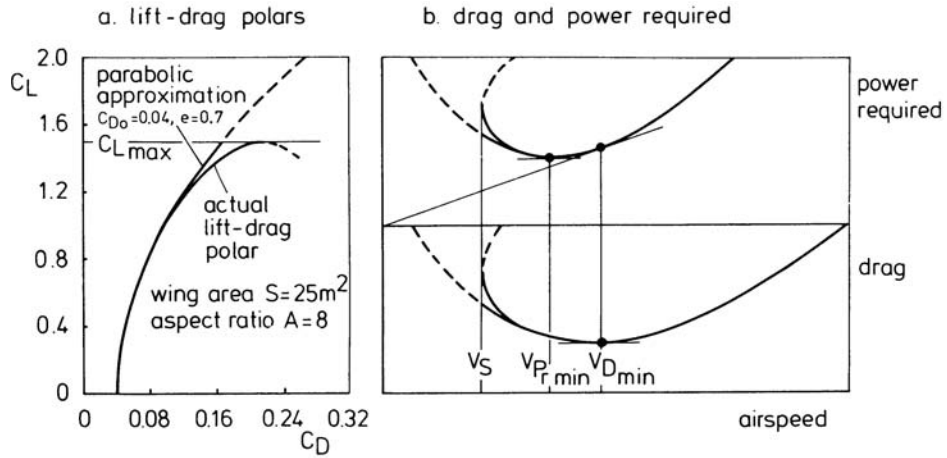


Figure 9.6 Parabolic approximation of lift-drag polar

best the empirical curve. We see from Fig. 9.6a that at a certain value of the lift coefficient, the drag coefficient ceases to be parabolic with C_L . As the lift coefficient increases past a value of about 1.0, the actual drag coefficient increases strongly from that expected from the parabolic behavior. Beyond the stalling point the C_L drops again as the angle of attack is further increased. The parabolic lift-drag polar on the other hand, is simply broken off at the maximum lift coefficient. At this point a large deviation from the actual drag coefficient occurs. Therefore, as is clearly seen by inspection of the illustrative diagrams in Fig. 9.6b, the shapes of the P_r - and D curves at airspeeds near the stalling speed are somewhat different for the two types of C_L versus C_D curves. For the actual lift-drag polar, the drag and power required values will be greater than obtained from its parabolic approximation. Furthermore, the actual P_r - and D curves are convex in a way that they have vertical tangents at the stalling speed.

Fig. 9.7a presents typical parabolic lift-drag polars for a high-subsonic commercial turbofan airplane. The same data are given in Fig. 9.7b by means of the zero-lift drag coefficient C_{D0} and the induced drag factor $k = 1/(\pi Ae)$ as functions of flight Mach number. The curves illustrate that the drag coefficients rise sharply at Mach numbers greater than 0.70. The procedure of calculating the drag and power required curves is accomplished in Tab. 9.2 for the aerodynamic data of Fig. 9.7, assuming an airplane weight of 2500 kN, a wing area of 365 m², and a flight altitude of 9000 m (I.S.A.). The Mach number corresponding to a given forward velocity is given by

$$M = \frac{V}{c} = \frac{V}{\sqrt{\gamma RT}} \quad (9.30)$$

where $T = 229.65\text{ K}$ is the air temperature. The lift coefficient follows from Eq. 9.20 with $W = 0.4663\text{ kg/m}^3$ (see Appendix D).

For each pair of C_L and M values, the drag coefficient is found through the drag equation

$$C_D = C_{D0} + kC_L^2 \quad (9.31)$$

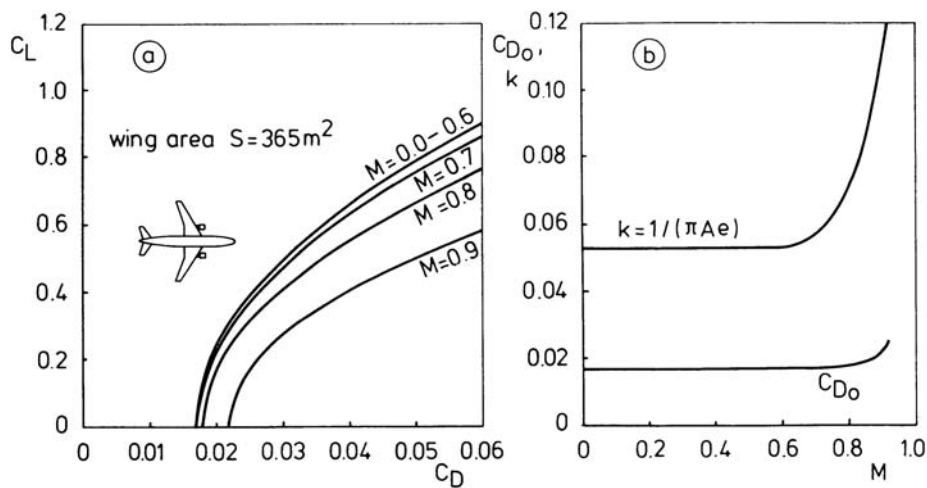


Figure 9.7 Lift-drag polars for high-subsonic transport airplane

Table 9.2 Drag and power required for a high-subsonic airplane. Airplane weight $W = 2500\text{ kN}$, wing area $S = 365\text{ m}^2$, flight altitude $H = 9000\text{ m}$ (I.S.A.).

C_L	V , m/s	M	C_D	C_L/C_D	D , kN	P_r , kW
1.40	144.9	0.477	0.1229	11.39	219.4	31795
1.20	156.5	0.515	0.0933	12.86	194.4	30426
1.00	171.5	0.564	0.0700	14.29	175.0	30013
0.80	191.7	0.631	0.0513	15.58	160.4	30756
0.70	204.9	0.675	0.0441	15.89	157.3	32235
0.60	221.4	0.729	0.0389	15.42	162.1	35885
0.50	242.5	0.798	0.0360	13.89	180.0	43650
0.45	255.6	0.841	0.0370	12.16	205.7	52565
0.40	271.1	0.892	0.0386	10.36	241.3	65403

The numerical results are plotted in Fig. 9.8. From a comparison with Fig. 9.4, it is apparent that there is no fundamental difference in the general shapes of the power required and drag curves for propeller-driven and jet-driven airplanes.

As a third example, in Tab. 9.3 the drag and power required curves are produced for a supersonic airplane with a weight of 85 kN and a wing area of 35 m^2 . The flight is executed at an altitude of $11\,000\text{ m}$ (I.S.A.). At this height the air density is equal to 0.3639 kg/m^3 and the air temperature is 216.65 K . Fig. 9.9 furnishes the aerodynamic data for the vehicle. In the calculations, values of Mach number are chosen. The corresponding airspeeds follow from Eq. 9.30 and the lift coefficients are given by Eq. 9.20. From Eq. 9.31, the lift coefficient at a given Mach number determines the drag coefficient and so the drag and power required.

The graphic representation of the calculation results is given in Fig. 9.10. The curves portray that

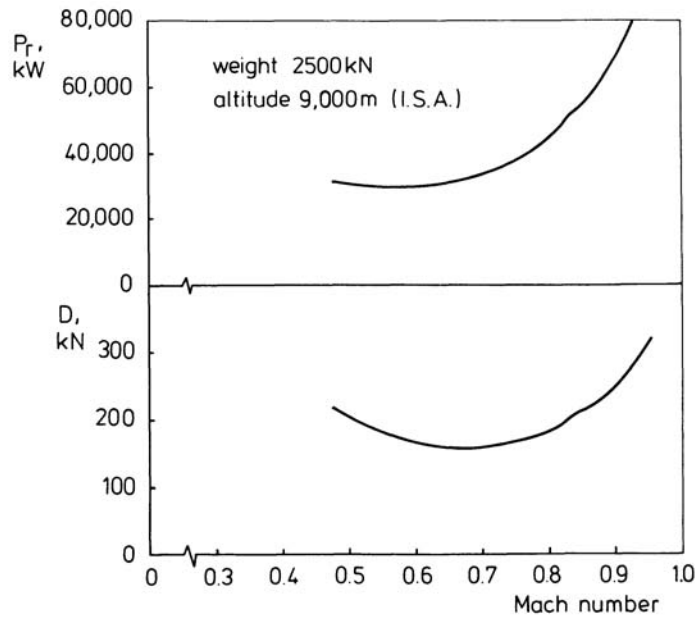


Figure 9.8 High-subsonic transport airplane drag and power required

Table 9.3 Drag and power required for a supersonic airplane. Airplane weight $W = 85000\text{ N}$, wing area $S = 35\text{ m}^2$, flight altitude $H = 11\,000\text{ m}$ (I.S.A.).

M	$V, \text{ m/s}$	C_L	C_D	C_L/C_D	$D, \text{ kN}$	$P_r, \text{ kW}$
0.47	138.1	0.7000	0.2095	3.34	25.4	3513
0.50	147.5	0.6271	0.1697	3.70	23.0	3394
0.60	177.0	0.4355	0.0839	5.19	16.4	2897
0.80	236.1	0.2447	0.0308	7.96	10.7	2522
1.00	295.1	0.1567	0.0273	5.75	14.8	4366
1.10	324.6	0.1295	0.0386	3.36	25.3	8213
1.20	354.1	0.1088	0.0343	3.18	26.8	9476
1.60	472.1	0.0612	0.0252	2.43	35.0	16530
2.20	649.2	0.0324	0.0195	1.66	51.3	33271

there is a dramatic rise in drag and power required due to compressibility when the airplane flies at transonic and supersonic speeds. Since the drag coefficient decreases with increasing supersonic flight velocity, the drag rises above $M = 1.1$ at a slower rate than below the sonic speed.

9.3. THRUST AND POWER AVAILABLE

Fig. 9.11 indicates the typical variation of thrust with flight Mach number for turbojets, turbofans and propeller propulsion systems. The data are presented as the fraction of the thrust at a given

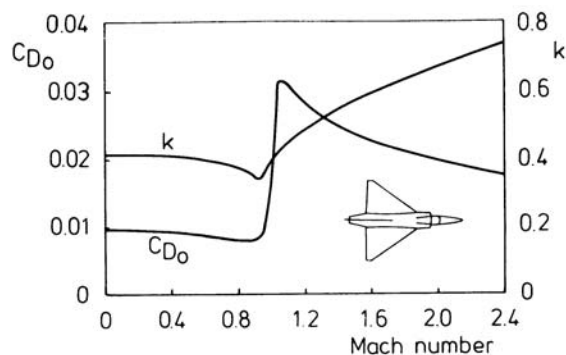


Figure 9.9 Aerodynamic data for supersonic airplane (estimated)

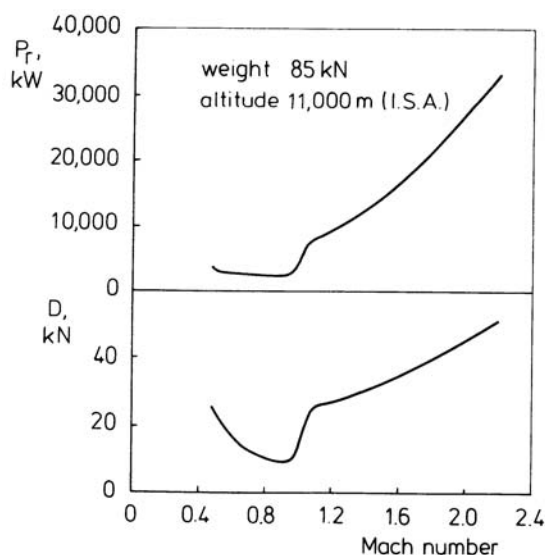


Figure 9.10 Power required and drag for supersonic airplane

Mach number to the static thrust ($V = 0$). The curves show that throughout the subsonic flight regime the thrust of a turbojet is reasonably constant with airspeed (cf. Fig. 6.29). On the other hand, propeller thrust declines rapidly with increasing Mach number. For moderate bypass ratios, the curves for the turbofans have shapes in the middle between that of turbojets and propeller propulsion systems. As depicted in Fig. 9.12a, the behavior of the propeller thrust results in a power available remaining relatively constant with airspeed, except at high and low forward velocities where the propulsive efficiency falls off (see Fig. 7.2). In contrast, the almost constant value of turbojet thrust causes that its power available increases essentially linearly with airspeed (Fig. 9.12b). Obviously, if the airplane is equipped with turbofan engines, the power available curve will lie approximately halfway between that of the pure turbojet and propeller propulsion systems.

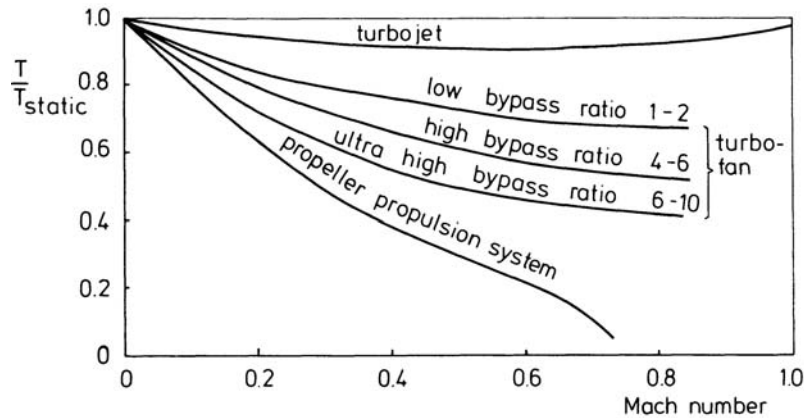


Figure 9.11 Typical Variation of thrust with Mach number. Note: nowadays, it is more proper to use the nomenclature of “low”, “medium” and “high” bypass ratio for the three turbofan curves indicated above. Some variants of modern turbofan engines like the CFM LEAP and the PW1000G exhibit bypass ratios up to 12.5

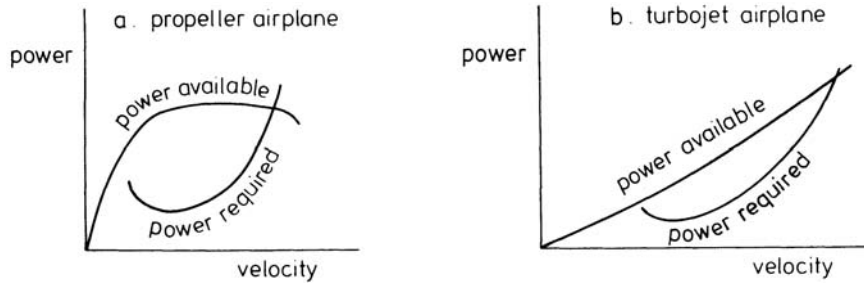


Figure 9.12 Typical power available curves

Since the performance characteristics of turbojet and turbofan engines are specified in terms of thrust, the power available curves for these engine types are simply obtained from $P_a = TV$. For propeller-driven airplanes the calculation procedure is definitely more complicated as the available power is obtained from the product of shaft brake power of the engine and propulsive efficiency of the propeller,

$$P_a = \eta_j P_{br} \quad (9.32)$$

First of all, we will explain the derivation of the power available versus V curve for an airplane with piston-engine and propeller. This type of airplane may be equipped with a constant speed propeller or a fixed-pitch propeller. In both cases, power available is determined at a given inlet manifold pressure. Thus, as explained in [Section 6.2](#), for the flight at a given altitude, shaft brake power as a function of engine rpm is known from the standard power diagram. For the combination of piston-engine and constant speed propeller, the pilot can control the inlet manifold pressure and the propeller blade angle separately such that the engine speed remains constant. Accordingly, at a

Table 9.4 Power available and thrust for piston-engine and constant speed propeller. Flight altitude $H = 0$ m (I.S.A.), propeller diameter $D = 2.60$ m, propeller gear ratio $n_p/n = 1.0$, inlet manifold pressure $p_z = 115\,140$ Pa, engine speed $n = 2300$ rpm.

V , m/s	V , km/hr	P_{br} , kW	C_P	J	C_T	η_j	P_a , kW	T , N
10	36	295	0.0360	0.100	0.090	0.250	73.75	7375
20	72	295	0.0360	0.201	0.081	0.452	133.34	6667
30	108	295	0.0360	0.301	0.070	0.585	172.58	5753
40	144	295	0.0360	0.401	0.061	0.680	200.60	5015
50	180	295	0.0360	0.502	0.054	0.753	222.14	4443
60	216	295	0.0360	0.602	0.048	0.803	236.89	3948
70	252	295	0.0360	0.702	0.044	0.858	253.11	3616
80	288	295	0.0360	0.803	0.040	0.892	263.14	3289

given altitude (given air density), shaft brake power is directly known from selected values of inlet manifold pressure and engine speed.

The performance of an electric motor in combination with batteries and an electronic speed controller is not affected by the flight altitude, apart from minor temperature effects. Hence, it can be assumed constant. On the other hand, the propeller torque and rotational speed (in case of a fixed-pitch variable speed propeller) are dependent on air density.

Using the chosen set of data, the calculation to obtain thrust and power available for the illustrative propeller-driven small airplane of the preceding section is carried out in [Tab. 9.4](#).

The procedure of finding power available and propeller thrust at successive values of airspeed is illustrated in the following.

1. For the selected values of inlet manifold pressure and engine speed we find the shaft brake power from the standard power diagram in [Fig. 9.13](#).
2. The power coefficient of the propeller is computed from the equilibrium condition $P_p = P_{br}$:

$$C_P = \frac{P_{br}}{\rho n_p^3 D^5}$$

3. The value of C_T for the C_P and J found in steps 2 and 3 is taken from [Fig. 9.14](#), and the propulsive efficiency is computed from

$$\eta_j = \frac{C_T}{C_P}$$

4. Power available and thrust are determined by using the two equations

$$P_a = \eta_j P_{br} \quad \text{and} \quad T = \eta_j \frac{P_{br}}{V}$$

When dealing with a fixed-pitch propeller the blade angle $\beta_{0.75}$ is constant. This implies that the power required for rotation and so the propeller speed will vary with forward velocity. At flight

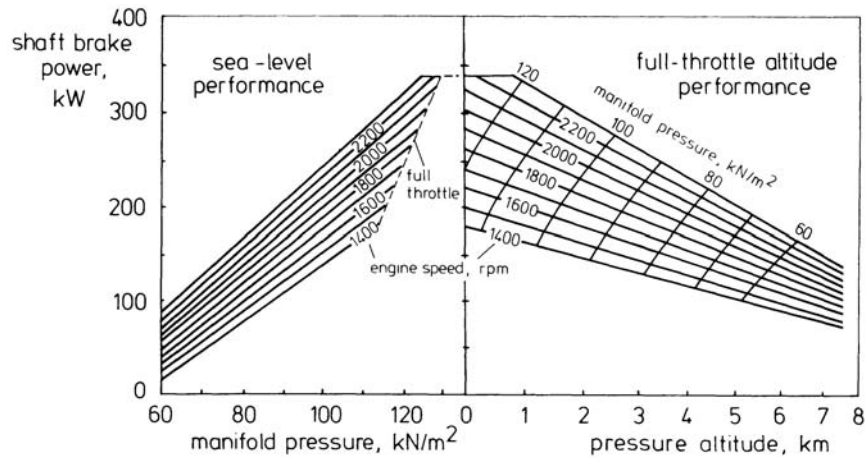


Figure 9.13 Standard power diagram of piston-engine (illustrative)

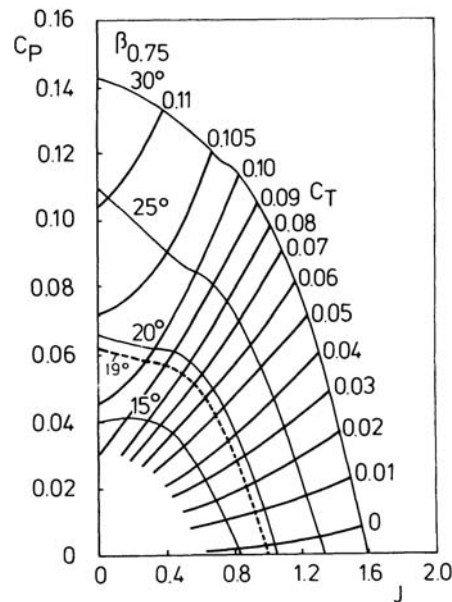


Figure 9.14 Propeller chart of 2-bladed propeller (estimated)

speeds lower than a chosen design speed the propeller power requirements slow the rotational speed down, and at higher airspeeds it is necessary to reduce the engine control setting in order to avoid over-speeding of the engine. When starting from given values of airspeed, the determination of power available and thrust requires a very cumbersome calculation method since the engine speed, defined by the equilibrium condition $P_p = P_{br}$ can only be found by trial and error. A work-

ing procedure to determine successive points of the power available curve for a piston-engine with a fixed-pitch propeller is to start from chosen values of engine speed. Then, in combination with the selected inlet manifold pressure, shaft brake power is directly known, and the resulting airspeed follows from the condition $P_p = P_{br}$. The values of power available and thrust can now be found in four steps:

1. Determine P_{br} from the standard power diagram for each chosen value of engine speed.
2. Compute the power coefficient from

$$C_P = \frac{P_{br}}{\rho n_p^3 D^5}$$

Take from the propeller chart the values of J and C_T which correspond to this C_P and the selected blade angle $\beta_{0.75}$ and compute V and η_j by using

$$V = J n_p D \quad \text{and} \quad \eta_j = \frac{C_T}{C_P} J$$

3. Compute the available power and thrust by using

$$P_a = \eta_j P_{br} \quad \text{and} \quad T = \eta_j \frac{P_{br}}{V}$$

The procedure is executed in [Tab. 9.5](#) for the airplane of the preceding example, but now for the case of a constant propeller blade setting. The numerical results in [Tab. 9.4](#) and [Tab. 9.5](#) are plotted in [Fig. 9.15](#), showing that the curve for the fixed-pitch propeller is not very different from that for the constant speed propeller, except that there will be less excess power. In a turboprop, most of the gas generator power is extracted from the gas stream through the engine by the turbine to drive the propeller, while a small portion is used to develop jet thrust through expansion of the exhaust gases in the nozzle. Therefore, the power available produced by the turboprop is the sum of the power delivered by the propeller plus the power equivalent of the jet thrust,

$$P_a = \eta_j P_{br} + T_j V \tag{9.33}$$

where the shaft power P_{br} and the additional jet thrust T_j may be known from the engine brochure and η_j can be found according to the procedure for the constant speed propeller in [Tab. 9.4](#).

9.4. THE PERFORMANCE DIAGRAM

[Fig. 9.16](#) shows the two performance curves in terms of power for our illustrative small airplane with piston-engine and constant speed propeller. Power required and power available are taken from the previous [Tab. 9.1](#) and [Tab. 9.4](#). The maximum forward velocity at which level unaccelerated flight can be maintained, is determined by the condition that $P_c = 0$ in [Eq. 9.10](#). Thus

$$P_a = P_r \tag{9.34}$$

Table 9.5 Power available and thrust for piston-engine and fixed-pitch propeller. Flight altitude $H = 0$ m (I.S.A.), propeller diameter $D = 2.60$ m, inlet manifold pressure $p_z = 115\,140$ Pa, propeller blade angle $\beta_{0.75} = 19$ deg

$n_p = n$, rpm	P_{br} , kW	C_p	J	C_T	V , m/s	V , km/hr	η_j	P_a , kW	T , N
1800	233	0.0593	0.18	0.102	14.0	50.4	0.309	72.0	5143
1900	245	0.0530	0.54	0.074	40.2	144.7	0.749	183.5	4565
2000	258	0.0479	0.60	0.066	52.0	187.2	0.826	213.0	4096
2100	270	0.0433	0.66	0.056	60.1	216.2	0.853	230.5	3835
2200	283	0.0394	0.71	0.048	67.7	243.7	0.871	246.5	3641
2300	295	0.0360	0.74	0.043	73.8	265.7	0.875	258.0	3496

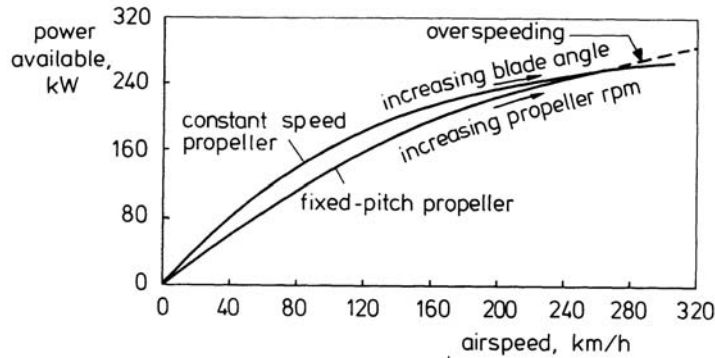


Figure 9.15 Power available curves for piston-engine propeller combination

In Fig. 9.16, this equality holds for the intersection of the P_a and P_r curves. At all speeds lower than the maximum level flight speed $V_{\max}$, power available exceeds power required for level flight. The excess power can be used for increasing the potential energy of the vehicle, i.e., climbing flight and/or for increasing kinetic energy, i.e., accelerated flight. Now, suppose the pilot wishes to slow down the airspeed in order to change to a steady climbing flight. For that, they must pull back the control stick to operate the elevators such that the angle of attack is increased. In the first instant, before the airspeed is altered, increased lift and drag are produced. The extra lift causes an upward directed acceleration and the excess drag reduces the flight velocity. Ultimately, the control action may lead to a new state of steady climbing flight where, from Eq. 9.10 and Eq. 9.11, the rate of climb is given by

$$RC = \frac{P_a - P_r}{W} \quad (9.35)$$

Using Eq. 9.35, the rate of climb follows directly from the excess power in Fig. 9.16. This procedure is carried out in Tab. 9.6 and the resulting RC is plotted versus V in Fig. 9.17a. The maximum rate of climb is then found to be $RC_{\max} = 6.2$ m/s. Naturally, the maximum rate of climb is of great importance to minimize the time for the airplane to attain its cruise altitude. From the curve in Fig. 9.17a, we also see that the best speed for climbing is $V_{RC\max} = 150$ km/hr. Since the rate of climb is maximum at the airspeed at which the excess power is maximum, the optimum speed for

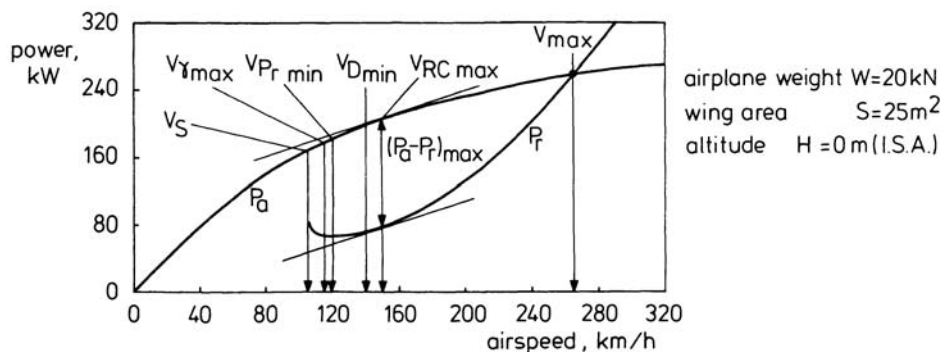


Figure 9.16 Performance diagram for small propeller-driven airplane

Table 9.6 Calculation of rate of climb

V , km/hr	P_a , kW	P_r , kW	P_c , kW	RC , m/s
106.2	170.0	82.6	87.4	4.37
120.0	183.0	68.0	115.0	5.75
140.0	197.0	74.0	125.0	6.15
160.0	210.0	88.0	122.0	6.10
180.0	221.0	107.0	114.0	5.70
200.0	231.0	132.0	99.0	4.95
220.0	240.0	165.0	75.0	3.75
240.0	248.0	204.0	44.0	2.20
260.0	256.0	247.0	9.0	0.45
280.0	262.0	293.0	-31.0	-1.55

maximum rate of climb can also be found in [Fig. 9.16](#) as the abscissa where the two power curves have parallel tangents.

Another curve that can be used to display the climb performance is the hodograph, which is the plot of the rate of climb against the horizontal component of the airspeed, $V_h = V \cos \gamma$ ([Fig. 9.17b](#)). In the latter diagram, a radius vector from the origin and intersecting the curve has the slope:

$$\frac{RC}{V_h} = \frac{V \sin \gamma}{V \cos \gamma} = \tan \gamma$$

Hence, the angle between the abscissa and a straight line from the origin to the RC curve represents the flight-path angle or angle of climb,

$$\gamma = \tan^{-1} \left[\frac{RC}{V_h} \right] = \sin^{-1} \left[\frac{RC}{V} \right]$$

It is also apparent that the length of the radius vector from the origin to any point on the curve serves as a measure of the airspeed V . Furthermore, it is seen that the maximum climb angle in

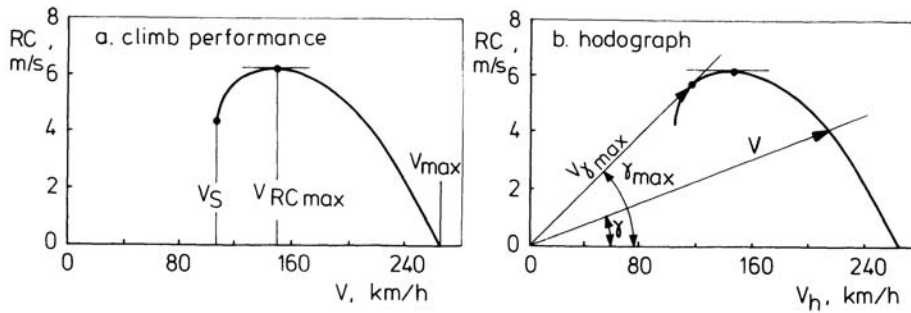


Figure 9.17 Rate of climb versus airspeed and climb performance hodograph

steady symmetric flight is determined by the tangent to the hodograph. From Fig. 9.17b, $\gamma_{\max} = 9.93^\circ$.

The corresponding speed for steepest climbing is found as $V_{\gamma_{\max}} = 120 \text{ km/hr}$. The flight with maximum climb angle is of importance to minimize the horizontal distance for the airplane to arrive at a particular altitude, which is relevant for obstacle avoidance tasks, for example. We further notice that the airspeed for best climb angle is less than the speed for best rate of climb. As matters of interest, the airspeeds for minimum drag, $V_{D_{\min}}$, and minimum power required, $V_{P_{r \min}}$, have also been marked in Fig. 9.16. It is seen that $V_{RC \max}$ is greater than the minimum drag speed and that $V_{\gamma_{\max}}$ is nearly the minimum power required speed.

At the engine control setting considered in Fig. 9.16, a large excess power is available at the stalling speed, through which the airplane will climb if steady flight is maintained. In order to perform a level flight at the stall, of course, the engine must be throttled back until power available equals power required. Another point to note with respect to the flight at low airspeeds is that in case the pilot desires to increase the rate of climb, the control stick has to be pushed forward in order to attain an increased airspeed. This control action will lead to the wanted effect of a higher rate of climb owing to the greater vertical distance between the performance curves in Fig. 9.16. The region wherein this phenomenon occurs is referred to as the region of reversed command. This situation is connected with the problem of speed instability, which complication shall be discussed in Section 11.3. In Fig. 9.18, the performance curves of Fig. 9.16 are repeated. In addition, the power available curve for the fixed-pitch propeller of the previous Tab. 9.5 is drawn. The blade setting of the latter propeller is such that both propulsion systems provide the same maximum level flight speed.

As we have learned in the preceding section, due to the decrease in engine speed with decreasing airspeed, shaft brake power and so power available is lower for the fixed-pitch propeller. Consequently, the rate of climb and the climb angle at each flight velocity will be less for the airplane with fixed-pitch propeller. From our discussion in Section 9.1, we know that it is convenient in considering the performance of jet propelled airplanes to work with thrust and drag curves. This type of performance diagram is presented in Fig. 9.19 for our illustrative high-subsonic turbofan transport of Tab. 9.2. The thrust curve is sketched according to the typical variation of high-bypass ratio turbofan thrust. The intersection of the thrust and drag curves in Fig. 9.19 defines the maximum airspeed for level flight,

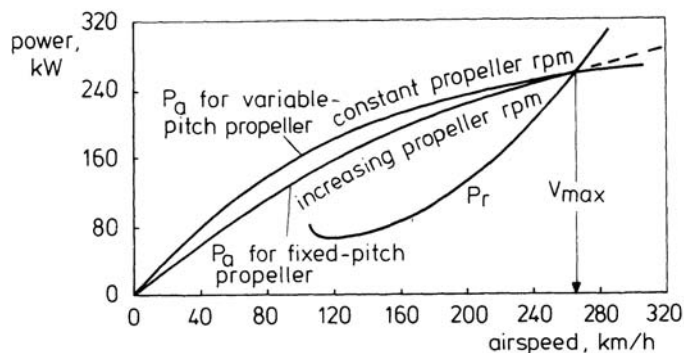


Figure 9.18 Performance diagrams for small propeller-driven airplane

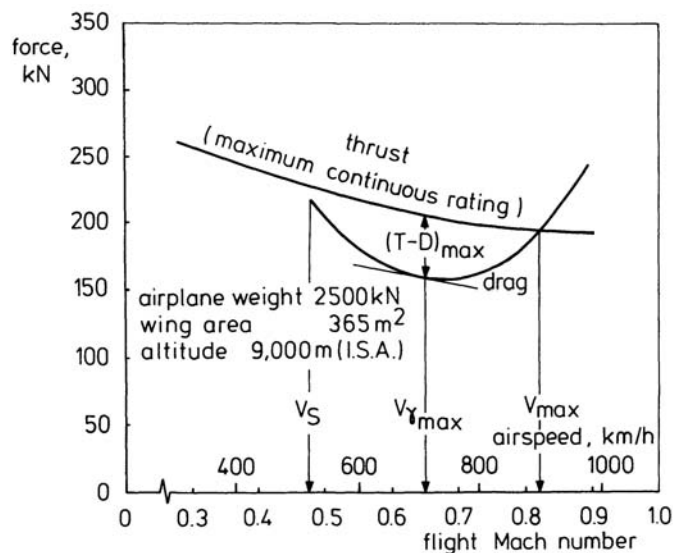


Figure 9.19 Performance diagram for turbofan transport airplane

$$T = D \quad (9.36)$$

At velocities below $V_{\max}$, the excess thrust determines directly the angle of climb since from Eq. 9.3 we find that

$$\sin \gamma = \frac{T - D}{W} \quad (9.37)$$

This equation indicates that the maximum climb angle is obtained for maximum excess thrust. Inspection of Fig. 9.19 shows that for the jet airplane steepest climbing occurs in the proximity of the minimum drag speed. The high thrust to weight ratios for jet airplanes allow relative large climb

angles. Therefore, in the light of Eq. 9.12 to Eq. 9.14, it is worthwhile to examine the validity of the approximation that γ is sufficiently small to assume that $\cos \gamma$ is equal to one. The effect of this approximation can best be studied by considering steady symmetric flight conditions at a given airspeed. Then, the performance diagram directly yields the climb angle and the rate of climb, using drag and power required for level flight. At a given airspeed, the lift coefficient in level flight is greater than in climbing flight ($C_L = W/(qS)$ instead of $C_L = W \cos \gamma/(qS)$). Consequently, also the drag coefficient and so the drag and power required in level flight are greater than in climbing flight.

It is thus evident that when using the performance diagram, we have the safe situation that climb angle and rate of climb are underestimated. Apparently, the increased drag and power required values result from the use of wrong lift coefficients (wrong induced drag coefficients). Hence we may provide a relationship between the actual climb angle and the climb angle using $\cos \gamma = 1$ by writing:

$$\sin \gamma = \frac{T - D}{W} = \frac{T - D_1}{W} + \frac{\Delta D_i}{W} \quad (9.38)$$

where the subscript “1” denotes the case $\cos \gamma = 1$ and ΔD_i is the surplus of induced drag. However, $\Delta D_i = \Delta C_{Di} \frac{1}{2} \rho V^2 S$; hence, from Eq. 9.38

$$\sin \gamma = \sin \gamma_1 + \Delta C_{Di} \frac{\frac{1}{2} \rho V^2 S}{W}$$

Now since $C_{Di} = k C_L^2$

$$\sin \gamma = \sin \gamma_1 + k (C_{L1}^2 - C_L^2) \frac{\frac{1}{2} \rho V^2 S}{W}$$

Substituting $C_{L1} = W / (\frac{1}{2} \rho V^2 S)$ and $C_L = W \cos \gamma / (\frac{1}{2} \rho V^2 S)$, results in the expression:

$$\sin \gamma = \sin \gamma_1 + k \sin^2 \gamma \frac{W}{\frac{1}{2} \rho V^2 S} \quad (9.39)$$

The problem may be adequately described by setting $\gamma = \gamma_1$ in the second term on the right-hand side of Eq. 9.39, so that

$$\frac{\sin \gamma}{\sin \gamma_1} = \frac{RC}{RC_1} = 1 + k \sin \gamma_1 \frac{W}{\frac{1}{2} \rho V^2 S} \quad (9.40)$$

To illustrate the result of the preceding analysis we now look as an example at a typical turbofan transport with a wing loading of 6850 N/m^2 . For this airplane the induced drag factor is $k = 0.053$ and the maximum sea-level climb angle $\gamma_1 = 15^\circ$. If the corresponding speed for steepest climbing is 425 km/hr , we have from Eq. 9.40

$$\frac{\sin \gamma}{\sin \gamma_1} = \frac{RC}{RC_1} = 1 + 0.053 \times 0.2588 \frac{6850}{0.5 \times 1.225 \times (425/3.6)^2} = 1.011$$

From this numerical result, we see that the error is only 1.1%. Nevertheless, if desired, the result can easily be improved by iteration.

9.5. PERFORMANCE PREDICTION USING ANALYTICAL EXPRESSIONS

The performance diagram enables us to determine graphically the point performance for airplanes for which the lift-drag polar and the variation of thrust or power available with forward speed are known in any arbitrary form. In [Section 9.2](#), we described an analytical procedure for deriving the drag and power required curves from the approximation that the drag coefficient increases parabolically with the lift coefficient (see [Eq. 9.21](#) and [Eq. 9.26](#)).

In order to obtain a complete analytical representation of the performance curves we have to introduce also simplifying assumptions with regard to the shape of the thrust and power available curves. Obviously, such analytical methods of performance computation will only provide an assessment of the actual performance and are especially of importance to obtain an insight into the effects on performance of the various parameters. As discussed in [Chapter 6](#), the thrust of a turbofan engine is produced by the cold air flowing through the bypass duct and the hot air passing through the exhaust nozzle (see [Fig. 6.6](#)). Typically, the turbofan thrust decreases with airspeed, which behavior may be conveniently described by:

$$\frac{T}{T_{\text{static}}} = 1 - k(V)^{\frac{1}{2}} \quad (9.41)$$

where k is a constant for a given bypass ratio, control setting and altitude. Although it is a laborious task, from [Eq. 9.21](#) and [Eq. 9.26](#), formulae for the performance of the airplane can be derived. Returning to [Fig. 9.11](#), we see that the variation of turbofan thrust with airspeed lies between that of the turboprop and the turbojet. Moreover, [Fig. 9.11](#) shows that the turbofan becomes more and more a turboprop as the bypass ratio is enlarged, and that the turbofan resembles a pure turbojet if its bypass ratio is low. Therefore, it is convenient in analyzing performance using analytical expressions for thrust and drag, to consider successively the extreme cases of propulsion by a propeller and a pure jet.

As we have learned in [Section 9.3](#), for a constant speed propeller the power available is essentially constant throughout the speed range of the airplane. Hence, power available for propeller-driven airplanes may be assumed to be independent of airspeed, provided that engine control setting and altitude remain unchanged. The variation of power available with altitude may be described by a relationship similar to [Eq. 6.102](#), namely,

$$\frac{P_a}{P_{a0}} = \left(\frac{\rho}{\rho_0} \right)^n \quad (9.42)$$

in which the subscript “0” designates sea-level condition and the power n is less than 1.0 (in the troposphere).

Returning again to [Fig. 9.11](#), we note that the thrust of a subsonic turbojet engine is relatively constant with flight velocity. Accordingly, it appears worthwhile to assume that the thrust of a jet-powered airplane has a constant value throughout the subsonic speed range. As stated previously (see [Eq. 6.90](#)), we may relate the thrust of the turbojet at any given altitude to its sea-level value by

$$\frac{T}{T_0} = \left(\frac{\rho}{\rho_0} \right)^n \quad (9.43)$$

[Fig. 9.20a](#) shows schematically the performance diagram with the assumption P_a is constant. Special points which correspond to definite points on the lift drag polar are indicated on the power

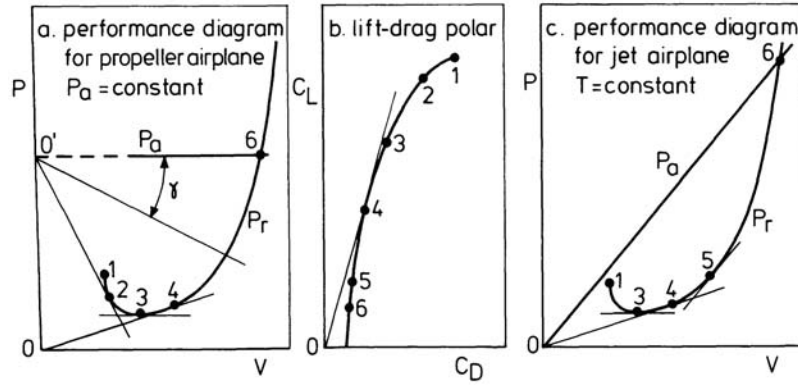


Figure 9.20 Idealized performance diagrams

required curve. The lift drag polar is sketched in Fig. 9.20b. The meanings of these points are reviewed in Tab. 9.7, where points 2, 3 and 6 require some further explanation. The angle inclined between any straight line through point 0' in Fig. 9.20a and intersecting the power required curve and the horizontal P_a -line is approximately a measure of the climb angle since, from Eq. 9.6 and Eq. 9.35, γ is given by

$$\gamma = \sin^{-1} \left[\frac{RC}{V} \right] = \sin^{-1} \left[\frac{P_a - P_r}{WV} \right] \quad (9.44)$$

Hence, at point 2 we find the speed for steepest climbing and the corresponding maximum climb angle as this point is located by the tangent from point 0' to the P_r curve. The exact location of point 2, clearly, depends on the magnitude of power available. Recalling Eq. 9.35 for the rate of climb, we find that when power available is unchanging, the maximum rate of climb is given by

$$RC_{\max} = \frac{P_a - P_{r \min}}{W} \quad (9.45)$$

Point 3 in Fig. 9.20a indicates the speed at which the power required curve has a minimum value. Substitution of Eq. 9.17 into Eq. 9.45 results in

$$RC_{\max} = \frac{P_a}{W} - \sqrt{\frac{W}{S} \frac{2}{\rho} \frac{1}{(C_L^3/C_D^2)_{\max}}} \quad (9.46)$$

Thus, we see that point 3 on the lift-drag polar represents the angle of attack at which the climb factor C_L^3/C_D^2 is maximum. Regarding point 6, it should be noticed that an analytical prediction of the maximum level flight speed starting from a given value of P_a and using Eq. 9.34, Eq. 9.17 and Eq. 9.31 is very complicated as it requires the solution of a fourth power equation in C_L . A working approach to the problem is to specify $V_{\max}$ and then to determine the power available needed to satisfy the equilibrium condition $P_a = P_r$.

Fig. 9.20c shows the performance diagram in terms of power for a jet airplane with constant thrust. In this case power available varies linearly with airspeed. The meanings of the special points in

Table 9.7 Point performance in steady symmetric flight, with reference to Fig. 9.20

Point	Performance		Lift-drag polar	Equation
	$P_a = \text{const.}$	$T = \text{const.}$		
1	stall speed	stall speed	$C_{L\max}$	$V = \sqrt{\frac{W}{S} \frac{2}{\rho} \frac{1}{C_L}}$
2	max. climb angle	—	—	$\sin \gamma = \frac{P_a - P_r}{WV}$
3	min. power required	min. power required	$(C_L^3/C_D^2)_{\max}$	$P_r = W \sqrt{\frac{W}{S} \frac{2}{\rho} \frac{C_D^2}{C_L^3}}$
3	max. rate of climb	—	$(C_L^3/C_D^2)_{\max}$	$RC = \frac{P_a - P_r}{W}$
4	min. drag	min. drag	$(C_L/C_D)_{\max}$	$D = \frac{C_D}{C_L} W$
—	—	max. climb angle	—	$\sin \gamma = \frac{T - D}{W}$
5	—	max. rate of climb	—	$RC = \frac{P_a - P_r}{W}$
6	max. level flight speed	—	—	$P_a = P_r, L = W$

Fig. 9.20b and Fig. 9.20c are also listed in Tab. 9.7, where now the points 4, 5 and 6 may need some additional explanation.

For the climb angle (point 4) we can write, from Eq. 9.37 and Eq. 9.16,

$$\sin \gamma = \frac{T - D}{W} = \frac{T}{W} - \frac{C_D}{C_L} \quad (9.47)$$

At constant thrust, the climb angle appears to be maximum at the minimum drag speed and thus at the maximum lift-to-drag ratio,

$$\sin \gamma_{\max} = \frac{T}{W} - \frac{1}{(C_L/C_D)_{\max}} \quad (9.48)$$

In reference to Fig. 9.20b, the point at which C_L/C_D is maximum is found by drawing a line from the origin tangent to the lift-drag polar. Maximum rate of climb occurs at point 5, where the excess power is maximum. Clearly, the location of the corresponding point on the lift-drag polar depends on the magnitude of the thrust, which defines the slope of the P_a -line in Fig. 9.20c. Combining Eq. 9.15 and Eq. 9.47 results in the following expression for the rate of climb,

$$RC = V \sin \gamma = \sqrt{\frac{W}{S} \frac{2}{\rho} \frac{1}{C_L}} \left[\frac{T}{W} - \frac{C_D}{C_L} \right] \quad (9.49)$$

The maximum rate of climb can be obtained by setting the first derivative of Eq. 9.49 with respect to C_L equal to zero, i.e

$$\frac{dRC}{dC_L} = \frac{d}{dC_L} \left[\sqrt{\frac{W}{S} \frac{2}{\rho} \frac{1}{C_L}} \left[\frac{T}{W} - \frac{C_D}{C_L} \right] \right]$$

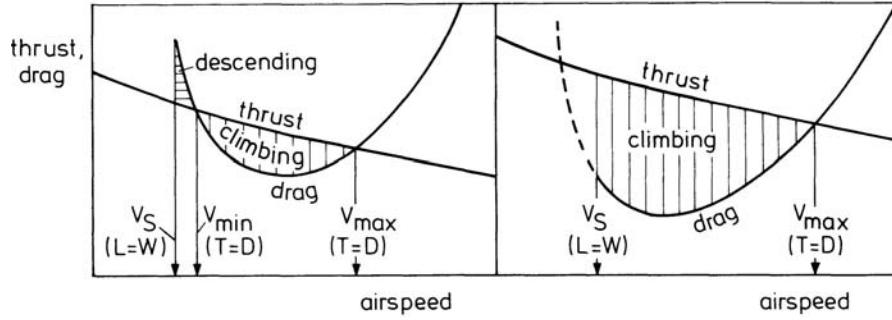


Figure 9.21 Minimum airspeed

Carrying out this differentiation yields the condition for maximum rate of climb that

$$\frac{T}{W} = 3 \frac{C_D}{C_L} - 2 \frac{dC_D}{dC_L} \quad (9.50)$$

For a parabolic variation of C_D with C_L we can substitute Eq. 9.18 into Eq. 9.50 to give

$$\frac{T}{W} = 3 \frac{C_{D0}}{C_L} - \frac{C_L}{\pi A e} \quad (9.51)$$

This quadratic equation in C_L can be solved to obtain the lift coefficient for maximum rate of climb,

$$C_{Lc} = \frac{\pi A e}{2} \frac{T}{W} \left[-1 + \sqrt{1 + 12 \frac{C_{D0}}{\pi A e} \left(\frac{W}{T} \right)^2} \right] \quad (9.52)$$

The maximum level steady flight speed at point 6 is described by the conditions:

$$W = C_L \frac{1}{2} \rho V^2 S \quad (9.53)$$

$$T = C_D \frac{1}{2} \rho V^2 S \quad (9.54)$$

Substituting Eq. 9.21 into Eq. 9.54 yields a quadratic equation in $V_{\max}$,

$$T = C_{D0} \frac{1}{2} \rho V_{\max}^2 S + \frac{W^2}{\pi A e \frac{1}{2} \rho V_{\max}^2 S} \quad (9.55)$$

which can be solved to obtain an expression for the maximum level flight speed,

$$V_{\max} = \sqrt{\frac{T}{\rho C_{D0} S} \left[1 \pm \sqrt{1 - \frac{4 C_{D0}}{\pi A e} \left(\frac{W}{T} \right)^2} \right]} \quad (9.56)$$

In principle, there are two solutions for the level steady flight speed. The plus sign in Eq. 9.56 represents the high-speed intersection of the thrust and drag curves, and the minus sign is coupled

with the possibility of a low-speed intersection (Fig. 9.21). In the latter case, the stalling speed cannot be reached in level steady flight. On the other hand, there are speeds, depending on airplane weight, configuration, altitude and engine rating, at which the equation $T = D$ cannot be satisfied at a lift coefficient less than or equal to $C_{L\max}$. Then the minimum airspeed equals the stalling speed.

9.6. PROBLEMS

1. A twin-engine turboprop airplane has a maximum take-off mass of 78000 kg. Each of its engines can produce a maximum static thrust at sea-level altitude of 111 kN. The lift drag polar of this aircraft can be considered parabolic, with $C_{D0} = 0.02$, $e = 0.8$ and $A = 9.2$. The wing area is 122.6 m^2 and its $C_{L\max}$ is 1.6. Determine the following performance metrics at sea-level altitude:
 - (a) Minimum airspeed for level flight
 - (b) Airspeed for minimum drag, and corresponding value of drag
 - (c) Airspeed for minimum power required, and corresponding value of power required
 - (d) Airspeed for maximum rate of climb, and corresponding value of rate of climb
 - (e) Airspeed for maximum climb angle, and corresponding value of climb angle
 - (f) Maximum airspeed for level flight
2. For the aircraft of Problem 1, calculate the performance metrics if the thrust available depends on airspeed according to the following relation (where M is the Mach number).

$$T(M) = T_{\text{static}}(1 - 1.1M + 0.8M^2)$$

3. Draw the performance diagrams of the aircraft in the scenarios described in Problems 1 and 2. Locate the points corresponding to the performance metrics listed in Problems 1 and compare their positions on the chart. What is the impact of including the variation of thrust with airspeed on the performance analysis of the same airplane?
4. A piston-engine, single-propeller airplane has a maximum take-off mass of 3995 kg. The engine can deliver a maximum brake power of 647 kW at sea-level altitude, and the propeller has a constant efficiency of 0.92. The lift-drag polar of this aircraft can be considered parabolic, with $C_{D0} = 0.025$, $e = 0.8$ and $A = 9.7$. The wing area is 62 m^2 and its $C_{L\max}$ is 1.5. Determine the following performance metrics at sea-level altitude:
 - (a) Minimum airspeed for level flight
 - (b) Airspeed for minimum drag, and corresponding value of drag
 - (c) Airspeed for minimum power required, and corresponding value of power required
 - (d) Airspeed for maximum rate of climb, and corresponding value of rate of climb
 - (e) Airspeed for maximum climb angle, and corresponding value of climb angle
 - (f) Maximum airspeed for level flight

5. Draw the performance diagrams for the aircraft of Problems 4, and locate the points corresponding to the listed performance metrics.
6. Which of these aircraft design factors influence the minimum speed for level flight? And which ones influence the maximum rate of climb? Discuss the effect of each factor for scenarios at low and high altitude.
 - (a) High-lift devices
 - (b) Airplane weight
 - (c) Maximum static thrust or power
 - (d) Power lapse rate with altitude
 - (e) Lift distribution along the wing span

10

EFFECT OF ALTITUDE

10.1. EFFECT OF ALTITUDE ON DRAG AND POWER REQUIRED

The effect of altitude on point performance in steady symmetric flight arises from the decrease in air density with increasing altitude. The associated modification of the performance diagram may be examined by repeating the construction of the two performance curves for each altitude in the way described in [Section 9.2](#) and [Section 9.3](#). However, the influence of altitude on drag and power required curves can best be studied by considering flight conditions at different altitudes but at the same angle of attack. And flight at the same angle of attack implies flight at the same lift and drag coefficients C_L and C_D . Using the subscript “1” to denote the conditions at altitude H_1 , the relevant equations are:

$$V_1 = \sqrt{\frac{W}{S} \frac{2}{\rho_1} \frac{1}{C_L}}, \quad D_1 = \frac{C_D}{C_L} W, \quad P_{r1} = W \sqrt{\frac{W}{S} \frac{2}{\rho_1} \frac{C_D^2}{C_L^3}}$$

At an altitude $H_2 > H_1$, designated by the subscript “2”, we have

$$V_2 = \sqrt{\frac{W}{S} \frac{2}{\rho_2} \frac{1}{C_L}}, \quad D_2 = \frac{C_D}{C_L} W, \quad P_{r2} = W \sqrt{\frac{W}{S} \frac{2}{\rho_2} \frac{C_D^2}{C_L^3}}$$

Let us assume that we can neglect the effect on the lift-drag polar of the alteration of the flight Mach number that is coupled with the altitude variation at constant dynamic pressure. Then, the lift and drag coefficients also remain unchanged, and we obtain,

$$\frac{V_2}{V_1} = \sqrt{\frac{\rho_1}{\rho_2}} \tag{10.1}$$

$$\frac{D_2}{D_1} = 1 \tag{10.2}$$

$$\frac{P_{r2}}{P_{r1}} = \sqrt{\frac{\rho_1}{\rho_2}} \quad (10.3)$$

The ratios in Eq. 10.1 to Eq. 10.3 show that at a given angle of attack the values of airspeed and power required increase with increasing altitude, whereas the drag is independent of height. To illustrate the results of this analysis, consider as an example an airplane powered by two turboprop engines, having the following characteristics:

airplane weight	W	$= 150\,000\text{ N}$
wing area	S	$= 70\text{ m}^2$
wing aspect ratio	A	$= 12$
lift-drag polar	C_D	$= C_{D0} + C_L^2/(\pi Ae)$
zero-lift drag coefficient	C_{D0}	$= 0.013$
Oswald's efficiency factor	e	$= 0.76$
maximum lift coefficient	$C_{L\max}$	$= 1.5$

Fig. 10.1 presents drag and power required curves for four altitudes. According to Eq. 10.1 and Eq. 10.2, the drag curves experience a horizontal translation to the right when altitude increases. The power required curves show a shift to the right as well as an upward displacement. In this respect, from Eq. 10.1 and Eq. 10.3, we can write,

$$\frac{P_{r2}}{P_{r1}} = \frac{V_2}{V_1} \quad (10.4)$$

Eq. 10.4 shows that corresponding points for a given angle of attack lie at a straight line through the origin. Consequently, all power required curves have only one joint tangent, which defines the locations of the points for minimum drag, since $D_{\min} = (P_r/V)_{\min}$.

10.2. RATE OF CLIMB AND CLIMB ANGLE

Fig. 10.2a shows a graph of representative power available curves for our illustrative turboprop airplane of the preceding section. Sketched are typical variations of P_a with V for a given engine control setting, where it is assumed that at each velocity the available power varies with height according to Eq. 9.42. Also plotted is the set of power required curves, as given in the previous Fig. 10.1. Fig. 10.2a shows that the variations of power required and power available with altitude result in a decrease in the vertical distances between the performance curves. We also see that the stalling speed (T.A.S.) increases, whilst the maximum level steady flight speed first remains more or less unchanged, and later falls off with increasing altitude.

The altitude effects on the RC vs V curves, resulting from the performance curves, are shown in Fig. 10.2b. These plots show that as altitude increases the maximum rate of climb decreases.

This is illustrated by Fig. 10.3, where $RC_{\max}$ is plotted against altitude. It appears that the latter curve is practically linear. A point to note is that in the case of a supercharged piston engine the linear decrease of maximum rate of climb with altitude is only valid above the critical altitude of the engine since from thereon the power output decreases linearly with air density. This behavior is illustrated by the dashed lines in Fig. 10.3. The altitude at which the maximum rate of climb becomes equal to zero is called the *absolute ceiling* or *theoretical ceiling* of the airplane. At this

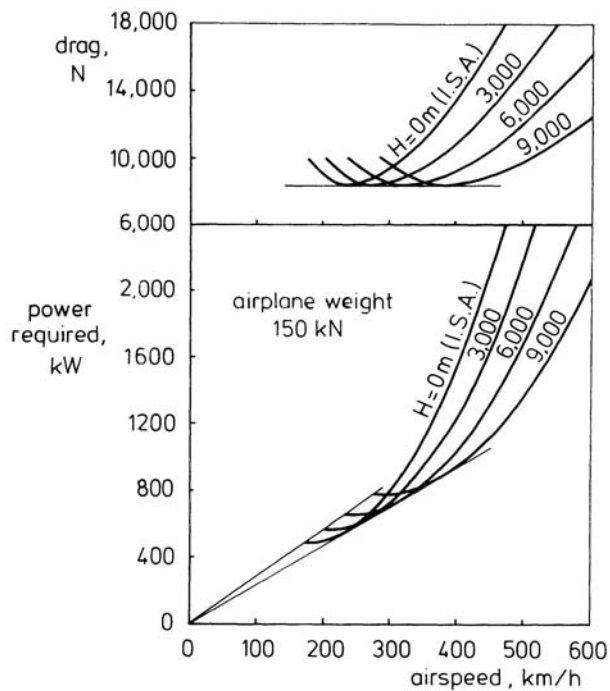


Figure 10.1 Altitude effects on drag and power required

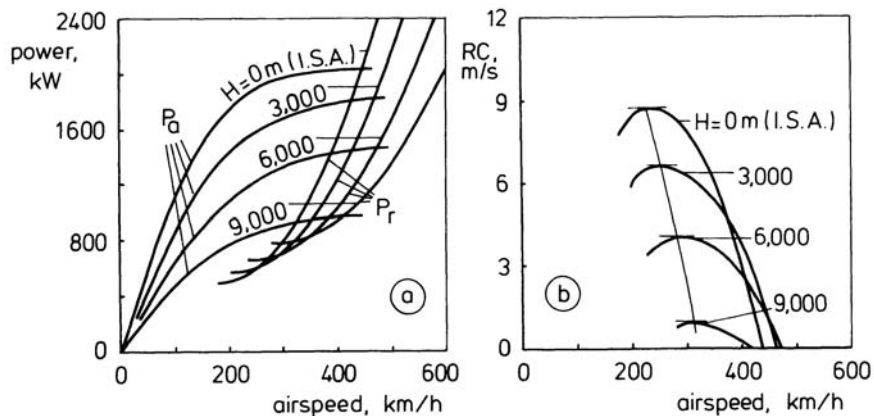


Figure 10.2 Performance diagrams and rate of climb curves

height, the P_a curve is tangent to the P_r curve, i.e., the high-speed and the low-speed intersections of the performance curves coincide and no positive excess power exists (Fig. 10.3). Note that the theoretical ceiling depends on airplane configuration, airplane weight and engine control setting. The time to climb from sea level to any given altitude H is given by the integral

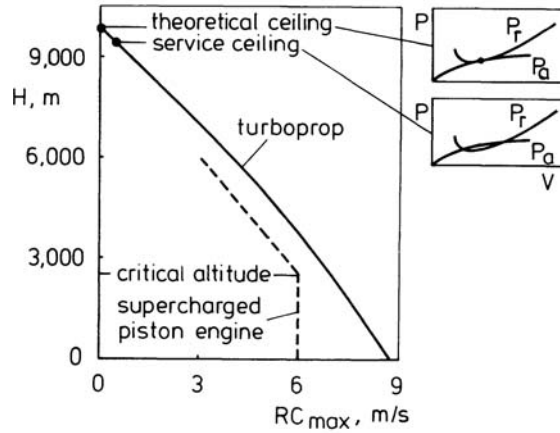


Figure 10.3 Maximum rate of climb versus altitude

$$t = \int_0^H \frac{dH}{dH/dt} = \int_0^H \frac{dH}{RC} \quad (10.5)$$

Hence, the minimum time to arrive at the theoretical ceiling, H_{th} is

$$t_{min} = \int_0^{H_{th}} \frac{dH}{RC_{max}} \quad (10.6)$$

Since the maximum rate of climb diminishes to zero at the theoretical ceiling, the time needed for reaching this altitude in a quasi-steady climb becomes infinite (although it could of course be reached in a dynamic maneuver). This makes the idea of the theoretical ceiling inadequate for use as a criterion for the climbing capability of an airplane. Therefore, as a practical upper limit of flight altitude, the *service ceiling* is used, which is defined as that altitude at which the maximum rate of climb is reduced to 0.5 m/s (100 ft/min). In our example in Fig. 10.3 the difference between the two ceilings is seen to be 500 m.

Let us assume for the sake of discussion that power available would be independent of airspeed. Then, the maximum rate of climb is given by Eq. 9.46, which is repeated here for convenience,

$$RC_{max} = \frac{P_a}{W} - \sqrt{\frac{W}{S} \frac{2}{\rho} \frac{1}{(C_L^3/C_D^2)_{max}}} \quad (10.7)$$

This equation clearly shows that, at a given engine control setting, the maximum rate of climb diminishes with increasing height due to the fact that both P_a and ρ lessen. Eq. 10.7 also indicates that if P_a is constant with airspeed, the angle of attack for maximum rate of climb does not vary with altitude. Hence, the equilibrium condition $W = C_L \frac{1}{2} \rho V^2 S$ requires that the dynamic pressure must remain fixed (Fig. 10.4a). Accordingly, while the true airspeed for maximum rate of climb

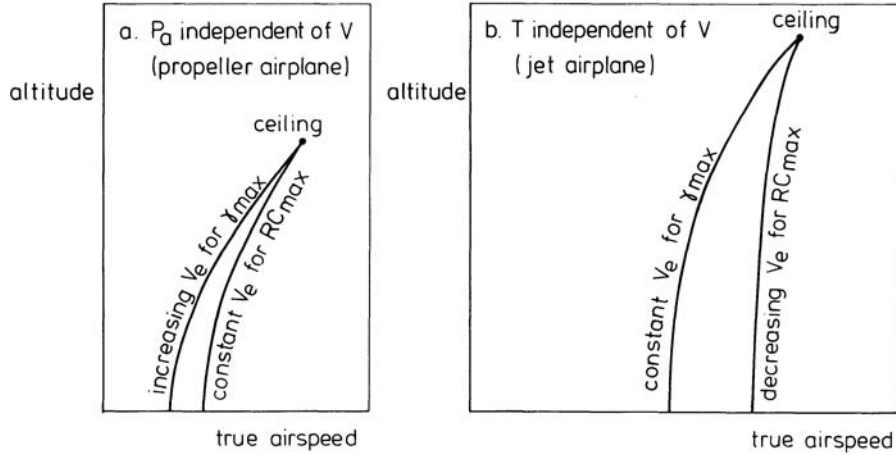


Figure 10.4 Typical variations of climb speed with altitude

must increase as the altitude increases,

$$V_{RC_{\max}} = \sqrt{\frac{W}{S} \frac{2}{\rho} \frac{1}{(C_L)(C_L^3/C_D^2)_{\max}}} \quad (10.8)$$

the equivalent airspeed for maximum rate of climb is interestingly invariable with height (which makes it easy to monitor on an airspeed indicator).

$$V_{e_{RC_{\max}}} = \sqrt{\frac{W}{S} \frac{2}{\rho_0} \frac{1}{(C_L)(C_L^3/C_D^2)_{\max}}} \quad (10.9)$$

It must be emphasized that this reasoning is only valid as far as P_a is independent of airspeed. When the actual variations of power available are taken into account, the fastest climb will occur at a somewhat higher equivalent airspeed than predicted by Eq. 10.9.

As was seen in Chapter 9, in the case of a propeller-driven airplane we cannot derive analytic expressions for the steepest climb conditions. However, from Fig. 9.17b one thing is sure; at sea level the airspeed for steepest climb is lower than that for maximum rate of climb and lies very close to the stalling speed. Since the airspeeds for steepest climb and fastest climb must coincide at the theoretical ceiling, we conclude that the equivalent airspeed for steepest climb will increase with altitude (Fig. 10.4a).

We will proceed to examine the effect of altitude on the two special climb speeds for jet airplanes, assuming that the engine thrust is constant with airspeed. Then, the maximum climb angle is given by Eq. 9.48, which is rewritten below,

$$\sin \gamma_{\max} = \frac{T}{W} - \frac{1}{(C_L/C_D)_{\max}} \quad (10.10)$$

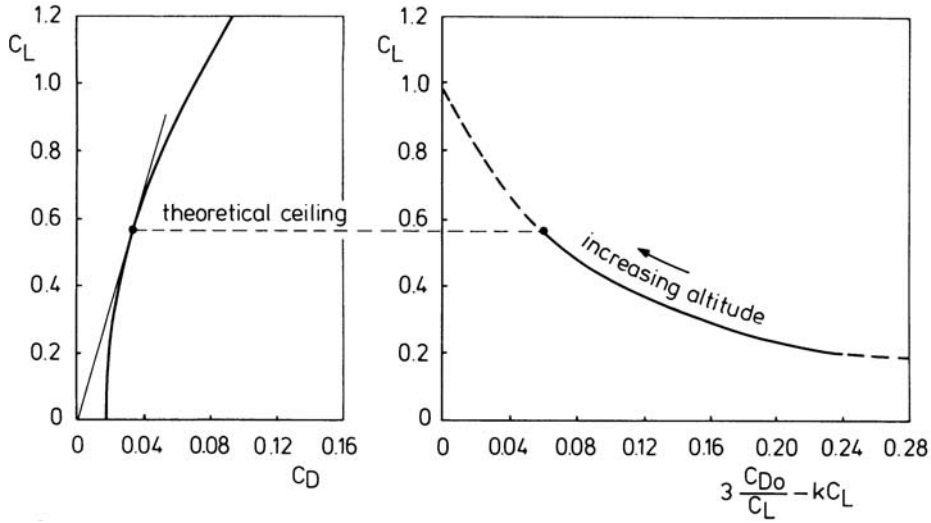


Figure 10.5 Lift coefficient for fastest climb

This equation shows that at constant engine control setting, the climb angle will decrease as the altitude increases. At the theoretical ceiling of the airplane, the steepest climb angle becomes zero,

$$\sin \gamma_{\max} = \frac{T_{th}}{W} - \frac{1}{(C_L/C_D)_{\max}} = 0 \quad (10.11)$$

Obviously, the angle of attack for steepest climb is independent of altitude so that now we have that the true airspeed for best angle of climb must increase with increasing altitude, but the corresponding equivalent airspeed for best angle of climb remains constant with altitude.

$$V_{e\gamma_{\max}} = \sqrt{\frac{W}{S} \frac{2}{\rho_0} \frac{1}{(C_L)(C_L/C_D)_{\max}}} \quad (10.12)$$

Also with respect to the airspeed for fastest climb, a different behavior occurs compared with the case of propeller propulsion. According to Eq. 9.50, the condition for maximum rate of climb reads,

$$\frac{T}{W} = 3 \frac{C_D}{C_L} - 2 \frac{dC_D}{dC_L} \quad (10.13)$$

For an airplane with parabolic lift-drag polar, $C_D = C_{D0} + kC_L^2$, Eq. 10.13 can be written as (see also Eq. 9.51)

$$\frac{T}{W} = 3 \frac{C_{D0}}{C_L} - kC_L \quad (10.14)$$

The condition in Eq. 10.14 is plotted in Fig. 10.5 for an airplane that has a drag equation with $C_{D0} = 0.017$ and $k = 0.053$.

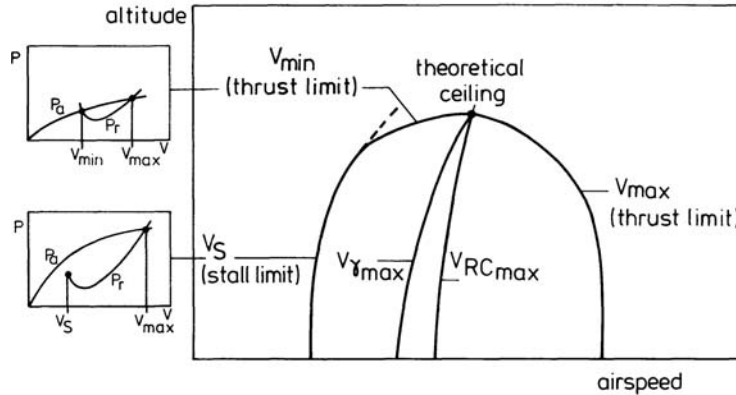


Figure 10.6 Typical flight speed boundaries for subsonic airplane

An important thing to notice is that the lift coefficient for maximum rate of climb increases with increasing altitude, owing to the fact that the thrust falls off when height is gained. This observation implies that the equivalent airspeed for best rate of climb also falls off with height although the corresponding true airspeed may increase somewhat with height (Fig. 10.4b). At the theoretical ceiling, we have

$$\frac{T_{th}}{W} = \frac{C_D}{C_L} \quad (10.15)$$

Substitution of Eq. 10.15 into Eq. 10.13 confirms the result of the previous Eq. 10.11 that at the theoretical ceiling the airplane flies at that angle of attack where the ratio C_L/C_D is the maximum. Although the foregoing results are based on the assumption of a thrust which is independent of airspeed, they certainly indicate the typical features of the climb speeds for γ_{max} and RC_{max} .

10.3. STALL, PROPULSION AND BUFFET BOUNDARIES

For the case of constant engine control setting and given airplane weight and configuration, the influence of height on the possible flight speeds is sketched in Fig. 10.6. For the sake of completeness, also are indicated the typical variations of the climb speeds.

The altitude effects on the high-speed and low-speed boundaries due to engine output and stall characteristics are, basically, identical for the various types of subsonic airplanes with turbo-engines and for airplanes with aspirated (non-supercharged) piston engines.

With regard to minimum airspeed, two different altitude regions must be distinguished. At lower heights, the magnitude of power available is such that a steady flight with maximum lift coefficient can be executed without losing height (see also Fig. 9.21). Therefore, in this region, the minimum airspeed is equal to the stalling speed, which follows from

$$V_S = \sqrt{\frac{W}{S} \frac{2}{\rho} \frac{1}{C_{L_{max}}}} \quad (10.16)$$

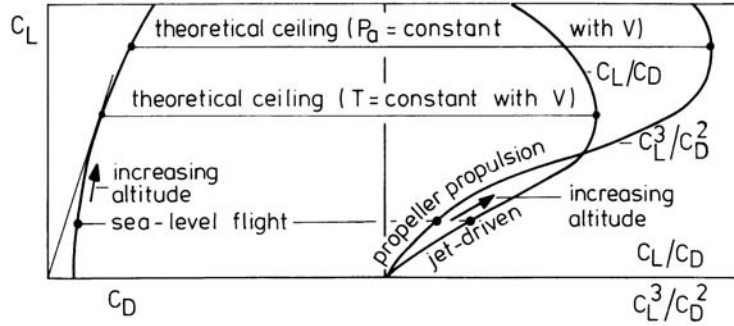


Figure 10.7 Lift coefficient for maximum airspeed

and increases with height in accordance with Eq. 10.1. Because $C_{L\max}$ is independent of altitude, the minimum equivalent airspeed in this region is also constant with height, and is obtained from the following equation.

$$V_{es} = \sqrt{\frac{W}{S} \frac{2}{\rho_0} \frac{1}{C_{L\max}}}$$

At heights near the theoretical ceiling, power available has been reduced to the extent that power required for steady level flight at maximum lift coefficient exceeds P_a . In this region, the minimum airspeed is determined by the low-speed intersection of the performance curves, whereby the required angle of attack is smaller than the critical angle of attack. This condition is also depicted in Fig. 10.6.

The high-speed boundary is formed by the maximum level steady flight speeds. In accordance with the performance diagrams in the previous Fig. 10.2, the maximum airspeed in Fig. 10.6 initially remains approximately constant and then becomes smaller with increasing altitude down to the speed $V_{\gamma\max} = V_{RC\max}$ at the theoretical ceiling.

Let us first examine in some detail the variation of $V_{\max}$ with altitude for propeller-driven airplanes. In this case, we may use our approximation that P_a is constant with airspeed. Using Eq. 9.17 and the condition $P_a = P_r$, we get the relationship

$$P_a = W \sqrt{\frac{W}{S} \frac{2}{\rho} \frac{C_D^2}{C_L^3}} \quad (10.17)$$

Solving Eq. 10.17 for the climb factor yields

$$\frac{C_L^3}{C_D^2} = \frac{W^3}{S} \frac{2}{\rho} \frac{1}{P_a^2} \quad (10.18)$$

Eq. 10.18 indicates that because ρ and P_a decrease with increasing altitude, the climb factor will increase up to its maximum value $(C_L^3/C_D^2)_{\max}$ when the airplane is at the theoretical ceiling. As can be seen in Fig. 10.7, there will be an associated increase in angle of attack so that also the lift and drag coefficients at which the airplane flies will become greater as altitude increases.

The relationship between the maximum level steady flight speed and the changing values of ρ , P_a and α is given by

$$P_a = C_D \frac{1}{2} \rho V_{\max}^3 S \quad \text{or} \quad (10.19)$$

$$V_{\max} = \sqrt[3]{\frac{P_a}{S} \frac{2}{\rho} \frac{1}{C_D}} \quad (10.20)$$

In studying the variation of $V_{\max}$ with altitude on the basis of Eq. 10.20, we have to include an assumption about the relationship between power available and height. To this end, we consider the following three characteristic altitude changes of P_a :

- Power available is directly proportional to air density. In this case, it is seen from Eq. 10.20 that $V_{\max}$ decreases continuously with height, as sketched in Fig. 10.8a.
- Power available is independent of altitude. Now, the decrease of ρ will dominate the increase of C_D , resulting in a rise in $V_{\max}$ (Fig. 10.8b). This condition can be used in the case of air-planes with supercharged piston engines at heights below the critical altitude of the engines. Beyond the critical height, the piston engine output varies linearly with density. Consequently, $V_{\max}$ will inevitably decrease so that from thereon the $V_{\max}$ vs. H curve is similar to the curve in Fig. 10.8a.
- The ratio P_a/ρ increases with height according to Eq. 9.42. Under this condition, we may find that at first $V_{\max}$ increases somewhat. Above a certain altitude the influence of the increasing C_D will dominate and, accordingly, $V_{\max}$ will fall off (Fig. 10.8c). This behavior is typical for turboprop airplanes.

The same traits are true of the turbojet airplane. From the condition of equilibrium $T = D$ at $V_{\max}$ we obtain

$$T = \frac{C_D}{C_L} W \quad \text{whence} \quad (10.21)$$

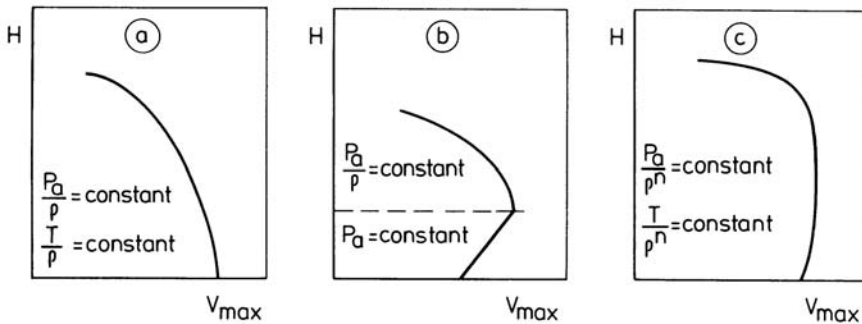


Figure 10.8 Altitude effects on maximum airspeed

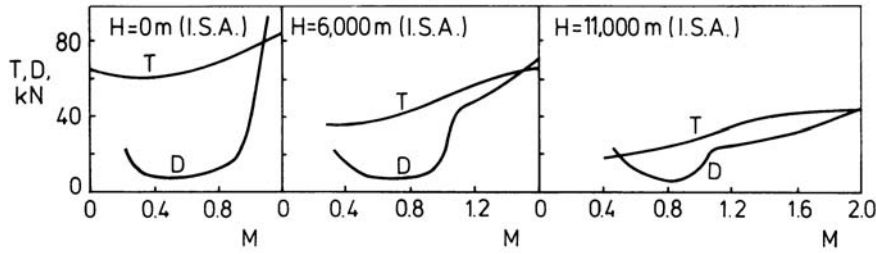


Figure 10.9 Performance diagrams of supersonic airplane

$$\frac{C_L}{C_D} = \frac{W}{T} \quad (10.22)$$

Using the approximation that T is constant with V , we find that in consequence of the fact that the thrust falls off with altitude, the lift-to-drag ratio in Eq. 10.22 will increase up to $(C_L/C_D)_{\max}$ at the theoretical ceiling (Fig. 10.7). Now the relation between $V_{\max}$, ρ , T and α is governed by

$$T = C_D \frac{1}{2} \rho V_{\max}^2 S \quad \text{or} \quad (10.23)$$

$$V_{\max} = \sqrt{\frac{T}{S} \frac{2}{\rho} \frac{1}{C_D}} \quad (10.24)$$

If the assumption is made that the thrust decreases in direct proportion to ambient density, it follows from Eq. 10.24 that $V_{\max}$ decreases with height, as shown in Fig. 10.8a. In point of fact, $V_{\max}$ will be almost constant up to a large flight altitude. This picture of the maximum level flight speed variation is shown in Fig. 10.6 and Fig. 10.8c and comes about because of the increase in the ratio T/ρ with altitude (see Eq. 6.90 and Eq. 9.43).

The performance diagrams of a supersonic airplane for three altitudes are presented in Fig. 10.9. The weight of the airplane is 82 kN and the jet is thrust augmented by afterburning. The altitude effects resulting from these graphs are shown in Fig. 10.10.

In contrast with its subsonic counterparts, the maximum level steady flight speed appears to increase strongly when a supersonic airplane climbs from sea level to a higher altitude. The reason for this lies in the combined effect of an increasing thrust and decreasing drag coefficient with supersonic flight velocity. Fig. 10.10a shows that the very highest airspeed is reached near the tropopause (I.S.A.).

Apparently, high excess powers are present at both subsonic and supersonic speeds, through which in each of the two speed regimes a maximum rate of climb speed can be recognized (Fig. 10.10b). The flight regime of an airplane is also determined by its buffet characteristics. Buffeting concerns an undesirable shaking of the airplane and its controls, which is caused by the turbulence in the flow when the boundary layer separates from the outer surface of the airplane. Boundary layer separation can happen at any airspeed. Therefore, buffeting can affect the low-speed as well as the high-speed boundary.

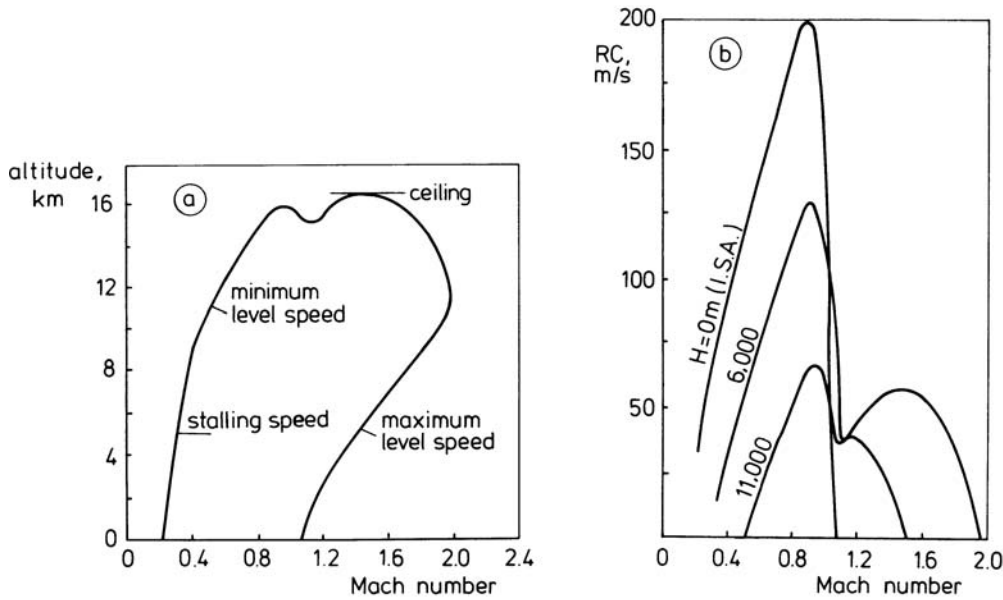


Figure 10.10 Altitude effects on performance of supersonic airplane

Generally, there is a marked tendency for the stalling angle of attack to go down with increasing flight Mach number. The actual maximum usable angles of attack, of course, can only be obtained from flight testing over the entire Mach number range of a specific type of airplane. The typical variation of the maximum attainable lift coefficient against flight Mach number for a high-subsonic type of airplane (buffeting limit) is sketched in Fig. 10.11.

At low Mach numbers, buffeting occurs as the stall is approached, and the maximum achievable lift coefficient is close to the $C_{L\max}$ value of the airplane.

As described in Chapter 4, when an airplane exceeds the critical Mach number, shock waves on the airplane surface will be formed. Due to the large pressure increase through the waves, shock-induced boundary layer separation comes about and the resulting turbulence in the wake may cause buffeting. The objectionable phenomena also include pitching and yawing oscillations from rapid changes of pressure distribution. In consequence of this, buffeting becomes more pronounced and maximum C_L decreases with increasing Mach number up to transonic speeds, at which it may cause a complete collapse of the lift.

Curves of constant values of $n \frac{W/S}{p/p_0}$ are also plotted in Fig. 10.11, where n is the load factor. The curves are calculated from

$$nW = C_L \frac{1}{2} \gamma p M^2 S \quad (10.25)$$

which is the basic lift equation for level flight when the load factor is not equal to unity (see Section 8.3), and when the dynamic pressure is expressed in terms of the Mach number M , the static pressure p , and the specific heat ratio of the air γ . Clearly, plots such as in Fig. 10.11 can be used to determine the operating envelope of an airplane with respect to buffeting since for any given wing

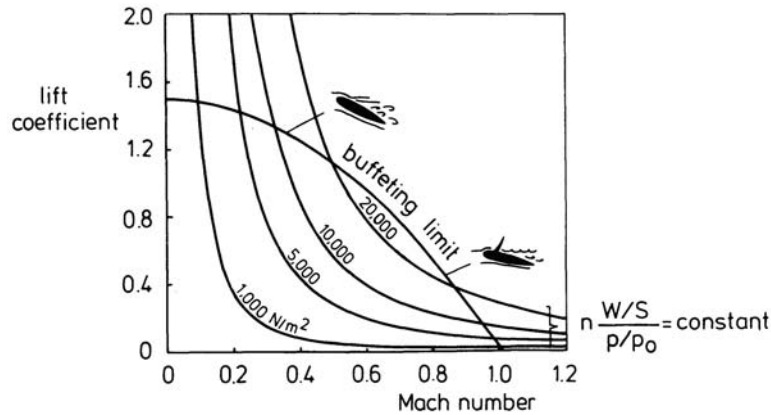


Figure 10.11 Mach number effect on stall

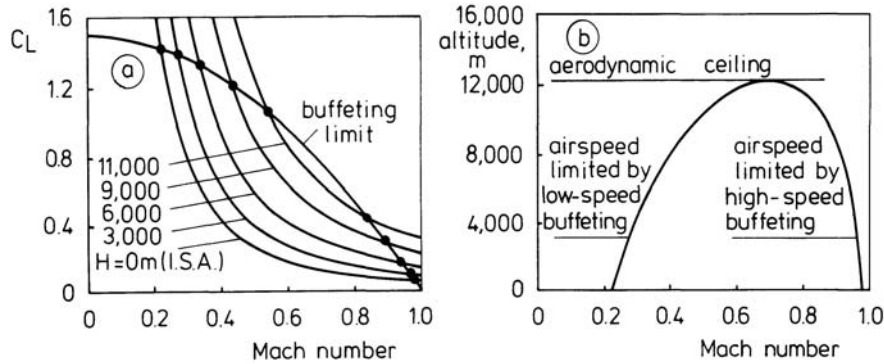


Figure 10.12 Mach number effect on level speed limits

loading, altitude and load factor there is a minimum and maximum Mach number defined by the points at which the buffet boundary crosses the appropriate $n \frac{W/S}{p/p_0}$ vs. M curve.

In order to determine the operational envelope where level steady flight speeds can be maintained, our hypothetical buffet boundary is plotted again in Fig. 10.12a. Superimposed on the buffet plot are now C_L vs. M curves for level steady flight, calculated from the condition $W = C_L \frac{1}{2} \gamma r M^2 S$, using $W/S = 5 \text{ kN/m}^2$. We clearly see that the range of possible level flight speeds becomes smaller as altitude increases. At a certain altitude the low-speed and high-speed stall coincide. This altitude is called the *aerodynamic ceiling* of the airplane.

Fig. 10.12b shows the resulting flight Mach numbers as a function of altitude. It is evident that these flight speed limits depend on airplane configuration, weight and load factor.

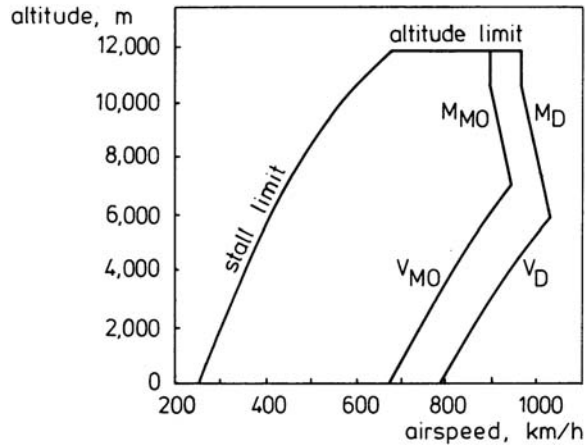


Figure 10.13 Flight envelope of jet airplane

10.4. FLIGHT ENVELOPE

The flight envelope describes the area of altitude and airspeed where an airplane is constrained to operate (Fig. 10.13). Within the boundaries of this diagram fall all the possible combinations of airspeed, altitude and load factor.

The flight envelope is defined by the various limitations on the performance of the airplane, such as available engine power, stalling, buffet characteristics, structural considerations and requirements on external noise production.

The selected high-speed boundary depends highly on the chosen value of the design cruising speed V_C , which is the maximum equivalent or calibrated level flight speed at which the structure is strong enough to withstand prescribed loads imposed by allowable flight maneuvers and gusts encountered in rough air. The conditions defining the flight loads are specified in the airworthiness regulations. As explained in the previous Section 8.5, the basic maneuvering and gust envelopes (V - n diagrams) define the symmetrical flight loads for which the airplane structure is designed.

From the speed-altitude operating limits in Fig. 10.13, which refer to jet airplanes, the following boundaries are recognized:

- The design diving airspeed V_D which limits the maximum level flight speeds at which the airplane is designed to remain controllable and to withstand particular flight loads. Flying at V_D , the associated flight Mach number increases with altitude, and therefore an altitude may be reached at which it would be impossible to fly because of compressibility effects. For this reason, there is a design diving Mach number M_D , which cuts off V_D so that the airplane remains free from undesirable flying qualities associated with buffeting.
- The maximum operating speed V_{MO} , which is the calibrated airspeed that may not be deliberately exceeded in any type of flight, and the associated maximum operative Mach number M_{MO} . Both the V_{MO} and M_{MO} are calculated respectively from V_D and M_D according to some safety margin to account for unintentional increments of speed. The airspeed V_{MO} is also so established that it is not smaller than the design cruising speed V_C .

- The maximum flight altitude for airplanes with a pressurized cabin. This altitude limit is determined by the maximum pressure differential load for which the airplane structure is designed.
- The stall limit, which is formed by the calibrated minimum stalling speed, that is the calibrated minimum steady flight speed with power off at which the airplane is controllable. The maneuver conducted to measure this speed has previously been described in [Section 8.4](#).

Remember that, at constant calibrated airspeed, the flight Mach number will increase with altitude. Therefore, the calibrated minimum stalling speed may increase with altitude due to the effects of near-stall buffeting on maximum lift coefficient. It is also important to remember that the stall boundary depends strongly on airplane weight and configuration.

For supersonic airplanes similar flight speed limitations occur. In addition to the boundaries indicated in [Fig. 10.13](#), maximum speed may be limited by detrimental effects of compressibility on flying qualities. Also, the serious deterioration of the strength of materials due to aerodynamic heating in supersonic flight may constrain the achievable level flight speed.

The relationship between the temperature at the stagnation points on the leading edge of the wing or at the nose of the fuselage and the flight Mach number is given by the expression

$$T_t = T \left[1 + \frac{\gamma - 1}{2} M^2 \right] \quad (10.26)$$

where T_t represents the total temperature at a stagnation point and T is the ambient temperature (as derived in [Appendix C](#)).

For instance, let us assume a flight in the lower stratosphere (I.S.A.) at a Mach number of 2.5. Then [Eq. 10.26](#) yields: $T_t = 488\text{K} = 215^\circ\text{C}$. This figure may confirm that extra structural problems are present in supersonic airplane design as a result of kinetic heating of the skin surfaces.

In order to warrant safe and economic operations throughout the entire range of flight speeds, each airplane is furnished with a flight manual, specifying the conditions under which the airplane can be used safely.

The possible area of altitude and airspeed where hypersonic airplanes may operate is depicted in [Fig. 10.14](#). Hypersonic regime is usually defined as flight in excess of Mach 5 where temperature effects, and other such as chemical reactions, start to play a major role in the physics of flight. The maximum altitude boundary is attained when the sum of aerodynamic lift and centrifugal force becomes insufficient to balance the component of the airplane weight perpendicular to the flight path. On the other hand, for a given airspeed the airplane cannot fly below a certain altitude where the adverse effects of high total pressures or high skin temperatures on structural strength, become too great. When an airplane is flying along a curvilinear path in a great-circle plane, the upper boundary can be found from the equality

$$C_L \frac{1}{2} \rho V^2 S + \frac{W}{g} \frac{V^2}{R} = W \cos \gamma \quad (10.27)$$

where R is the radius of curvature of the flight path and γ is the angle the flight path makes with the local horizontal ([Fig. 10.15](#)).

With the assumption of a small flight-path angle ($\cos \gamma = 1$), we can transform Eq. 10.27 into the form

$$C_L \frac{1}{2} \rho V^2 S + \frac{W}{g} \frac{V^2}{(R_e + h)} = W \quad (10.28)$$

In this equation R_e is the radius of the (spherical) Earth and h is the flight altitude. Substitution of Eq. 1.18 into Eq. 10.28 produces the following expression for the relationship between the flight velocity V and the altitude h ,

$$C_L \frac{1}{2} \rho V^2 S = W_0 \frac{g}{g_0} \left[1 - \frac{V^2}{V_c^2} \right] \quad (10.29)$$

where W_0 is the weight of the airplane at sea level and V_c is the circular velocity. As exemplified in Fig. 10.14, there exists a narrow flight corridor which links atmospheric flight to space flight and vice versa. Through the flight corridor a lifting vehicle can reach the circular velocity and become a satellite or can perform a lifting re-entry trajectory.

The three boundaries in Fig. 10.14 are determined for the value $W_0 / (C_L S) = 4800 \text{ N/m}^2$, a permissible total pressure of $p_t / p_0 = 2$, and a maximum allowable total temperature of 1900°C . For the variation of temperature, pressure and density with altitude in the upper atmosphere, the data in Ref. 33 are used.

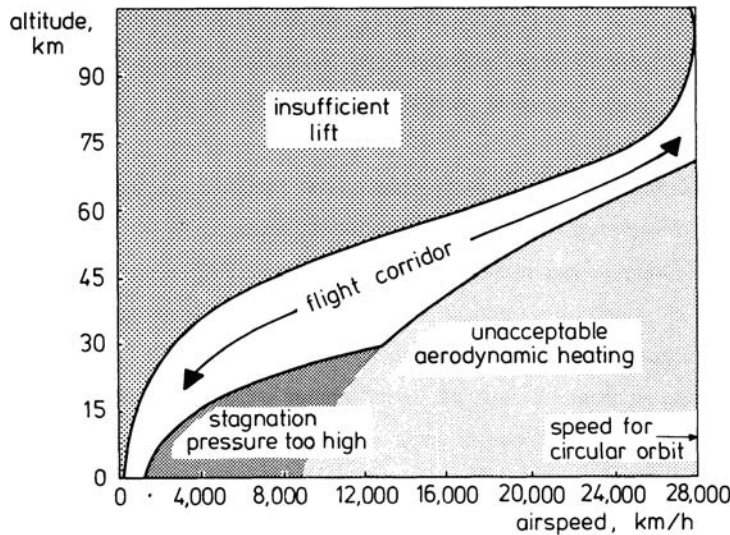


Figure 10.14 Flight corridor

10.5. PROBLEMS

1. For the aircraft introduced in Problem 2 of Section 9.6, calculate the performance metrics at an altitude of 11 000 m assuming that the available thrust varies with altitude according to the

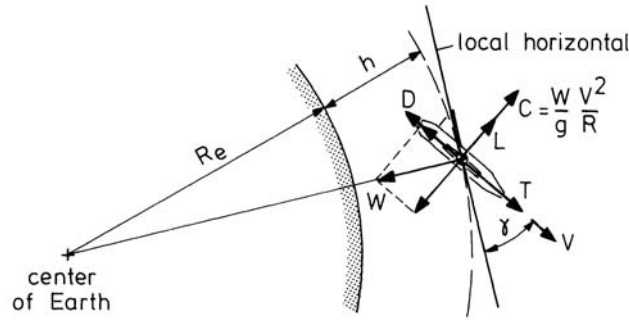


Figure 10.15 High-altitude and high-velocity flight in great circle plane

following relation

$$\frac{T}{T_0} = \left(\frac{\rho}{\rho_0} \right)^{0.85}$$

2. Calculate the theoretical ceiling altitude for the aircraft described in the previous problem.
3. For the aircraft introduced in Problem 5 of [Section 9.6](#), calculate the performance metrics at an altitude of 3000 m assuming that the power available varies with altitude according to the following relation?

$$\frac{P_a}{P_{a0}} = \left(\frac{\rho}{\rho_0} \right)^{0.7}$$

4. Calculate the theoretical ceiling altitude for the aircraft described in the previous problem.
5. Draw the boundaries of the flight envelope for the two aircraft mentioned in Problems 1 and 2.
6. Is it possible for an aircraft to have a higher maximum level flight speed at high altitude than a low altitude? Discuss how the maximum level flight speed varies with altitude for different power-train architectures.

11

FLIGHT AND AIRPLANE CONDITION EFFECTS

11.1. EFFECT OF WEIGHT

To study the effect of changing the weight of an airplane, we consider here steady symmetric flight at an initial weight W_1 . For the purpose of calculating new values of airspeed, drag and power required at a weight W_2 , let the flight altitude and the angle of attack remain fixed. If further possible effects of compressibility are ignored, we can utilize the fact that C_L and C_D are invariable at constant angle of attack. Then, from Eq. 9.15 to Eq. 9.17, we have the following ratios,

$$\frac{V_2}{V_1} = \sqrt{\frac{W_2}{W_1}}. \quad (11.1)$$

$$\frac{D_2}{D_1} = \frac{W_2}{W_1}. \quad (11.2)$$

$$\frac{P_{r2}}{P_{r1}} = \sqrt{\left[\frac{W_2}{W_1}\right]^3}. \quad (11.3)$$

Thus, starting from the weight W_1 , for each angle of attack the new speed V_2 , drag D_2 and power required P_{r2} can be calculated.

Fig. 11.1 shows the effect of weight on drag and power required curves of our illustrative turboprop airplane with a wing area of 70 m^2 , a parabolic lift-drag polar, $C_D = 0.023 + 0.035C_L^2$ and a maximum lift coefficient of 1.5. As can be seen from Eq. 11.1 and Eq. 11.2, all corresponding points on the drag curves which have the same angle of attack are located on a quadratic curve through the origin,

$$\frac{D_2}{D_1} = \left[\frac{V_2}{V_1}\right]^2 \quad (11.4)$$

Similarly, from Eq. 11.1 and Eq. 11.3, we find that with changing weight all corresponding points on the power required curves move along a third order curve through the origin,

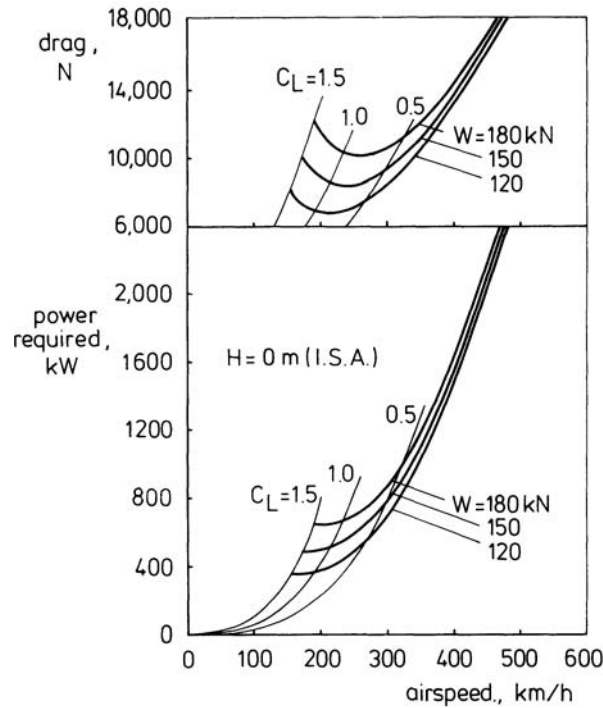


Figure 11.1 Effect of weight on drag and power required

$$\frac{P_{r2}}{P_{r1}} = \left[\frac{V_2}{V_1} \right]^3 \quad (11.5)$$

It is important to realize again that the foregoing relations hold only at low subsonic velocities and that at high-subsonic and supersonic velocities the effect of weight must be determined by calculating the drag and power required curves according to the procedure described in Section 9.2.

Using a parabolic lift-drag polar, the effect of changing the weight of the airplane can also be examined from Eq. 9.26 which is repeated below for convenience,

$$P_r = C_{D0} \frac{1}{2} \rho V^3 S + \frac{W^2}{\pi A e \frac{1}{2} \rho V S} \quad (11.6)$$

Inspection of Eq. 11.6 shows that the weight only affects that part of power required that is associated with induced drag. Since at constant weight the relative importance of this part of power required increases with decreasing velocity and air density, the effect of changes in weight on performance are especially noticeable at lower airspeeds and/or greater heights (Fig. 11.2). As far as the minimum airspeed is determined by stalling, from Eq. 11.1, we have

$$\frac{V_{S2}}{V_{S1}} = \sqrt{\frac{W_2}{W_1}} \quad (11.7)$$

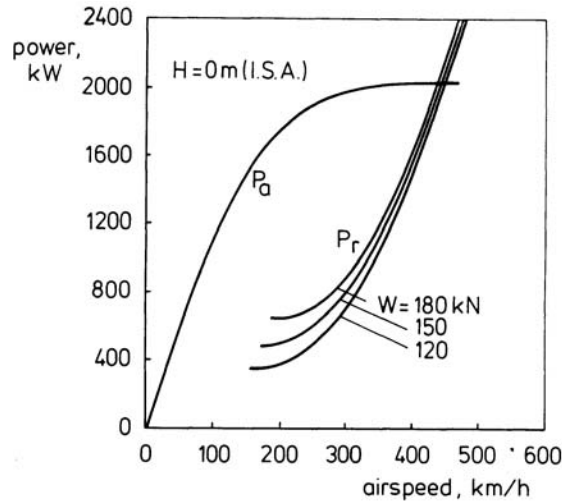


Figure 11.2 Effect of weight on performance diagram

A change in weight, particularly, has a considerable influence on climb performance. Of special interest is of course the effect of weight on the maximum rate of climb. From Eq. 9.35, we find that

$$RC_{\max} = \frac{(P_a - P_r)_{\max}}{W} \quad (11.8)$$

It will be appreciated that at each flight speed the numerator of Eq. 11.8 decreases with increasing weight. Consequently, the total outcome of Eq. 11.8 is a dramatic reduction of the maximum rate of climb. Also, there is a higher speed for fastest climb as the weight increases. Obviously, the same effects on maximum climb angle and steepest climb speed will occur. In the high-speed range, the first term of the right-hand side of Eq. 11.6 prevails so that there the influence of a change in weight on maximum level flight speed will be much smaller, certainly at low altitudes. This is confirmed by the performance curves in Fig. 11.2, which show that there is only a slight reduction in maximum airspeed as weight increases. For our example airplane, a complete picture of the effect of weight on performance in level steady flight and climb is presented in Fig. 11.3. It can be seen that also the absolute ceiling goes down significantly with weight.

From the preceding discussion it may be clear that for each flight, the maximum allowable weight of the airplane and so the maximum load the airplane can carry is determined by requirements on take-off and landing distances, climb performance, and en route obstacle clearance. Therefore, a close relationship exists between actual take-off weight and the airworthiness standards. To illustrate this connection, Tab. 11.1 gives the minimum climb requirements to be achieved by transport airplanes with the critical engine out, as specified in the Federal Aviation Regulations (FAR) (see Section 8.5). The climb requirements are expressed as climb gradients, that is to say, in terms of $\sin \gamma = \frac{RC}{V}$, and expressed in percent. As portrayed in Fig. 11.4, the take-off path with engine failure is broken down into three climb segments. The take-off reference speeds V_{LOF} and V_2 in Fig. 11.4 are specified in terms of the calibrated minimum stalling speed V_{MS} for the appropriate airplane

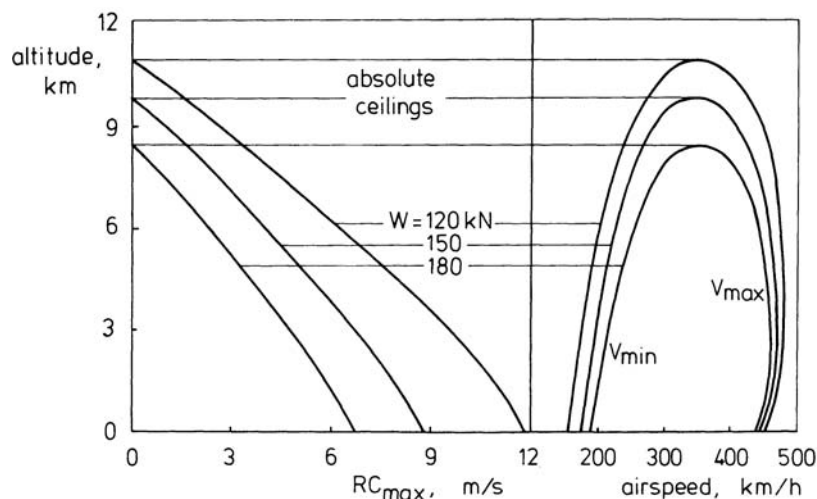


Figure 11.3 Effect of weight on performance

Table 11.1 Take-off climb requirements for transport airplanes

number of engines	minimum climb gradient		
	2	3	4
first segment: T.O.-power and flaps, landing gear down	> 0.0%	0.3%	0.5%
second segment: T.O.-power and flaps, landing gear up	2.4%	2.7%	3.0%
third segment: METO-power, flaps and landing gear up	1.2%	1.4%	1.5%

configuration and weight. To ensure a safe climb-out, the speed at liftoff, V_{LOF} , normally, is 15 to 25 percent higher than the minimum stalling speed. Dependent on the type of power plant and number of engines, the minimum value of the speed at the obstacle height, the take-off safety speed V_2 , may not be less than $1.15V_{MS}$ or $1.2V_{MS}$ (Chapter 16). From a complete investigation of each segment, weight limits are determined which are available to the pilot in the form of graphs where the take-off weight is given in terms of humidity, pressure altitude, and ambient temperature (Fig. 11.5). In conclusion, for safe operation, we can say that the pilot should know exactly at which weight they are flying. The pilot should also have a good understanding of the performance characteristics under different conditions of number of operative engines, engine control setting, flap setting, and landing gear position. The typical effects of the latter conditions will be discussed in the following sections.

11.2. EFFECT OF ENGINE FAILURE

Malfunction of one or more engines on multi-engine airplanes leads, as a matter of course, to a considerable loss in power available. For example, in the case of a two-engine airplane, after engine failure we have only half the commencing thrust. With the resulting reduction in excess thrust

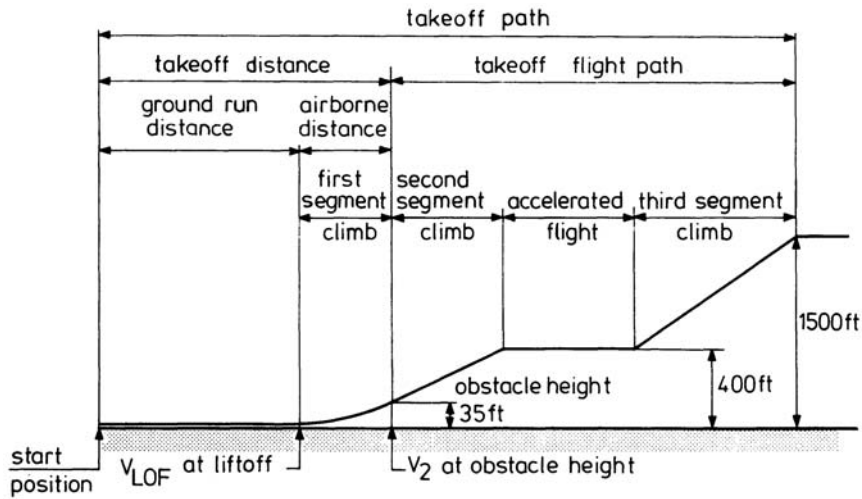


Figure 11.4 Take-off performance for transport airplane

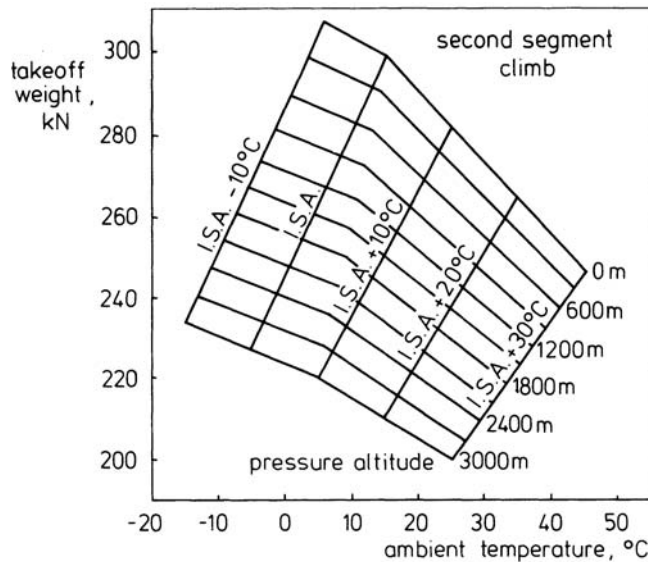


Figure 11.5 Weight-altitude-temperature (WAT) curves for transport airplane

and power, maximum level flight speeds, maximum rates of climb and ceilings deteriorate. The qualitative effects of the number of operative engines on maximum rate of climb for a two-engine and a four-engine airplane are sketched in Fig. 11.6. It is important to notice that engine failure must be considered for multi-engine airplanes in all flight phases. With respect to cruise flying, especially, the lowering of the theoretical and practical ceilings is of great importance to flight safety.

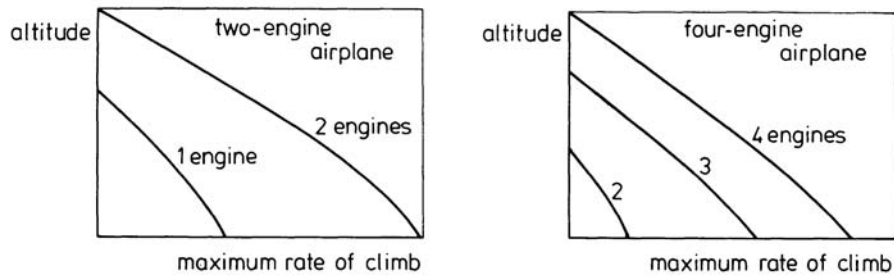


Figure 11.6 Effect of the number of operating engines on maximum rate of climb

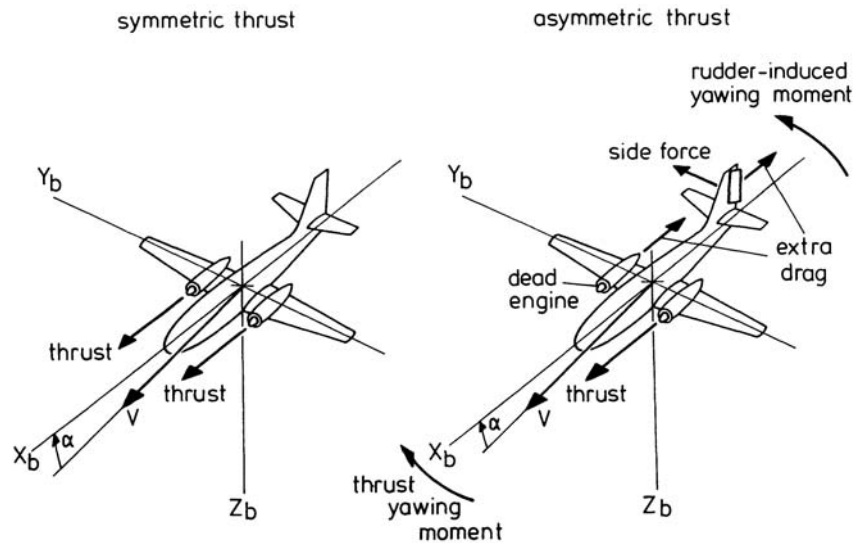


Figure 11.7 Engine failure on a twin-engined airplane

Needless to say that the load the airplane carries as well as the selected route must warrant the condition that there is no risk of en-route terrain collisions. A point to note is that on airplanes with three or more engines, the occurrence of two inoperative engines in cruising flight must be awaited.

Failure of an engine in flight not only means loss of thrust, but also an increment in drag as caused by (Fig. 11.7):

- additional drag from control surface deflections
- additional drag produced by the dead engine.

For a propeller airplane it is important to avoid the existence of windmilling drag. A propeller being windmilled by the oncoming air and thus driving the inoperative engine causes a considerable additional drag. Also, there is a great risk of further damage to the engine. Fortunately, windmilling

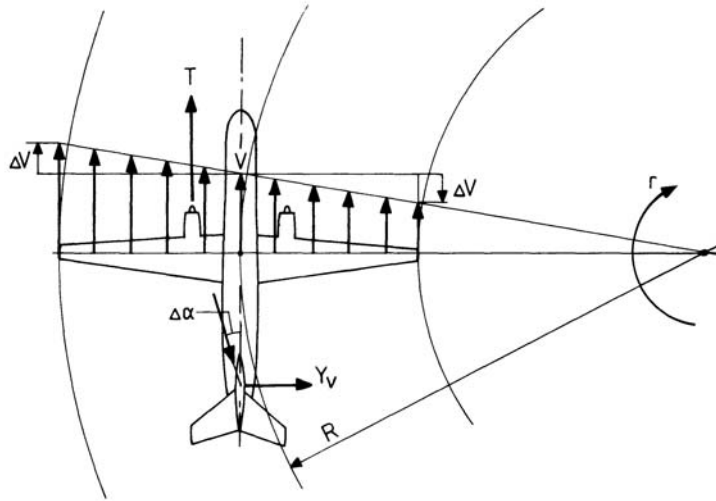


Figure 11.8 Yawing motion

drag can be almost completely eliminated by feathering the propeller (see [Chapter 7](#)). The methods of calculating windmilling drag are beyond the scope of this book. For information about this subject the reader is referred to [Ref. 34](#).

As portrayed in [Fig. 11.7](#), failure of the starboard engine of a twin-engined airplane causes an unbalanced thrust yawing moment to the right. Under this condition, there will be a direct tendency to yaw toward the dead engine. Assuming a pure yawing motion, the angle of sideslip remains zero so that the velocity vector of the center of gravity lies in the plane of symmetry ([Fig. 11.8](#)). The airplane travels along a curvilinear flight path of which the radius is given by

$$R = \frac{V}{r} \quad (11.9)$$

where r is the angular velocity of the yawing motion. From [Fig. 11.8](#), it is seen that the wing tips of the airplane have velocity differences from the flight speed by an amount

$$\Delta V = r \frac{b}{2} \quad (11.10)$$

The changes in local velocity along the span due to the yawing velocity will cause an increase in lift and drag on the outer wing and a decrease in lift and drag on the inner wing. Also a side force Y_v occurs due to a change in the angle of attack at the vertical stabilizer. Clearly, the yawing motion considered in [Fig. 11.8](#) will create a rolling moment to the right and, although to a lesser degree, also a yawing moment to the left ([Fig. 11.9](#)). Furthermore, in the case of failure of a wing-mounted propeller engine, the asymmetric lift from the part of the wing submerged in the slipstream of the propeller will cause an additional rolling moment toward the dead engine ([Fig. 11.10](#)).

The resulting yawing moment to the right in combination with the rolling moment in the same direction will cause, if allowed to continue uncontrolled, a spiral dive. Evidently, when engine failure occurs the yawing motion must be stopped promptly. This can be done by introducing a sideslip

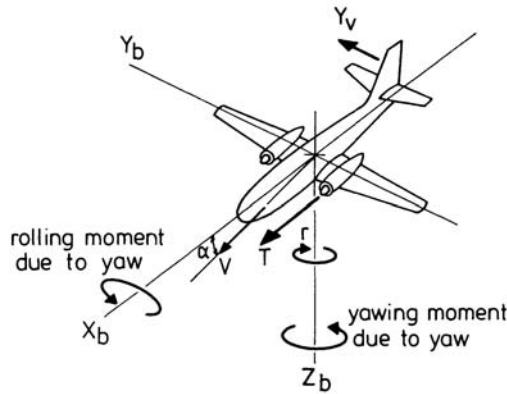


Figure 11.9 Asymmetric force and moments resulting from yawing motion

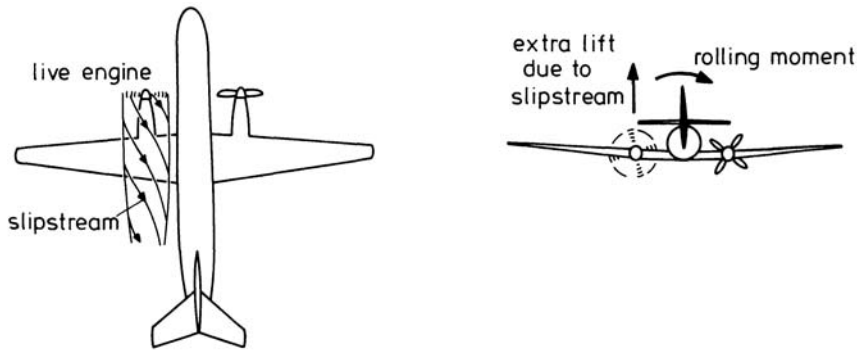


Figure 11.10 Rolling moment caused by asymmetric lift on wing

angle to generate a side force on the vertical tail that counteracts the yawing moment, by introducing a bank angle raising the dead engine to rotate the lift vector toward the live engine, or by a combination of both. Practically, these maneuvers are performed by the pilot by applying rudder and aileron control. A resolute application of rudder deflection toward the live engine will be required to generate a rudder-induced yawing moment and establish a new sideslip angle (see Fig. 11.7). A deflection of the ailerons will be needed to overcome the rolling moment and establish a new bank angle.

Fig. 11.11 shows a new condition of steady straight level flight that may be established by applying the aforementioned control inputs. The corresponding equilibrium equations in the air-path axes (cf. Eq. 3.37) are reported below.

$$\begin{aligned}
 -D + T \cos \beta &= 0 \\
 -S - T \sin \beta + W \sin \phi + S_v &= 0 \\
 -L + W \cos \phi &= 0
 \end{aligned}
 \tag{11.11}$$

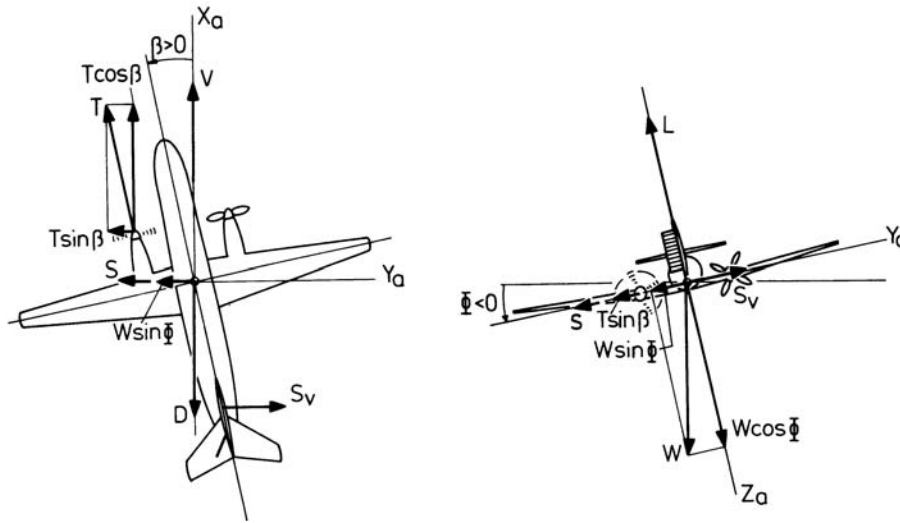


Figure 11.11 Steady straight level sideslipping flight with bank angle

The forces S and S_v in the equations are the lateral forces due to the sideslipping motion and rudder deflection, respectively. Recall that for consistency with lift and drag, the forces S and S_v are taken positive in the direction of the negative Y_a axis. Normally, a sideslip at $\beta > 0$ produces a side force to port ($S > 0$). According to Eq. 4.15, we have $S = C_S \frac{1}{2} \rho V^2 S$, where C_S is the lateral force coefficient which varies essentially linearly with angle of sideslip. Note that $\Phi < 0$ in Fig. 11.11 because the bank angle customarily is taken positive when the airplane is rotating clockwise about its longitudinal axis.

Of special relevance is the flight condition at an angle of sideslip $\beta = 0$ and $\phi \neq 0$, represented in Fig. 11.12 and corresponding to the following equations of equilibrium.

$$\begin{aligned} -D + T &= 0 \\ -W \sin \phi + S_v &= 0 \\ -L + W \cos \phi &= 0 \end{aligned} \quad (11.12)$$

In this flight condition the lowest airplane drag will occur, furnishing maximum flight speed. Emphasis is made that the maximum side force that the rudder can establish decreases with decreasing airspeed. The airspeed at which the maximum amount of moment exerted by full rudder equals the unbalanced yawing moment developed by the inoperative engine, determines the lowest speed at which the airplane can be flown while keeping straight. The latter airspeed is called the *minimum control speed*, V_{MC} , and represents the minimum speed for fully controlled flight at a given airplane weight, configuration and altitude, and at any particular engine control setting. Clearly, the airspeed always must be maintained above the minimum control speed in a flight with one or more engines inoperative. During the take-off maneuver, especially, the minimum control speed is an essential factor and must be at least 10% below the take-off safety speed V_2 at the obstacle height in Fig. 11.4. When engine failure occurs the operative engine(s) will be called on to

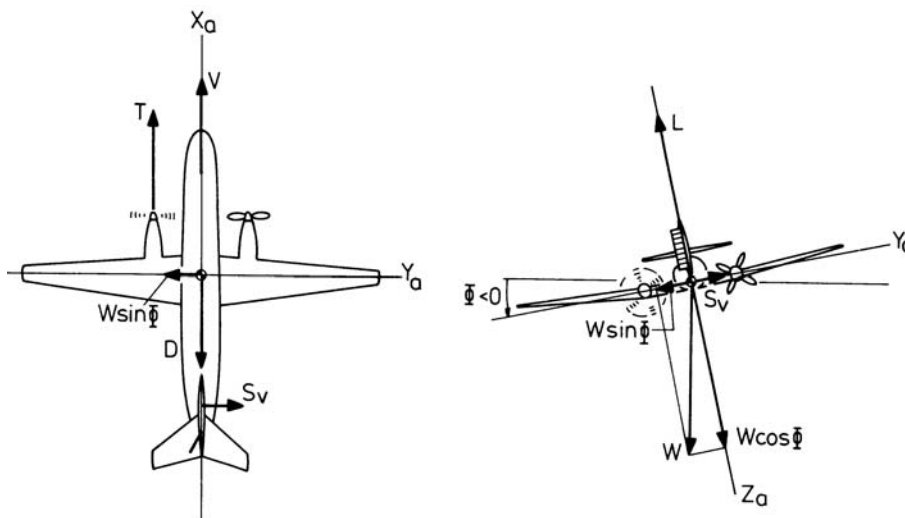


Figure 11.12 Steady straight level non sideslipping flight with bank angle

generate extra thrust or power by choosing a higher control setting. We shall look at the effect of changes of engine control setting on airplane performance in some detail in the next section.

11.3. EFFECT OF CHANGES OF ENGINE CONTROL SETTING

In order to get increased thrust or power, a higher engine control setting must be selected by the pilot. The occurrence of engine failure, as discussed in the preceding section, is an example of a condition in which additional thrust from the live engine may be asked to maintain height and/or airspeed. Also in the flight with all engines operating, the pilot can affect the engine output by changing the engine control setting. Typical performance curves for an airplane powered by turboprop engines are sketched in Fig. 11.13. The power available curves are drawn for a number of characteristic power settings. As we have learned in Chapter 8, airspeed and engine control setting in climbing flight can be chosen independently of each other, whereas in steady level flight the flight condition is fully determined by one of the variables, α , V or Γ . Thus, when flying at a given altitude, particular values of flight speed and engine control setting are coupled. This is illustrated in Fig. 11.13 by the intersections A to F, which define the relationship between engine control setting and level flight velocity. When the engine throttles are fully opened, emergency or full power will be obtained. This condition is represented in Fig. 11.13 by the upper power available curve. As mentioned earlier in Chapter 6 full power can be allowed for a short time only. The maximum rating permitted for unlimited duration is therefore lower and is known as METO (maximum except take-off) or maximum continuous.

The effects of lowering the engine control setting are apparent from Fig. 11.13; a decreasing maximum level flight speed and a decrease in rate of climb at each airspeed. Also note that at low engine ratings the minimum flight speed is determined by the low-speed intersection of the P_a and P_r curves. Then, steady level flight at either of two velocities is possible. One faster and one

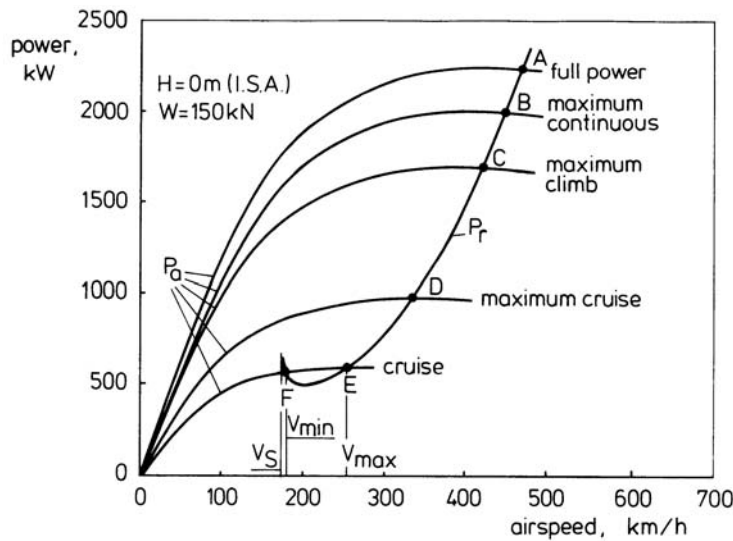


Figure 11.13 Performance diagram for various engine control settings

slower than the airspeed at which maximum excess power occurs (see also Fig. 9.21).

Operating at the greater airspeed is known as flying the normal or front side of the power curve, while operation in the low-speed region is called flying the back side of the power curve or flying in the region of reversed command (see Chapter 9). To explain this, suppose the pilot is flying in the high-speed region and that due to an external cause, the airplane experiences a sudden change in airspeed from the equilibrium condition in point E in Fig. 11.13. In the case that the pilot maintains level flight at a fixed engine control setting, there will be a negative excess power when speed increases and a positive excess power when speed falls off (Fig. 11.14). Hence, in both situations the airplane will tend to restore the original airspeed. Apparently, the equilibrium condition in point E is stable. On the other hand, in the low-speed region, for example in point F in Fig. 11.13, any speed disturbance will tend to diverge the speed further from its original value. For this reason, flying in the low-speed region must be avoided in all circumstances in which loss of airspeed or altitude may be dangerous.

What is argued above about the behavior of the speed following a speed disturbance is all we can state from considering equilibrium conditions. The transition from one steady flight condition to another is, as a matter of course, intrinsically connected with unsteady motions and should be studied by means of the full system of equations of motion as derived in Chapter 3. However, consistent with the scope of this text, we need not concern ourselves with the dynamic behavior of the airplane in response to the forces and moments developed.

The boundary between the two speed regions is found at the airspeed where the performance curves have parallel tangents which, of course, is at the speed for fastest climb.

Provided that power available is constant with airspeed, the transition point occurs at the minimum power required speed (Fig. 11.15a). Likewise, in the case of a jet airplane the transition point is approximately the speed for minimum drag (Fig. 11.15b). The jet picture in Fig. 11.15b illustrates

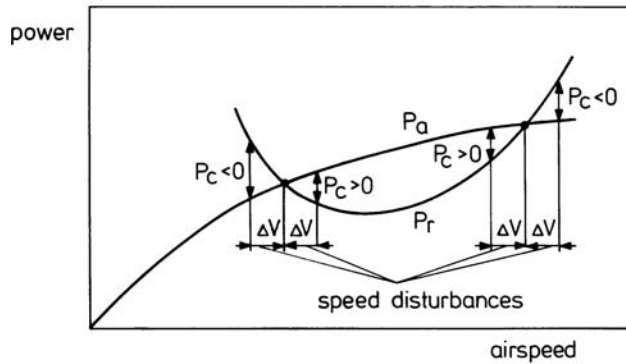


Figure 11.14 Variation of level flight speed at fixed engine control setting

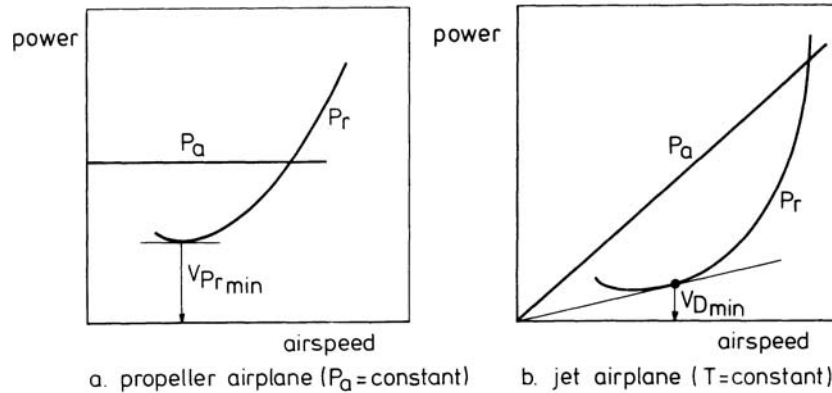


Figure 11.15 Selection of flight region

that besides the variation of power available with airspeed, there is a second characteristic of a jet airplane that is different from a propeller-driven airplane: the relative stretching and flatness of the power required curve in the low-speed region.

In order to assure a sufficient degree of *speed stability*, the pilot will select a flight speed greater than the minimum drag speed. Generally, for jet airplanes as well as propeller airplanes:

$$V \geq V_M = 1.1 V_{D\min} \quad (11.13)$$

where V_M is called *minimum comfortable airspeed*.

If an airplane is cruising at $V < V_M$ a loss of speed due to a disturbance will require immediate elevator control as well as thrust increase to avoid undesired speed deviations and/or loss of altitude.

Assuming a parabolic variation of C_L with C_D , we obtain from Eqs. 9.22, 10.16 and 11.13 the ratio of the minimum comfortable airspeed to the stalling speed as

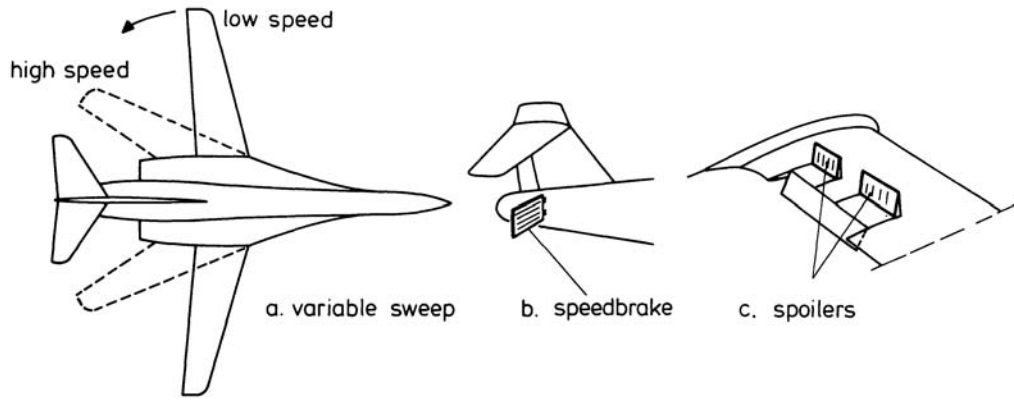


Figure 11.16 Reduction of minimum drag speed

$$\frac{V_M}{V_S} = 1.1 \sqrt{\frac{C_{L\max}}{\sqrt{C_{D0}} \pi A e}}. \quad (11.14)$$

Eq. 11.4 shows that for jet airplanes relative high values of the ratio V_M/V_S will occur, owing to their comparative low values of zero-lift drag coefficient C_{D0} and wing aspect ratio A . This is especially true for supersonic airplanes with slender delta wings.

The necessity to correct the engine control setting continually arises at all flight speeds lying in the low-speed region and at which the pilot tries to maintain a straight flight path. A critical situation may be the approach path before landing, where application of an automatic throttle control system may be needed to solve the problem artificially.

Eq. 11.14 indicates that lack of sufficient speed stability can also be corrected by increasing the zero-lift drag coefficient and/or wing aspect ratio. In the case of highly swept supersonic wings, variable wing geometry can be a suitable design feature providing, among other things, an improved aspect ratio and thus a reduced approach speed (Fig. 11.16a).

In order to stabilize the descent speed on approach by drag increase, the airplane uses high-drag devices. In addition to wing flaps and landing gear, the airplane may be equipped with speedbrakes in the form of extensible panels attached to the fuselage (Fig. 11.16b). Use may be made of spoilers as well. The latter high-drag devices are opening panels in the upper surface of the wing positioned span wise between fuselage and ailerons (Fig. 11.16c). They are extended symmetrically across the plane of symmetry of the airplane. When used in combination with flaps, a large extra drag results. Besides for providing a high drag, spoilers are used to supply additional roll control. For this purpose, only the spoilers on the down-going wing are up to cancel the lift at that wing and thus rolling the airplane. They also have a practical meaning, in the case of a glider, as a control to vary the lift-to-drag ratio and with that the glide angle (Chapter 13). Further, during ground run with spoilers opened, the lift is destroyed to increase the frictional force between wheels and ground surface (Chapter 16).

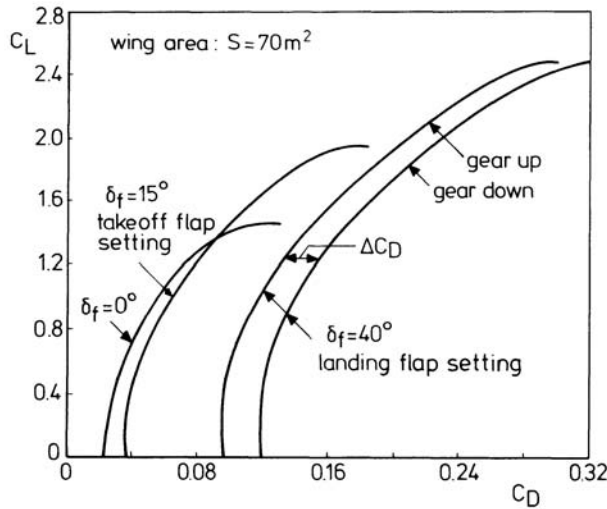


Figure 11.17 Typical low-speed lift-drag polars

11.4. EFFECT OF AIRPLANE CONFIGURATION

In this section we shall illustrate the effect of landing gear position and flap deflection on low-altitude flight performance.

The importance of landing gear down and flap deflection will be considered on the basis of the typical set of lift-drag polars in Fig. 4.16, which are re-shown in Fig. 11.17 for convenience. The curves, which apply to a hypothetical two-engine turboprop airplane, show that a considerable contribution to the drag coefficient is supplied by the landing gear; approximately a doubling of the zero-lift drag coefficient of the clean airplane. As explained earlier in Chapter 4, we also see that a flapped configuration affects both drag and lift coefficients. Let us assume that our turboprop airplane has a weight of 150 kN and that it flies at sea level (I.S.A.). Fig. 11.18a shows the corresponding graph of power required versus airspeed for the clean airplane and for the configuration with landing gear down. Representative power available curves at maximum continuous engine rating are also sketched, considering the flight with two operative engines and the case of one inoperative engine with propeller feathered. Expressed in terms of rate of climb against airspeed, the power data in Fig. 11.18a look as plotted in Fig. 11.18b.

It appears that the landing gear drag causes a considerable deterioration of the performance of the airplane. Especially, in the case of engine failure, the influence of the landing gear on maximum rate of climb is dramatic.

The effect of flap deflection on the performance curves and rate of climb is presented in Fig. 11.19, for the case of one and two operative engines. At a fixed airspeed V , the lift coefficient C_L is also fixed by the condition $L = W$, or

$$C_L = \frac{W}{S} \frac{2}{\rho V^2} \quad (11.15)$$

This conclusion implies that at a given flight velocity, the drag coefficient C_D increases with increas-

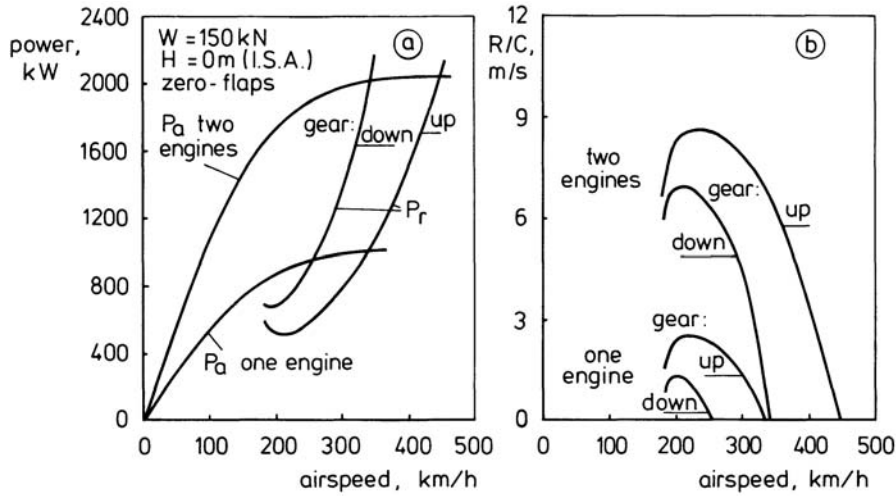


Figure 11.18 Effect of undercarriage-drag on climb performance

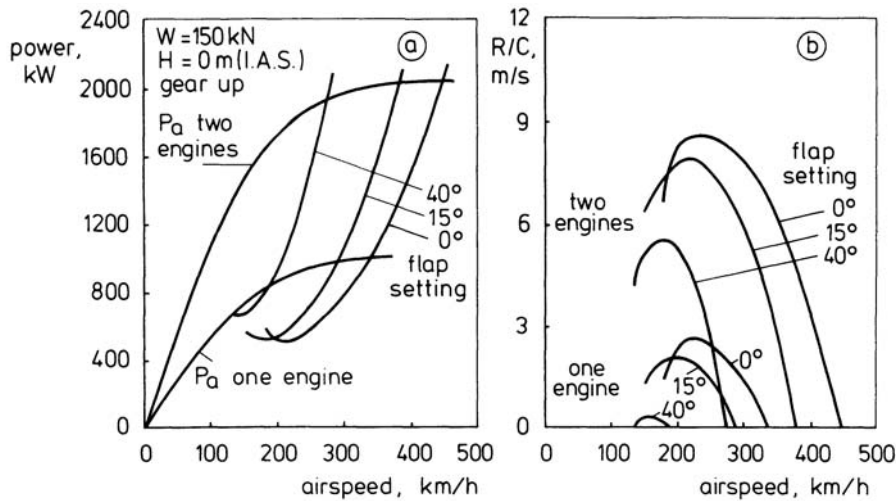


Figure 11.19 Effect of flap-angle on climb performance

ing flap angle. As a consequence, power required enlarges and, hence, rate of climb worsens as the flap setting becomes greater. On the other hand, flaps reduce the stalling speed V_S by increasing the maximum lift coefficient C_{Lmax} and/or wing area S . The relationship between these quantities again follows from the condition that lift equals weight in steady flight

$$V_S = \sqrt{\frac{W}{S} \frac{2}{\rho C_{Lmax}}} \quad (11.16)$$

Apparently, when taking off, the effect of flap deflection is twofold; it decreases the ground run distance by a reduced liftoff speed and it increases the airborne distance through reduced rate of climb. Overall, a flapped configuration typically produces a shortening of the total take-off distance (Fig. 11.4). However, the flap angle for minimum take-off distance varies considerably with runway and ambient conditions so that the selection of the optimum flap setting requires extensive calculations.

Concerning the use of flaps, it is important to notice that the maximum flap angle that can be applied is usually limited by the climb-out performance. To illustrate this statement, we recall that according to the Federal Aviation Regulations (FAR) for transport category airplanes, compliance with the climb gradient requirements at an airspeed $V_2 = 1.20V_{MS}$ and at one engine inoperative, must be shown (see Section 11.1). From Fig. 11.19b, we find that at a flap angle of 40 deg and with one engine inoperative, the climb gradient is insufficient ($\gamma < 2.4\%$). This observation also explains why during take-off the flaps are virtually always partly deflected ($\delta_f = 10 \text{ deg} - 15 \text{ deg}$). For small airplanes, even zero flap setting may be selected.

On the other hand, during landing operations it is necessary to apply full flaps in order to furnish a high drag required to handle the airplane on the approach path and during the ground run after landing. When an expedited descent is required, also a flap setting beyond the normal landing setting ($\delta_f = 50 \text{ deg} - 90 \text{ deg}$) may be used.

It is worth to mention that all movable aerodynamic devices affixed to the airplane for producing high lift or high drag, usually have a speed limitation for extension. Also the landing gear, when used as a speed-brake, has such a speed limit, but when locked down it might be used up to higher airspeeds.

We end this section by emphasizing that, although the evaluation of the low-speed capabilities in the foregoing example pertains to a propeller-driven airplane, the picture for jet-powered airplanes is practically the same.

11.5. PROBLEMS

1. For the aircraft introduced in Problem 1 of Section 9.6, calculate the performance metrics when its weight is 75% of its maximum take-off weight.
2. Calculate the theoretical ceiling altitude for the aircraft described in the previous problem.
3. For the aircraft introduced in Problem 4 of Section 9.6, calculate the performance metrics when its weight is 75% of its maximum take-off weight.
4. Calculate the theoretical ceiling altitude for the aircraft described in the previous problem.
5. Draw the boundaries of the flight envelope for the two aircraft mentioned in Problems 1 and 2, and compare it to those obtained by solving Problem 5 of Section 10.5
6. How should the pilot of a twin-engine jet aircraft act on the cockpit controls (rudder, ailerons, elevator) to counteract the effects of the failure of the right engine? Explain your answer in terms of the aerodynamic forces and moments acting on the aircraft.
7. What does it mean for an aircraft to be flying on the "back side of the power curve"? Why is it important for the pilot to avoid this flight regime?

8. Explain the concept of *speed stability* with reference to the power required and power available curves. How can different devices be used to mitigate a lack of speed stability?
9. For the aircraft introduced in Problem 1 or the one introduced in Problem 2 of [Section 9.6](#), calculate
 - (a) the minimum airspeed for level flight when its landing gear is down: assume that the zero-lift drag coefficient C_{D0} increases by 0.02.
 - (b) the minimum airspeed for level flight when its flaps are set to 20 deg: assume that the maximum lift coefficient $C_{L\max}$ increases by 0.5 and the zero-lift drag coefficient C_{D0} increases by 0.015.
 - (c) the minimum airspeed for level flight when its flaps are set to 40 deg: assume that the maximum lift coefficient $C_{L\max}$ increases by 1.0 and the zero-lift drag coefficient C_{D0} increases by 0.03.

12

TURNING PERFORMANCE

12.1. GOVERNING EQUATIONS

As mentioned earlier in [Section 3.5](#), the basic maneuver to change the flight path heading is the true banked or coordinated turn. For that reason, in discussing the maneuverability of airplanes, the emphasis is primarily on steady curvilinear flight with wings banked and without sideslip, as visualized in the previous [Fig. 3.8](#). Remember that in the coordinated turn we have the special conditions that the inward centripetal force required to pull to airplane toward the center of the turn is accomplished by the horizontal component of the lift and that both the resultant aerodynamic force ($R + T$) and the vector sum of the weight and the outward centrifugal force ($W + C$) are in the plane of symmetry of the airplane.

In accordance with our approach to analyzing point performance in [Chapter 9](#) to [Chapter 11](#), we shall continue to adopt that the thrust vector is tangent to the flight path ($\alpha_T = 0$). Then, from the system of equations from [Eq. 3.40](#), we find that the instantaneous conditions on the spiral flight path are described by ([Fig. 12.1](#)):

$$T - D - W \sin \gamma = 0 \quad (12.1)$$

$$W \cos \gamma \sin \mu - C \cos \mu = 0 \quad (12.2)$$

$$-L + W \cos \gamma \cos \mu - C \sin \mu = 0 \quad (12.3)$$

Rather than the conventional air-path axis system used for symmetric flight, it is more convenient to employ for turning flight an additional axis system with axes X_t , Y_t , and Z_t . With the origin of the system at the center of gravity of the airplane, the X_t axis coincides with the X_a axis (and thus with the velocity vector). The Y_t axis lies in the horizontal plane along the radius of curvature. The Z_t axis lies in the vertical plane and is perpendicular to both the X_t and Y_t axes (see [Fig. 12.1](#)).

Resolving the forces along the latter coordinate system produces the following series of equations (cf. [Eq. 3.41](#)):

$$T - D - W \sin \gamma = 0 \quad (12.4)$$

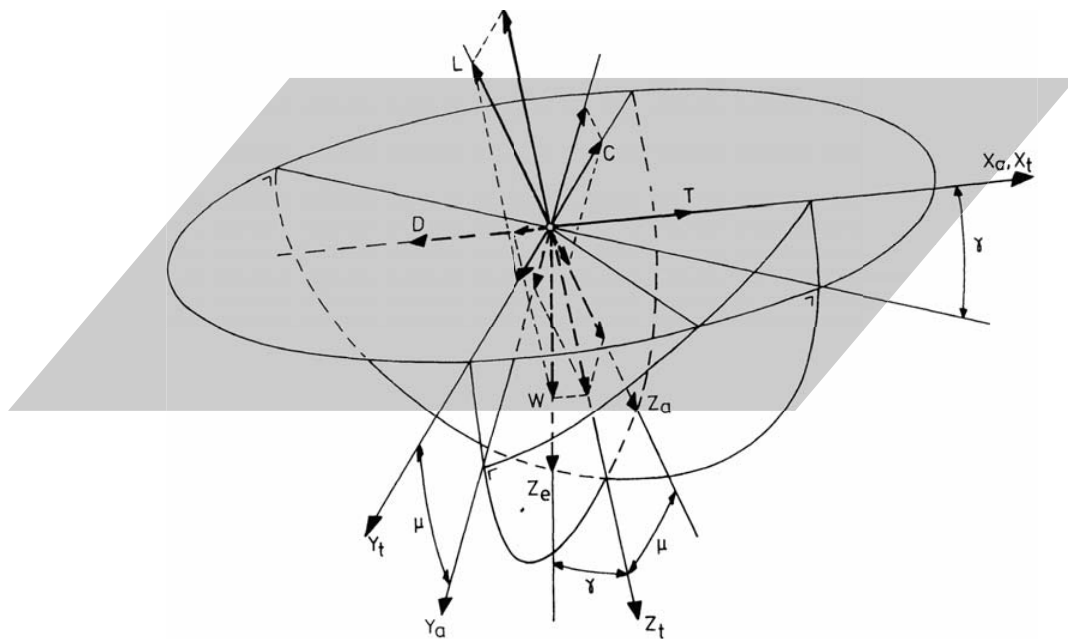


Figure 12.1 Forces in the coordinated turn

$$L \sin \mu - C = 0 \quad (12.5)$$

$$-L \cos \mu + W \cos \gamma = 0 \quad (12.6)$$

In examining the instantaneous flight condition in a coordinated turn, it is customary to assume level flight ($\gamma = 0$) since the resulting performance in level turning flight can be used to represent the performance in all normal climbing and descending turns. Then, from Eq. 3.39, we see that the aerodynamic angle of roll equals the angle of bank ($\mu = \Phi$). Further, the centrifugal force C is given by

$$C = \frac{W}{g} \frac{V^2}{R} \quad (12.7)$$

where R is the turning radius and g is the acceleration of gravity ($g = g_0 = 9.80665 \text{ m/s}^2$). Thus, the governing force equations alter, for steady-level turning flight, to

$$T - D = 0 \quad (12.8)$$

$$L \sin \Phi - \frac{W}{g} \frac{V^2}{R} = 0 \quad (12.9)$$

$$-L \cos \Phi + W = 0 \quad (12.10)$$

These equations can also be found directly from Fig. 12.2, where the forces in a turn to the right are represented when looking from behind and down on the airplane. The figure illustrates that

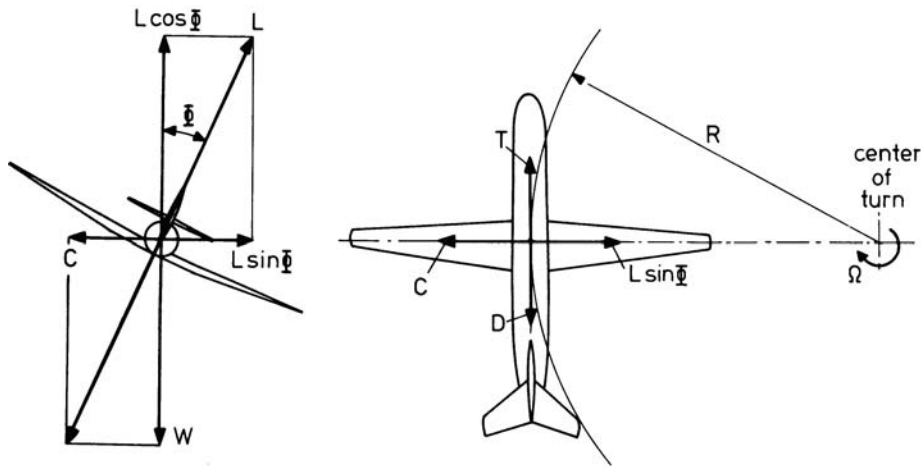


Figure 12.2 The airplane in a steady level true banked turn

in a true banked turn the centripetal force is completely balanced by the centrifugal force. This condition provides that the airplane has no tendency to move either inward or outward so that the airplane travels along a circular path. Fig. 12.2 also shows that the weight is balanced by the vertical component of the lift and that the drag equals the thrust.

Substitution of the relationships $L = C_L \frac{1}{2} \rho V^2 S$ and $D = C_D \frac{1}{2} \rho V^2 S$ into Eq. 12.8 and Eq. 12.10 yields

$$T = C_D \frac{1}{2} \rho V^2 S \quad (12.11)$$

$$\frac{W}{g} \frac{V^2}{R} = C_L \frac{1}{2} \rho V^2 S \sin \Phi \quad (12.12)$$

$$W = C_L \frac{1}{2} \rho V^2 S \cos \Phi \quad (12.13)$$

For given values of W and ρ , the three Eq. 12.11, Eq. 12.12 and Eq. 12.13 contain five variables: α , V , Γ , R and Φ so that the flight condition is determined by two control variables.

In the next section we will express the various performance items in terms of angle of attack α (C_L and C_D), and the angle of bank Φ .

12.2. EQUATIONS FOR THE PERFORMANCE IN A COORDINATED TURN

The airspeed in a constant altitude turn, from Eq. 12.13, is given by

$$V = \sqrt{\frac{W}{S} \frac{2}{\rho} \frac{1}{C_L} \frac{1}{\cos \Phi}} \quad (12.14)$$

The drag follows from Eq. 12.11 and Eq. 12.13 as

$$D = W \frac{C_D}{C_L} \frac{1}{\cos \Phi} \quad (12.15)$$

An expression for the power required is found by multiplying Eq. 12.15 with Eq. 12.14 to give

$$P_r = DV = W \sqrt{\frac{W}{S} \frac{2}{\rho} \frac{C_D^2}{C_L^3} \frac{1}{\cos^3 \Phi}} \quad (12.16)$$

The Eq. 12.14 to Eq. 12.16 can also be expressed in terms of angle of attack and load factor. According to its definition, the load factor n follows from Eq. 12.10 as

$$n = \frac{L}{W} = \frac{1}{\cos \Phi} \quad (12.17)$$

which shows that the load factor changes inversely as the cosine of the bank angle.

Using Eq. 12.17, we can write

$$V = \sqrt{\frac{nW}{S} \frac{2}{\rho} \frac{1}{C_L}} \quad (12.18)$$

$$D = nW \frac{C_D}{C_L} \quad (12.19)$$

$$P_r = nW \sqrt{\frac{nW}{S} \frac{2}{\rho} \frac{C_D^2}{C_L^3}} \quad (12.20)$$

Expressions for the radius of turn are obtained from Eq. 12.12 and Eq. 12.13, whence

$$R = \frac{W}{S} \frac{2}{\rho} \frac{1}{g} \frac{1}{C_L} \frac{1}{\sin \Phi} \quad \text{and} \quad (12.21)$$

$$R = \frac{V^2}{g \tan \Phi} \quad \text{or} \quad (12.22)$$

$$R = \frac{W}{S} \frac{2}{\rho} \frac{1}{g} \frac{1}{C_L} \frac{n}{\sqrt{n^2 - 1}} \quad \text{and} \quad (12.23)$$

$$R = \frac{V^2}{g \sqrt{n^2 - 1}} \quad (12.24)$$

These equations tell us that the larger the bank angle (hence the load factor) or the lower the airspeed in a turn, the smaller the radius of turn will be. It is important to note that the bank angle (hence the load factor) and the airspeed are constrained by the equilibrium equations to maintain the conditions of steady horizontal coordinated turn. For this reason, it is not possible to independently vary each of them without adjusting the other accordingly. The rate of turn can be found from Eq. 12.22 and Eq. 12.24 as

$$\Omega = \frac{V}{R} = \frac{g \tan \Phi}{V} = \frac{g \sqrt{n^2 - 1}}{V} \quad (12.25)$$

It might be interesting to mention that well-defined rates of turn are in common use. These turning rates are expressed in terms of the number of degrees the airplane changes heading in one second, namely:

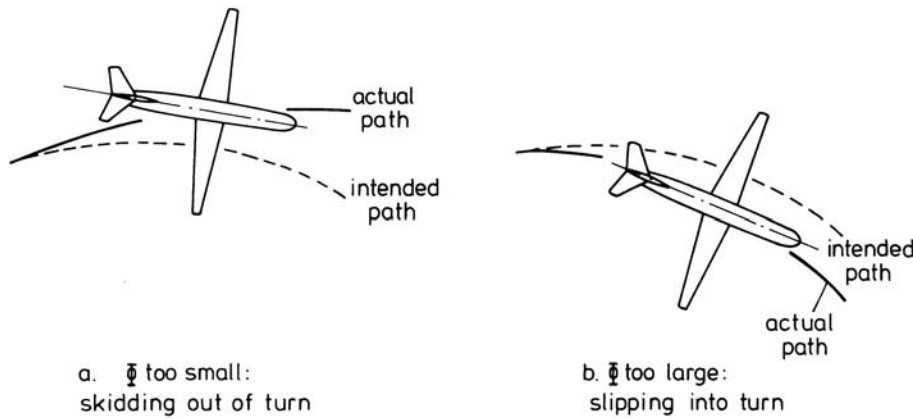


Figure 12.3 Turn with incorrect angle of bank

- Rate 1: $\Omega = 3 \text{ deg/s}$
- Rate 2: $\Omega = 6 \text{ deg/s}$
- Rate 3: $\Omega = 12 \text{ deg/s}$
- Rate 4: $\Omega = 24 \text{ deg/s}$

When turning at Rate 1, the airplane executes what is known as a *standard rate turn*, where a complete reversal of flight direction (180 deg turn) takes one minute. From Eq. 12.25, we see that the time needed to execute a 180 deg turn (π radians) is given by

$$T_{\pi} = \frac{\pi}{\Omega} = \frac{\pi V}{g \tan \Phi} = \frac{\pi V}{g \sqrt{n^2 - 1}} \quad (12.26)$$

Eq. 12.26 shows that the lower the airspeed the smaller the angle of bank (load factor) required for a desired turning time T_{π} . For example, at an airspeed of 300 km/hr (162 kts), the angle of bank for a Rate 1 turn ($T_{\pi} = 1 \text{ min}$) is 24 deg, and at $V = 150 \text{ km/hr}$ (81 kts) we find: $\Phi = 12.5 \text{ deg}$.

If for a given rate of turn the angle of bank is too small, the unbalanced centrifugal force will pull the airplane to the outside of the turn. Under this condition, the airplane is said to be skidding out of turn, whereby the nose of the airplane will swing toward the inside of the flight path (Fig. 12.3a). On the other hand, if the airplane banking is too large for the rate of turn the airplane will be pulled to the inside of the turn, and the nose will swing toward the outside; slipping into turn (Fig. 12.3b). Obviously, during an incorrect banked turn, also the occupants will tend to slide inward or outward on their seats.

To indicate to the pilot whether or not the angle of bank is correct for a particular rate of turn, the instrument panel in the cockpit is equipped with a turn and slip indicator. This instrument is actually a combination of two separate mechanisms, which are brought together in one casing; a turn needle and a ball which can move freely in a curved transparent tube. The dial presentation of a conventional turn and slip indicator is sketched in Fig. 12.4.

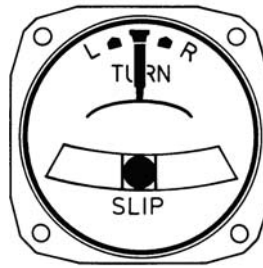


Figure 12.4 Turn and slip indicator

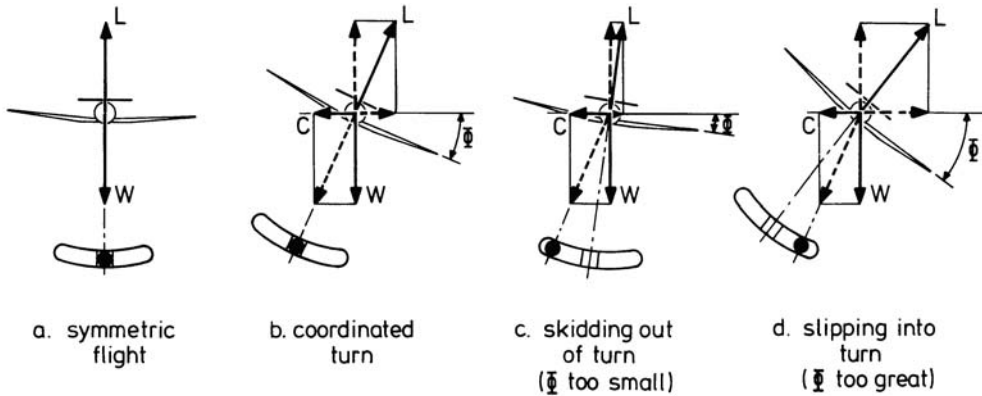


Figure 12.5 Slip indicator

The turn needle is a gyroscopically controlled pointer mechanism and indicates the rate at which the airplane is turning about its vertical axis. We leave the description of the way in which the turn indicator works to specialized books on aircraft instruments. For instance, see [Ref. 9](#).

For our aim it is merely of interest to understand the operation of the slip indicator. Therefore, let us examine [Fig. 12.5](#), where the position of the ball in the tube indicates skid or slip and is determined by the gravitational forces acting on the ball.

During symmetric flight as well as in a coordinated turn, the ball is in the lowest point of the tube because the resultant of the gravitational forces acts in the plane of symmetry of the airplane ([Fig. 12.5a](#) and [Fig. 12.5b](#)). If the gravitational forces are unbalanced, such as during a skid or a slip, the ball moves away from the center position in the direction of the horizontal excess force ([Fig. 12.5c](#) and [Fig. 12.5d](#)).

The influence of banking and turning on drag and power required curves can be examined by considering flight conditions at different load factors (angles of bank) but at a fixed angle of attack (fixed lift and drag coefficients). From [Eq. 12.14](#) to [Eq. 12.20](#), the following simple ratios are obtained when flight conditions at load factors n_1 and n_2 are considered:

$$\frac{V_2}{V_1} = \sqrt{\frac{n_2}{n_1}} = \sqrt{\frac{\cos \Phi_1}{\cos \Phi_2}} \quad (12.27)$$

$$\frac{D_2}{D_1} = \frac{n_2}{n_1} = \frac{\cos \Phi_1}{\cos \Phi_2} \quad (12.28)$$

$$\frac{P_{r2}}{P_{r1}} = \sqrt{\left[\frac{n_2}{n_1}\right]^3} = \sqrt{\left[\frac{\cos \Phi_1}{\cos \Phi_2}\right]^3} \quad (12.29)$$

These ratios indicate that at a given angle of attack the values of airspeed, drag and power required increase as the load factor or the angle of bank becomes greater. Drag and power required curves are plotted in Fig. 12.6 at various angles of bank for the former illustrative two-engine airplane with turboprops. The lift-drag polar of the airplane is given in the previous Fig. 11.17. The curves in Fig. 12.6 relate to the clean configuration (flaps and gear up), an airplane weight of 150000 N, and an altitude of 0 m (I.S.A.). The following technique was used to obtain the drag and power required curves at a given angle of bank:

1. Values of C_L were chosen.
2. The associated values of C_D were determined from the lift-drag polar in Fig. 11.17.
3. At each C_L , the airspeed was found from Eq. 12.14, using $\rho_0 = 1.225 \text{ kg/m}^3$.
4. Drag and power required were computed from Eq. 12.15 and Eq. 12.16, respectively.

This procedure of finding drag and power required at successive values of C_L was repeated for several values of angle of bank, and in this fashion the system of curves in Fig. 12.6 was determined. Clearly, also the stalling speed in a turn, $V_{S\Phi}$, increases proportional to the square root of the load factor,

$$V_{S\Phi} = \sqrt{\frac{nW}{2} \frac{2}{\rho} \frac{1}{C_{L\max}}} = V_S \sqrt{n} \quad (12.30)$$

where V_S is the stalling speed in symmetric flight.

The dashed lines in Fig. 12.6 are formed by the points on the drag and power required curves that correspond to a given lift coefficient.

From Eq. 12.27 to Eq. 12.29, we find that

$$\frac{D_2}{D_1} = \left[\frac{V_2}{V_1} \right]^2 \quad (12.31)$$

$$\frac{P_{r2}}{P_{r1}} = \left[\frac{V_2}{V_1} \right]^3 \quad (12.32)$$

Apparently, all corresponding points on the drag and power required curves are located on quadratic and third-order curves, respectively.

The circling motion, in principle, has two effects on the drag characteristics of the airplane. The first is a change in the flow direction relative to the airplane, and the second is that the outer wing

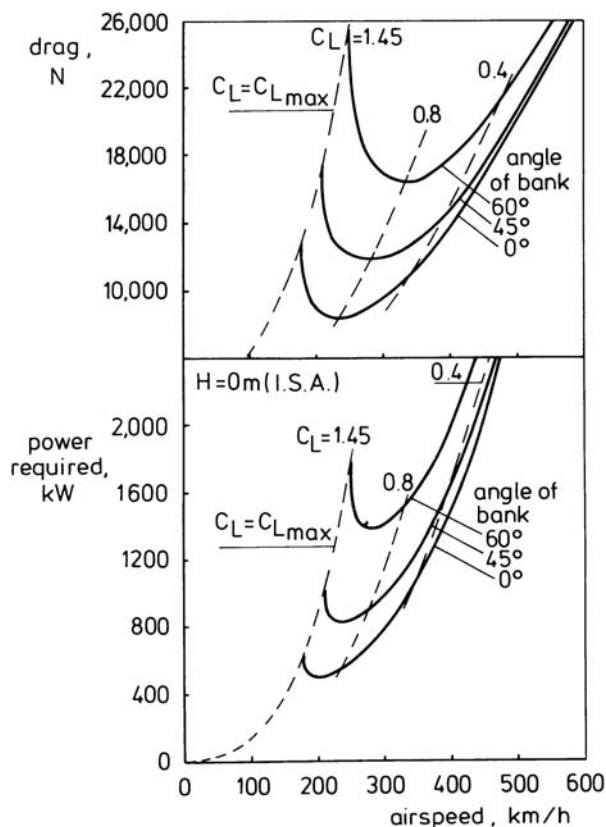


Figure 12.6 Drag and power required at various angles of bank

travels faster than the inner wing (Fig. 12.7). Usually, the second of these is the most important effect, implying the occurrence of nonuniform lift and drag distributions over the wing span, which give rise to moments affecting the rotation of the airplane (see also Section 11.2). These additional moments have to be trimmed by extra control surface deflections, resulting in more drag. The difference between the wing tip velocity and the flight speed is given by (see Fig. 12.7)

$$\Delta V = \Omega \frac{b}{2} \cos \Phi \quad (12.33)$$

By substituting Ω from Eq. 12.25, $\cos \Phi$ from Eq. 12.17, and V from Eq. 12.18 we can write the wing tip velocity difference relative to the flight speed as

$$\frac{\Delta V}{V} = \frac{bg}{2V^2} \frac{\sqrt{n^2 - 1}}{n} = \frac{\rho b S g C_L}{4W} \frac{\sqrt{n^2 - 1}}{n^2} \quad (12.34)$$

We can use Eq. 12.34 to judge the importance of the problem. For example, for an airplane having a minimum stalling speed V_{MS} of 60 m/s, a positive limiting load factor n_1 of 2.5, and a wing span

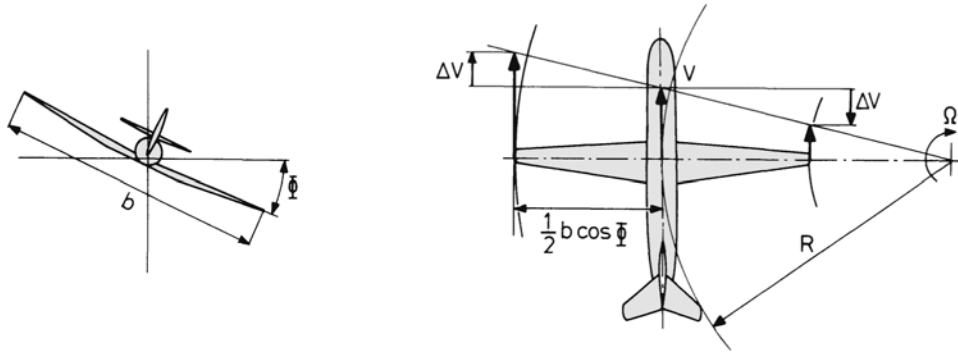


Figure 12.7 The airplane in circular motion

of 25 m, we get: $\Delta V/V_A = 0.031$. The latter result may indicate that in actual practice $\Delta V/V \ll 1$ so that the maneuvering capability of an airplane can be determined, to a first approximation, by neglecting the effects of rotation on trim drag.

Finally, we may remark that in turning flight an additional trim drag also may occur because of the fact that at the same airspeed the lift coefficient must be increased over that required for symmetric flight according to the equation

$$C_L = \frac{nW}{\frac{1}{2}\rho V^2 S} \quad (12.35)$$

The required equilibrium of moments about the lateral axis calls for a greater elevator angle and hence more drag is produced. However, in the present discussion we shall also neglect this effect on the drag characteristics of the airplane.


12.3. CALCULATION OF TURNING PERFORMANCE

The preceding analysis on turning performance can best be summarized by looking at an illustrative example. Therefore, sea-level performance diagrams are shown in Fig. 12.8 at a given engine control setting and at various angles of bank for the turboprop airplane of Section 12.2.

In order for the airplane to execute a level-flight turn, power required must be equal to power available at each airspeed. Owing to this requirement, we make the interesting observation that in Fig. 12.8 the total range of flight speeds, from the stalling speed $(V_S)_{\Phi=0}$ up to the maximum level flight speed $V_{\max}$, can be divided into two distinct parts, from $(V_S)_{\Phi=0}$ to V^* and from V^* to $V_{\max}$. In the first region $(V_S)_{\Phi=0} < V < V^*$, the airplane can execute a turn at maximum lift coefficient. Since power available prevails in this interval, the pilot must lower the engine control setting until the power available becomes equal to the power required. The value of P_a can be found from

$$P_a = \frac{1}{2}\rho V^3 S (C_D)_{C_{L\max}} \quad (12.36)$$

It should be noticed that limiting values of lift coefficient from buffet onset phenomena may be relevant to the possible stalling speeds in a turn. When a stall occurs during a turn, there is a tendency for the airplane to follow a descending spiral path in its stalled-state. This yawing-rolling motion is

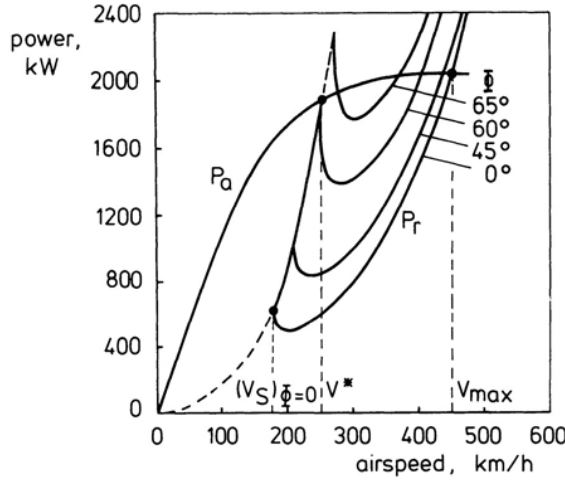

wing area : 70 m²
 lift-drag polar : Figure 11.17
 airplane weight : 150 kN
 altitude : 0 m (I.S.A.)
 engine rating : maximum continuous

Figure 12.8 Performance diagrams for turning flight

called *spin*. To guard against the danger of a turning stall, it is usual practice to keep the permissible maximum angle of attack below the critical value. In the second region ($V^* < V < V_{\max}$), the airplane cannot perform a level turn at $C_{L\max}$ because of limitations imposed by the power available curve in Fig. 12.8. Now, at a given airspeed the allowable turning drag coefficient follows from

$$C_D = \frac{P_a}{\frac{1}{2}\rho V^3 S} \quad (12.37)$$

Starting from the conditions as specified by the Eq. 12.36 and Eq. 12.37, the turning performance can be deduced from the envelope of the performance curves in Fig. 12.8, which for the sake of clearness are repeated separately in Fig. 12.9a.

The calculation procedure can be carried out as follows. With the lift coefficient being fixed at its maximum value $C_L = C_{L\max}$, the corresponding drag coefficient C_D is found from the lift-drag polar and is also fixed. Starting from the stalling speed $(V_S)_{\Phi=0}$, lift is computed from $L = \frac{1}{2}\rho V^2 S C_L$, the load factor from $n = L/W$, the drag required for such level turn from $D = nWC_D/C_L$, and the power required from $P_r = DV$. At this point, it is possible to check if the available power P_a is sufficient to maintain the turn in these conditions. If $P_a > P_r$, the airspeed can be increased in small steps, and the procedure is repeated until V^* is reached. In the latter condition, $P_a = P_r$ at $C_L = C_{L\max}$, and the calculation procedure must change. For airspeeds V higher than V^* , the required power is fixed at its maximum available value P_a , drag is calculated from $D = P_a/V$, the drag coefficient from $C_D = D/(1/2\rho V^2 S)$, the lift coefficient from the drag polar, and the load factor again from $D = nWC_D/C_L$. This is repeated until the maximum level flight speed $V_{\max}$ is reached, where the load factor is equal to 1. For any combination of airspeed and load factor, the angle of bank can now be calculated from $\Phi = \cos^{-1}(1/n)$, the radius of turn from $R = V^2/g \tan \Phi$, and the time in a 180 deg turn from $T_\pi = \pi R/V$. Exemplary numerical results are tabulated in Tab. 12.1 and plotted in Fig. 12.9b to Fig. 12.9d.

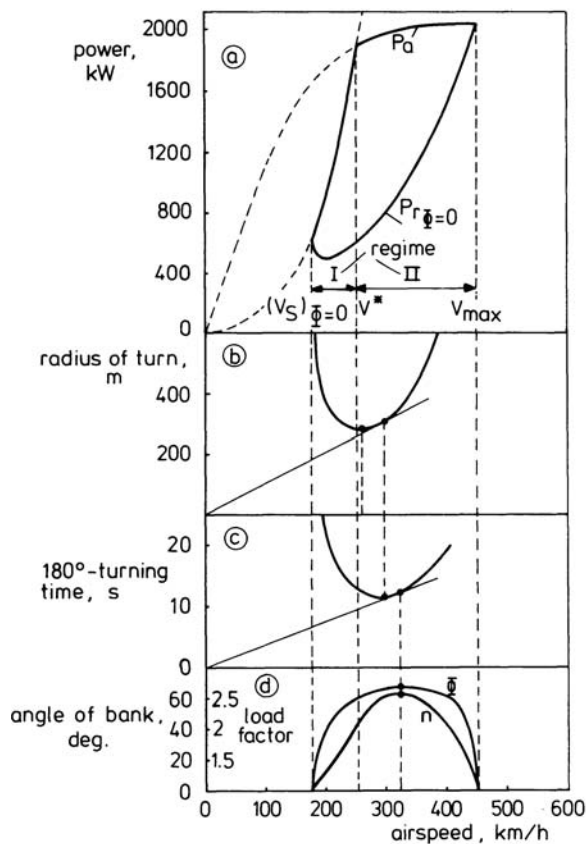


Figure 12.9 Turning performance

Table 12.1 Calculation of turning performance

V , km/hr	C_D	C_L	L , kN	n	Φ , deg	R , m	T_{π} , s
176	0.124	1.45	150.0	1.00	0.0	∞	∞
200	0.124	1.45	192.2	1.28	38.6	395	22
240	0.124	1.45	276.6	1.84	57.1	293	14
260	0.118	1.44	321.8	2.15	62.3	279	12
300	0.079	1.26	374.9	2.50	66.4	309	11
340	0.056	0.99	378.3	2.52	66.6	393	13
380	0.040	0.71	339.5	2.26	63.7	561	17
420	0.030	0.45	262.8	1.75	55.2	967	26
450	0.024	0.20	150.0	1.00	0.0	∞	∞

Evidently, at V_S and $V_{\max}$ the airplane is in steady level symmetric flight, where $n = 1$, $\Phi = 0$, $R = \infty$, $\Omega = 0$ and $T_\pi = \infty$. The curves show that the airspeed for minimum turning radius is not the same as that for minimum turning time. Likewise, the speed for fastest turn differs from the speed at which the bank angle and load factor are maximum. Apparently, we have:

$$V_{R_{\min}} < V_{T_{\pi\min}} < V_{n_{\max}}$$

To prove that this order has a general validity, we write

$$T_\pi = \frac{\pi R}{V}$$

This expression indicates that the location of the airspeed for fastest turn is found by drawing the tangent from the origin to the $R - V$ curve in Fig. 12.9b, giving $V_{T_{\pi\min}} > V_{R_{\min}}$. From Eq. 12.26, the angle of bank is $\tan \Phi = \frac{\pi}{g} \frac{V}{T_\pi}$ so that we find that the tangent to the $T_\pi - V$ curve in Fig. 12.9c locates the point where the angle of bank and the load factor are maximum, yielding $V_{n_{\max}} > V_{T_{\pi\min}}$. To this point in our discussion, only sea-level turning performance has been exemplified. In order to demonstrate the impact on maneuverability due to altitude effects, let us return to our transport airplane with turbofan engines of which the aerodynamic data are given in Fig. 9.7, and having a wing area of 365 m^2 , a weight of 2500 kN , and a maximum sea-level T/W of 0.25 . Since for this high-subsonic airplane compressibility drag may occur, at each flight velocity the lift and drag coefficients must be determined from the lift-drag polar for the turning flight Mach number.

Fig. 12.10 shows for three altitudes the radius of turn, turning time and load factor as functions of airspeed for this turbofan airplane, when flying at constant engine control setting. As the general tendency is for the thrust to decrease with altitude, also the resulting turning performance deteriorates strongly with increasing height.

12.4. ANALYTIC EXPRESSIONS FOR BEST TURNING PERFORMANCE

As we have seen in the preceding section, the airspeeds for maximum bank angle or load factor and minimum turning radius, define a speed region where optimum conditions are present for performing a turn.

Therefore, an interesting way of looking at the turning performance problem is to estimate the performance features at the boundaries of this velocity range. Here, this will be done by means of analytic expressions, which for their developments require the adoption of simplifying assumptions with regard to the variation of thrust and power available with flight speed. We first consider the estimation of the bank angle. Inserting $T = D$ and $P_a = P_r$ into Eq. 12.15 and Eq. 12.16 results in the following expressions,

$$\cos \Phi = \frac{W}{T} \frac{C_D}{C_L} \quad \text{and} \quad (12.38)$$

$$\cos \Phi = \left[\frac{\frac{W}{S} \frac{2}{\rho} (C_D^2 / C_L^3)}{(P_a / W)^2} \right]^{\frac{1}{3}} \quad (12.39)$$

If we take up the case of a subsonic jet airplane, we recall from Fig. 9.11 that the thrust for this type of airplane is more or less constant with airspeed. Using the idealized behavior that T does not

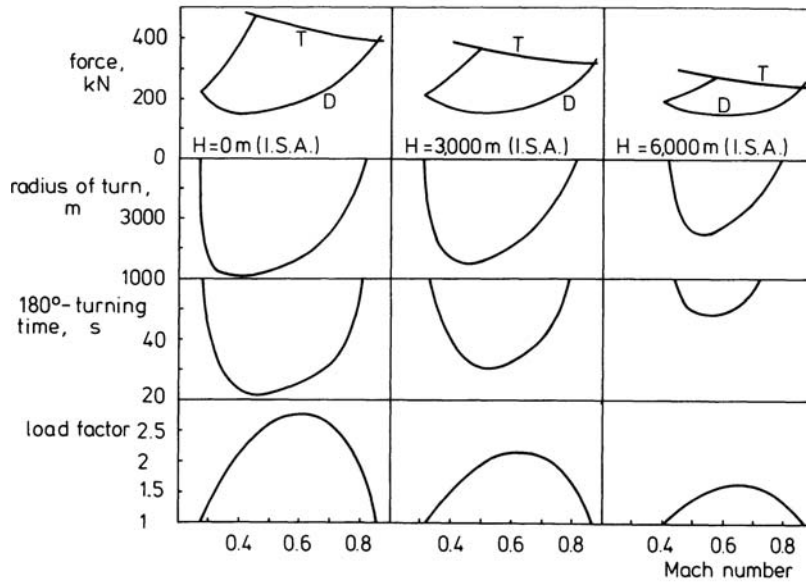


Figure 12.10 Effect of altitude on turning performance

vary with airspeed, then from Eq. 12.38, we draw the conclusion that the steepest turn (maximum bank angle and maximum load factor) occurs when the airplane is flown at the angle of attack for maximum lift-to-drag ratio, $(C_L/C_D)_{\max}$.

Likewise, it appears from Eq. 12.39 that in the case of a propeller-driven airplane for which we can make the working approximation that power available is independent of airspeed, the steepest turn is obtained in the flight at the angle of attack for maximum climb factor, $(C_L^3/C_D^2)_{\max}$.

Furthermore, we see that at constant engine control setting, the maximum angle of bank falls off with altitude due to the decrease of thrust or power available and air density with height. Note that the height has the same deteriorating influence on the associated values of turning radius and turning time, as can be seen from Eq. 12.21 and Eq. 12.26. The related airspeed, on the contrary, will show a gradual increase with altitude, as may be appreciated when we consider the equilibrium condition that the drag is equal to the thrust (see Eq. 12.11):

$$V = \sqrt{\frac{T}{\rho} \frac{2}{S} \frac{1}{C_D}} \quad (12.40)$$

In terms of power available, we have

$$V = \sqrt[3]{\frac{P_a}{\rho} \frac{2}{S} \frac{1}{C_D}} \quad (12.41)$$

In analyzing the variation of the airspeeds for steepest turn, $V_{\Phi_{\max}}$, we may assume that the ratios T/ρ and P_a/ρ both increase somewhat with height (see Chapter 9). Under these conditions, we find

at constant C_D an increasing value of $V_{\Phi_{\max}}$. The foregoing analysis shows anew that the maneuverability of an airplane improves as the flight altitude is decreased. When drawing this conclusion, however, it is important to remember that the maximum achievable load factor may be greater than the maximum allowable load factor. As mentioned in [Chapter 8](#), the value of the limit maneuvering load factor is based on strength requirements and may vary from 2.5 for transports up to roughly 7 for fighter airplanes. Moreover, passenger comfort in civil airplanes and the possibility of physical damage of the human body due to large accelerations and decelerations in combat airplanes may limit the maneuverability ([Ref. 35](#)).

From [Eq. 12.21](#), the condition for the tightest turn (minimum radius of turn) can be expressed as

$$R_{\min} = \frac{W}{S} \frac{2}{\rho} \frac{1}{g} \frac{1}{(C_L \sin \Phi)_{\max}} \quad (12.42)$$

where, for a jet-powered airplane, the relationship between C_L and Φ may be given by [Eq. 12.38](#). Elimination of the bank angle from [Eq. 12.38](#) and [Eq. 12.42](#) yields

$$R_{\min} = \frac{W}{S} \frac{2}{\rho} \frac{1}{g} \frac{1}{\left[C_L \sqrt{1 - \left[\frac{W}{T} \right]^2 \left[\frac{C_D}{C_L} \right]^2} \right]_{\max}} \quad (12.43)$$

This expression shows that at a given engine control setting and altitude (given value of T/W), the tightest turn occurs at an angle of attack which lies between the angle of attack for maximum lift coefficient and that for maximum lift-to-drag ratio.

The exact lift coefficient for minimum turning radius can be derived by differentiating the quantity between brackets in [Eq. 12.43](#) with respect to C_L and setting the result equal to zero,

$$\frac{d}{dC_L} \left[C_L \sqrt{1 - \left[\frac{W}{T} \right]^2 \left[\frac{C_D}{C_L} \right]^2} \right] = 0$$

This yields the following condition:

$$\frac{C_D}{C_L} \frac{dC_D}{dC_L} = \left(\frac{T}{W} \right)^2 \quad (12.44)$$

Introducing in [Eq. 12.44](#) a parabolic variation of C_L with C_D , that is $C_D = C_{D0} + C_L^2/(\pi Ae)$, we find the lift coefficient as

$$C_L = \sqrt{\frac{1}{2} \left(\frac{T}{W} \right)^2 (\pi Ae)^2 - C_{D0} \pi Ae} \quad (12.45)$$

From [Eq. 12.45](#), it is apparent that the lift coefficient for the tightest turn decreases with increasing height so that its largest value occurs at sea level, where the thrust is at a maximum. At low heights, however, the lift coefficient demanded by [Eq. 12.45](#) generally exceeds the maximum lift coefficient of the airplane so that only an actual minimum turning radius can be realized at the (calibrated) stalling speed in the turn, $V_{S\Phi}$. This observation also emphasizes the significance of a large value of the maximum lift coefficient in obtaining a small turning radius. At the theoretical ceiling, where $R = \infty$, we have $T/W = C_D/C_L$ in [Eq. 12.44](#), yielding $dC_D/dC_L = C_D/C_L$, which is the condition for

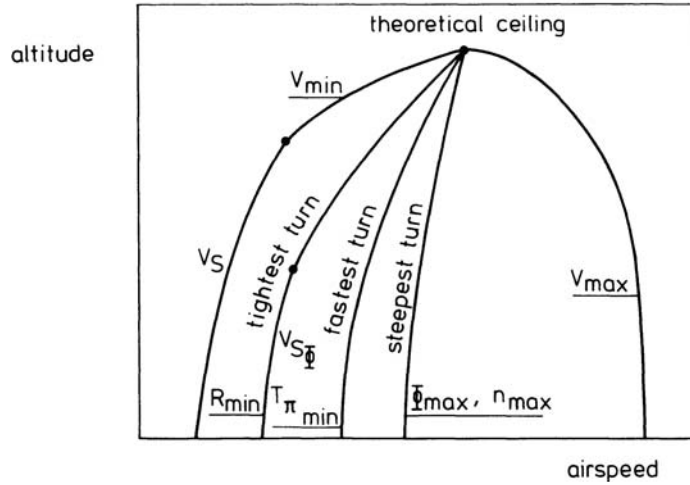


Figure 12.11 Effect of altitude on airspeeds for optimum turning performance

maximum lift-to-drag ratio (see Section 4.4). Therefore, the airspeed $V_{R_{\min}}$ normally increases from $V_{S\Phi}$ at sea level up to the minimum drag speed in level flight, $V_{D_{\min}}$, at the theoretical ceiling.

In the same manner, we can readily produce an expression, giving the lift coefficient for minimum radius of turn analogous to Eq. 12.45, for a propeller-driven airplane with power available independent of airspeed.

The required lift coefficient then turns out to be

$$C_L = \sqrt{\frac{27 (P_a/W)^4}{64 \left[\frac{W}{S} \frac{2}{\rho} \right]^2 (\pi A e)^4 - C_{D0} \pi A e}} \quad (12.46)$$

Now, the reader can easily determine that the lift coefficient given by the last equation will vary from $C_L = C_{L_{\max}}$ at sea level down to $C_L = \sqrt{3 C_{D0} \pi A e}$ at the theoretical ceiling, where is flown at the minimum power required speed. As a consequence, there is again the tendency for the airspeed for tightest turn to increase with altitude.

It will also be evident from the foregoing analyses that as a result of the difference in wing loading and in the variation of thrust with airspeed for jet-powered and propeller-driven airplanes, there is the particular quality of the latter airplane types that most of the speeds for best turning performance are somewhat less than those of their jet-driven counterparts.

We end this section with Fig. 12.11, where the qualitative relationships are sketched between the three airspeeds for best turning performance. For the sake of completeness, the minimum and maximum level flight speeds have also been indicated.

12.5. CLIMBING AND DESCENDING TURNS

Sometimes it may be needed to execute a climbing or descending turn, for example, when height must be altered in a flight over a restricted area.

From Eq. 12.4 to Eq. 12.6, the expressions for the airspeed, drag, power required and load factor in a climbing turn may be written as follows:

$$V = \sqrt{\frac{W}{S} \frac{2}{\rho} \frac{1}{C_L} \frac{\cos \gamma}{\cos \mu}} \quad (12.47)$$

$$D = \frac{C_D}{C_L} W \frac{\cos \gamma}{\cos \mu} \quad (12.48)$$

$$P_r = W \sqrt{\frac{W}{S} \frac{2}{\rho} \frac{C_D^2}{C_L^3} \frac{\cos^3 \gamma}{\cos^3 \mu}} \quad (12.49)$$

$$n = \frac{\cos \gamma}{\cos \mu} \quad (12.50)$$

According to Eq. 3.39, the aerodynamic angle of roll μ in these expressions is related to the bank angle Φ and the flight-path angle γ by

$$\sin \mu = \frac{\sin \Phi}{\cos \gamma} \quad (12.51)$$

Comparing Eq. 12.48 and Eq. 12.49 with Eq. 12.15 and Eq. 12.16 shows that for climbing flight, the drag and power required at given angle of attack and bank angle are unequal to the corresponding values for a constant altitude turn. Nevertheless, for small flight path angles, say, $\gamma < 15^\circ$, it is acceptable to assume $\cos \gamma = 1$ so that drag and power required are given by Eq. 12.15 and Eq. 12.16. With this, the following approximations to the flight-path angle and the rate of climb in a climbing turn hold:

$$\sin \gamma = \frac{T - D}{W} = \frac{T}{W} - \frac{C_D}{C_L} \frac{1}{\cos \Phi} \quad (12.52)$$

$$RC = \frac{P_a - P_r}{W} = \frac{P_a}{W} - \sqrt{\frac{W}{S} \frac{2}{\rho} \frac{C_D^2}{C_L^3} \frac{1}{\cos^3 \Phi}} \quad (12.53)$$

Of course, the extension of a symmetric climb with a turn will have the effect that the rate of climb becomes less than that in straight flight, provided that during the maneuver the engine control setting remains unchanged.

Similarly, a greater rate of descent occurs in a descending turn than in a symmetric descent. As we have remarked in Chapter 3, in order to lose height in approaching for landing, small airplanes may perform a straight sideslipping flight. In this respect it may be more effective to execute a descending turn and in particular a slipping turn, where the airplane is subjected to a large drag. The latter maneuver is characterized by the fact that the bank angle is too large for the rate of turn. Under this condition, the airplane slips into the turn with its nose pointing toward the outside of the turn (see Fig. 12.3b). Fig. 12.12 gives by way of illustration the forces acting on the airplane in a

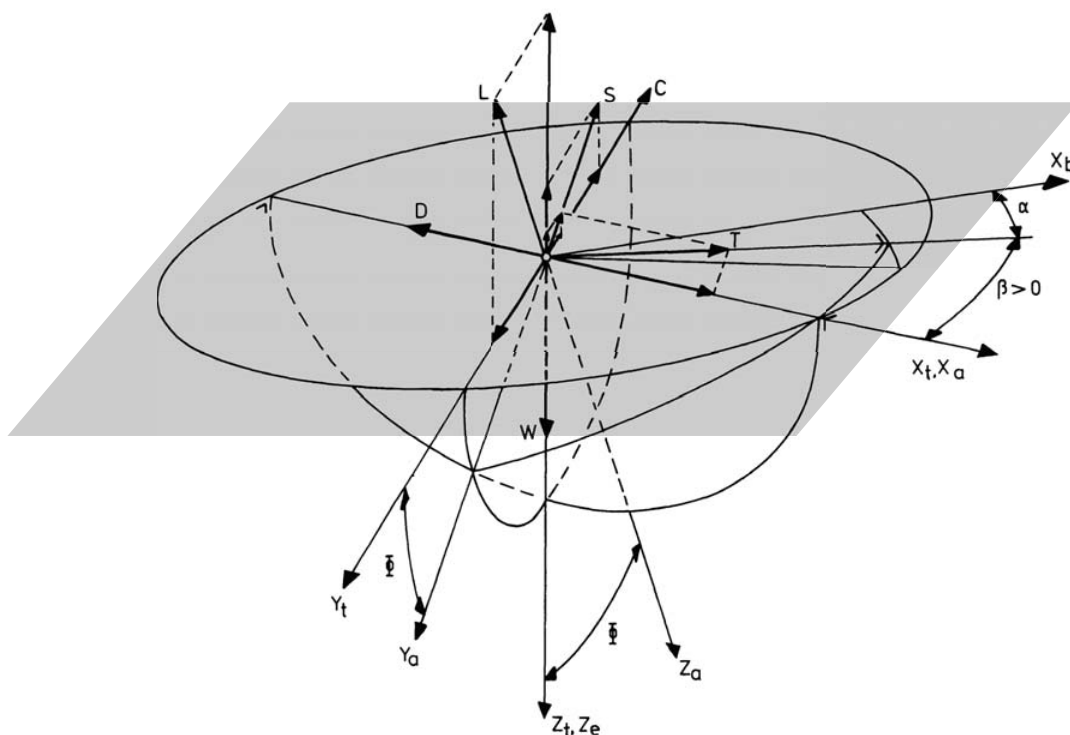


Figure 12.12 Forces in a slipping turn

slipping level turn to the right ($\beta > 0$). When resolving the forces along the X_t , Y_t and Z_t axes, we get the following equations for level slipping turning flight:

$$-D + T \cos \beta = 0 \quad (12.54)$$

$$L \sin \Phi - T \sin \beta \cos \Phi - S \cos \Phi - C = 0 \quad (12.55)$$

$$-L\cos\Phi - T\sin\beta\sin\Phi - S\sin\Phi + W = 0 \quad (12.56)$$

A special type of flight is the gliding turn, which for example is carried out by a glider pilot when circling in rising air to gain height and also as a means to lose height when descending toward the airfield for landing. We shall look at this type of maneuver in [Chapter 13](#).

As we have previously mentioned, in a turn the outer wing will move faster than the inner wing, and therefore will produce more lift. As a consequence, it may be found necessary to apply opposite aileron deflections in order to maintain the desired angle of bank. This intervention of the pilot is called *holding off bank*. A point to note is that this phenomenon is different in climbing and descending turns. To explain this, we consider the three rotations of the airplane about its body axes.

Recalling that $\Omega = d\psi/dt$, we find from Eq. 1.22 the angular velocities as follows (see also Fig. 1.20).

$$\text{rate of roll } p = -\Omega \sin \theta \quad (12.57)$$

$$\text{rate of pitch } q = \Omega \cos \theta \sin \phi \quad (12.58)$$

$$\text{rate of yaw } r = \Omega \cos \theta \cos \phi \quad (12.59)$$

In these equations, θ is the angle of pitch and ϕ is the angle of roll. Note that the rate of turn Ω is positive when pointing along the positive Z_e axis (vertically downward).

In a climbing turn ($\theta > 0$), the airplane is besides pitching and yawing, also rolling outward. Conversely, in a descending turn the airplane is rolling inward.

The roll to the outside of the turn in a climb increases the angle of attack at the outer wing above that of the inner wing. In combination with its higher velocity, the outer wing generates more lift so that the airplane may have a tendency to over-bank.

The inward roll of the descending turn causes a greater angle of attack at the inner wing. The additional lift obtained in this fashion may balance the extra lift furnished by the outer wing due to its higher speed. Accordingly, in a descending turn, the problem of hold-off bank is generally absent.

12.6. PROBLEMS

1. An airplane is in a steady level symmetric flight condition. The true airspeed equals 100 m/s. The pilot initiates a steady level coordinated turn by banking the aircraft to 30 deg and has the intention to maintain airspeed and altitude. After banking the aircraft, the pilot must
 - (a) increase the pitch attitude and thereby the angle of attack
 - (b) increase the thrust
 - (c) none of the above
 - (d) increase the pitch attitude and the thrust
2. Consider an airplane conducting a turn at a bank angle ϕ of 60 deg and an airspeed of 80 m/s. Calculate the corresponding load factor.
3. Air traffic control requests an airplane to conduct a level rate-one turn at an airspeed of 70.0 m/s and 1000 m altitude (I.S.A.). Determine the bank angle needed to execute the turn and the corresponding turn radius and load factor.
4. A general aviation airplane has a maximum lift coefficient $C_{L\max}$ of 1.4, a weight W of 8 kN and a wing surface area S of 10 m².
 - (a) Calculate the stall speed of this airplane in (a) steady level symmetric flight and in (b) a steady level coordinated turn at a load factor $n = 2$.
 - (b) Discuss the effect of bank angle on stall speed.
5. A subsonic jet airplane is flying with a true airspeed V of 75 m/s at 1500 m altitude (I.S.A.). The following data are available at this specific flight condition.

Parameter	Value
Weight	150 kN
Wing surface area	250 m ²
Wing span	50 m
Oswald's efficiency factor	0.80
Maximum lift coefficient	1.2
Flight altitude	1500 m (I.S.A.)
Maximum thrust at 1500 m altitude	25 kN

The aerodynamic characteristics of this airplane can be represented with a parabolic lift drag polar. The maximum thrust can be assumed constant as a function of airspeed.

- (a) Calculate the maximum achievable load factor when flying at 75 m/s.
 - (b) Is the turning performance in this condition limited by the maximum available thrust or by the maximum lift coefficient?
 - (c) Calculate the minimum turn radius when flying at 75 m/s and the corresponding time to execute a 180 deg turn.
6. For the airplane of problem 5, consider flight steady level coordinated turning flight conditions at different angles of bank ($\phi = 30$ deg, 45 deg and 60 deg) but at a fixed angle of attack of 5 deg. The airplane has a linear lift curve slope up to the maximum lift coefficient.

$$C_L = 5.15 \cdot (\alpha + 0.009) \quad \text{with } \alpha \text{ expressed in radians}$$

Calculate the aerodynamic drag D , power required P_r and corresponding true airspeed V , for each angle of bank specified.

7. The propulsion system characteristics of the subsonic jet airplane of problem 5 can be described as a function of altitude with the following relation.

$$\frac{T}{T_0} = \frac{\rho}{\rho_0}$$

where T_0 and ρ_0 represent the sea level static thrust and the air density at sea level conditions (I.S.A.).

- (a) Redo the calculation of problem 5 for a flight altitude of 3000 m.
 - (b) Discuss the effect of altitude on turning performance in terms of airspeed, power required and aerodynamic drag.
 - (c) Explain whether the maximum achievable load factor of this airplane will increase, decrease or remain the same with increasing altitude.
8. An airplane powered by two turboprop engines has the following characteristics

Parameter	Value
Weight	140 kN
Wing surface area	70 m ²
Wing aspect ratio	12
Oswald's efficiency factor	0.76
Maximum lift coefficient	1.5
Flight altitude	1000 m (I.S.A.)
Zero-lift drag coefficient	0.013

The airplane flies at 250 km/hr (true airspeed) and is performing a climbing turn at a bank angle of 40 deg. At this airspeed and altitude, the combined maximum power available is 1200 kW.

- Calculate the maximum rate of climb in this climbing turn.
- Is the achievable rate of climb in a turn larger than, equal to, or smaller than the rate of climb in horizontal level flight at the same lift coefficient? Give a thorough explanation with your answer.

13

GLIDING FLIGHT

13.1. SYMMETRIC FLIGHT

Gliding flight, by definition, is the flight with zero thrust. Naturally, this is true in the case of an engineless glider or sailplane, but it is also true when an airplane is flying with the engine(s) at idling. In the latter case, the propulsive force is usually sufficiently small that its contribution to the resultant aerodynamic force can be ignored. Furthermore, zero thrust can be expected when an airplane has shortage of fuel or when a single-engine airplane has engine failure.

Setting $T = 0$ in Eq. 9.1 and Eq. 9.2, we obtain the following equations (see also Fig. 9.1)

$$-D - W \sin \gamma = 0 \quad (13.1)$$

$$L - W \cos \gamma = 0 \quad (13.2)$$

Eq. 13.1 and Eq. 13.2 describe the equilibrium of forces for symmetric un-powered flight and show that the weight must be balanced by the lift and drag only. Since the drag is directed along the negative X_a axis, a state of equilibrium exists if the weight furnishes a force component in the direction of flight. In other words, the airplane must travel downward so that $\gamma < 0$ (Fig. 13.1).

When an airplane flies at a negative flight-path angle, it is said to be in either a descent or a dive. The term descent is used when the flight path makes a relatively small angle with the horizontal plane, whilst a dive concerns the occurrence of a steep slope of the flight path. Descents and dives may be executed in the flight with either power-on or power-off. The subject of the present chapter is the glide, which is thus a descending or diving flight with $T = 0$.

In order to avoid the use of negative flight-path angles in formulae, one conventionally defines:

$$\gamma_d = -\gamma \quad (13.3)$$

Hence, the angle γ_d is counted positive downward and is called the angle of descent or angle of glide. Similarly, a negative rate of climb may be replaced by a positive rate of descent (rate of sink),

$$RD = -RC \quad (13.4)$$

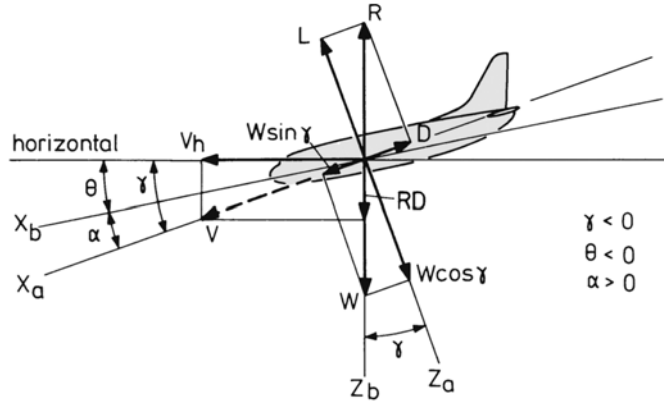


Figure 13.1 Steady symmetric glide conditions

Substituting $\gamma_d = -\gamma$ into Eq. 13.1 and Eq. 13.2 and using the familiar expressions; $L = C_L \frac{1}{2} \rho V^2 S$ and $D = C_D \frac{1}{2} \rho V^2 S$, we obtain in a glide

$$D = C_D \frac{1}{2} \rho V^2 S = W \sin \gamma_d \quad (13.5)$$

$$L = C_L \frac{1}{2} \rho V^2 S = W \cos \gamma_d \quad (13.6)$$

From Eq. 13.6, the airspeed can be written as

$$V = \sqrt{\frac{W}{S} \frac{2}{\rho} \frac{1}{C_L} \cos \gamma_d} \quad (13.7)$$

Dividing Eq. 13.5 by Eq. 13.6 gives

$$\tan \gamma_d = C_D / C_L \quad (13.8)$$

From Eq. 13.7 and Eq. 13.8, the rate of descent in gliding flight is found to be

$$RD = V \sin \gamma_d = V \frac{C_D}{C_L} \cos \gamma_d = \sqrt{\frac{W}{S} \frac{2}{\rho} \frac{C_D^2}{C_L^3} \cos^3 \gamma_d} \quad (13.9)$$

Note that, at low subsonic flight speeds and ignoring Reynolds number effects, the quantities V , γ_d and RD in Eqs. 13.7 to 13.9, are fully determined by the angle of attack, which in its turn is controlled by the elevator.

Eqs. 13.7 to 13.9 form the basis of our analyses on performance in gliding flight. In the following we proceed by examining the variations of V , γ_d and RD with angle of attack for a specified type of glider. Let us assume that this airplane has a parabolic lift-drag polar with $C_D = 0.012 + 0.02 C_L^2$ and a maximum lift coefficient of 1.5. Fig. 13.2 shows a graph of the drag equation, where the variations of the lift-to-drag ratio C_L / C_D and the climb factor C_L^3 / C_D^2 with lift coefficient are also plotted. The

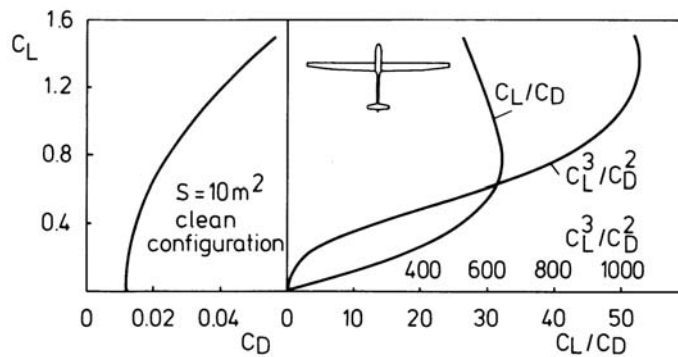


Figure 13.2 Plot of parabolic lift-drag polar for glider

Table 13.1 Calculation of glide performance. Airplane weight $W = 4000$ N, wing area $S = 10$ m², altitude $H = 2000$ m (I.S.A.), configuration: clean.

C_L	C_D	C_L/C_D	C_L^3/C_D^2	γ_d , deg	V , km/hr	RD , m/s	V_h , km/hr
1.50	0.0570	26.3	1038.8	2.176	82.8	0.874	82.8
1.40	0.0512	27.3	1046.8	2.094	85.7	0.871	85.7
1.30	0.0458	28.4	1047.4	2.018	89.0	0.870	88.9
1.20	0.0408	29.4	1038.1	1.947	92.6	0.874	92.6
1.10	0.0362	30.4	1015.7	1.885	96.7	884	96.7
1.00	0.0320	31.3	976.6	1.833	101.5	0.901	101.4
0.90	0.0282	31.9	916.7	1.795	107.0	0.930	106.9
0.80	0.0248	32.3	832.5	1.776	113.4	0.976	113.4
0.70	0.0218	32.1	721.7	1.784	121.3	1.049	121.2
0.60	0.0192	31.3	585.9	1.833	131.0	1.164	130.9
0.50	0.0170	29.4	432.5	1.947	143.5	1.354	143.4
0.40	0.0152	26.3	277.0	2.176	160.4	1.692	160.3
0.30	0.0138	21.7	141.8	2.634	185.2	2.364	185.0
0.20	0.0128	15.6	48.8	3.662	226.7	4.022	226.3
0.10	0.0122	8.2	6.7	6.956	319.8	10.757	317.4
0.00	0.0120	0.0	0.0	90.000	926.8	257.435	0.0

computations are made in [Tab. 13.1](#), presuming a flight at an altitude of 2000 m (I.S.A.) and a wing loading of 400 N/m². The airplane data specified for our numerical example may illustrate the general features that airplanes designed for gliding have a comparatively low wing loading, a low induced drag factor (large wing aspect ratio), and a small C_{D0} value. A graphic representation of the point performance in symmetric flight is sketched in [Fig. 13.3](#) in the form of the hodograph curve. As we have seen in [Chapter 9](#), this diagram is a plot of the vertical velocity $RD = V \sin \gamma_d$ versus the horizontal velocity $V_h = V \cos \gamma_d$. Clearly, the length of the vector from the origin O to a point on the hodograph represents the magnitude of the airspeed along the flight path that corresponds to

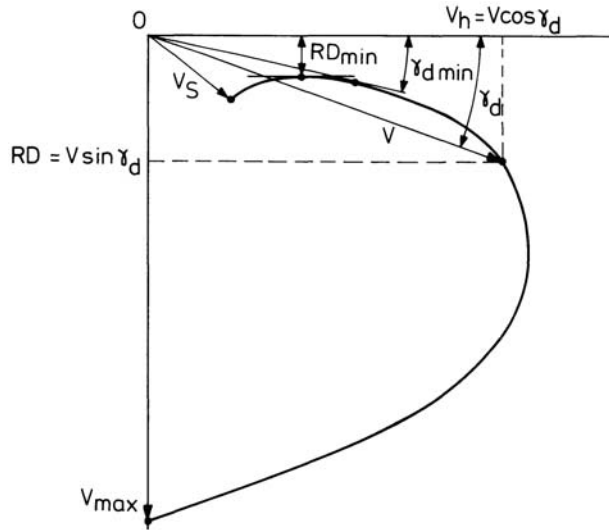


Figure 13.3 Hodograph curve for gliding flight

that point. The angle confined between a radius vector and the horizontal axis is a measure of the angle of descent.

From an inspection of the hodograph curve, the following features are apparent:

- From the stalling speed at maximum lift coefficient, the airspeed increases continuously with decreasing lift coefficient. When flying at $C_L = 0$, the airplane is in a steady vertical dive ($\gamma_d = 90^\circ$), where the flight velocity is maximum.
- The minimum value for the rate of descent occurs at that point where the hodograph has a horizontal tangent.
- The point on the hodograph that corresponds to the minimum angle of descent is found by drawing a line from the origin tangent to the curve.

An expression for the terminal-speed in the vertical dive is obtained by substituting $C_D = C_{D0}$ and $\sin \gamma_d = 1$ in Eq. 13.15, which furnishes

$$V_{max} = \sqrt{\frac{W}{S} \frac{2}{\rho} \frac{1}{C_{D0}}} \quad (13.10)$$

For our illustrative glider we find $V_{max} = 927 \text{ km/hr}$, which value will strongly exceed the design diving speed for which the airplane is designed to withstand loads that may be expected during normal operation. A typical value of the maximum allowable airspeed for a glider is of the order of 250 km/hr (Ref. 36).

Minimum rate of descent is of interest to the pilot who wants to perform a flight with maximum endurance, that is, the maximum length of time that the glider can stay in the air,

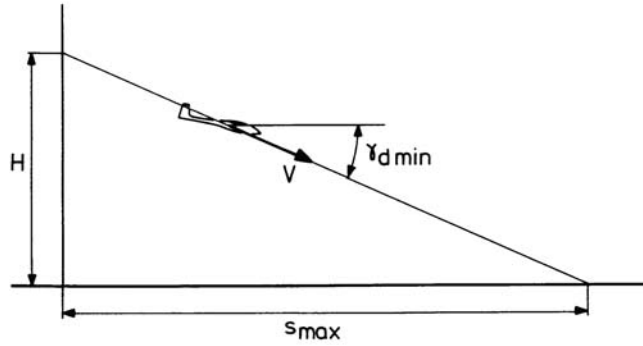


Figure 13.4 Maximum distance covered In quasi-steady glide

$$t_{\max} = \int_H^0 \frac{-dH}{RD_{\min}} = \int_H^0 \frac{dH}{RD_{\min}} \quad (13.11)$$

Minimum angle of descent is of importance to the pilot who wants to glide as far as possible (Fig. 13.4),

$$s_{\max} = \int_H^0 \frac{dH}{\tan \gamma_{d \min}} = \frac{H}{\tan \gamma_{d \min}} \quad (13.12)$$

From Eq. 13.8 we see that the smallest angle of descent, and hence the maximum horizontal distance that the glider can travel, is obtained when the angle of attack is such that the lift-to-drag ratio is the maximum, so that

$$s_{\max} = H \left[\frac{C_L}{C_D} \right]_{\max} \quad (13.13)$$

Notice that there is no effect of weight on the minimum angle of descent and so on maximum range. On the other hand, weight affects the airspeed at a given height and lift coefficient and with that the corresponding endurance.

From Tab. 13.1, we observe that when considering a glide in the normal range of airspeeds, the angle of descent remains small enough to assume $\cos \gamma_d = 1$. Using this approximation in the Eq. 13.7 to Eq. 13.9 yields the following expressions for gliding flight:

$$V = \sqrt{\frac{W}{S} \frac{2}{\rho} \frac{1}{C_L}} \quad (13.14)$$

$$\gamma_d = \tan^{-1} \left[\frac{C_D}{C_L} \right] = \sin^{-1} \left[\frac{C_D}{C_L} \right] \quad (13.15)$$

$$RD = \sqrt{\frac{W}{S} \frac{2}{\rho} \frac{C_D^2}{C_L^3}} \quad (13.16)$$

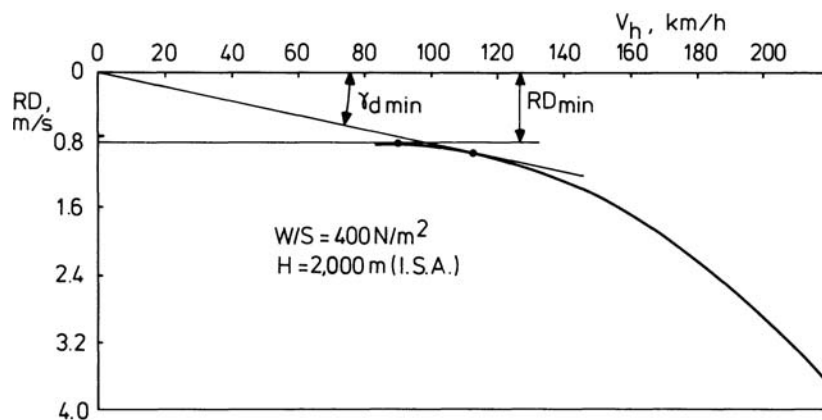


Figure 13.5 Glide performance hodograph assuming $\gamma_d = 1$

Eq. 13.16 shows that with the assumption $\cos \gamma_d = 1$, the minimum rate of descent is obtained when the climb factor C_L^3/C_D^2 is the maximum. We also see that at the speed for best glide angle the airplane drag is minimum,

$$D_{\min} = W \sin \gamma_{d\min} = \frac{W}{(C_L/C_D)_{\max}} \quad (13.17)$$

Likewise, it follows that at the speed for minimum rate of descent, the power required is minimum,

$$P_{r\min} = (DV)_{\min} = (WV \sin \gamma_d)_{\min} = W(RD_{\min}) \quad (13.18)$$

Fig. 13.5 gives again the hodograph for our illustrative glider, but now calculated from Eq. 13.14 to Eq. 13.16, and for the speed range extending from the stall to about the maximum allowable airspeed. With the adoption of a parabolic lift-drag polar, $C_D = C_{D0} + C_L^2/(\pi Ae)$, the airspeeds for best glide angle and for minimum rate of descent can easily be deduced from Eq. 13.14 as

$$V_{\gamma_{d\min}} = \sqrt{\frac{W}{S} \frac{2}{\rho} \frac{1}{\sqrt{C_{D0}} \pi Ae}} \quad (13.19)$$

$$V_{RD_{\min}} = \sqrt{\frac{W}{S} \frac{2}{\rho} \frac{1}{\sqrt{3} C_{D0} \pi Ae}} \quad (13.20)$$

For our glider the lift coefficients for flattest glide and for minimum rate of descent are 0.78 and 1.34, respectively. As discussed in Chapter 4, a large part of the lift-drag polar is indeed roughly parabolic, but there may be some additional drag at lift coefficients above about 1.0. This means that the actual minimum rate of descent tends to be worse than the parabolic drag equation forecasts.

13.2. EFFECT OF ALTITUDE

To investigate the effect of altitude on the performance in gliding flight, two flight conditions at different altitudes but at the same angle of attack are considered. The latter requirement says that

the lift and drag coefficients remain constant as the altitude varies, provided that slight Reynolds number effects on the lift-drag polar can be ignored. Since from Eq. 13.8 the glide angle is completely determined by the lift-to-drag ratio, we discover that this angle also remains unchanged. Using the subscripts “1” and “2” to denote the set of conditions at altitudes H_1 and H_2 the ratio of the horizontal velocities is

$$\frac{V_{h2}}{V_{h1}} = \frac{\sqrt{\frac{W}{S} \frac{2}{\rho_2} \frac{1}{C_L} \cos \gamma_d \cos \gamma_d}}{\sqrt{\frac{W}{S} \frac{2}{\rho_1} \frac{1}{C_L} \cos \gamma_d \cos \gamma_d}} = \sqrt{\frac{\rho_1}{\rho_2}} \quad (13.21)$$

Similarly, for the ratio of the vertical velocities we obtain

$$\frac{RD_2}{RD_1} = \frac{\sqrt{\frac{W}{S} \frac{2}{\rho_2} \frac{1}{C_L} \cos \gamma_d \sin \gamma_d}}{\sqrt{\frac{W}{S} \frac{2}{\rho_1} \frac{1}{C_L} \cos \gamma_d \sin \gamma_d}} = \sqrt{\frac{\rho_1}{\rho_2}} \quad (13.22)$$

Combining Eq. 13.21 and Eq. 13.22 yields

$$\frac{V_{h2}}{V_{h1}} = \frac{RD_2}{RD_1} \quad (13.23)$$

Let us now consider Fig. 13.6a, where the hodograph curves are shown for our illustrative glider at three altitudes. According to Eq. 13.23, corresponding points on the curves shift to the left and upward along a straight line through the origin when altitude decreases (increasing air density). Consequently, all curves have a joint tangent which defines the minimum angle of glide. Note that the related airspeed decreases with decreasing height. Likewise, we find that at a given angle of attack the rate of descent and the corresponding airspeed both fall off with decreasing altitude. Looking at Eqs. 13.11 to 13.16, we see that the flight program for maximum range as well as for maximum endurance requires that the pilot controls the airplane in such a way that throughout the glide the dynamic pressure remains constant. In other words, the equivalent airspeed must be kept constant and the true airspeed increases when the airplane descends. Because the acceleration is typically small, though, it is neglected in the equations of motion, and the flight is said to be quasi-steady. It will be evident from the foregoing discussion that plotting the hodograph curves on the basis of equivalent airspeeds will lead again to a single curve applying at all altitudes (Fig. 13.6b).

In this respect, it is worth to note that the pilot is faced with two sorts of speed data. The airspeed indicator, in principle, displays equivalent airspeeds, whereas the readings of the vertical-speed indicator are close to true speeds. Widely used for indicating the vertical velocity of a glider is the mechanical variometer, which, like the vertical speed indicator discussed earlier in Chapter 5, is a pressure-operated device. As shown in Fig. 13.7, one side of the variometer is connected to the static pressure tapping on the glider and the other to a vacuum-insulated capacity. When the airplane descends, the increasing pressure forces air to flow into the device through the clearance between the vane and the case; the flow direction, naturally, is reversed when climbing. The pointer, which is directly connected to the vane, shows a displacement owing to the different pressures acting on the two sides of the vane.

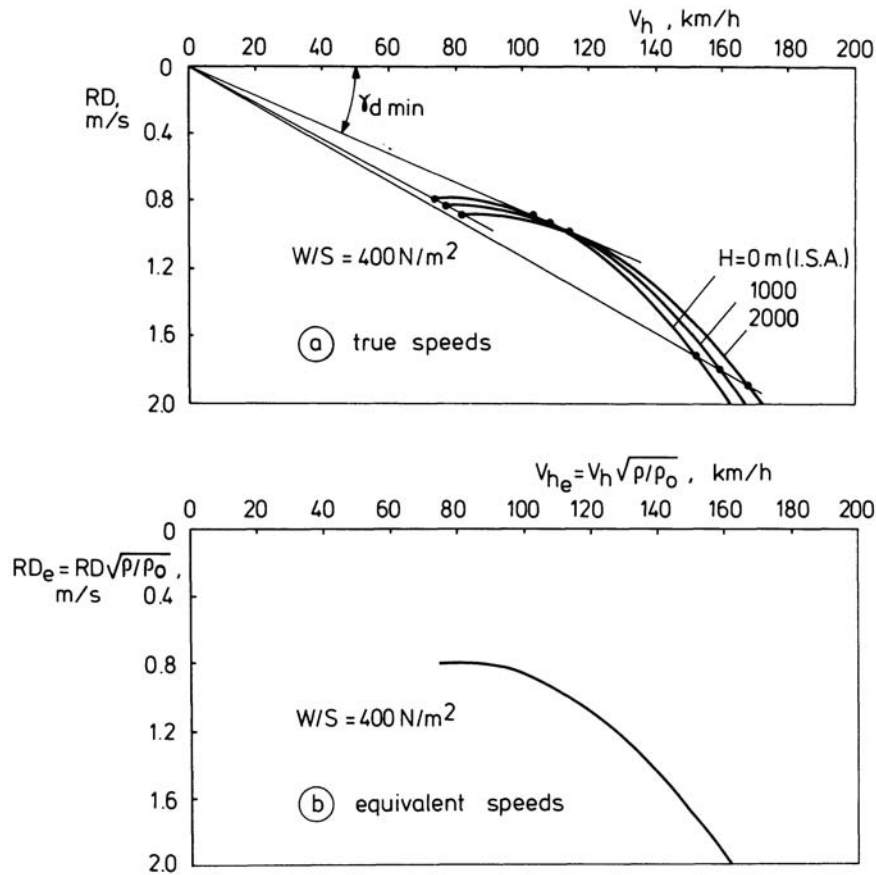


Figure 13.6 Effect of altitude on glide performance

So far, hodograph curves have been considered, which relate low-subsonic flight speeds. However, as the angle of glide and/or the wing loading of the airplane are greater, the glide will be executed at a higher airspeed.

Of special note is the orbiter stage of the United States Space Shuttle. The Orbiter is a reusable delta-winged space vehicle/glider, powered by three rocket engines, which are contained in the aft fuselage (Fig. 13.8). The liquid propellants for these engines are carried in an external jettisonable tank, attached to the vehicle at liftoff. In addition, two jettisonable and reusable solid rocket boosters are mounted on the fuel tank for liftoff. The complete Space Shuttle system is launched vertically, with all engines operating.

The Orbiter can deliver to Earth orbit a crew of seven persons and a mass of 29 500 kg payload. After completion of a mission, the orbiter reenters the atmosphere and returns to the surface of the Earth where it lands as a conventional airplane.

In the upper layer of the atmosphere, the spacecraft is steered by a reaction control system, but in the lower more dense atmosphere, the vehicle is controlled aerodynamically by rudder and elevons.

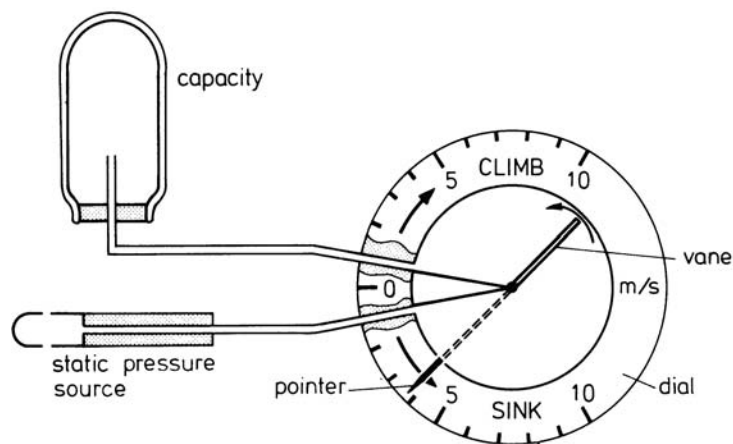


Figure 13.7 Principle of variometer

When traveling back from orbit to Earth, the Orbiter behaves as a lifting vehicle, performing a glide through the flight corridor, as shown in the previous Fig. 10.14. During the return to sea level the orbital speed range is encountered so that the lift-drag polar will strongly depend on flight Mach number.

$$C_L = C_L(\alpha, M) \quad (13.24)$$

$$C_D = C_D(\alpha, M) \quad (13.25)$$

Not only the Orbiter, but also the conventional jet airplanes with their high wing loadings attain

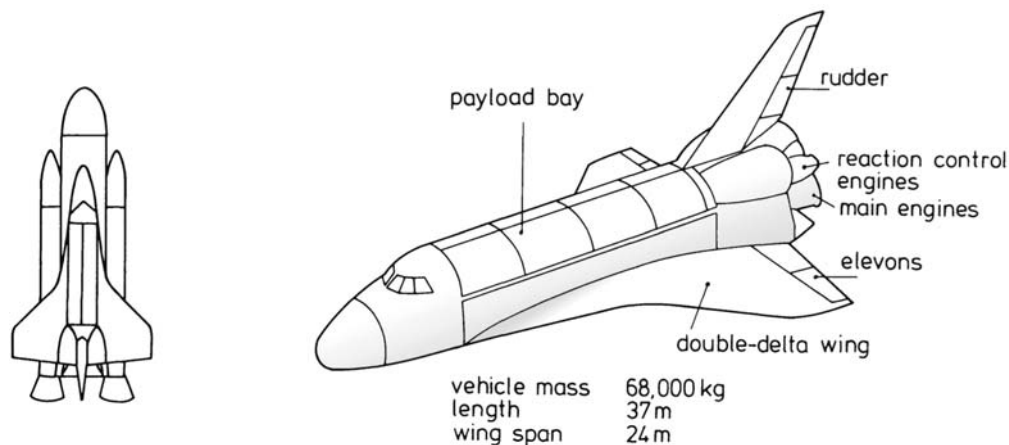


Figure 13.8 Space shuttle system and orbiter

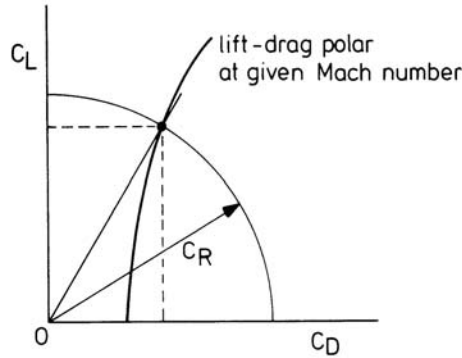


Figure 13.9 Establishing the angle of attack from known value of C_R

flight speeds at which the effects of compressibility cannot be ignored. Consequently, the glide performance of all these airplane types can no longer be represented by a single hodograph curve as in Fig. 13.6b. If we want to determine their hodograph curves, we now have for the point performance (given values of altitude and airplane weight) at a given flight Mach number:

$$V = Mc \quad (13.26)$$

$$C_L = \frac{W}{S} \frac{2}{\rho} \frac{1}{V^2} \cos \gamma_d = f_1(\alpha) \quad (13.27)$$

$$C_D = C_{D0} + k C_L^2 = f_2(\alpha) \quad (13.28)$$

$$\gamma_d = \tan^{-1} \left[\frac{C_D}{C_L} \right] = f_3(\alpha) \quad (13.29)$$

$$RD = V \sin \gamma_d = f_4(\alpha) \quad (13.30)$$

Since Eq. 13.27 to Eq. 13.30 contain the angle of attack in implicit form, we must solve the problem iteratively starting from $\cos \gamma_d = 1$.

The angle of attack can also be determined graphically from the condition $R = W$ or (cf. Eq. 4.14)

$$C_R = \frac{W}{\frac{1}{2} \gamma \rho M^2 S} \quad (13.31)$$

For the lift-drag polar at a given Mach number we have at each angle of attack the relationship (Fig. 13.9)

$$C_R = \sqrt{C_L^2 + C_D^2} \quad (13.32)$$

Since at a given airplane weight, altitude and Mach number, the value of C_R is known from Eq. 13.31, we obtain the corresponding values of C_L and C_D at that point on the lift-drag polar where the curve intersects a circle having a radius C_R and of which the center is located at the origin O.

13.3. EFFECT OF WIND

It is important to realize that in our discussions on gliding flight so far the atmosphere is supposed to be at rest with respect to the Earth. As we have learned in [Chapter 1](#), in the presence of wind, the velocity of the airplane relative to the ground or ground speed V_g is the vector sum of the airspeed V and the wind velocity V_w (see [Fig. 1.21](#)).

In considering the effect of wind on gliding, for simplification, we shall assume a steady wind. We shall also assume that the wind blows in a direction parallel to the plane of symmetry of the airplane. Under these conditions, the wind velocity can be added to the flight velocities given by the hodograph curve in still air to give the ground speed.

The hodograph curve of [Fig. 13.5](#) is plotted again in [Fig. 13.10](#), together with a hodograph illustrating the effect of a steady wind. The latter curve shows that as a result of the upward component of the wind velocity, a positive rate of climb is possible. Apparently, the presence of wind may be of great importance to gliding since in the case of an upwind that is greater than the rate of descent, the airplane will climb relative to the Earth.

The resulting type of flight is known as *soaring*, which mostly is performed using rising currents of warm air. These vertical updrafts usually are called thermals and occur due to local heating of the Earth's surface by the Sun (see [Section 2.6](#)). Obviously, to gain the maximum rate of climb in a thermal, the pilot must select the airspeed which provides the minimum rate of descent with respect to the air.

[Fig. 13.11](#) illustrates the usual technique to find the performance in soaring against wind from the hodograph curve in still air. For this purpose, ground speed V_g is measured relative to replaced axes of which the origin is shifted over a distance equal to the wind velocity and in a direction opposite to the wind direction. The angle γ_{dg} is the actual glide angle (glide angle relative to the Earth's surface).

[Fig. 13.12](#) illustrates the effects of horizontal and vertical wind velocities on flattest glide. If the pilot wants to achieve the best glide angle over the ground in the presence of an upwind, then the best airspeed to glide will correspond to point A in [Fig. 13.12a](#), such that $O'A$ is the tangent to the hodograph curve. In the case of a downwind the origin is displaced upward and the minimum angle of glide is found by drawing the tangent $O'B$.

When a pilot wants to fly at the best angle of glide relative to the ground in the presence of a headwind or tailwind, then points C and D in [Fig. 13.12b](#) represent the best airspeeds.

Emphasis is made that the foregoing analyses are based on a wind blowing in a direction parallel

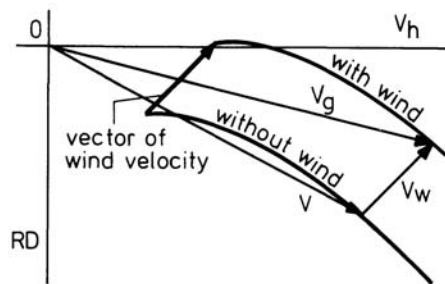


Figure 13.10 Hodograph for gliding with and without wind

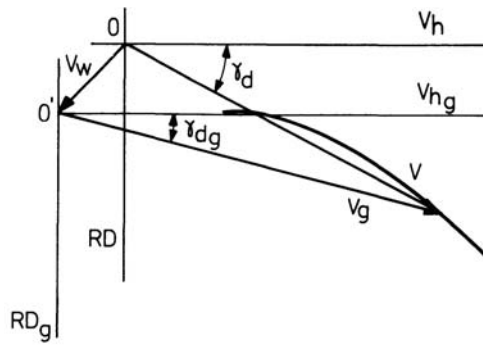


Figure 13.11 Effect of wind in the hodograph diagram

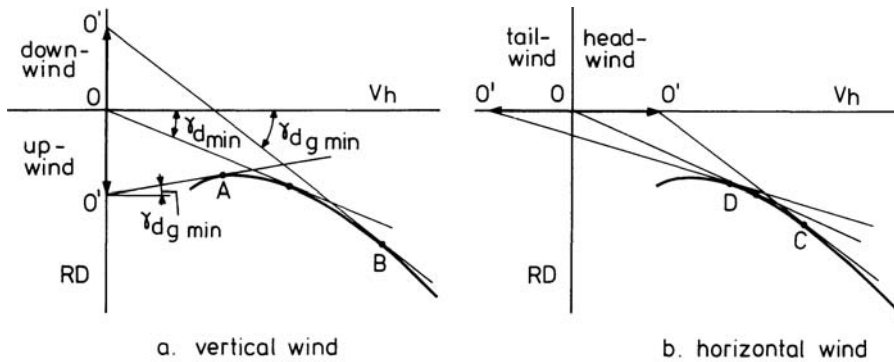


Figure 13.12 Vertical and horizontal wind velocities in the hodograph diagram

to the flight path. Under most circumstances, however, the wind velocity will be directed at some angle to the desired flight path of the airplane over the ground. Fig. 13.13a shows, as an example, the path of an airplane in level flight as resulting from its airspeed and a horizontal wind velocity. Since the wind is blowing from the left, the airplane will drift to the right, through which the velocity vector of the ground speed is at a drift angle with the intended course. Therefore, in addition to the preceding simplified treatment of the wind, it is worth to recognize that the pilot often must counteract the wind velocity by changing the heading of the airplane in order that the track coincides with the intended course. The latter situation is depicted in Fig. 13.13b. Apparently, the ground speed is given by

$$V_g = V \cos \delta - V_w \cos \epsilon \quad (13.33)$$

where δ is the angle between the flight velocity vector and the track, the so-called *wind correction angle*, and ϵ is the angle between the wind velocity vector and the desired path. Eq. 13.33 can be manipulated to yield

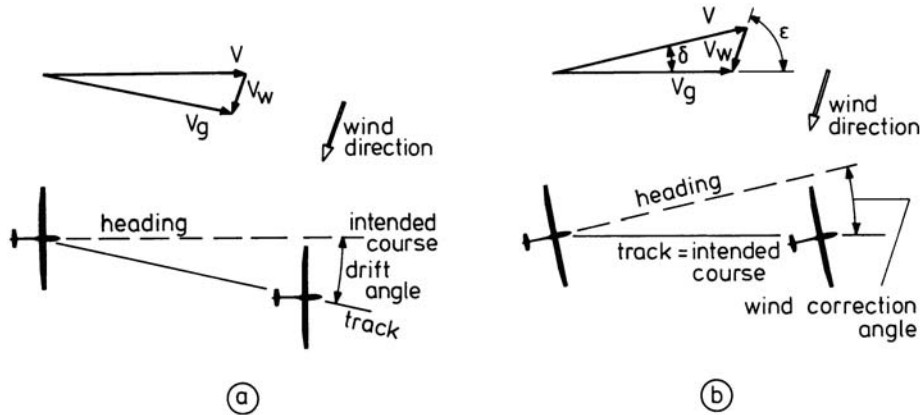


Figure 13.13 Effect of wind on heading

$$V_g = V \sqrt{1 - \left[\frac{V_w}{V} \right]^2 \sin^2 \epsilon} - V_w \cos \epsilon \quad (13.34)$$

An inspection of Eq. 13.34 indicates that a wind directed perpendicular to the track reduces the flight speed relative to the ground, although it has no component along the track. Clearly, this effect occurs because the heading of the airplane is into the wind in order that the actual flight path over the ground shall be in the right direction.

13.4. TURNING FLIGHT

In the preceding section, we have seen that a glider can gain height by flying in ascending warm air masses. Owing to their small horizontal dimensions, the glider pilot must execute turning flights to utilize these thermals. A horizontal cross-section through a thermal may be taken as circular, with the greatest vertical velocity at the center and falling off toward the outside. The most appropriate radius of turn and the associated values of angle of bank and airspeed for optimum climb performance will then depend on the manner in which the vertical velocity in the thermal varies with radius. For this reason, the relationship between the minimum rate of descent and the radius of turn of the airplane is of importance. To investigate this connection, let us consider the equations governing the translational motion of the airplane in a steady coordinated turn. Then, by substitution of $T = 0$ and $\gamma = -\gamma_d$ in Eq. 12.4 to Eq. 12.6, we obtain

$$-D + W \sin \gamma_d = 0 \quad (13.35)$$

$$L \sin \mu - C = 0 \quad (13.36)$$

$$-L \cos \mu + W \cos \gamma_d = 0 \quad (13.37)$$

where, from Eq. 3.35, the centrifugal force C is

$$C = \frac{W}{g} V \Omega \cos \gamma_d = \frac{W}{g} \frac{V^2}{R} \cos^2 \gamma_d \quad (13.38)$$

With the substitution of Eq. 13.38, $D = C_D \frac{1}{2} \rho V^2 S$ and $L = C_L \frac{1}{2} \rho V^2 S$, the equations for turning in a glide become

$$C_D \frac{1}{2} \rho V^2 S = W \sin \gamma_d \quad (13.39)$$

$$C_L \frac{1}{2} \rho V^2 S \sin \mu = \frac{W}{g} V \Omega \cos \gamma_d = \frac{W}{g} \frac{V^2}{R} \cos^2 \gamma_d \quad (13.40)$$

$$C_L \frac{1}{2} \rho V^2 S \cos \mu = W \cos \gamma_d \quad (13.41)$$

For a given airplane weight and atmospheric conditions, Eq. 13.39 to Eq. 13.41 contain five variables, namely: α, V, γ_d, μ and R so that each instantaneous flight condition is defined by the selection of two control variables. Expressing the performance items in terms of angle of attack (C_L and C_D) and the aerodynamic angle of roll μ , we readily find

$$V = \sqrt{\frac{W}{S} \frac{2}{\rho} \frac{1}{C_L} \frac{\cos \gamma_d}{\cos \mu}} \quad (13.42)$$

$$\tan \gamma_d = \frac{C_D}{C_L} \frac{1}{\cos \mu} \quad (13.43)$$

$$RD = \sqrt{\frac{W}{S} \frac{2}{\rho} \frac{C_D^2}{C_L^3} \frac{\cos^3 \gamma_d}{\cos^3 \mu}} \quad (13.44)$$

$$n = \frac{L}{W} = \frac{\cos \gamma_d}{\cos \mu} = \frac{C_L}{C_D} \sin \gamma_d \quad (13.45)$$

$$R = \frac{V^2 \cos \gamma_d}{g \tan \mu} = \frac{W}{S} \frac{2}{\rho} \frac{1}{g} \frac{1}{C_L} \frac{\cos^2 \gamma_d}{\sin \mu} \quad (13.46)$$

$$\Omega = \frac{V \cos \gamma_d}{R} = \frac{g \tan \mu}{V} \quad (13.47)$$

$$T_\pi = \frac{\pi}{\Omega} = \frac{\pi R}{V \cos \gamma_d} \quad (13.48)$$

However, in consonance with our earlier experience that in a normal glide the angles of descent remain small, we may assume that $\cos \gamma_d$ is approximately equal to unity in the equations listed above. Moreover, because we are considering coordinated turns, we get from Eq. 3.39 that in consequence of the assumption $\cos \gamma_d = 1$, the aerodynamic angle of roll μ is equal to the angle of bank Φ . Then the governing series of equations reduce to

$$V = \sqrt{\frac{W}{S} \frac{2}{\rho} \frac{1}{C_L} \frac{1}{\cos \Phi}} \quad (13.49)$$

$$\tan \gamma_d = \frac{C_D}{C_L} \frac{1}{\cos \Phi} \quad (13.50)$$

$$RD = \sqrt{\frac{W}{S} \frac{2}{\rho} \frac{C_D^2}{C_L^3} \frac{1}{\cos^3 \Phi}} \quad (13.51)$$

$$n = \frac{L}{W} = \frac{1}{\cos \Phi} = \frac{C_L}{C_D} \tan \gamma_d \quad (13.52)$$

$$R = \frac{V^2}{g \tan \Phi} = \frac{W}{S} \frac{2}{\rho} \frac{1}{g} \frac{1}{C_L} \frac{1}{\sin \Phi} \quad (13.53)$$

$$\Omega = \frac{V}{R} = \frac{g \tan \Phi}{V} \quad (13.54)$$

$$T_\pi = \frac{\pi}{\Omega} = \frac{\pi R}{V} \quad (13.55)$$

The effect of banking on the hodograph curve can be examined by considering again two flight conditions at different bank angles but at a fixed angle of attack. Assuming that at constant α also the lift and drag coefficients remain the same, we find

$$\frac{V_{h2}}{V_{h1}} = \left[\frac{\cos \Phi_1}{\cos \Phi_2} \right]^{1/2} = \left[\frac{n_2}{n_1} \right]^{1/2} \quad (13.56)$$

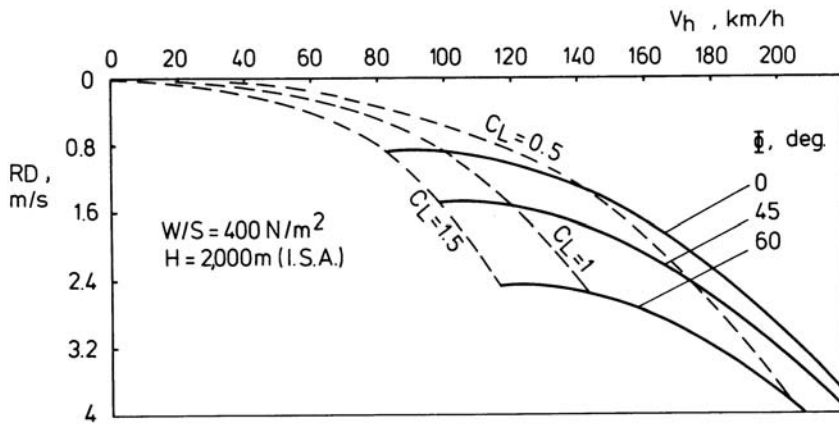


Figure 13.14 Effect of angle of bank on hodograph curve

$$\frac{RD_2}{RD_1} = \left[\frac{\cos \Phi_1}{\cos \Phi_2} \right]^{3/2} = \left[\frac{n_2}{n_1} \right]^{3/2} \quad (13.57)$$

$$\frac{RD_2}{RD_1} = \left[\frac{V_{h2}}{V_{h1}} \right]^3 \quad (13.58)$$

where the subscripts “1” and “2” indicate the conditions at bank angles Φ_1 and Φ_2 , respectively. The hodograph curves of Fig. 13.14 show the performance of our illustrative glider when turning at fixed angles of bank. The curves are deduced from the hodograph curve in straight flight, in the way described before. The points on the curves that correspond to the same value of C_L are joined by dashed lines. Fig. 13.15 presents the rate of descent as a function of radius of turn for various angles of bank, as calculated from Eq. 13.51 and Eq. 13.53. Here the points are connected that correspond to the same value of V . The upper dashed line in Fig. 13.15 represents the minimum rate of descent which can be obtained at each particular radius of turn. Along this line the airspeed and the bank angle increase as the radius of turn decreases. A mathematical formulation of the relationship between RD and R is derived by elimination of the angle of bank from Eq. 13.51 and Eq. 13.53. This yields the equation

$$RD = \sqrt{\frac{W}{S} \frac{2}{\rho} \left\{ \frac{C_D^2}{\left[C_L^2 - \left(\frac{W}{S} \frac{2}{\rho} \frac{1}{g} \frac{1}{R} \right)^2 \right]^{3/2}} \right\}}. \quad (13.59)$$

Apparently, at given values of airplane weight, air density and radius of turn, the minimum rate of descent will be obtained when the term between brackets in Eq. 13.59 is a minimum. An expression for the corresponding lift coefficient is derived by taking the derivative of that term with respect to C_L and equating it to zero. Using the parabolic drag equation, $C_D = C_{D0} + C_L^2/(\pi A e)$, the optimum lift coefficient for minimum rate of descent is found to be

$$C_L = \sqrt{3C_{D0}\pi A e + 4 \left(\frac{W}{S} \frac{2}{\rho} \frac{1}{g} \frac{1}{R} \right)^2} \quad (13.60)$$

This equation shows that for minimum rate of descent the glider should obviously fly at a large lift coefficient that varies between the value at which the climb factor is the maximum ($R = \infty$) and a value close to the maximum lift coefficient ($R = R_{\min}$). In order to demonstrate the determination of the maximum rate of climb, we will assume the presence of a very simple thermal in which the variation of the vertical velocity with radius r is given by

$$V_W = V_{W\max} \left[1 - \frac{r}{r_{\max}} \right] \quad (13.61)$$

The linear velocity profile of this thermal is shown as the upper line in Fig. 13.16, assuming $V_{W\max} = 4 \text{ m/s}$ and $r_{\max} = 200 \text{ m}$.

By taking various points at particular radii on the thermal line and subtracting from the vertical air velocity the minimum rate of descent of the glider in still air when turning at the same radius (see

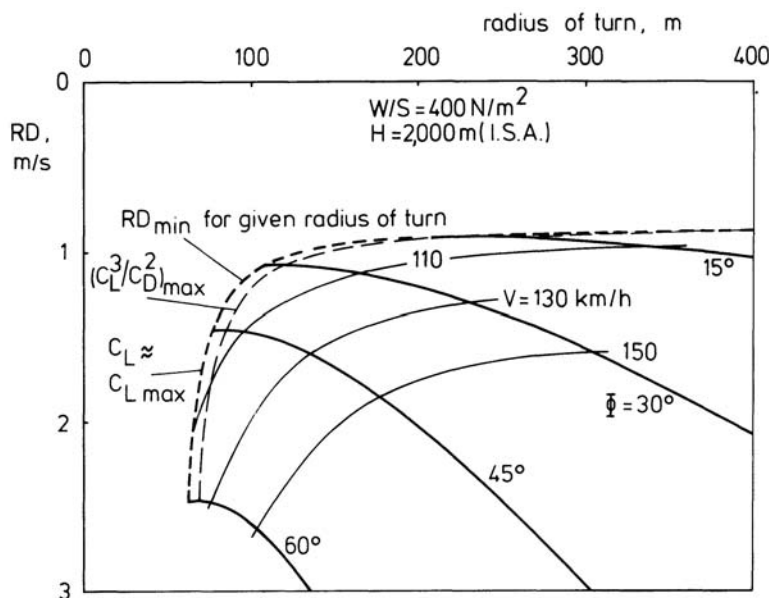


Figure 13.15 Rate of descent versus radius of turn for various angles of bank

the upper dashed curve in Fig. 13.15), we find the lower curve in Fig. 13.16. This curve shows the eventual result since it gives the rate of climb relative to the Earth versus radius of turn when circling concentrically with the thermal. Clearly, the maximum rate of climb for our example is achieved at a radius of about 80 m. According to Fig. 13.15, the corresponding lift coefficient is approximately 1.5 ($= C_{L_{\max}}$). Using these figures in Eq. 13.53 learns that optimum climb performance is achieved at an angle of bank of 43 and an air-speed of 97 km/hr.

We end this section by noting that it may be possible to execute a glide which combines turning in thermals with some “dolphin” flying. The latter term denotes the performance condition in which a glider flies through a series of updrafts during a straight glide. Then the resulting flight path exhibits a series of leaps, somewhat comparable with the manner of moving on of a dolphin.

13.5. CROSS-COUNTRY FLIGHT

The normal flight of a glider consists of a series of climbs made by turning in thermals and a series of straight symmetric glides between the thermals (Fig. 13.17a).

In Section 13.4 we have demonstrated how to determine the maximum rate of climb in a given thermal. Here we will consider the problem of maximizing the average speed for the whole flight. For that end, all the climbs and all the straight glides are taken together and represented by a single climb followed by a single glide. In order to represent all the climbs as a single climb, it is assumed that the thermals have all the same strength. Further, the assumption is made that the start and the end of the flight are at the same height and that the glide takes place in still air (Fig. 13.17b).

Presuming that the mean rate of climb of the airplane in the thermal is RC_g and the gain of height is ΔH , then the time spent in the climb is

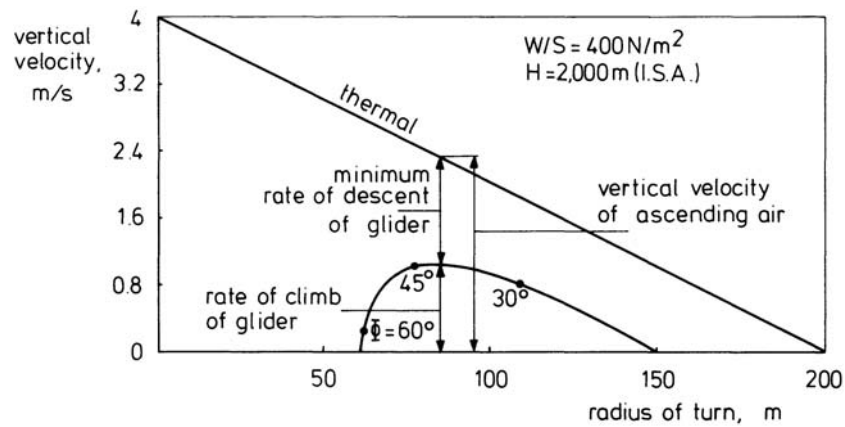


Figure 13.16 Determination of maximum rate of climb in a given thermal

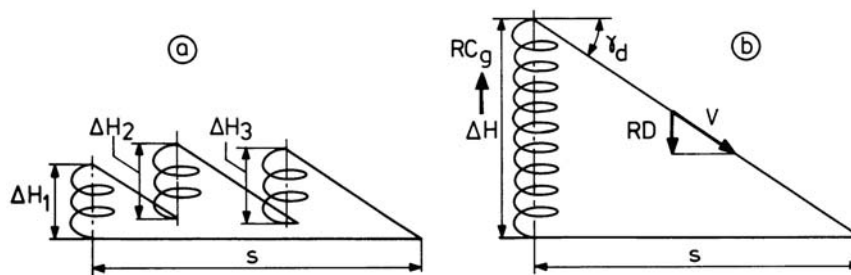


Figure 13.17 Representation of cross-country flying

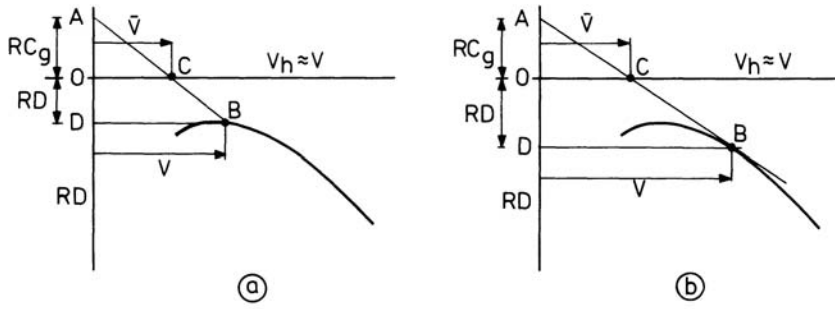


Figure 13.18 The average cross-country speed in the hodograph diagram

$$t_C = \frac{\Delta H}{RC_g} \quad (13.62)$$

Similarly, the time gone in the glide is

$$t_D = \frac{\Delta H}{RD} \quad (13.63)$$

Thus the total time for the whole flight becomes

$$t_C + t_D = \Delta H \left(\frac{1}{RC_g} + \frac{1}{RD} \right) = \frac{\Delta H}{RC_g \times RD} (RC_g + RD) \quad (13.64)$$

The distance traveled can be expressed as the average speed $\bar{V}$ times the total time. Hence, the horizontal distance s becomes

$$s = \bar{V} (t_C + t_D) \cos \gamma_d \quad (13.65)$$

Making use of the relationships $s = \Delta H / \tan \gamma_d$ and $RD = V \sin \gamma_d$, we obtain

$$\bar{V} = \frac{\Delta H}{(t_C + t_D)} \frac{V}{RD} \quad (13.66)$$

By combination of Eq. 13.64 and Eq. 13.66, we find the average speed as

$$\bar{V} = RC_g \frac{V}{(RC_g + RD)} \quad (13.67)$$

Clearly, the problem is to select the flight speed $\bar{V}$ in the glide so as to make $\bar{V}$ an extremity at a known value of the rate of climb RC_g . Therefore, consider the hodograph diagram in Fig. 13.18a where from a point A, such that the length OA expresses RC_g , a line is drawn to a point B on the hodograph curve.

With the approximation that $V_h \approx V$ the distance DB represents the flight speed V during the glide. Observing that the triangles AOC and ADB are similar, we find that the relationship between the various speeds in Fig. 13.18a corresponds to Eq. 13.67 if the speed $\bar{V}$ is represented by OC. It is also

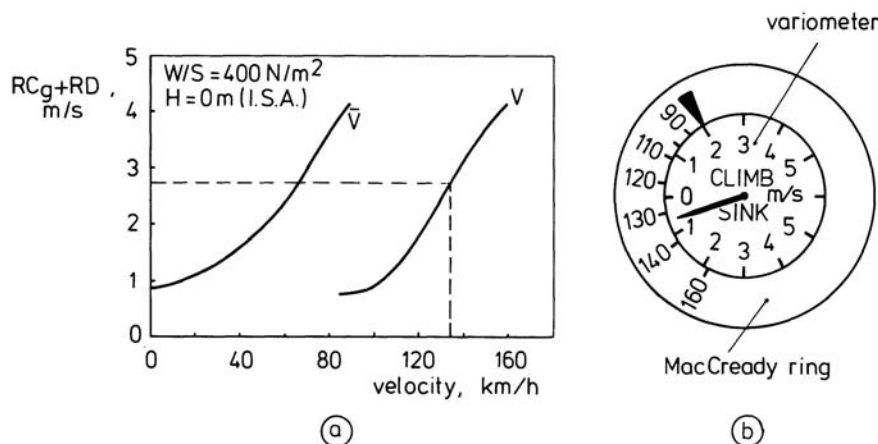


Figure 13.19 Determination of the optimum airspeed during glide between thermals

clear that the optimum value for $\bar{V}$ is found by drawing the tangent from point A to the hodograph curve (Fig. 13.18b).

By considering a large number of rate of climb values RC_g in Fig. 13.5, for our illustrative glider the curves of Fig. 13.19a can be produced. A convenient tool in optimizing a cross-country flight is the MacCready ring, which is a rotatable ring added to the variometer (Fig. 13.19b). When gliding between the thermals, the datum mark on the ring is set opposite the figure on the rate of climb scale which equals the prevailing value of RC_g . The ring is calibrated such that the connection between the airspeeds V on the ring and the rates of descent RD on the variometer scale corresponds to the relationship between V and $(RC_g + RD)$ in Fig. 13.19a. This makes that, for a given wing loading and height, the pointer designates directly the airspeed for optimum cross-country flying on the ring. It should be understood that the airspeed thus found depends entirely on the pilot's assessment of RC_g (2 m/s in Fig. 13.19b).

Modern gliders may be equipped with water tanks so that their weight can be increased by carrying water ballast. This provision can lead to an improved cross-country performance, at least as the vertical velocities in the thermals are sufficiently large. To illustrate the influence of the extra weight on the optimum value for the speed $\bar{V}$, we consider Fig. 13.20, where the hodograph curves are sketched for an airplane weight W_1 and for an increased weight W_2 . From Eq. 13.14 and Eq. 13.16, it is immediately apparent that the two hodograph curves relating to the higher wing loading are obtained by multiplying corresponding V and RD values on the initial curves by the factor $\sqrt{W_2/W_1}$. It is interesting to note that the effect of an increased weight on the hodograph curve is precisely the same as the effect of an increase in altitude, i.e., the curve is displaced downward and to the right (cf. Fig. 13.6a). As depicted in Fig. 13.20, the rate of climb RC_g in a given thermal will decrease and the best speed in the glide $\bar{V}$ will increase with weight. This visualization of the problem indicates that in the case of strong thermals, the average speed $\bar{V}$ may increase and hence the presence of ballast in the airplane promises to be beneficial (Fig. 13.20a). When, on the other hand, the thermals are quite weak, it does not pay to fly with ballast, and jettisoning water may be gainful (Fig. 13.20b).

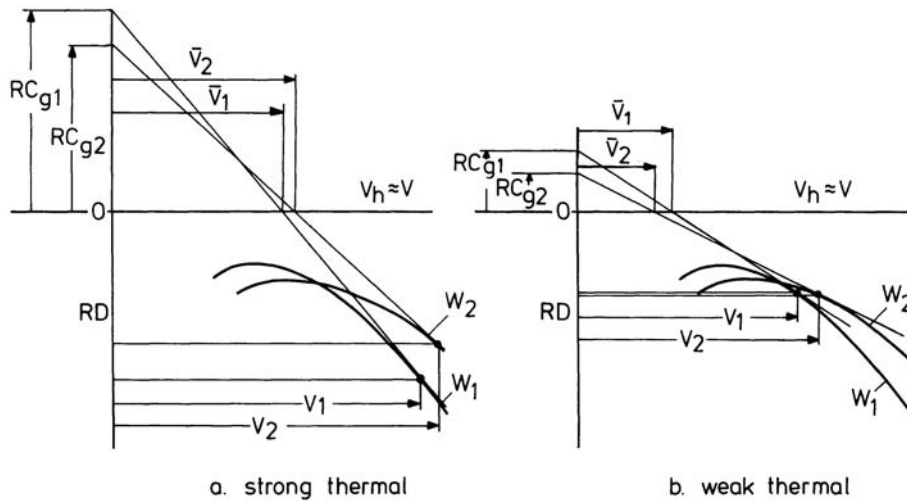


Figure 13.20 Effect of airplane weight on optimum speed

13.6. PROBLEMS

- Consider a glider performing a quasi-steady symmetric glide at 1000 m altitude (I.S.A.). The atmosphere is completely at rest (no wind). This airplane has a parabolic lift drag polar with $C_D = C_{D0} + kC_L^2$ and a maximum lift coefficient of 1.6. The airplane weight is 3000 N and the wing surface area equals 15 m^2 .
 - Calculate the best (minimum) glide angle and the corresponding airspeed.
 - Calculate the minimum rate of descent and the corresponding airspeed.
- The glider of the previous problem is now performing a quasi-steady symmetric glide at 2000 m altitude (I.S.A.) and it has extra weight on board in the form of water ballast. The total airplane weight is now 3500 N.
 - Calculate the best (minimum) glide angle and the corresponding airspeed.
 - Calculate the minimum rate of descent and the corresponding airspeed.
 - Discuss the effect of altitude on gliding performance in terms of best glide angle, minimum rate of descent and the corresponding airspeeds.
 - Explain the main advantage of having extra weight on board.
- A flight test has been performed with a glider with the objective to quantify the parameters of the parabolic lift drag polar based on the gliding performance. The airplane has a weight of 2500 N and a wing surface area of 10 m^2 . When performing a quasi-steady symmetric glide (no wind) at 1000 m altitude and a true airspeed of 139 km/hr, the resulting glide angle is 3 deg. A quasi-steady symmetric glide at the same altitude and an increased airspeed of 165 km/hr results in a glide angle of 4 deg. Assume that the aerodynamics can be represented

with a parabolic lift drag polar with the form $C_D = C_{D0} + kC_L^2$. Determine the zero lift drag coefficient C_{D0} and the induced drag coefficient k .

4. A twin engine jet aircraft has the following lift drag polar $C_D = 0.042 + 0.05 \cdot C_L^2$ and a maximum lift coefficient of 1.8. It has a weight of 250 kN and is flying at 5000 m (I.S.A.). Find the maximum value of the glide distance for this airplane in quasi-steady symmetric flight in case there is no wind.
5. A twin engine propeller aircraft with a weight of 60 kN experiences problems with its fuel system when flying at an altitude of 3000 m (I.S.A.). As a result, both engines have stopped. The runway is located at a distance of 50 km. The airplane has the following lift drag polar $C_D = 0.02 + 0.04 \cdot C_L^2$ and a maximum lift coefficient of 1.6. Is this airplane able to glide towards the runway?
6. For the airplane of the previous problem, compute the best airspeed for maximum glide distance at an altitude of 3000 m (I.S.A.) in case a headwind of 10 m/s is present. Hint, draw a hodograph to determine the optimum condition.
7. In the presence of a thermal with a radius of 300 m, a glider is performing a turn and gaining height. The thermal has a linear vertical velocity profile V_W as a function of its radius r .

$$V_W = 5 \cdot \left(1 - \frac{r}{300}\right)$$

Make use of the glider characteristics provided in problem 1. The glider is at 500 m altitude (I.S.A) and it performs a turn with a bank angle of 30 deg and a radius of 100 m. Compute the rate of climb and the corresponding airspeed for this condition.

(Suggestion: Repeat this exercise for various bank angles and turn radii in order to estimate the optimal climb performance in this thermal. Make sure that the maximum lift coefficient is not exceeded.)

14

SYMMETRIC CLIMB AND DESCENT

14.1. QUASI-STEADY SYMMETRIC FLIGHT

To this point, we have dealt mainly with point performance problems. For the remainder of this book, emphasis will be placed on the path performance or integral performance values, which, as we have defined in [Chapter 8](#), are related to the course of the flight. With regard to the climb to a particular altitude, three integral performance values are of paramount importance, namely,

- the length of time required to climb
- the horizontal distance covered during climb
- the amount of fuel consumed during climb.

In the absence of wind, the time rate of change of altitude is the rate of climb of the airplane, which is equal to the vertical component of the airspeed,

$$\frac{dh}{dt} = RC = V \sin \gamma \quad \text{and} \quad (14.1)$$

$$dt = \frac{dh}{RC} = \frac{dH}{RC} \quad (14.2)$$

The time to climb from an altitude H_1 to an altitude H_2 is obtained by integrating [Eq. 14.2](#) between H_1 and H_2

$$t = \int_{H_1}^{H_2} \frac{dH}{RC} \quad (14.3)$$

where, for a given airplane, RC is a function of airplane weight, engine control setting, selected flight speed and altitude. The related range (= horizontal distance) in the absence of wind is given by

$$s = \int_{t_1}^{t_2} V \cos \gamma \, dt = \int_{H_1}^{H_2} \frac{dH}{\tan \gamma} \quad (14.4)$$

The weight of the fuel consumed during a climb from H_1 to H_2

$$W_f = \int_{t_1}^{t_2} F \, dt = \int_{H_1}^{H_2} \frac{F}{RC} dH \quad (14.5)$$

where F is the fuel weight flow rate.

Let us look at the determination of the minimum time to climb from sea level to a given altitude, using the approach of quasi-steady flight conditions. Then, Eq. 14.3 tells us that to minimize t , the rate of climb must be maximum at each altitude (cf. Eq. 10.6).

$$t_{\min} = \int_0^H \frac{dH}{RC_{\max}} \quad (14.6)$$

Note that this is true exclusively in light of the assumption of quasi-steady flight. In more generic, and realistic, assumptions, the solution to the minimum time to climb problem is more involved, and will be discussed in the following Section 14.2. Assuming that the maximum rate of climb decreases linearly with height, we can write

$$\frac{RC_{\max}}{RC_{\max 0}} = \frac{H_{\text{th}} - H}{H_{\text{th}}} \quad (14.7)$$

where the subscripts “0” and “th” denote sea level and theoretical ceiling, respectively.

Using this relationship, Eq. 14.6 can be integrated to give

$$t_{\min} = \frac{H_{\text{th}}}{RC_{\max 0}} \ln \left(\frac{1}{1 - \frac{H}{H_{\text{th}}}} \right) \quad (14.8)$$

When no analytic expression is obtainable that relates $RC_{\max}$ to H , the integration of Eq. 14.6 can be accomplished graphically. Then, as shown in Fig. 14.1b, the minimum time to climb to a given altitude is derived by plotting the curve $RC_{\max}^{-1}$ against H and determining the shaded area on the left-hand side of the curve. The present relationship is based on the $RC_{\max}$ versus H curve in Fig. 14.1a. This curve is repeated from the previous Fig. 10.3, and concerns our illustrative two-engine turbo-prop airplane of Chapter 10. The result in Fig. 14.1c shows that the minimum time needed to reach the service ceiling ($H = 9250$ m) is 47.5 min.

The time required to climb to a given altitude may also be obtained by adding increments in time between altitude intervals,

$$t = \sum_{i=1}^n \left[\frac{\Delta H}{RC_i} \right] \quad (14.9)$$

In this summation form of Eq. 14.6, RC_i is the average value of the rate of climb within each interval ΔH . The mean and cumulative values for the airplane considered in Fig. 14.1, are tabulated in Tab. 14.1. When using this numerical procedure, it is fairly simple to include the effect of the variation of airplane weight due to the consumption of fuel. For this purpose, at the end of each interval ΔH , the weight of the fuel consumed is determined, $\Delta W_{fi} = F_i \Delta t_i$, where F_i is the average value

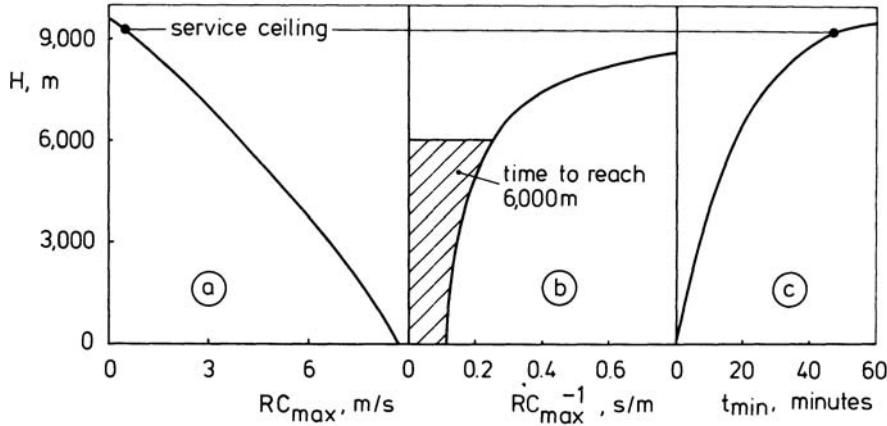


Figure 14.1 Time to climb determination

of the fuel weight flow rate within an interval ΔH . Then, the rate of climb in the adjacent interval is calculated at an airplane weight, $W_{i+1} = W_i - \Delta W_{fi}$. Of course, the total fuel consumed during climb can be found from $W_f = \sum \Delta W_{fi}$.

We conclude this section with the observation that the downward flight with engine(s) working differs from the climb only in that at the descent speed the sign of the flight-path angle is negative so that the thrust will be less than the drag. Therefore, the formulae for descending flight are included in the preceding general performance theory and need not to be developed separately.

Descent programs may be expressed as a constant engine control setting and constant Mach number schedule until a particular operating speed is reached, after which a constant E.A.S. is maintained. Needless to say that local air traffic control regulations may cause considerable alterations to recommended schedules.

14.2. THE UNSTEADY QUASI-RECTILINEAR CLIMB

In Fig. 14.1 and Tab. 14.1, the determination of minimum time to climb was carried out using quasi-steady-state climb data. In fact, the airspeed at which the maximum rate of climb occurs, increases with height, as can be seen in Fig. 10.4. This implies that we must use a portion of the available excess power to accelerate the airplane along its flight path. In order to examine the effect of the dynamic behavior of the airplane on the rate of climb, we consider the equation of motion in the direction of flight (cf. Eq. 8.7),

$$\frac{W}{g} \frac{dV}{dt} = T - D - W \sin \gamma \quad (14.10)$$

where the thrust vector lies along the velocity vector.

Assuming quasi-rectilinear flight, we have normal to the flight path the following approximate equilibrium condition, determining the angle of attack,

$$L = W \cos \gamma \quad (14.11)$$

Table 14.1 Calculation of time to climb

H m	$RC_{\max}$ m/s	RC_i m/s	Δt_i min	t min	H m	$RC_{\max}$ m/s	RC_i m/s	Δt_i min	t min
0	8.60			0.00			$\vdots$		
		8.50	0.98	0.98	5000	4.80	5.05	1.65	12.42
500	8.40	8.25	1.01	1.99			4.60	1.81	14.23
1000	8.10	7.90	1.05	3.04	5500	4.40	4.15	2.01	16.24
1500	7.70	7.55	1.10	4.14	6000	3.90	3.65	2.28	18.52
2000	7.40	7.20	1.16	5.30	6500	3.40	3.25	2.56	21.08
2500	7.00	6.80	1.23	6.53	7000	2.90	2.65	3.15	24.23
3000	6.60	6.35	1.31	7.84	7500	2.40	2.15	3.88	28.11
3500	6.10	5.90	1.41	9.25	8000	1.90	1.65	5.05	33.16
4000	5.70	5.50	1.52	10.77	8500	1.40	1.10	7.58	40.74
4500	5.30	$\vdots$			9000	0.80	0.65	6.41	47.15
					9250	0.50			

With the assumption of a small flight-path angle, so that $\cos \gamma$ can be set equal to unity, [Eq. 14.11](#) reduces to

$$L = W \quad (14.12)$$

[Eq. 14.10](#) can be rewritten by multiplying with V as

$$\frac{W}{g} V \frac{dV}{dh} \frac{dh}{dt} = TV - DV - WV \sin \gamma \quad (14.13)$$

Using $dh/dt = V \sin \gamma = RC$, $TV = P_a$ and $DV = P_r$, and rearranging [Eq. 14.13](#) yields

$$RC \left[1 + \frac{V}{g} \frac{dV}{dh} \right] = \frac{P_a - P_r}{W} \quad (14.14)$$

where the numerator of the right-hand term is the excess power, that can be used for climb and acceleration. The excess power per unit airplane weight is called the *specific excess power*.

When performing a quasi-steady climb, the excess power is used for climbing only. Neglecting the possible effects of accelerations on the lift-drag polar, allows that power required in Eq. 14.14 can be taken equal to its value in quasi-steady flight at the same momentary conditions. Hence,

$$\frac{P_a - P_r}{W} = RC_s \quad (14.15)$$

where the subscript “s” is used to denote a quasi-steady flight condition. When we put Eq. 14.15 into Eq. 14.14, we obtain

$$RC = \frac{RC_s}{1 + \frac{V}{g} \frac{dV}{dH}} = \frac{RC_s}{1 + \frac{V}{g_0} \frac{dV}{dH}} \quad (14.16)$$

where the acceleration of gravity g_0 has the standard sea-level value (9.80665 m/s²). The denominator of the far right-hand term represents the effect of the acceleration of the airplane along the flight path on the actual rate of climb RC , and is called the *kinetic energy correction factor*.

Division of Eq. 14.16 by V yields a similar expression for the climb angle

$$\sin \gamma = \frac{\sin \gamma_s}{1 + \frac{V}{g_0} \frac{dV}{dH}} \quad (14.17)$$

where γ and γ_s are the angles of climb in actual flight and in quasi-steady climb, respectively. The results derived above can be applied to particular climb programs, like the climb at constant equivalent airspeed, which we go through as a first example of an unsteady airplane motion. In this case the relationship between true airspeed V (T.A.S.) and equivalent airspeed V_e (E.A.S.) (Section 5.4) is

$$V = V_e \sqrt{\frac{\rho_0}{\rho}} \quad (14.18)$$

In the climb with constant equivalent airspeed, the true airspeed continually increases with height so that the airplane is gaining kinetic energy ($dV/dH > 0$). Consequently, the actual rate of climb values are smaller than their quasi-steady-state counterparts ($RC < RC_s$).

Using Eq. 14.18 and $V_e = \text{constant}$, the kinetic energy correction factor can be written as

$$1 + \frac{V}{g_0} \frac{dV}{dH} = 1 + \frac{1}{2g_0} \frac{dV^2}{dH} = 1 + \frac{V_e^2}{2g_0} \frac{d(\rho_0/\rho)}{dH}. \quad \text{Then} \quad (14.19)$$

$$\frac{RC}{RC_s} = \frac{\sin \gamma}{\sin \gamma_s} = \frac{1}{1 + \frac{V_e^2}{2g_0} \frac{d(\rho_0/\rho)}{dH}} \quad (14.20)$$

For the International Standard Atmosphere, the density ratio ρ_0/ρ and altitude H are related by the previous Eq. 2.13 and Eq. 2.16. Using the equation of state $p = \rho RT$, the relationship $\frac{1}{2}\rho V^2 = \frac{1}{2}\gamma p M^2$ and the hydrostatic equation $dp = -\rho g_0 dH$, we can easily develop the following detailed expression for the kinetic energy correction factor in terms of the instantaneous flight Mach number,

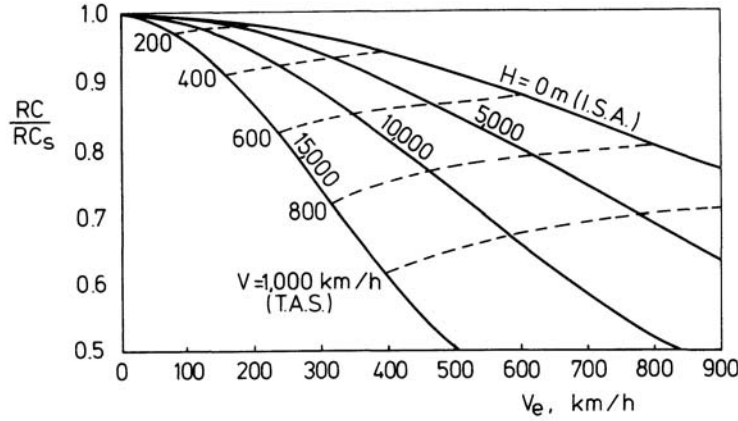


Figure 14.2 Kinetic energy correction factor

$$1 + \frac{V}{g_0} \frac{dV}{dH} = 1 + \frac{\gamma M^2}{2} \left[1 + \frac{R}{g_0} \frac{dT}{dH} \right] \quad (14.21)$$

When we put Eq. 14.21 into Eq. 14.21, we find in the troposphere (I.S.A.) with $dT/dH = -0.0065 \text{ K/m}$ (see Fig. 2.3),

$$\frac{RC}{RC_s} = \frac{\sin \gamma}{\sin \gamma_s} = \frac{1}{1 + 0.567 M^2} \quad (14.22)$$

In the lower stratosphere (I.S.A.), where $dT/dH = 0$, we obtain

$$\frac{RC}{RC_s} = \frac{\sin \gamma}{\sin \gamma_s} = \frac{1}{1 + 0.7 M^2} \quad (14.23)$$

Note that in the case of climb with constant equivalent airspeed, the Mach number in Eq. 14.22 and Eq. 14.23 increases with altitude according to $\frac{1}{2} \rho_0 V_e^2 = \frac{1}{2} \gamma p M^2$, or

$$M = V_e \sqrt{\frac{\rho_0}{\gamma p}} \quad (14.24)$$

In Fig. 14.2, the ratio RC/RC_s is plotted against equivalent airspeed for a number of altitudes. The points on the curves that correspond to the same value of V are connected by dashed lines. Clearly, the kinetic energy correction factor increases with increasing airspeed and altitude.

Climb programs commonly consist of a constant E.A.S. schedule until the cruise Mach number is reached, followed by a climb at this Mach number toward the cruise altitude (determination of the optimum cruise Mach number is explained in the following Chapter 15, while limit speeds in the flight envelope are presented in Section 10.4). Therefore, as a second example of a practical flight technique we consider the climb at constant flight Mach number. Using $V^2 = M^2 c^2 = M^2 \gamma R T$, we find that

$$1 + \frac{V}{g_0} \frac{dV}{dH} = 1 + \frac{1}{2} \gamma M^2 \frac{R}{g_0} \frac{dT}{dH} \quad (14.25)$$

For a climb in the troposphere (I.S.A.), we get

$$\frac{RC}{RC_s} = \frac{\sin \gamma}{\sin \gamma_s} = \frac{1}{1 - 0.133M^2} \quad (14.26)$$

Climbing in this region at constant Mach number means that airspeed is decreasing with altitude. Eq. 14.26 confirms that which we would expect: $RC > RC_s$ and $\gamma > \gamma_s$.

In the lower part of the stratosphere (I.S.A.), the airspeed remains unchanged and hence $RC = RC_s$.

14.3. OPTIMUM CLIMB

In Section 14.1, we demonstrated the usual method for obtaining the minimum time to climb to a given altitude. The relationship between maximum rate of climb in quasi-steady flight and altitude for a given engine control setting was used to establish the required time duration in simplifying assumptions.

In Section 14.2, we made clear that the actual rate of climb values may differ from the corresponding quasi-steady-state values because some of the excess power must be used to accelerate the airplane along its flight path. Therefore, the conventional approach may be inadequate for high-subsonic and supersonic airplanes since the problem not only concerns climbing to a given height but also attaining effectively any desired airspeed at that height. The mathematical method which is capable of handling the problem of optimizing the dynamic performance of airplanes is the optimal control theory or the calculus of variations. A discussion of this subject, however, is definitely beyond the scope of this book. The interested reader is referred to Ref. 37 and Ref. 38 which contain detailed teaching texts in the field of airplane performance optimization.

As mentioned already in Section 14.1, there are three dynamic performance problems of special interest. They are fastest climb or least time to climb, steepest climb or minimum range during climb, and most economical climb where the smallest amount of fuel is consumed. A fairly simple approach to these climb trajectories is to formulate the dynamics of the airplane in terms of its total energy. This is the so called *energy-state approximation* that will be explained briefly in this section. The present dynamic model neglects accelerations normal to the flight path and assumes a flight in a single vertical plane and a no-wind condition (Ref. 39 and Ref. 40).

Then the total energy of the airplane, E , is given by the sum of the potential energy and the kinetic energy. Thus

$$E = WH + \frac{1}{2} \frac{W}{g_0} V^2 \quad (14.27)$$

The total energy per unit airplane weight is termed *energy height* and denoted here by the symbol H_e ,

$$H_e = H + \frac{V^2}{2g_0} \quad (14.28)$$

The energy height is a measure of the geopotential and geometric altitude that can be attained if the airplane loses all its kinetic energy by trading it to increase potential energy in an ideal way, that

is as if no dissipative forces were acting and the total mechanical energy would therefore remain constant. By differentiating Eq. 14.28 with respect to time, and using $dH/dt = V \sin \gamma$, we obtain

$$\frac{dH_e}{dt} = \frac{dH}{dt} + \frac{V}{g_0} \frac{dV}{dt} = V \left[\sin \gamma + \frac{1}{g_0} \frac{dV}{dt} \right] \quad (14.29)$$

Combining Eq. 14.10, Eq. 14.15 and Eq. 14.29 furnishes

$$\frac{dH_e}{dt} = \frac{(T - D)V}{W} = RC_s \quad (14.30)$$

This remarkable result says that the time derivative of the energy height is equal to the rate of climb of the airplane in quasi-steady flight. Therefore, dH_e/dt is also called specific excess power. From Eq. 14.3 and Eq. 14.16, the time to climb can be expressed as

$$t = \int_{H_1}^{H_2} \frac{\left[1 + \frac{V}{g_0} \frac{dV}{dH} \right] dH}{RC_s} \quad (14.31)$$

By differentiating Eq. 14.28 with respect to H and substituting the result into Eq. 14.31, we can write the time to climb from one energy height to another as follows:

$$t = \int_{H_{e1}}^{H_{e2}} \frac{dH_e}{RC_s} \quad (14.32)$$

By the same token, Eq. 14.4 and Eq. 14.5 can also be transformed into integrals with independent variable H_e ,

$$s = \int_{H_{e1}}^{H_{e2}} \frac{dH_e}{\tan \gamma_s} \quad (14.33)$$

$$W_f = \int_{H_{e1}}^{H_{e2}} \frac{F}{RC_s} dH_e \quad (14.34)$$

Thus the trajectories for minimum time, steepest climb and minimum expenditure of fuel between any two altitude/airspeed combinations are optimized by maximizing the quasi-steady-state performance parameters RC , RC_s/F , and γ_s at each energy height. In this connection, it is important to remember that the time-history of the airplane motion is fully determined if two control variables are specified as a function of time, and appropriate boundary conditions are known, for example, the initial flight condition (see Chapter 8).

The importance of the energy height concept is exemplified here by applying this approach to the minimum time to climb problem. Therefore, typical contours of constant RC_s are plotted in Fig. 14.3a for a high-subsonic airplane and in Fig. 14.4 for a supersonic airplane. These curves are constructed by determining the RC_s values for a series of altitudes, assuming a constant engine control setting and airplane weight. The RC_s equal to zero contours represent the level flight speed envelopes as portrayed in the previous Fig. 10.6 and Fig. 10.10.

The plots in Fig. 14.3a and Fig. 14.4 are enhanced by superimposing lines of constant energy height, which are calculated from Eq. 14.28. Since a base of H versus $V^2/(2g_0)$ is used, the constant H_e lines are straight.

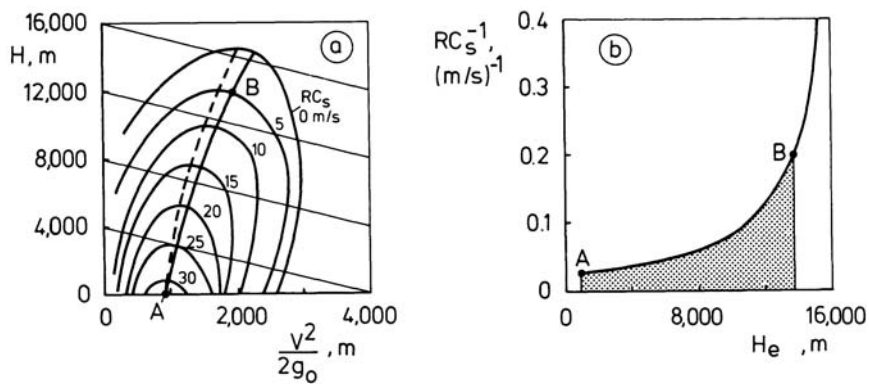


Figure 14.3 Determination of minimum flight time from an initial to a final energy height

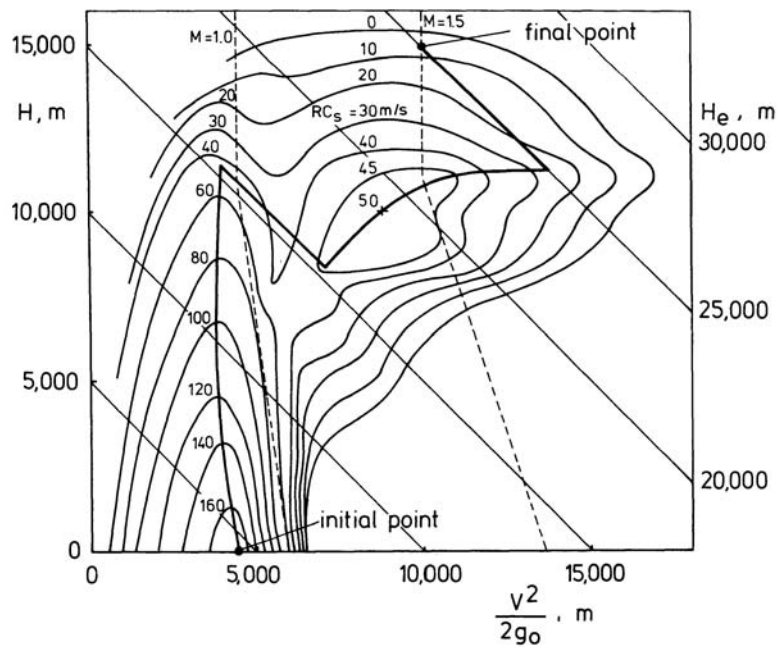


Figure 14.4 Curves of constant rate of climb for a supersonic airplane

From Eq. 14.32 it follows that the condition for minimum time to climb is given by

$$\left[\frac{\partial (RC_s)}{\partial V} \right]_{H_e} = 0 \quad (14.35)$$

In other words, the minimum flight time in Fig. 14.3a and Fig. 14.4 is obtained when flying through the points on the RC_s curves that are tangent to the constant energy height lines. This means that, for a minimum-time climb, the aircraft should either fly along the lines of constant energy height whenever possible, or alternatively move between these lines in the locally orthogonal direction (that is, in the direction of the gradient of the energy height) whenever necessary. In general, it can be proven that the minimum-time evolution of a dynamic system in a conservative force field is such that the total mechanical energy remains constant along the trajectory, signifying that kinetic and potential energy can be dynamically exchanged in the most time-effective manner. This is a direct consequence of the *principle of least action*.

The loci of these points of tangency describe the optimum trajectories. Note that in the supersonic case, the optimum path consists of a number of stages. Successively we have in Fig. 14.4: an accelerated climb from the initial condition to an appropriate energy height, a zoom dive through the transonic speed range along a constant energy height line, a continued accelerated climb at supersonic speeds, and a zoom climb to the final point at almost constant energy height. The zoom-dive is executed correctly by decreasing altitude while increasing speed, therefore trading potential energy for kinetic energy while keeping total mechanical energy constant. The zoom climb is the inverse process. These maneuvers become available for the pilot when a constant energy height line is tangent to two different rate of climb curves. This allows the airplane to accelerate while diving, or to climb while decelerating, in a very time-effective way.

To calculate $t_{\min}$, first plot RC_s^{-1} against H_e for various points along the trajectory, as constructed in Fig. 14.3b for the high-subsonic airplane. The shaded area under the curve represents the minimum flight time from $V = V_A$ at sea level ($H = 0$) to $V = V_B$ at $H_e = 13800\text{m}$.

As indicated by the dashed line in Fig. 14.3a, the quasi-steady fastest climb schedule occurs at altitude/airspeed combinations at which the RC_s curves are tangent to the horizontal lines of constant geopotential altitude. Apparently, this trajectory does not differ seriously from the unsteady climb schedule so that the associated times to climb will only be slightly different. In contrast, the supersonic airplane in Fig. 14.4 has a significantly different time schedule and in this case the energy concept leads to substantial savings in flight time.

14.4. EFFECTS OF VERTICAL WIND GRADIENTS

In this section the situation is considered in which the airplane is faced with the occurrence of a varying wind velocity during climb and descent. The variations of wind speed with height and time are called *wind shear*. It is the object of the following analysis to show the importance of wind on climb angle and rate of climb and to derive a suitable means of correcting for its effect.

For simplicity, we shall presume the presence of an increasing or decreasing headwind or tailwind which varies with height only: $V_W = V_W(H)$.

From Fig. 14.5a, we find at an airspeed V and headwind V_W the components of the ground speed along the axes of the Earth axis system as (cf. Eq. 1.26)

$$V_{X_g} = V \cos \gamma - V_W \quad (14.36)$$

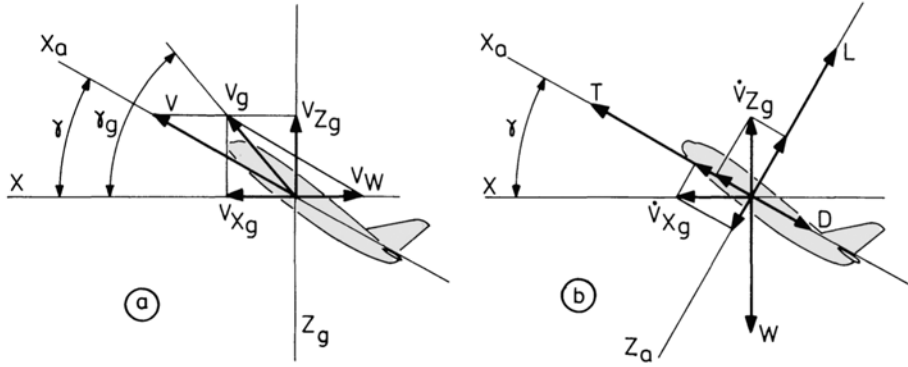


Figure 14.5 Effect of wind on velocities and accelerations

$$V_{Y_g} = 0 \quad (14.37)$$

$$V_{Z_g} = V \sin \gamma \quad (14.38)$$

The associated acceleration of the airplane is described by the two equations:

$$\frac{dV_{X_g}}{dt} = \frac{dV}{dt} \cos \gamma - V \sin \gamma \frac{d\gamma}{dt} - \frac{dV_W}{dt} \quad (14.39)$$

$$\frac{dV_{Z_g}}{dt} = \frac{dV}{dt} \sin \gamma + V \cos \gamma \frac{d\gamma}{dt} \quad (14.40)$$

In Eq. 14.39, the term dV_W/dt is the time rate of change of the wind velocity as experienced by the airplane. The components of the acceleration along the air-path axes are given by Fig. 14.5b.

$$\frac{dV_{X_a}}{dt} = \frac{dV_{X_g}}{dt} \cos \gamma + \frac{dV_{Z_g}}{dt} \sin \gamma \quad (14.41)$$

$$\frac{dV_{Z_a}}{dt} = -\frac{dV_{X_g}}{dt} \sin \gamma + \frac{dV_{Z_g}}{dt} \cos \gamma \quad (14.42)$$

After substitution of Eq. 14.39 and Eq. 14.40 into Eq. 14.41 and Eq. 14.42, we get

$$\frac{dV_{X_a}}{dt} = \frac{dV}{dt} - \frac{dV_W}{dt} \cos \gamma \quad (14.43)$$

$$\frac{dV_{Z_a}}{dt} = V \frac{d\gamma}{dt} + \frac{dV_W}{dt} \sin \gamma \quad (14.44)$$

Thus, in the presence of a wind gradient, the equations of motion for the airplane in symmetric flight read:

$$\frac{W}{g} \left[\frac{dV}{dt} - \frac{dV_W}{dt} \cos \gamma \right] = T - D - W \sin \gamma \quad (14.45)$$

$$\frac{W}{g} \left[V \frac{d\gamma}{dt} + \frac{dV_W}{dt} \sin \gamma \right] = L - W \cos \gamma \quad (14.46)$$

Note that with $dV_W/dt = 0$, the equations of motion become identical to the [Eq. 8.7](#) and [Eq. 8.8](#), which were derived in [Chapter 8](#) for the no-wind condition. Hence, we can conclude that the motion of the airplane relative to the air is not affected by a horizontal wind with a constant velocity. However, when the magnitude of the wind velocity varies with altitude, also the motion of the airplane relative to the air changes. This may be seen by writing,

$$\frac{dV}{dt} = \frac{dV}{dH} \frac{dH}{dt} = \frac{dV}{dH} V \sin \gamma \quad \text{and} \quad (14.47)$$

$$\frac{dV_W}{dt} = \frac{dV_W}{dH} \frac{dH}{dt} = \frac{dV_W}{dH} V \sin \gamma \quad (14.48)$$

where dV_W/dH is the vertical wind gradient.

Assuming a quasi-rectilinear climb and using $g = g_0$, we obtain by putting [Eq. 14.47](#) and [Eq. 14.48](#) into [Eq. 14.45](#),

$$\frac{W}{g_0} \left[\frac{dV}{dH} V \sin \gamma - \frac{dV_W}{dH} V \sin \gamma \cos \gamma \right] = T - D - W \sin \gamma \quad (14.49)$$

Assuming also that the flight-path angle is sufficiently small, so that its cosine can be replaced by unity, we can change [Eq. 14.49](#) into the forms:

$$\sin \gamma \left[1 + \frac{V}{g_0} \frac{dV}{dH} - \frac{V}{g_0} \frac{dV_W}{dH} \right] = \frac{T - D}{W} = \sin \gamma_s \quad \text{and} \quad (14.50)$$

$$RC \left[1 + \frac{V}{g_0} \frac{dV}{dH} - \frac{V}{g_0} \frac{dV_W}{dH} \right] = \frac{(T - D)V}{W} = RC_s \quad (14.51)$$

Examining [Eq. 14.50](#) and [Eq. 14.51](#), we note that the effect of a wind gradient ($dV_W/dH \neq 0$) can be treated in a similar fashion as the effect of accelerated flight. Furthermore, we note that in the case of a headwind that increases with height ($dV_W/dH > 0$), a wind gradient has the tendency to improve the climb performance, at least as V is held constant. Due to the resulting decrease in acceleration with respect to the ground there is a conversion from kinetic to potential energy, through which both the climb angle and the rate of climb will increase. Conversely, a negative wind gradient ($dV_W/dH < 0$) will reduce the climb performance.

As discussed in [Chapter 2](#), due to the surface friction effect of the ground on the wind, for an open area there will normally be a continuous increase in wind velocity from ground level up to some height (see [Fig. 2.19](#)). Clearly, large wind gradients may occur close to the ground so that wind shear effects are of special significance when taking off or landing in wind.

Before closing this section, we remark that variations in the horizontal wind direction will change the magnitude of the headwind or tailwind component and therefore will have a similar effect as a change of wind velocity with height.

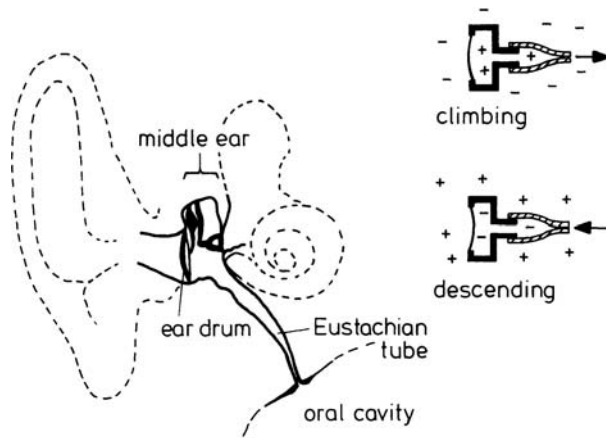


Figure 14.6 The Eustachian tube

14.5. LIMITATIONS ON VERTICAL VELOCITY

The adjustment of the pressures within the air spaces in our head to varying atmospheric pressure during climb and descent can be experienced as unpleasant and even as painful.

Of special significance is the matching of the air pressure in the middle ear cavity (Fig. 14.6). When the exterior pressure changes, the eardrum bulges outward if the atmospheric pressure is decreasing, and inward if it is increasing. Equalization of pressures is obtained by means of the *Eustachian tube*, which connects the middle ear with the oral cavity.

When climbing, the higher pressure in the middle ear causes air to escape through the Eustachian tube. This occurs each time a pressure difference of about 2000 Pa is built up between the inside and outside air. The process of balancing the pressure in the middle ear is fairly automatic and the occupant is aware only of a click as the air passes through the Eustachian tube.

When descending, however, the equalization process is most often more difficult. In going from lower to higher atmospheric pressure, the Eustachian tube does not open by itself and yawning, swallowing, or blowing with mouth and nose closed is required in order that compensating air can enter the middle ear. But if there is a common cold or a sore throat, the Eustachian tube may be blocked. In such circumstances, over-inflation of the eardrums occurs and severe pain will be experienced during descent.

Generally, the influence of ambient pressure changes on the ears fails to appear if the time rate of change of pressure is kept within the following limits:

$$-30 < \frac{dp}{dt} < 18 \text{ Pa/s} \quad (14.52)$$

In relating the change in pressure to the rate of climb of the airplane, we write

$$RC = \frac{dH}{dt} = \frac{dH}{dp} \frac{dp}{dt} \quad (14.53)$$

By making use of the hydrostatic equation: $dp = -\rho g_0 dH$, we can express the rate of climb as

$$RC = -\frac{1}{\rho g_0} \frac{dp}{dt} \quad (14.54)$$

Obviously, the vertical velocities determined by Eq. 14.52 and Eq. 14.54 decrease as altitude decreases. For example, the maximum allowable rate of climb at sea level should not exceed 2.5 m/s (500 ft/min) and the rate of descent 1.5 m/s (300 ft/min).

The use of pressurized airplanes has greatly solved the problem mentioned above. In this case, the limit on the vertical velocities of the airplane is determined by the rate of change of cabin pressure. At the normal cruising altitude, the cabin pressure, p_c , is equivalent to a geopotential pressure altitude of approximately 1800 m (≈ 6000 ft), i.e., $p_c/p_0 = 0.8$. Under this condition, the minimum time needed to increase the cabin pressure to the sea-level standard value becomes

$$t = \frac{p_0(1 - p_c/p_0)}{dp/dt} = \frac{101325 \cdot (1 - 0.8)}{18} = 1125 \text{ s (18.8 min)}$$

Note that this length of time is independent of the cruising altitude. For instance, during a descent from 9000 m, the mean allowable rate of descent of the airplane is $9000/1125 = 8$ m/s (1575 ft/min).

14

14.6. PROBLEMS

1. An aircraft has a true airspeed of 100 m/s and a climb rate of 15 m/s.
 - (a) What is the climb angle of this aircraft?
 - (b) If the aircraft is at sea-level altitude, will it be able to climb safely over an obstacle of 175 m height located 1 km away if the climb angle and airspeed are held constant?
2. An aircraft is flying at 130 m/s with a lift-to-drag ratio of 14. What is the thrust-to-weight ratio required to achieve a climb rate of 5 m/s?
3. A propeller aircraft has a maximum available power of 647 kW, a zero lift drag coefficient of 0.02, a wing area of 26 m^2 , an aspect ratio of 9.55, an Oswald span efficiency factor of 0.8, and a mass of 3995 kg. It is flying at sea-level altitude at a true airspeed of 95 m/s.
 - (a) Calculate the rate of climb in these conditions, if the airspeed is constant.
 - (b) How does this value of change if the aircraft was 500 kg lighter?
 - (c) How does this value change if the aircraft was equipped with an engine that could deliver 680 kW?
 - (d) How does this value change if the aircraft is also accelerating so that the equivalent airspeed remains constant?
4. A jet aircraft is about to land with an airspeed of 100 m/s, at sea-level altitude, and along a glideslope inclined by 3 deg. It has a weight of 55 000 N, a reference area of 30 m^2 and a parabolic drag polar with $C_{D0} = 0.02$ and $k = 0.044$. What is the thrust required to maintain constant speed in this flight condition?

5. A propeller aircraft is descending at sea level altitude along a glideslope inclined by 3 deg. It has a speed of 93 m/s, a weight of 39000 N, a reference area of 30 m² and a parabolic drag polar with $C_{D0} = 0.017$ and $k = 0.044$. If the piston engine generates 150 kW of power at the shaft, what is the propulsive efficiency of the propeller?
6. The climb performance of an aircraft when climbing at a constant IAS is provided in the following table.

Altitude (m)	I.A.S. (m/s)	T.A.S. (m/s)	Rate of Climb (m/s)
0	50.00	50.00	4.6
300	50.00	50.73	4.4
600	50.00	51.47	4.2
900	50.00	52.23	4.0
1200	50.00	53.00	3.8
1500	50.00	53.80	3.6
1800	50.00	54.61	3.4

- (a) Plot the rate of climb against altitude.
- (b) Calculate the total time required to fly from sea level to 1800m altitude.
- (c) Calculate the required ground distance to climb from sea level to 1800m.
7. An aircraft is climbing at a true airspeed of 102 m/s, at a rate of climb of 7 m/s, which is 60.0% of its maximum rate of climb in steady flight. What is its acceleration (in m/s²)?
8. During an unsteady climb, an aircraft increases its speed by 1 m/s every second. At a certain instant, the ratio between its actual rate of climb and the one it would have in steady flight is 0.55. What is its angle of climb?
9. An aircraft is flying at $M = 0.5$ at 5000 m altitude. It weighs 400 kN.
 - (a) What is its energy height?
 - (b) What would its speed be if it converted all its potential energy into kinetic energy?
10. An aircraft is cruising at 4300 m altitude with a true airspeed of 190 m/s. If it wants to reach a Mach number equal to $M = 0.79$ in the shortest time possible, to what altitude does it have to transfer?
11. An aircraft is flying at sea-level altitude with a true airspeed of 100 m/s and a climb rate of 15 m/s. A strong headwind of 20 m/s is present.
 - (a) What is the aircraft climb angle relative to the ground?
 - (b) If the aircraft is at sea-level altitude, will it be able to climb safely over an obstacle of 175 m height located 1 km away if the climb angle and airspeed are held constant?

15

CRUISE PERFORMANCE

15.1. RANGE AND ENDURANCE

As depicted in Fig. 15.1, here, the term range is used for the horizontal straight-line distance an airplane travels in cruising flight, whereas the distance traversed in climb, cruise, and descent is called *total range*, *stage length* or *block distance*. Maximum total range is the distance an airplane can fly between takeoff and landing as limited by its fuel capacity. The fuel consumption per unit time is

$$F = \frac{dW_f}{dt} \quad (15.1)$$

where W_f is the total fuel load. Since $dW_f = -dW$, the fuel weight flow rate is related to the weight of the airplane by (see also Chapter 8)

$$F = -\frac{dW}{dt} \quad (15.2)$$

The range is obtained from the following definite integral,

$$R = \int_{t_1}^{t_2} V dt = \int_{W_1}^{W_2} -\frac{V}{F} dW = \int_{W_2}^{W_1} \frac{V}{F} dW \quad (15.3)$$

where V/F is the specific range (range per unit weight of fuel). The subscripts “1” and “2” refer to the initial and final conditions at start and end of cruise, respectively.

The term *endurance* is used for the length of time spent in cruising flight. The endurance can be written as

$$E = \int_{t_1}^{t_2} dt = \int_{W_1}^{W_2} -\frac{dW}{F} = \int_{W_2}^{W_1} \frac{dW}{F} \quad (15.4)$$

At this point it is important to remember that in symmetric flight, the time history of the flight condition depends on the specification of two control laws, that is to say, the description of the variation of two control variables with time (see Chapter 8).

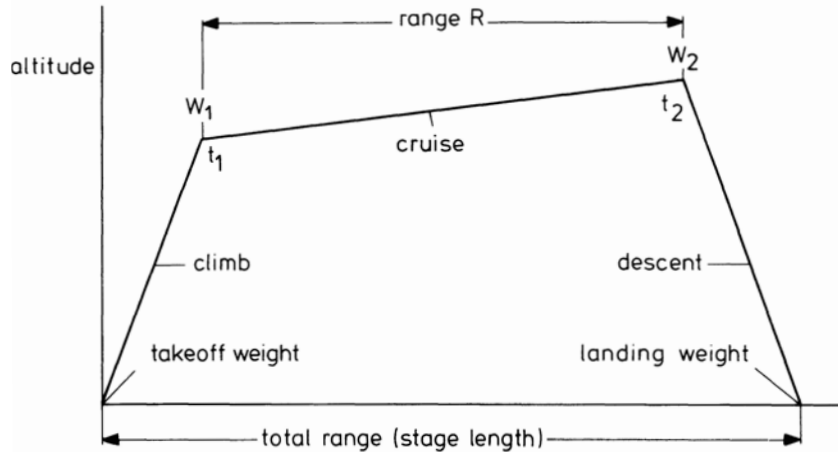


Figure 15.1 Mission nomenclature

15

Generally, both control variables are held constant throughout the cruise so that the flight condition only changes due to the influence of fuel consumption on airplane weight. For airplanes propelled by air-breathing engines, however, there is only a slow variation of airplane weight. This observation allows us to consider the flight as a continuous succession of uniform motions under slowly varying conditions. In other words, the instantaneous values of V/F and F can be determined as though the airplane is in quasi-steady-state flight.

The procedure for determining F and V/F as a function of airplane weight may be illustrated by reference to Fig. 15.2a and Fig. 15.2b for a propeller-driven and a jet-driven airplane, respectively. In both cases it is assumed that the airplane is performing a level flight at constant engine control setting.

In the case of propeller propulsion, the problem requires the computation of the level flight speed at a number of airplane weights from the equilibrium condition $P_a = P_r$. To each flight velocity, there corresponds a particular value of propulsive efficiency η_j and specific fuel consumption c_P . Then, successive engine powers can be found by using Eq. 6.1,

$$P_{br} = \frac{P_a}{\eta_j}. \quad (15.5)$$

The corresponding fuel weight flow rates can be computed from Eq. 6.15,

$$F = c_P P_{br}. \quad (15.6)$$

Analogously, for the jet picture we may use the respective points of intersection of the thrust and drag curves to give the successive values of airspeed V , thrust T , and specific fuel consumption c_T . According to the definition of c_T , Eq. 6.64, the fuel weight flow rates can be obtained from

$$F = c_T T. \quad (15.7)$$

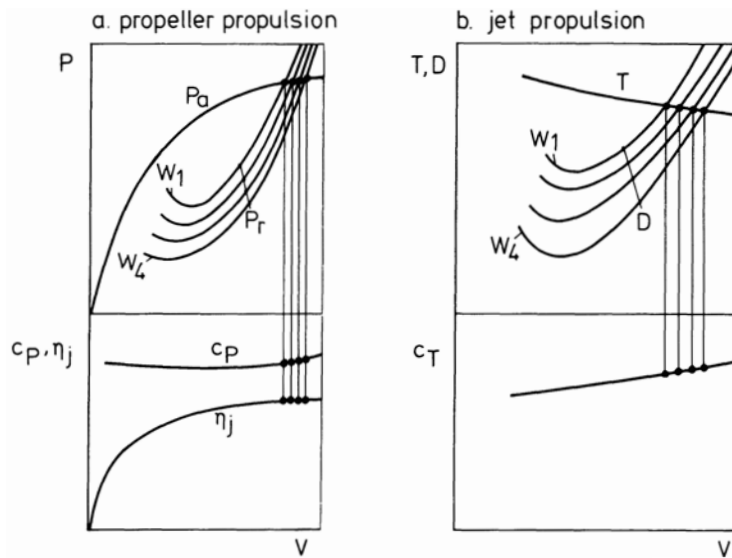


Figure 15.2 Determination of V/F and F for cruise flight at constant altitude and engine control setting

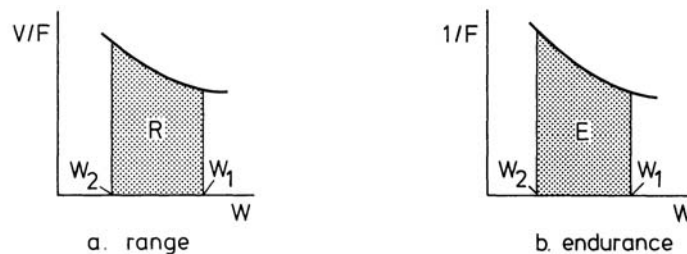


Figure 15.3 Calculation of range and endurance for cruise flight at constant altitude and engine control setting

Now, Eq. 15.3 and Eq. 15.4 can be evaluated graphically to give the values of range and endurance for the chosen cruise technique of constant altitude and constant engine control setting.

Range follows from plotting V/F against W , as shown in Fig. 15.3a. The shaded area under the curve from the final cruise weight W_2 to the initial cruise weight W_1 represents the range. Similarly, the endurance follows from the plot of $1/F$ versus W , as shown in Fig. 15.3b.

If the preceding calculation procedure is done systematically a so-called cruise chart can be deduced as exemplified in Fig. 15.4. The diagram gives the typical variations of specific range with airspeed and airplane weight, showing the various cruise techniques for a specified altitude. In Fig. 15.4, the constant engine rating program is represented by the line AB, the constant speed program by the line AC, and the maximum range program by the line AD, all for the same initial cruising speed. Of these, the most realistic cruise program is to maintain a constant airspeed at a fixed altitude (line AC). In this connection, it may be remarked that, practically, the range achieved by this cruise technique is virtually the same as that gained by the maximum range program (Ref.

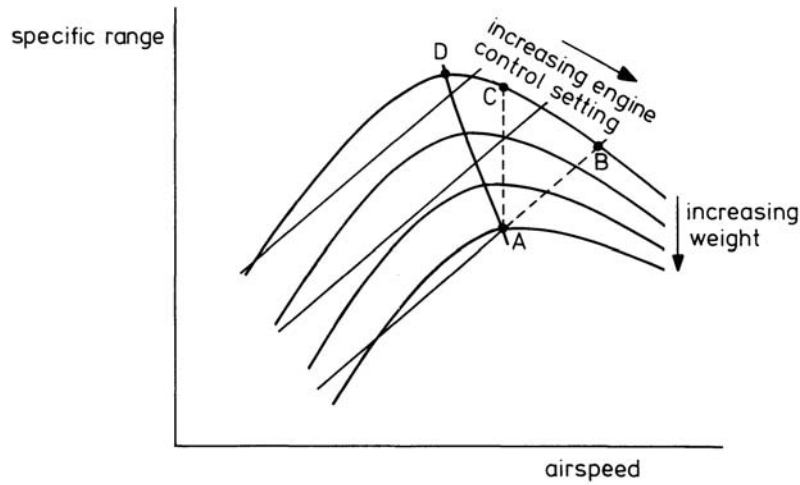


Figure 15.4 Typical specific range performance at a specified altitude

41). The instantaneous airspeeds which give the greatest distance on a given quantity of fuel (line AD), may be called maximum range speeds or economic speeds, V_{ec} . Obviously, for a particular cruise program, the relationship between specific range and airplane weight follows directly from the chart and so the resulting range for a given amount of fuel.

15.2. APPROXIMATE ANALYTIC EXPRESSIONS FOR RANGE AND ENDURANCE: PROPELLER PROPULSION

To obtain analytic expressions for range and endurance, we note that specific range and fuel weight flow rate can be related to the characteristics of the airplane and propulsion system by using Eq. 15.5 and Eq. 15.6. Assuming quasi-level and quasi-steady flight, we can write

$$F = c_P P_{br} = c_P \frac{P_a}{\eta_j} = c_P \frac{P_r}{\eta_j} = c_P \frac{DV}{\eta_j} \quad (15.8)$$

Making use of the relationships of Chapter 9 that $V = \sqrt{\frac{W}{s} \frac{2}{\rho} \frac{1}{C_L}}$ and $D = \frac{c_D}{c_L} W$, we obtain

$$\frac{V}{F} = \frac{\eta_j}{c_P} \frac{C_L}{C_D} \frac{1}{W} \quad (15.9)$$

$$F = \frac{c_P}{\eta_j} W \sqrt{\frac{W}{S} \frac{2}{\rho} \frac{C_D^2}{C_L^3}} \quad (15.10)$$

Substituting Eq. 15.9 into Eq. 15.3, and Eq. 15.10 into Eq. 15.4 gives

$$R = \int_{W_2}^{W_1} \frac{\eta_j}{c_P} \frac{C_L}{C_D} \frac{dW}{W} \quad (15.11)$$

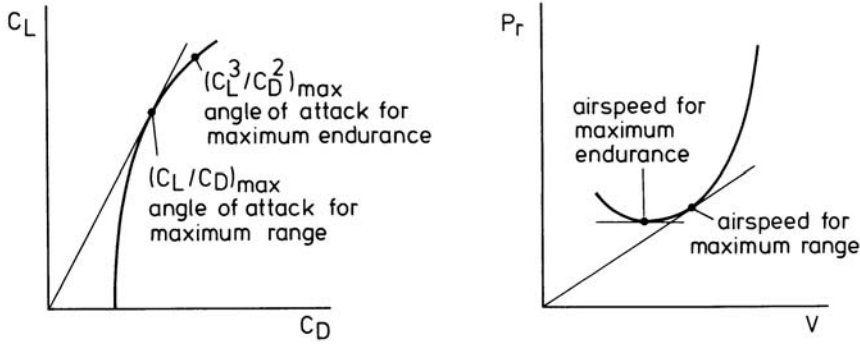


Figure 15.5 Best range and endurance conditions in level flight for propeller-driven airplanes

$$E = \int_{W_2}^{W_1} \frac{\eta_j}{c_P} \frac{dW}{W \sqrt{\frac{W}{s} \frac{2}{\rho} (C_D^2/C_L^3)}} \quad (15.12)$$

An examination of Eq. 15.11 and Eq. 15.12 reveals that from an analytical point of view it is interesting to consider the cruise technique where the angle of attack is held constant throughout the flight. Furthermore, η_j and c_P usually exhibit only small variations over the band of cruising speeds so that it is possible to assume that they have constant average values. Then, Eq. 15.11 can be integrated to give an approximate analytic expression for the range,

$$R = \frac{\eta_j}{c_P} \frac{C_L}{C_D} \int_{W_2}^{W_1} \frac{dW}{W} = \frac{\eta_j}{c_P} \frac{C_L}{C_D} \ln W \Big|_{W_2}^{W_1} = \frac{\eta_j}{c_P} \frac{C_L}{C_D} \ln \frac{W_1}{W_2} \quad (15.13)$$

This expression is the classic Breguet formula for range, derived by the Frenchman Louis-Charles Breguet (1880-1955). Inspection of Eq. 15.13 learns that to maximize range, flight must be carried out at the angle of attack at which C_L/C_D is the maximum. This is the flight condition for minimum airplane drag (Fig. 15.5). Also note that Eq. 15.13 can be used for both constant altitude and climbing flight. If the altitude is kept constant, then we see from the relationship $W = C_L \frac{1}{2} \rho V^2 S$ that the airspeed must be steadily reduced as fuel is consumed. On the other hand, if the airspeed is held constant, the cruising height must be gradually increased during the course of the flight. Therefore, the latter cruise technique is commonly referred to as cruise-climb flight. It should be remarked that this type of flight may not be tolerable in many situations because of the requirements of air traffic control (A.T.C.). For propeller airplanes powered by piston engines, the term η_j/c_P in Eq. 15.13 remains nearly constant when airspeed or altitude are changed. Consequently, there will be no difference in range when the two cruise programs are compared; only an increase in cruising speed for the cruise-climb flight. For turboprop airplanes, however, high cruising altitudes are essential, since at a given engine rating the specific fuel consumption decreases with height. Also it is important that at the economic airspeed the engines operate at their maximum permitted cruise rating in order to achieve the lowest possible specific fuel consumption. Obviously, the only way to attain the optimum cruising condition is to fly at a high altitude.

To obtain a closed form solution for the endurance we shall consider the realistic cruise technique of a flight at constant altitude. Then, carrying out the integration of Eq. 15.12, with η_j and c_P assumed constant throughout the flight, produces the following formula

$$\begin{aligned} E &= \frac{\eta_j}{c_P} \sqrt{\frac{C_L^3/C_D^2}{\frac{1}{S} \frac{2}{\rho}}} \int_{W_2}^{W_1} \frac{dW}{W\sqrt{W}} = \frac{\eta_j}{c_P} \sqrt{\frac{C_L^3/C_D^2}{\frac{1}{S} \frac{2}{\rho}}} \left[\frac{-2}{\sqrt{W}} \right]_{W_2}^{W_1} \\ &= \frac{\eta_j}{c_P} \sqrt{\frac{C_L^3/C_D^2}{\frac{1}{S} \frac{2}{\rho}}} \left[\frac{2}{\sqrt{W_2}} - \frac{2}{\sqrt{W_1}} \right] \end{aligned} \quad (15.14)$$

Introducing the airspeed at the starting point of the cruising flight, that is

$$V_1 = \sqrt{\frac{W_1}{S} \frac{2}{\rho} \frac{1}{C_L}} \quad (15.15)$$

we modify Eq. 15.14 to obtain

$$E = 2 \frac{\eta_j}{c_P} \frac{C_L}{C_D} \frac{1}{V_1} \left[\sqrt{\frac{W_1}{W_2}} - 1 \right] \quad (15.16)$$

Combination of Eq. 15.13 and Eq. 15.16 yields the following expression for the average velocity during the flight

$$V_{av} = \frac{R}{E} = \frac{V_1 \ln(W_1/W_2)}{2(\sqrt{W_1/W_2} - 1)} \quad (15.17)$$

Eq. 15.14 indicates that for best endurance, the airplane must fly at the angle of attack at which C_L^3/C_D^2 is the maximum. This is the flight condition for minimum power required and minimum fuel weight flow rate. Inspection of Fig. 15.5 shows that level flight speeds less than the speed for best endurance are in the region of reversed command. As was demonstrated in Section 11.3, flying in this region introduces the problem of speed instability. Because of this phenomenon the actual cruising speed lies somewhat above the minimum power required speed, for example, $V_{cr} \geq 1.1 V_{D\min}$ (cf. Eq. 11.13).

15.3. APPROXIMATE ANALYTIC EXPRESSIONS FOR RANGE AND ENDURANCE: JET PROPULSION

Assuming quasi-steady level flight and using the relationship $D = \frac{C_D}{C_L} W$, the thrust can be written as

$$T = D = \frac{C_D}{C_L} W \quad (15.18)$$

With Eq. 15.7 and the relationship $V = \sqrt{\frac{W}{S} \frac{2}{\rho} \frac{1}{C_L}}$, the specific range is found to equal

$$\frac{V}{F} = \frac{1}{c_T W} \sqrt{\frac{W}{S} \frac{2}{\rho} \frac{C_L}{C_D^2}} \quad (15.19)$$

Substituting Eq. 15.19 into Eq. 15.3 yields

$$R = \int_{W_2}^{W_1} \frac{1}{c_T W} \sqrt{\frac{W}{S} \frac{2 C_L}{\rho C_D^2}} dW \quad (15.20)$$

The corresponding integral, expressing the endurance is obtained by insertion of Eq. 15.7 and Eq. 15.18 into Eq. 15.4,

$$E = \int_{W_2}^{W_1} \frac{1}{c_T} \frac{C_L}{C_D} \frac{dW}{W} \quad (15.21)$$

In deriving analytic expressions for range and endurance, first, we shall consider cruising at a fixed height and at a constant angle of attack. Moreover, we shall continue to assume that the specific fuel consumption remains constant for the duration of the flight. The analysis will be further simplified by neglecting the variation of the effects of compressibility on the aerodynamic characteristics of the airplane as the flight speed reduces during the course of the flight. Integrating Eq. 15.20, we find

$$R = \frac{1}{c_T} \sqrt{\frac{2 C_L}{S \rho C_D^2}} \int_{W_2}^{W_1} \frac{dW}{\sqrt{W}} = \frac{2}{c_T} \sqrt{\frac{2 C_L}{S \rho C_D^2}} |\sqrt{W}|_{W_2}^{W_1} = \frac{2}{c_T} \sqrt{\frac{2 C_L}{S \rho C_D^2}} [\sqrt{W_1} - \sqrt{W_2}] \quad (15.22)$$

It should be remarked that $\sqrt{\rho}$ is present in the denominator of Eq. 15.22, and that this is the essential reason why high cruising altitudes are desired for jet powered airplanes. By using Eq. 15.15, we can rewrite Eq. 15.22 as follows,

$$R = \frac{2}{c_T} \sqrt{\frac{W_1}{S} \frac{2 C_L}{\rho C_D^2}} \left[1 - \sqrt{\frac{W_2}{W_1}} \right] = 2 \frac{V_1}{c_T} \frac{C_L}{C_D} \left[1 - \sqrt{\frac{W_2}{W_1}} \right] \quad (15.23)$$

where V_1 is the initial airspeed.

Performing the integration of Eq. 15.21 gives

$$E = \frac{1}{c_T} \frac{C_L}{C_D} \int_{W_2}^{W_1} \frac{dW}{W} = \frac{1}{c_T} \frac{C_L}{C_D} |\ln W|_{W_2}^{W_1} = \frac{1}{c_T} \frac{C_L}{C_D} \ln \frac{W_1}{W_2} \quad (15.24)$$

From Eq. 15.23 and Eq. 15.24 the average airspeed during the flight is found to be

$$V_{av} = \frac{R}{E} = \frac{2 V_1 (1 - \sqrt{W_2/W_1})}{\ln(W_1/W_2)} \quad (15.25)$$

An inspection of Eq. 15.22 and Eq. 15.24 shows that:

- For best range, the airplane should be flown at the angle of attack for maximum C_L/C_D^2 . From the relationships $V = \sqrt{\frac{W}{S} \frac{2}{\rho C_L}}$ and $D = \frac{C_D}{C_L} W$, it may be seen that this requirement corresponds to the flight condition for minimum D/V (Fig. 15.6).
- At a given angle of attack, range increases with altitude up to the typical cruising altitude. The favorable effect of a higher altitude is augmented by the tendency of the specific fuel consumption to decrease with increasing altitude up to the tropopause (I.S.A.).

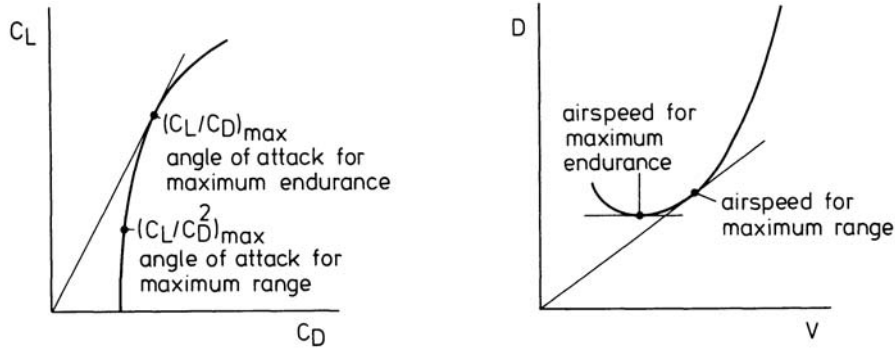


Figure 15.6 Best range and endurance conditions in level flight for jet-powered airplanes

- Maximum endurance will be obtained when C_L/C_D is the maximum. This is the flight condition for minimum airplane drag (Fig. 15.6).

A second cruise technique of interest for turbojet and turbofan airplanes is the flight at constant airspeed and angle of attack. For this cruise technique, we pointed out in Section 15.2 that as fuel is burned, the airplane should ascend in altitude. The flight-path angle occurring in this cruise-climb schedule, however, is normally sufficiently small so as to approve the use of the level-flight conditions that lift is equal to weight and thrust is equal to drag. From Eq. 15.3, Eq. 15.7 and Eq. 15.18, we then have

$$R = \int_{W_2}^{W_1} \frac{V}{c_T} \frac{C_L}{C_D} \frac{dW}{W} \quad (15.26)$$

If again c_T and C_L/C_D are assumed to have constant values throughout the flight, Eq. 15.26 can be readily integrated to give the expression

$$R = \frac{V}{c_T} \frac{C_L}{C_D} \ln \frac{W_1}{W_2} \quad (15.27)$$

where the quantity $\frac{V}{c_T} \frac{C_L}{C_D}$ is called the range factor.

Sometimes it may be convenient to express the range in terms of the overall efficiency of the propulsion system. According to Eq. 6.65, we have

$$\eta_{\text{tot}} = \frac{gV}{Hc_T} \quad (15.28)$$

Insertion of Eq. 15.28 into Eq. 15.27 gives

$$R = \eta_{\text{tot}} \frac{H}{g} \frac{C_L}{C_D} \ln \frac{W_1}{W_2} \quad (15.29)$$

As mentioned earlier in Chapter 6, the heating value H of all common aviation fuels (hydrocarbon fuels) is about 4.3×10^7 J/kg so that the ratio H/g in Eq. 15.29 is about 4390 km. Eq. 15.27 and Eq. 15.29 are also labeled Breguet range equations, although Breguet's name was originally

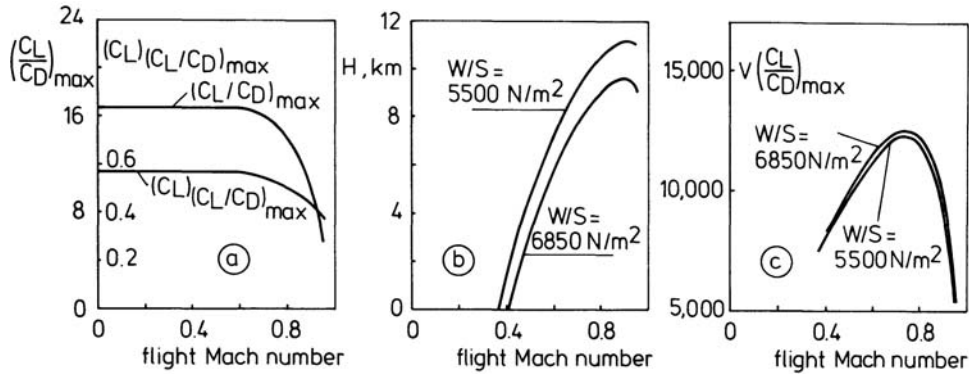


Figure 15.7 Condition for maximum $V(C_L/C_D)$

associated with range performance of airplanes driven by the combination of piston-engines and propellers. In this light, it is worthwhile to remark that Eq. 15.29 also holds for propeller-driven airplanes. This statement can easily be verified by substitution of Eq. 6.16 and Eq. 6.17 into Eq. 15.13. At constant airspeed and angle of attack, the endurance is directly found as

$$E = \frac{R}{V} = \frac{1}{c_T} \frac{C_L}{C_D} \ln \frac{W_1}{W_2} \quad (15.30)$$

Obviously, the greatest endurance will be obtained when C_L/C_D is the maximum. Also note that Eq. 15.30 is identical to the expression for the endurance in level flight (see Eq. 15.24). Eq. 15.27 indicates that for a given initial weight and fuel load, the airplane should fly at that altitude and airspeed at which the product $V(C_L/C_D)$ is a maximum, provided that variations in specific fuel consumption can be neglected.

The derivation of this flight condition will be demonstrated from a numerical example. For this, we return to our illustrative turbofan airplane with its lift-drag polars given in the previous Fig. 9.7. From this data, the curves in Fig. 15.7a are deduced, which give the maximum lift-to-drag ratio and the associated lift coefficient as a function of flight Mach number. The graph manifests the characteristic behavior that both quantities drop off sharply at Mach numbers greater than 0.6. The required (I.S.A.) altitudes are plotted versus M in Fig. 15.7b, as computed from the relationship $W = C_L \frac{1}{2} \gamma p M^2 S$ where C_L is the lift coefficient at which C_L/C_D is the maximum. The related airspeeds follow from $V = Mc$. The final result is shown in Fig. 15.7c, in the form of a plot of the product $V(C_L/C_D)_{\max}$ against flight Mach number. Clearly, there is an optimum flight Mach number and an optimum altitude at a given airplane weight. Fig. 15.7b also demonstrates that as the weight of the airplane decreases during cruise the airplane should climb in altitude to maintain the optimum flight condition.

Note from Eq. 15.27 that with the assumptions of constant c_T and C_L/C_D , the range has no absolute maximum. Without compressibility drag, a constrained optimum is obtained when the magnitude of the airspeed is specified. In this case, the maximum range will also occur when C_L/C_D is the maximum. This condition requires that the instantaneous height should be that height at which the minimum drag speed becomes equal to the chosen airspeed. When our cruise-climb flight is

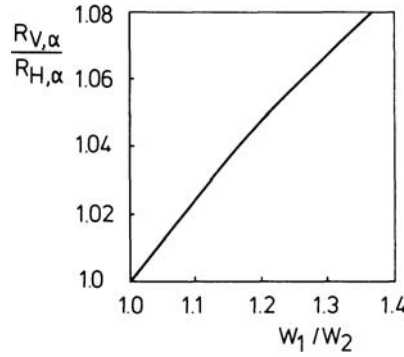


Figure 15.8 Relative range

conducted in the lower stratosphere (I.S.A.), where the speed of sound is constant, a fixed airspeed also means a fixed flight Mach number. Consequently, the aerodynamic ratio in Eq. 15.27 is exactly constant (see Chapter 4). If we look at the force equation

$$T = C_D \frac{1}{2} \rho V^2 S \quad (15.31)$$

we see that the thrust is directly proportional to the air density. However, at a constant value of T/ρ , turbo-engine performance in the lower stratosphere (I.S.A.) is such that engine control setting is fixed. As a result, also specific fuel consumption remains unchanged (see Chapter 6). Therefore, the desired flight program is realized if the pilot simply maintains constant readings on the Mach meter and the engine-speed indicator. The appropriate expression for the range is then obtained by substituting Eq. 15.31 into Eq. 15.27. The resulting form becomes

$$R = \frac{1}{c_T} \sqrt{\frac{T}{S} \frac{2}{\rho} \frac{C_L^2}{C_D^3}} \ln \frac{W_1}{W_2} \quad (15.32)$$

We observe that the condition for maximum range when flying in the lower stratosphere (I.S.A.) at a given engine control setting and airspeed exists when C_L^2/C_D^3 is the maximum.

A third constrained optimum is derived for a specified altitude at the starting point of the cruise-climb flight. Then, insertion of Eq. 15.15 into Eq. 15.27 leads to the expression

$$R = \frac{1}{c_T} \sqrt{\frac{W_1}{S} \frac{2}{\rho_1} \frac{C_L}{C_D^2}} \ln \frac{W_1}{W_2} \quad (15.33)$$

where ρ_1 is the air density at the initial height H_1 .

Examination of the above equation reveals that to obtain maximum range, flight must be executed at maximum $\frac{C_L}{C_D^2}$.

Taking the initial height of the cruise-climb flight to be the cruising height of the constant altitude flight and assuming the same angle of attack and specific fuel consumption, we can derive a simple relationship between the two ranges. Dividing Eq. 15.27 by Eq. 15.23 yields

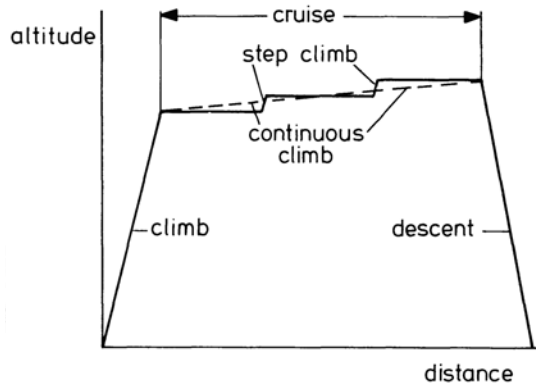


Figure 15.9 Stepped altitude flight

$$\frac{R_{V,\alpha}}{R_{H,\alpha}} = \frac{\ln W_1/W_2}{2(1 - \sqrt{W_2/W_1})} \quad (15.34)$$

The above ratio is presented in Fig. 15.8. The graph indicates that the increase in range by performing a cruise-climb flight becomes greater as the weight ratio W_1/W_2 increases. In other words, flying cruise-climb appears to be more economical than level flight, especially when the airplane executes a long-distance flight.

In practice, a cruise-climb flight may be approximated by a sequence of segments of level flight (Fig. 15.9). However, when the cruise is executed under the jurisdiction of flight traffic control regulations, each altitude change needs approval. Then cruising altitudes as well as cruising speeds and headings are assigned by air traffic control in order that sufficient spacing is ensured vertically, longitudinally, and laterally for safe flight.

15.4. EFFECT OF WIND ON CRUISE PERFORMANCE

In this section we shall pay some attention to the effect of wind on cruising performance. For simplicity, we shall consider the presence of a constant headwind or tailwind only, directed along the flight path.

From our analysis in Chapter 14, we know that if an airplane flies in a steady wind, the motion is governed by the same equations as used in still air. Thus, drag and power required curves are unaffected although now ground speed differs from airspeed.

In level and quasi-level flight, the relationship between ground speed V_g , airspeed V , and wind velocity V_W , is given by (cf. Eq. 1.24)

$$V_g = V - V_W \quad (15.35)$$

where, according to our sign convention, a headwind is taken positive and a tailwind negative. Wind does not affect the endurance of an airplane because it is a function only of fuel consumption per unit time. On the contrary, wind has a pronounced effect on range.

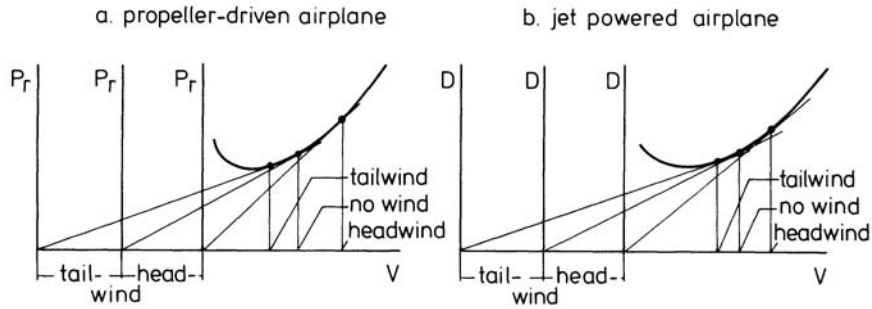


Figure 15.10 Effect of steady headwind and tailwind on airspeed for maximum specific range

The specific range with respect to the ground can be expressed as

$$\frac{V_g}{F} = \frac{V - V_W}{F} = \frac{V}{F} \left[1 - \frac{V_W}{V} \right] \quad (15.36)$$

Eq. 15.36 indicates that the with-wind and zero-wind specific ranges are different. For example, when $V = V_W$ the distance traveled relative to the ground is zero. Clearly, the presence of wind also affects the economic speed. This can be investigated by considering the following relationships:

$$\frac{V_g}{F} = \frac{V_g}{c_P P_{br}} = \frac{\eta_j}{c_P} \left[\frac{V - V_W}{P_r} \right] \quad (15.37)$$

$$\frac{V_g}{F} = \frac{V_g}{c_T T} = \frac{1}{c_T} \left[\frac{V - V_W}{D} \right] \quad (15.38)$$

Note that Eq. 15.37 and Eq. 15.38 concern the specific range of propeller-driven airplanes and jet powered airplanes, respectively. As shown in Fig. 15.10, with wind the economic speeds with respect to the ground are found by determining new origins on the airspeed axes and drawing tangents to the power required curve and the drag curve. From the constructions shown, it is seen that for both airplane types the airspeed for maximum specific range with a headwind is greater than in still-air conditions. The reverse is true when flying with a tailwind. Further, it may be understood from Fig. 15.10 that maximum specific range, and so the maximum range, is increased by a tailwind and decreased by a headwind. An expression for the range relative to the ground with a wind of velocity V_W is given by

$$R = \int_{W_2}^{W_1} \frac{V_g}{F} dW = \int_{W_2}^{W_1} \frac{(V - V_W)}{F} dW = \int_{W_2}^{W_1} \frac{V}{F} dW - V_W \int_{W_2}^{W_1} \frac{dW}{F} = R_{(V_W=0)} - V_W E \quad (15.39)$$

Again this equation shows that range is affected advantageously by a tailwind and adversely by a headwind. Therefore, it will be clear that the actual fuel load of the airplane not only is determined by the flight distance but also by the prevailing winds along the flight path. These may be known from meteorological forecasts, completed with seasonal wind data for the airway.

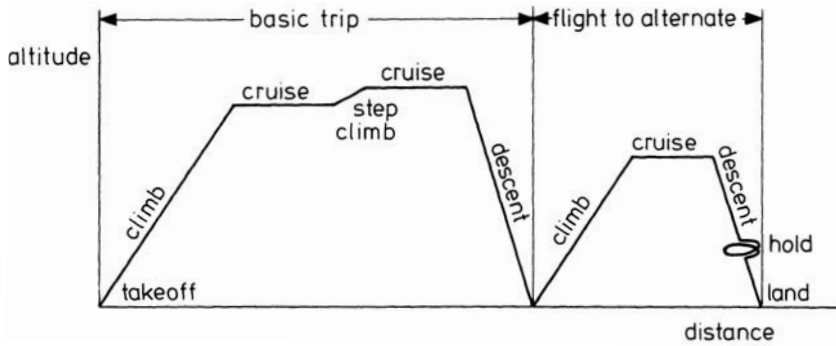


Figure 15.11 Typical flight profile

15.5. WEIGHT BREAKDOWN

The total weight of the airplane W_{to} , may be written as the sum of the structural weight W_c , the weight of the propulsion system W_e , the payload W_p , the fuel weight W_f , and the weight of the reserve fuel W_{fr} .

$$W_{to} = W_c + W_e + W_p + W_f + W_{fr} \quad (15.40)$$

The total weight is the weight at takeoff brake release (TOW), and depends on the loading condition. TOW should not exceed the maximum takeoff weight (MTOW), which is generally determined by structural considerations. The reserve fuel must be onboard above the trip fuel to provide for changes in the intended flight profile or flight program and for diversion to an alternate airport due to a balked landing at the airport of destination. The amount of reserve fuel is usually determined by the operator in accordance with operational procedures. Typically, the procedure allows for a flight to alternate and a standard stacking time (Fig. 15.11). Payload is the weight of passengers and cargo. The sum of the payload and trip fuel may be called the useful load W_u .

$$W_u = W_p + W_f \quad (15.41)$$

The structural weight will include not only the weight of the airframe but also the weight of fixed and removable equipment, furnishings, and the weight of the complete crew. The structural weight and the weight of the propulsion system may be combined into the operational empty weight (OEW) or basic operational weight W_b ,

$$W_b = W_c + W_e \quad (15.42)$$

Thus, W_b is the weight of the airplane fully equipped excluding only payload and fuel,

$$W_{to} = W_b + W_p + W_f + W_{fr} \quad (15.43)$$

If we divide through by the total weight, we obtain the weight breakdown in terms of weight fractions,

$$1 = \frac{W_b}{W_{to}} + \frac{W_p}{W_{to}} + \frac{W_f}{W_{to}} + \frac{W_{fr}}{W_{to}} \quad (15.44)$$

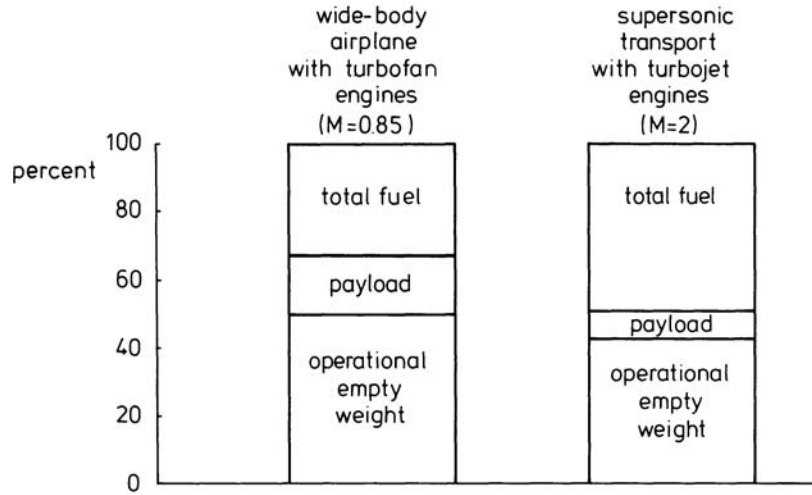


Figure 15.12 Typical weight breakdowns

Because of their usefulness, weight fractions are often employed in airplane performance and design considerations. For example, when we assume that the entire journey length is performed in cruising flight, from Eq. 15.27 and Eq. 15.29, the ratio W_f/W_{to} can be written as

$$\frac{W_f}{W_{to}} = 1 - e^{-\frac{R}{c_T(C_L/C_D)}} = 1 - e^{-\frac{R}{n_{tot} \frac{H}{g} (C_L/C_D)}} \quad (15.45)$$

where now R is the total range. Eq. 15.45 and Eq. 15.44 show that the aim is obviously to make the range factor as large as possible and to keep the fraction W_b/W_{to} low in order to obtain a large payload fraction. The weight fraction W_b/W_{to} may be regarded as the structural efficiency since the lighter the airplane is built, the greater is the useful load fraction. Typical weight fractions for a stage length of 6500 km are shown in Fig. 15.12, for a high-subsonic turbofan airplane and a supersonic transport with turbojet engines. Due to its lower range factor, the fuel fraction for the supersonic airplane is higher than for the turbofan airplane. Consequently, the payload fraction for the supersonic transport is considerably smaller, notwithstanding its higher structural efficiency. We also conclude from Eq. 15.45 that at a given range factor, a greater fuel fraction is required as the range becomes longer. This implies that, for a given airplane, the payload fraction decreases with range as can be seen from Eq. 15.44.

In Fig. 15.13a, the weight breakdown is sketched with respect to stage length in still air for a typical transport airplane. The line AB gives the takeoff weight at the maximum payload that can be carried. Point B corresponds to the maximum stage length with maximum payload. This range is called the design range. Increasing the total range above the design range requires that payload is replaced by fuel. This is represented by the line CD. At point D the ultimate range is reached (zero payload and reserve fuel unconsumed). Usually, the fuel tank capacity is such that the range cannot be increased beyond point E. The line EF, finally, indicates that some further increase of the total range is possible by reducing the takeoff weight when consuming the full fuel load.

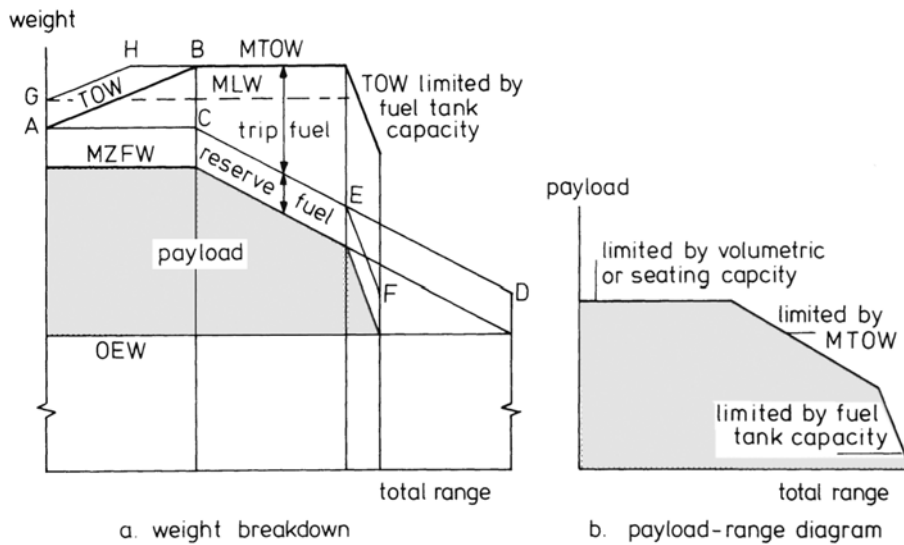


Figure 15.13 Payload-range characteristics

The line GH in Fig. 15.13a represents a limit to the takeoff weight that may be dictated on short ranges by the maximum allowable weight of the airplane at the landing. The maximum landing weight (MLW) is imposed by structural design requirements. Another weight limit is the maximum zero fuel weight (MZFW), the maximum allowable weight of the airplane without fuel. Normally, the maximum landing weight is greater than the maximum zero fuel weight plus the reserve fuel. Otherwise, payload might be restricted by the limited strength of the landing gear or airframe structure under particular landing conditions.

The payload-range relationship of Fig. 15.13a is separately portrayed in Fig. 15.13b. In both charts, the boundary edge lines are in reality not straight but slightly curves, in light of the exponential (or logarithmic) relations between range and weight (as shown in Eq. 15.45, for example). The second chart, often called the *payload-range diagram*, may be regarded as the basis of the economic value of a transport airplane.

15.6. THE ECONOMIC PERFORMANCE OF TRANSPORT AIRPLANES

The most valuable parameters determining the commercial merit of a transport airplane are summarized in this section. These performance items are given below and will be explained in the order listed:

- block time, E_B
- block speed, V_B
- transport product, P_R
- transport productivity, P_h

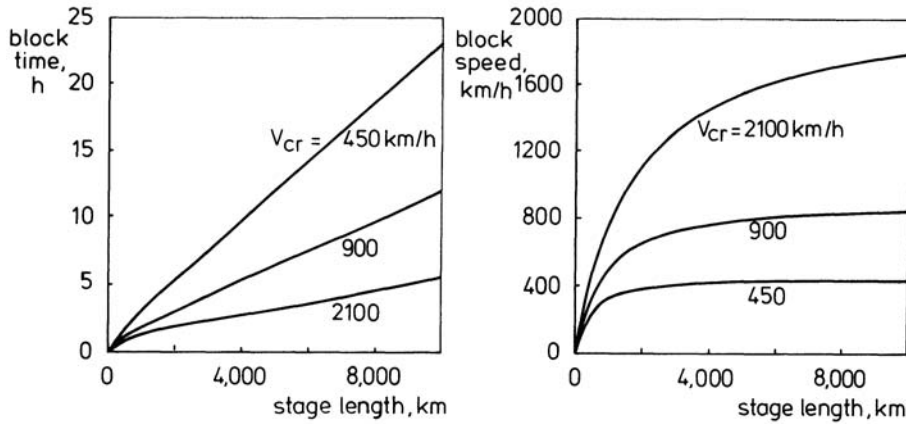


Figure 15.14 Block time and block speed versus range

- revenue-earning capacity, P_y

The *block time* is the total time elapsing from starting engines at the departure airport to engines off at the destination place. Thus, the block time includes taxi time from the loading point to the takeoff runway, checks, takeoff, ascent to cruising height, cruise, descent, final circuits, approach and landing, and taxi time to the terminal point. The *block speed* is the block distance divided by the block time,

$$V_B = \frac{R}{E_B} \quad (15.46)$$

Evidently, the block speed is lower than the cruising speed. According to Ref. 42 the relationship between block time, block distance and cruising speed can be written as

$$E_B = \frac{R}{V_{cr}} + \Delta t \quad (15.47)$$

where R is the block distance, V_{cr} is the cruising speed and Δt is the length of time that accounts for the field operations and the lower airspeeds in flight phases other than the cruise. Combining Eq. 15.46 and Eq. 15.47 results in the following expression for the block speed,

$$V_B = \frac{R}{\frac{R}{V_{cr}} + \Delta t} \quad (15.48)$$

Typical variations of block time and block speed with total range are plotted in Fig. 15.14, using $\Delta t = 50$ minutes. The graphs show that at a given cruising speed both block time and block speed increase with increasing block distance, and that raising the cruising speed is more beneficial as the range is greater.

Obviously, the revenues which are gained by transport of passengers and/or freight are dependent on payload as well as range. Therefore, the transport performance is given by the product of payload and range,

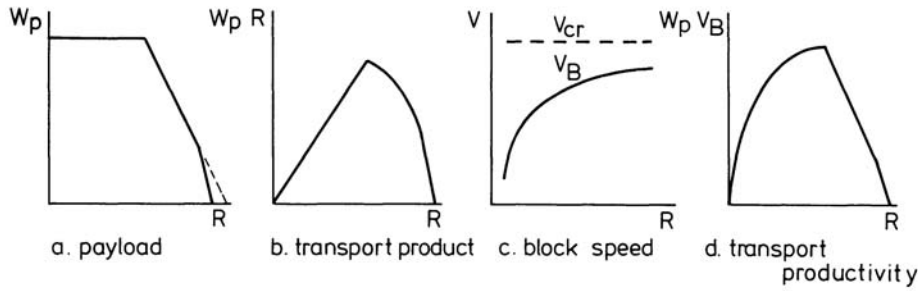


Figure 15.15 Economic parameters for transport airplane

$$P_R = W_p R \quad (15.49)$$

where P_R is named the *transport product* and may be expressed in the units ton·km or pax·km. For a transport airplane with payload-range characteristic as depicted in Fig. 15.13b and Fig. 15.15a, the variation of the transport product versus stage length is as shown in Fig. 15.15b. It is of interest to note that the peak value of the transport product occurs at a flight distance which is equal to half the ultimate range. In the case that the latter distance is shorter than the design range, the optimum value occurs at the design range. Also note that the revenues are directly proportional to the load factor, the ratio of the payload actually carried over a given route distance to that payload that could have been carried over the same distance. The reader should note that the term “load factor” is also used in Chapter 8 in the context of the loads from flight maneuvers on the airplane structure.

The *transport productivity* is defined as the transport product delivered per unit time. Usually, it is based on block time, so that we can write

$$P_h = \frac{W_p R}{E_B} = W_p V_B \quad (15.50)$$

From the combination of the payload range diagram in Fig. 15.15a and the block speed-range relationship in Fig. 15.15c, we obtain the curve of Fig. 15.15d. This shows the typical variation of transport productivity with block distance. From the diagrams, we see that the maximum value of P_h occurs at the design range.

The *revenue-earning capacity* is the transport product per year. If U is the annual flight utilization of the airplane in hours, we have

$$P_y = P_h U = W_p V_B U \quad (15.51)$$

For long-haul routes, the annual utilization might reach a value of 4500 hours. This figure gradually decreases as the route distance (block time) becomes shorter (Ref. 43).

Besides the preceding parameters, the specific costs of operating a commercial airplane, that is to say, the costs per ton·km or costs per hour are as much of importance to its economic value.

The operating costs are usually broken down into direct and indirect costs. The direct operating costs (DOC) are those which are associated with flying operations. These may include maintenance, crew, airplane service, landing fees, depreciation of capital invested, insurance, and fuel. The indirect operating costs (IOC), on the other hand, are independent of the characteristics of the airplane since they are connected with the costs of operating an airline. They may encompass management, administration, sales, housing, and depreciation of ground properties and equipment. Beyond doubt, when considering the economic value of an airplane we shall specially be interested in the direct operating costs as a criterion.

As a means of estimating DOC for comparative purposes, standard methods were published by the Society of British Aircraft Constructors (SBAC) in 1959 and by the Air Transport Association of America (ATA) in 1967 (Ref. 43 and Ref. 44). To reflect the effects of inflation and changing technology, renewed and updated cost models are regularly developed and updated. See, for example, Ref. 45 and Ref. 46. These sources will aid the reader in obtaining a proper understanding of the airplane related cost problem.

15.7. PROBLEMS

1. Look up the nominal range and payload of popular commercial aircraft currently in operation.
 - How do these aircraft compare to one-another on the payload-range diagram?
 - How do they compare to the Spirit of St. Louis, the first aircraft to fly non-stop across the Atlantic Ocean?
 - How do they compare to the Rutan Voyager, the first aircraft to fly non-stop around the world without stopping or refueling?
2. Why do airplanes fly at high altitudes? Explain what cruise flight parameters are affected by altitude and how they are beneficial to the cruise performance of any airplane.
3. It is possible to design aircraft that have a different energy source than kerosene (jet fuel). You can think of liquid hydrogen, liquefied natural gas, batteries, or hydrogen for fuel-cells. Search the internet for the values of energy density, in terms of J/kg and J/L, of various energy sources, and report these two parameters on a chart. Why do you think kerosene has historically been the preferred energy source for commercial aircraft?
4. An aircraft is cruising over a range of 13200 km, at a constant C_L/C_D ratio of 14, and burning fuel with an overall efficiency of the powerplant equal to $\eta_{\text{tot}} = 0.35$. By the end of the cruise phase, it has lost 45% of its initial weight. What is the specific energy of the fuel?
5. A simplified jet aircraft cruises over a range of 5200 km, at constant altitude and lift coefficient, with a lift-over-drag ratio of 12.8. Its thrust-specific fuel consumption is 0.000 195 N/(N·s). If its initial speed is 240 m/s, what is its final speed (in m/s)?;
6. A simplified jet aircraft with a surface area of 93 m² is loaded with a fuel weight equal to 30% of the total weight at the beginning of the cruise phase $W_{\text{ini}} = 440 \text{ kN}$. It has a parabolic polar with $CD0 = 0.0202$ and $K = 0.043$ and a thrust-specific fuel consumption of 0.82 N/(N·hr). It

is cruising at constant speed and C_L in the conditions of maximum endurance. How much time does it take to fly its range in these assumptions?

7. A twin-engined propeller aircraft is flying at an altitude of 50000 m. It has a wing area of 91.7 m^2 , a power-specific fuel consumption $c_P = 2.03 \times 10^{-7} \text{ kg}/(\text{W}\cdot\text{s})$, and a propulsive efficiency of 0.75. Its drag polar is non parabolic, and given by

$$C_D = 0.0165 - 0.0023C_L + 0.0478C_L^2$$

It is flying at the lift coefficient for maximum endurance, and weighs 112 kN. What is the fuel flow in this condition?

8. With a constant tailwind of 145 km/hr, a jet aircraft is capable to fly over a maximum range of 14000 km. If it has a nominal endurance of 13.6 hr, what is its nominal range (in km)?
9. An aircraft cruises over a range of 1150 km at a ground speed of 740 km/hr. The time it takes for all other flight phases and ground operations is 18% of the time spent in cruise. What is its block speed?
10. An aircraft takes a total time of 7.8 hr to transport 25000 kg of payload over a cruise range of 4200 km. What is its transport productivity?

16

AIRFIELD PERFORMANCE

16.1. THE TAKEOFF MANEUVER

The takeoff can be defined as the maneuver by which the airplane is accelerated from rest on the runway to the climb-out speed V_C over a 10.7 m (35 ft) obstacle (screen height) for civil transports or a 15.2 m (50 ft) obstacle for light propeller-driven and military airplanes (Fig. 16.1).

The takeoff distance may be considered to consist of two main parts: (1) the ground run distance, and (2) the airborne distance. The ground run comprises the pre-rotation phase and the rotation phase, where the airplane successively accelerates from standstill to the rotation speed V_R and from V_R to the lift-off speed V_{LOF} . The rotation speed is the speed at which the pilot initiates upward rotation of the airplane and is perhaps the most important reference speed for the pilot since varying V_R can greatly affect the takeoff distance and the overall safety level of the takeoff maneuver.

During the first part of the ground run, the airplane incidence remains fairly unchanged. Beyond the rotation speed the angle of attack is gradually increased from the ground attitude toward the lift-off condition such that at V_{LOF} the lift equals the weight and the airplane becomes airborne.

The airborne distance is usually divided into the transition to climbing flight and the rectilinear climb to the screen height. The transition phase, where the flight-path angle is increased from zero at V_{LOF} to that of steady climb at screen speed V_C , is flown with an incremental lift coefficient in order to provide sufficient lift to accomplish an adequate curvature of the flight path. During the takeoff maneuver, flap deflection and engine control setting remain constant. However, to improve climb performance, the landing gear is retracted soon after the airplane has become airborne.

After passing the screen height, the airplane travels along the takeoff flight path until it reaches a safe flight condition at an altitude of about 450 m (1500 ft), where the continued climb to cruising altitude begins (see Fig. 11.4).

According to the airworthiness requirements, for multi-engine civil transport airplanes the occurrence of single engine failure during the takeoff ground run must be awaited. To warrant nevertheless adequate safety and handling, a number of reference speeds are of significance in airfield performance computations. These speeds are indicated in Fig. 16.2 in the order in which they normally occur during the takeoff maneuver.

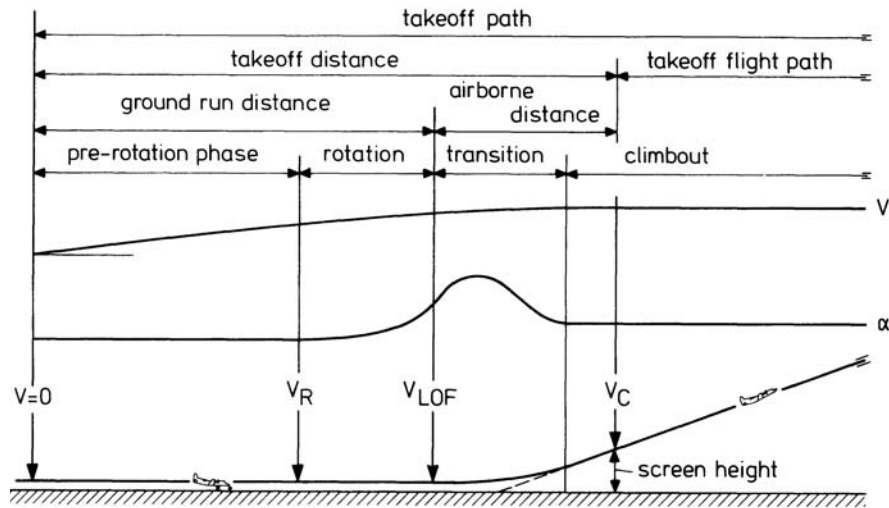


Figure 16.1 The takeoff maneuver

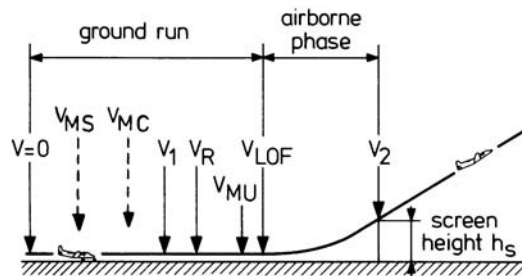


Figure 16.2 Takeoff reference speeds for conventional transports

The decision speed V_1 is selected such that when at this speed an engine failure is recognized, the pilot is able to abort the takeoff and make a full stop on the runway, or to continue the takeoff to the screen height with one engine out, in the same distance (Fig. 16.3a).

Takeoff distances based on this condition are called *balanced field lengths*. The scheduled takeoff distances are usually determined by the balanced field lengths or by the distances over the screen height for the all-engines case multiplied by a factor 1.15, whichever is greater.

The decision speed V_1 is determined by computing the so-called *accelerate-stop* and *accelerate-climb distances* as functions of the engine failure speed, V_{EF} . The former distance is the length required to accelerate to V_{EF} and thereafter stop the airplane on the runway. The other distance is the length required to accelerate to V_{EF} and then continue the takeoff over the screen height with one engine inoperative.

Plotting the two distances as sketched in Fig. 16.3b yields the balanced field length and the decision speed. If an engine should stop at a speed below V_1 the pilot should abandon the takeoff, whereas, if an engine fails beyond V_1 the pilot should continue the takeoff because of the fact that there

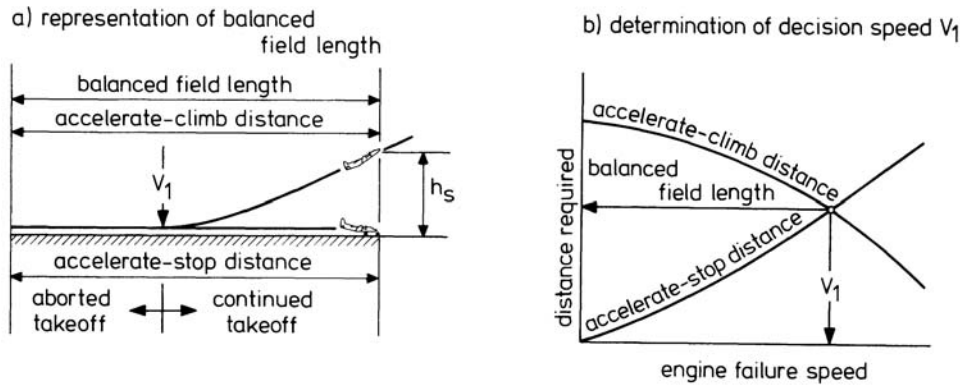


Figure 16.3 Balanced field length concept

may remain not enough runway length for deceleration to standstill. The decision speed may be recommended to be somewhat less for wet runway conditions than for dry conditions to guarantee that the same accelerate-stop distance can be achieved.

Returning to Fig. 16.2, we see that the decision speed is higher than the minimum control speed, V_{MC} , which is the minimum speed above which it is possible to maintain adequate airplane control for takeoff (see Section 11.2). We also see that the decision speed is lower than the rotation speed V_R . In its turn, the minimum acceptable value of V_R may not be less than $1.05 V_{MC}$.

The airworthiness requirements also distinguish the minimum lift-off or unstuck speed V_{MU} , the calibrated minimum speed at which the airplane can safely lift off the ground, and continue the takeoff. The actual lift-off speed V_{LOF} depends on the rotation speed V_R . The latter speed must be chosen such that $V_{LOF} \geq 1.1 V_{MU}$ with all engines operating or $V_{LOF} \geq 1.05 V_{MU}$ with one engine out. The requirements prevent a rotation to an attitude exceeding that at the demonstrated V_{MU} and with that the occurrence of a ground stall and so insufficient ability to lift-off. Further, V_R must allow the takeoff safety speed V_2 to be reached at the screen. The speed V_2 is referenced as the lowest speed to ensure an adequate and safe climb-out with the critical engine inoperative and the live engine(s) developing full takeoff thrust.

For turboprop airplanes the requirements quote: $V_2 \geq 1.1 V_{MC}$ and $V_2 \geq 1.2 V_{MS}$ for two-engine and three-engine airplanes and $V_2 \geq 1.15 V_{MS}$ for airplanes with more than three engines. For jet-driven airplanes the takeoff safety speed shall not be less than: $V_2 = 1.1 V_{MC}$ and $V_2 = 1.2 V_{MS}$ irrespective of the number of engines. The speed V_{MS} , is the minimum stalling speed measured in a flight where the airspeed is steadily reduced at a rate of 1 knot per second, as already defined in Section 8.4. For further details and the regulations in the non-transport categories the reader should consult the airworthiness requirements.

16.2. TAKEOFF GROUND RUN

The forces on the airplane during ground run are shown in Fig. 16.4. The weight of the airplane is balanced by the lift and the reaction force of the ground surface on the wheels. Thrust is opposed by the rolling friction between wheels and ground surface in addition to the drag of the airplane.

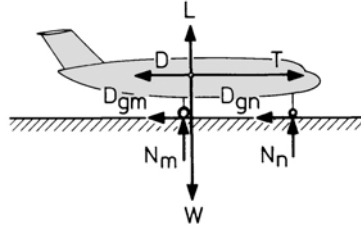


Figure 16.4 Forces acting during takeoff ground run

The frictional force D_g may be written as

$$D_g = D_{gm} + D_{gn} = \mu_r (N_m + N_n) = \mu_r (W - L) = \mu_r \left(W - C_{Lg} \frac{1}{2} \rho V^2 S \right) \quad (16.1)$$

where C_{Lg} is the lift coefficient in the ground run attitude and μ_r is the coefficient of rolling friction. Typically, μ_r may be taken as 0.02 for a concrete or asphalted runway and 0.05 for an airstrip with short cut grass. The equation of motion in forward direction is (assuming zero wind and no runway slope)

$$\frac{W}{g} \frac{dV}{dt} = T - D - D_g = T - C_{Dg} \frac{1}{2} \rho V^2 S - D_g \quad (16.2)$$

where C_{Dg} is the drag coefficient in the ground running condition. Both C_{Lg} and C_{Dg} will vary during the rotation phase of the ground run. Combining Eq. 16.1 and Eq. 16.2, the acceleration of the airplane during ground run at a speed V becomes

$$\frac{dV}{dt} = g \left[\frac{T}{W} - \mu_r - (C_{Dg} - \mu_r C_{Lg}) \frac{\frac{1}{2} \rho V^2}{W/S} \right] \quad (16.3)$$

Denoting $dV/dt = a$ and using $V = ds/dt$, the distance traveled in accelerating from rest to the lift-off speed can be expressed in the form

$$s_g = \int_0^{V_{LOF}} \frac{V dV}{a} = \int_0^{V_{LOF}} \frac{V dV}{g \left[\frac{T}{W} - \mu_r - (C_{Dg} - \mu_r C_{Lg}) \frac{\frac{1}{2} \rho V^2}{W/S} \right]} \quad (16.4)$$

This equation shows that the distance s_g depends on the acceleration during the ground run, which is a function of V . Introduction of the lift coefficient $(C_L)_{LOF}$ defined by the condition that the lift at V_{LOF} is equal to the weight of the airplane

$$W = L = (C_L)_{LOF} \frac{1}{2} \rho V_{LOF}^2 S \quad (16.5)$$

yields for the ground run distance

$$s_g = \int_0^{V_{LOF}} \frac{V dV}{g \left[\frac{T}{W} - \mu_r - \frac{(C_{Dg} - \mu_r C_{Lg})}{(C_L)_{LOF}} \frac{V^2}{V_{LOF}^2} \right]} \quad (16.6)$$

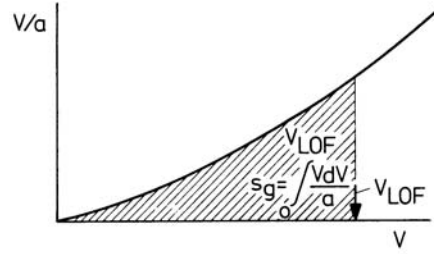


Figure 16.5 Graphic determination of ground run distance

The length of the ground run may be determined by stepwise integration of Eq. 16.4, that is, calculate the acceleration of the airplane at a number of forward speeds and then plot V/a against V as shown in Fig. 16.5. The area under the curve from $V = 0$ to $V = V_{LOF}$ is the value for s_g .

The ground run distance may be estimated analytically by assuming that the thrust to weight ratio T/W is represented by a mean value of the thrust $\bar{T}$ (W is assumed constant during takeoff). Further, we assume that the angle of attack is constant. In the case of a nose-wheel type landing gear, this is achieved by keeping the nose wheel on the ground until lift-off. Under this condition the quantity $(C_{Dg} - \mu_r C_{Lg})$ in Eq. 16.4 may be assumed constant throughout the ground run.

Eq. 16.6 can be integrated by realizing that the integrand function is of the form $V/(a + bV^2)$, and when substituting $y = a + bV^2$, then $dV = dy/(2b)$. The expression of the integral between $V = 0$ and $V = V_{LOF}$ is

$$s_g = \frac{W/S}{\rho g (C_{Dg} - \mu_r C_{Lg})} \ln \frac{\frac{\bar{T}}{W} - \mu_r}{\frac{\bar{T}}{W} - \mu_r - \frac{(C_{Dg} - \mu_r C_{Lg})}{(C_L)_{LOF}}} \quad (16.7)$$

The actual value of $\bar{T}$ may be described by the relationship $\bar{T} = kT_{static}$, where the factor k is a function of the ratio T_{LOF}/T_{static} . The latter ratio depends on the type of propulsion system owing to the different variation of thrust with forward speed (see Fig. 9.11). Another approach to the analytic estimation of the ground run distance is the use of a mean acceleration $\bar{a}$, giving the same distance as the actual variable acceleration.

Then, from Eq. 16.4, we get

$$s_g = \frac{V_{LOF}^2}{2\bar{a}} \quad (16.8)$$

Usually, $\bar{a}$ is taken as the acceleration at a speed $V_{LOF}/\sqrt{2} = 0.7V_{LOF}$.

It should be remarked that in determining the aerodynamic forces and moments on the airplane during the ground run, we have to account for the effects of the proximity of the ground on the flow field around the airplane. The presence of the ground reduces the induced downwash from the tip vortices since there cannot be a flow going into the ground (Fig. 16.6). Consequently, the airplane's $C_L - \alpha$ and $C_D - \alpha$ curves change as sketched in Fig. 16.7 (see also Fig. 4.10), through which at a given altitude of the airplane the lift coefficient increases and the (induced) drag coefficient decreases.

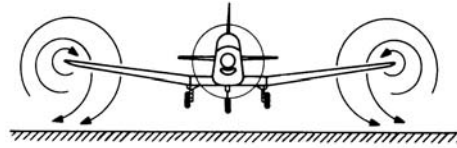


Figure 16.6 Effect of ground on tip vortices

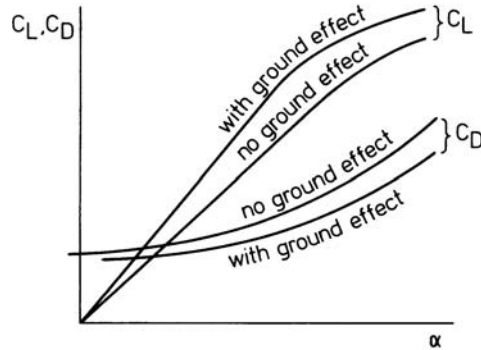


Figure 16.7 Typical effect of ground on lift and drag coefficient

The proximity of the ground also may have an effect on the contribution of the horizontal stabilizer to longitudinal stability at large angles of attack. The ground surface straightens the flow streamlines, thereby decreasing the downwash behind the wing (Fig. 16.8). This results in a greater angle of attack at the tail, which requires an increased upward deflection of the elevator to keep the airplane in equilibrium.

The ground effects decrease with increasing wing aspect ratio and are dependent on the relative distance between wing and ground surface (Ref. 47). Practically, ground effects are of importance during ground run and may be ignored when the airplane is airborne. Before leaving our examination of the ground run distance, let us call some attention to the effect of a runway slope. Looking at the forces in Fig. 16.9, the equation of motion reads:

$$\frac{W}{g} \left(\frac{dV}{dt} \right)_{\zeta} = T - D - \mu_r (W \cos \zeta - L) - W \sin \zeta \quad (16.9)$$

where ζ is the runway slope, uphill positive. Adopting in Eq. 16.9 the approximation that $\cos \zeta = 1$, we obtain

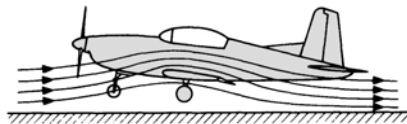


Figure 16.8 Effect of ground on down-wash

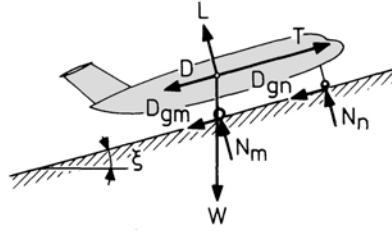


Figure 16.9 Presence of a runway slope

$$\left(\frac{dV}{dt} \right)_{\zeta} = g \left[\frac{T}{W} - \mu_r - (C_{Dg} - \mu_r C_{Lg}) \frac{\frac{1}{2} \rho V^2}{W/S} - \sin \zeta \right] \quad (16.10)$$

By combining Eq. 16.10 with Eq. 16.3, the relationship between the accelerations with and without runway slope can be written as

$$\left(\frac{dV}{dt} \right)_{\zeta} = \frac{dV}{dt} - g \sin \zeta \quad (16.11)$$

Any numerical consideration on the effect of $g \sin \zeta$ on the magnitude of the acceleration may show the strong influence of a runway slope on the length of the ground run.

16.3. THE AIRBORNE PHASE OF THE TAKEOFF MANEUVER

The airborne distance depends strongly on the way in which the pilot controls the airplane and can, therefore, only be evaluated when the two control laws are specified. One of these is already defined by the condition that the engine control setting is constant during the takeoff maneuver. The second control law may concern the time-history of the lift coefficient, the normal acceleration, or the rate of pitch, from the moment the airplane leaves the ground until it reaches the steady climbing attitude at the end of the transition.

An accurate determination of the flight path between the lift-off point and the screen height is usually made by step by step calculations, adopting a particular control law.

Also analytic procedures are developed, assuming $C_L = \text{constant}$ or $d\theta/dt = \text{constant}$ during transition. For a detailed description of these techniques, the reader is referred to Ref. 48 and Ref. 49.

In order to examine the airplane motion in the transition flare, let us return to Eq. 8.7 and Eq. 8.8, which can be written as (Fig. 16.10a)

$$\frac{W}{g} V \frac{dV}{ds} = T \cos \alpha_T - D - W \sin \gamma \quad (16.12)$$

$$\frac{W}{g} \frac{V^2}{R} = L + T \sin \alpha_T - W \cos \gamma \quad (16.13)$$

Assuming that the thrust and the velocity vectors are coincident ($\alpha_T = 0$) and that the flight-path angle is small ($\sin \gamma = \gamma$ and $\cos \gamma = 1$), the governing equations of motion reduce to (Fig. 16.10b).

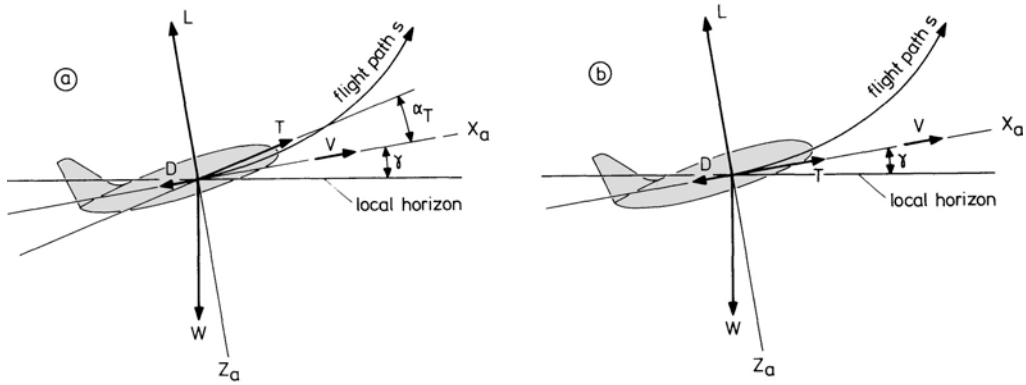


Figure 16.10 Equilibrium of forces during transition

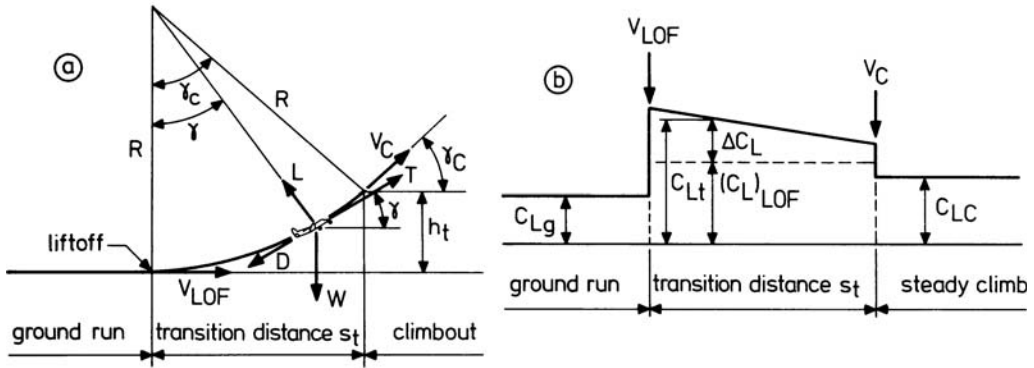


Figure 16.11 Schematic for transition to steady climb

$$\frac{W}{g} V \frac{dV}{ds} = T - D - W\gamma \quad (16.14)$$

$$\frac{W}{g} \frac{V^2}{R} = L - W \quad (16.15)$$

Here, a simple analytic approach to the problem is made by supposing that the path is circular of radius R . Accordingly, we have to consider the transition on the condition that at the lift-off point the pilot instantaneously increases the angle of attack and thereby applies an increment of lift, forcing the airplane to follow a curved path (Fig. 16.11a).

Just after lift-off, the transition lift coefficient, C_{Lt} , may be expressed as

$$(C_{Lt})_{\text{LOF}} = (C_L)_{\text{LOF}} + \Delta(C_L)_{\text{LOF}} \quad (16.16)$$

where $(C_L)_{\text{LOF}}$ is defined by Eq. 16.5. The lift coefficient at any point on the transition flight path may then be written as (Fig. 16.11b)

$$C_{Lt} = (C_L)_{\text{LOF}} + \Delta C_L \quad (16.17)$$

When we insert Eq. 16.5 and Eq. 16.17 into Eq. 16.15, we get

$$\frac{1}{gR} = \frac{1}{V_{\text{LOF}}^2} - \frac{1}{V^2} + \frac{\Delta C_L}{\frac{2}{\rho} \frac{W}{S}} \quad (16.18)$$

This expression shows that due to the increase in flight velocity, the value of ΔC_L and so of C_{Lt} must decrease during the transition (see Fig. 16.11b).

By combining Eq. 16.5, Eq. 16.15 and Eq. 16.16, we can express the radius R as

$$R = \frac{2 \frac{W}{S}}{\rho g \Delta (C_L)_{\text{LOF}}} = \frac{V_{\text{LOF}}^2}{g} \frac{(C_L)_{\text{LOF}}}{\Delta (C_L)_{\text{LOF}}} = \frac{V_{\text{LOF}}^2}{g (n_{\text{LOF}} - 1)} \quad (16.19)$$

where n_{LOF} is the load factor at lift-off. When the flight-path angle reaches the value

$$\gamma_C = \left(\frac{T - D}{W} \right)_C \quad (16.20)$$

the transition is completed and a steady climb at an airspeed V_C begins. At that point of the flight path the instantaneous value of the transition lift coefficient is suddenly reduced to a value C_{LC} associated with the steady speed V_C ,

$$C_{LC} = \frac{W}{S} \frac{2}{\rho} \frac{1}{V_C^2} \quad (16.21)$$

If R and γ_C are known, it is an easy matter to obtain from the geometrical pattern in Fig. 16.11a the following relationships:

$$s_t = R \gamma_C \quad (16.22)$$

$$h_t = R (1 - \cos \gamma_C) = R \frac{\gamma_C^2}{2} = \frac{1}{2} s_t \gamma_C \quad (16.23)$$

Note that in Eq. 16.23 we have employed the trigonometric relationship $1 - \cos \alpha = 2 \sin^2 (\alpha/2)$. With $dh = \gamma ds$, the speed increment attained during transition follows from integrating Eq. 16.14,

$$\int_{V_{\text{LOF}}}^{V_C} \frac{W}{2g} dV^2 = \int_0^{s_t} (T - D) ds - \int_0^{h_t} W dh \quad \text{or} \quad (16.24)$$

$$\frac{V_C^2 - V_{\text{LOF}}^2}{2g} = \int_0^{s_t} \left(\frac{T - D}{W} \right) ds - h_t \quad (16.25)$$

If the specific excess thrust $(T - D)/W$ in Eq. 16.25 is assumed constant and equal to its value at V_{LOF} , we obtain

$$\frac{V_C^2 - V_{\text{LOF}}^2}{2g} = \gamma_{\text{LOF}} s_t - h_t \quad (16.26)$$

where γ_{LOF} is the steady flight-path angle at the speed V_{LOF} ,

$$\gamma_{\text{LOF}} = \left(\frac{T - D}{W} \right)_{\text{LOF}} \quad (16.27)$$

As the variation of the airspeed during transition is usually very small, it is permissible to make the approximation that $\gamma_C = \gamma_{\text{LOF}}$. Then, after substitution of Eq. 16.19, Eq. 16.22, and Eq. 16.23 into Eq. 16.26, the following expression is derived:

$$\frac{V_C}{V_{\text{LOF}}} = \left[1 + \gamma_{\text{LOF}}^2 \frac{(C_L)_{\text{LOF}}}{\Delta(C_L)_{\text{LOF}}} \right]^{\frac{1}{2}} \quad (16.28)$$

The quantity $(\Delta C_L)_{\text{LOF}}$ is often expressed in terms of the normal acceleration a_n or the load factor n_{LOF} at lift-off (see also Section 8.3),

$$\frac{W}{g} \frac{V_{\text{LOF}}^2}{R} = \frac{W}{g} (a_n)_{\text{LOF}} = W (n_{\text{LOF}} - 1) = \Delta(C_L)_{\text{LOF}} \frac{1}{2} \rho V_{\text{LOF}}^2 S \quad (16.29)$$

or with Eq. 16.5,

$$\frac{(a_n)_{\text{LOF}}}{g} = n_{\text{LOF}} - 1 = \frac{\Delta(C_L)_{\text{LOF}}}{(C_L)_{\text{LOF}}} \quad (16.30)$$

As an example we may take $(C_L)_{\text{LOF}} = C_{L\text{max}}/1.44$ ($V_{\text{LOF}} = 1.2V_{MS}$) and an instantaneous rotation at lift-off to an angle of attack such that $(C_{Lt})_{\text{LOF}} = 0.8C_{L\text{max}}$. This gives

$$\frac{(a_n)_{\text{LOF}}}{g} - \frac{(C_L)_{\text{LOF}} - (C_L)_{\text{LOF}}}{(C_L)_{\text{LOF}}} = 0.8 \times 1.44 - 1 = 0.152, \text{ and } n_{\text{LOF}} = 1.152$$

This result represents a typical value for the normal acceleration as the practical upper limit may be about $0.2g$ ($n_{\text{LOF}} = 1.2$). Sometimes, the screen height is cleared before transition to the steady climb attitude is completed. Then the flight-path angle at the screen and the airborne distance follow from the relationships (Fig. 16.12a):

$$h_s = R(1 - \cos \gamma_s) = R\gamma_s^2/2 \quad \text{and} \quad s_a = R\gamma_s \quad (16.31)$$

If h_s is greater than h_t , then the airborne distance is (Fig. 16.12b)

$$s_a = s_t + s_c \quad (16.32)$$

where $s_c = (h_s - h_t)/\tan \gamma_C$ is the climb distance.

16.4. EFFECT OF WIND ON TAKEOFF

The effect of wind on the takeoff length is examined by considering a steady headwind of speed V_W . The acceleration relative to the ground and the distance traveled along the runway are given by

$$a_g = \frac{dV_g}{dt} = V_g \frac{dV_g}{ds_g} \quad (16.33)$$

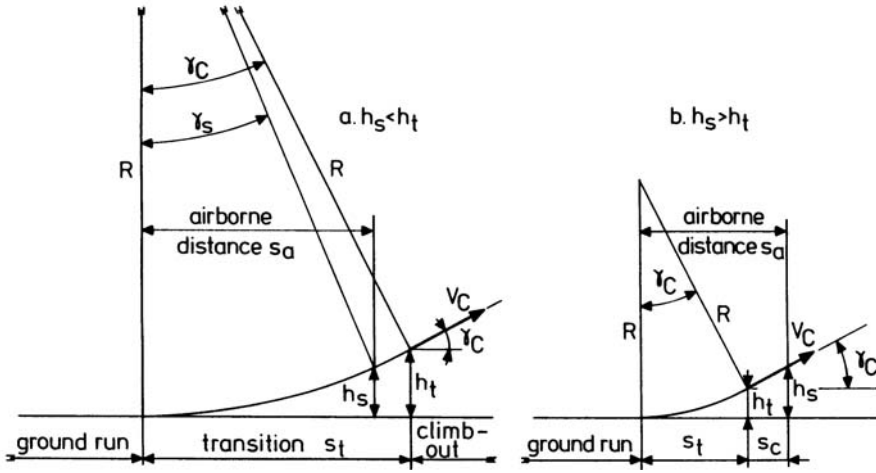


Figure 16.12 Transition and screen height

$$(s_g)_w = \int_0^{(V_g)_{\text{LOF}}} \frac{V_g dV_g}{a_g} \quad (16.34)$$

In these equations V_g is the ground speed ($V_g = V - V_w$). At a constant wind velocity we have $dV_g = dV$ and $a_g = a$ so that the ground run distance with headwind V_w becomes

$$(s_g)_w = \int_{V_w}^{V_{\text{LOF}}} \frac{(V - V_w) dV}{a} = \int_0^{V_{\text{LOF}}} \frac{V dV}{a} - \int_0^{V_w} \frac{V dV}{a} - V_w \int_{V_w}^{V_{\text{LOF}}} \frac{dV}{a} = s_g - s_{g0} - V_w (t_g)_w \quad (16.35)$$

where s_g is the ground run distance from standstill to V_{LOF} in the absence of wind, s_{g0} is the distance from $V = 0$ to $V = V_w$, and $(t_g)_w$ is the time elapsed from $V = V_w$ to $V = V_{\text{LOF}}$.

Eq. 16.35 shows that a headwind reduces the ground run distance required to attain the lift-off speed V_{LOF} . A steady headwind has the same effect on the elapsed time. From $a = dV_g / dt$, we can write

$$(t_g)_w = \int_0^{(V_g)_{\text{LOF}}} \frac{dV_g}{a} = \int_{V_w}^{V_{\text{LOF}}} \frac{dV}{a} = \int_0^{V_{\text{LOF}}} \frac{dV}{a} - \int_0^{V_w} \frac{dV}{a} = t_g - t_{g0} \quad (16.36)$$

where t_g is the time during ground run in still air and t_{g0} is the time elapsed from $V = 0$ to $V = V_w$. The analyses of the effect of wind in Chapter 14 have learned us that the presence of a headwind that increases with height is to increase the rate of climb and therefore to decrease the horizontal distance required to attain a particular height. In rough considerations, the effect of a wind gradient during the airborne phase is accounted for as the effect of a constant headwind with a velocity equal to that at half the height of the screen. Now the airborne distance with headwind V_w is

$$(s_a)_w = s_a - V_w t_a \quad (16.37)$$

where t_a is the airborne phase time. At an average airspeed $\bar{V}$, we get

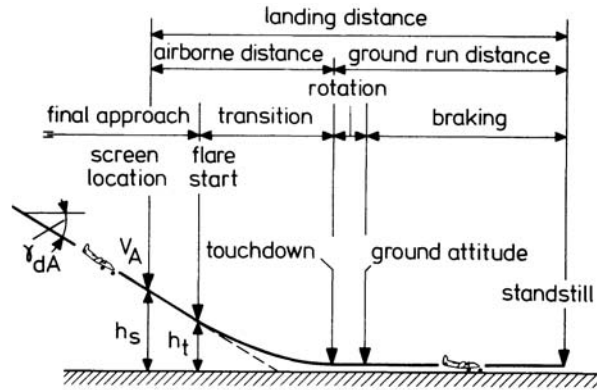


Figure 16.13 Landing maneuver

$$\frac{(s_a)_w}{s_a} = \frac{s_a - V_w \frac{s_a}{\bar{V}}}{s_a} = 1 - \frac{V_w}{\bar{V}} \quad (16.38)$$

This expression shows that the effect of a headwind V_w during transition and climb may be obtained by multiplying the airborne distance in still air by the factor $1 - (V_w/\bar{V})$, where $\bar{V} = (V_{LOF} + V_C)/2$.

It must not be forgotten that our analyses have been based on the presence of a headwind, and that it is of frequent occurrence that the wind makes some angle with the runway. Therefore, as a final note, during a so-called crosswind takeoff there is a tendency of the airplane to rotate about the vertical axis through its center of gravity. In order to hold heading, wings level and wheels on the ground during ground run, use of rudder and aileron is necessary.

After lift-off, heading is changed adequately to maintain straight track from the runway (Fig. 13.13). Typically, maximum safe crosswind-component velocities may vary from about 15 kts (7.7 m/s) for light airplanes up to 30 kts (15.4 m/s) or more for civil transports.

Similarly, high crosswind components during approach and landing also will require application of rudder and aileron to overcome the forces acting sidewise on the airplane (Fig. 3.5).

16.5. THE LANDING MANEUVER

The landing is the maneuver by which the airplane is brought from a steady approach speed V_A over a 15 m (50 ft) obstacle at the runway threshold (screen location) to standstill on the runway (Fig. 16.13).

Airworthiness requirements stipulate that the steady approach speed shall not be less than $1.3V_{MS}$, where V_{MS} is now the calibrated minimum stalling speed for the airplane in the landing configuration. For analysis, the landing distance can be divided into four parts:

1. The part of the final approach in the direction of the extended runway centerline. The distance covered during this phase is the horizontal length of the flight path between the screen location and the point where the transition flare starts. During approach flight landing gear and wing flaps are extended.

2. The flare to transit the airplane to a horizontal motion by the time the airplane arrives at ground level. During the flare the engine control setting is progressively throttled back to flight idling so that at touchdown the thrust is zero and the associated touchdown speed V_T is below the speed V_A at the screen. Further, we may assume that under touchdown conditions the vertical velocity of the airplane is zero and the lift equals the weight.
3. A free roll during which the airplane is rotated down to the ground altitude.
4. The major ground run where the retarding force is increased by application of the wheel brakes and additional aerodynamic and propulsive means.

Commonly, the required field length is specified as 10/6 times the shortest landing distance obtained from tests conducted on a dry runway. The factor 10/6 is used as a safety factor to take care of possible deviations in regular operation. For wet runway operation, it has become usual to impose an extra 15% on the landing distance.

Finally, we remark that the effects of wind on the landing distance are very similar to those on the takeoff distance. The presence of a headwind component shortens the landing distance, whereas a tailwind component increases the landing distance.

16.6. THE AIRBORNE DISTANCE OF THE LANDING MANEUVER

The airborne distance is the horizontal length between the screen location and the touchdown point at the end of the flare. The approach part covers a distance (see Fig. 16.13)

$$s_d = \frac{h_s - h_t}{\tan \gamma_{dA}} \quad (16.39)$$

where γ_{dA} is the slope of the descent path. The governing equations for steady descending flight are (Fig. 16.14)

$$-D + T \cos \alpha_T + W \sin \gamma_{dA} = 0 \quad (16.40)$$

$$-L - T \sin \alpha_T + W \cos \gamma_{dA} = 0 \quad (16.41)$$

Assuming again that $\alpha_T = 0$ and $\cos \gamma_{dA} = 1$, and using the relationships $L = C_{LA} \frac{1}{2} \rho V_A^2 S$ and $D = C_{DA} \frac{1}{2} \rho V_A^2 S$, we find

$$C_{LA} = \frac{W}{S} \frac{2}{\rho} \frac{1}{V_A^2} \quad (16.42)$$

$$\sin \gamma_{dA} = \left[\frac{C_D}{C_L} \right]_A - \frac{T}{W} \quad (16.43)$$

If the engines are idling during final approach (glide approach), then the airspeed V_A corresponds to a fixed slope of the flight path:

$$\gamma_{dA} = \sin^{-1} \left[\frac{C_D}{C_L} \right]_A \quad (16.44)$$

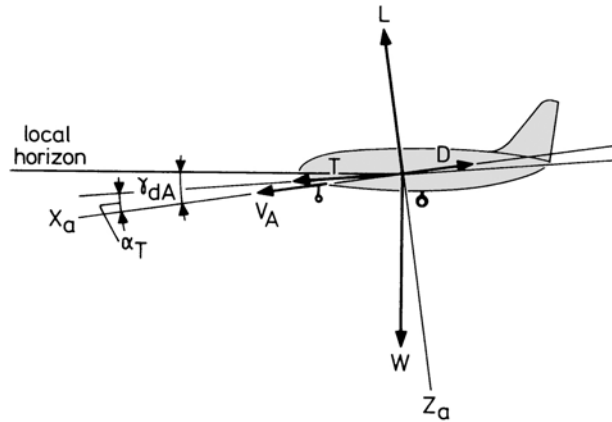


Figure 16.14 Forces in steady symmetric descent

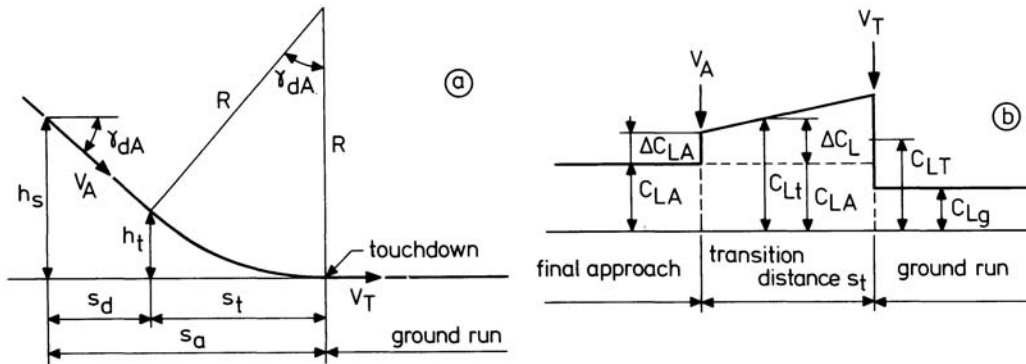


Figure 16.15 Schematic for landing flare analysis

When performing a power-on approach, the slope of the flight path can be chosen independent of the angle of attack. The powered descent is always executed in regular service operations of transport airplanes, which normally fly toward the runway by means of the *Instrument Landing System* (ILS). This navigational system provides vertical guidance above and below an approach path established at a fairly small angle of descent of about 3 deg. Clearly, this condition requires that the engines deliver a rather high thrust. Maintaining adequate thrust is also needed to control the flight path and to cope safely with an aborted final approach or a balked landing.

An assessment of the flare distance s_t and the height h_t can be made by representing the landing flare by a circular arc (Fig. 16.15a). This requires, as we know from the analysis in Section 16.3, that the angle of attack at the beginning of the flare is instantaneously increased to (Fig. 16.15b)

$$(C_{Lt})_A = C_{LA} + \Delta C_{LA} \quad (16.45)$$

In this case the formulae for the radius of curvature of the flare are identical to those in Eq. 16.19,

except that here V_{LOF} must be replaced by V_A , so that

$$R = \frac{2 \frac{W}{S}}{\rho g \Delta C_{LA}} = \frac{V_A^2}{g} \frac{C_{LA}}{\Delta C_{LA}} = \frac{V_A^2}{g(n_A - 1)} \quad (16.46)$$

Since at the end of the flare the flight path is tangential to the ground surface, the horizontal distance covered by the flare and the initial height of the flare can be expressed as

$$s_t = R\gamma_{dA} \quad \text{and} \quad h_t = R(1 - \cos \gamma_{dA}) = R \frac{\gamma_{dA}^2}{2} = \frac{1}{2} s_t \gamma_{dA} \quad (16.47)$$

Using appropriate values for γ_{dA} , V_A and n_A , we find from Eq. 16.46 and Eq. 16.47 the dimensions of the landing flare. From known values of s_t and h_t it is possible to estimate the reduction in speed by integration of Eq. 16.14,

$$\int_{V_A}^{V_T} \frac{W}{2g} dV^2 = \int_0^{s_t} (T - D) ds - \int_{h_t}^0 W \gamma ds \quad (16.48)$$

With $\gamma ds = -\gamma_d ds = dh$, we obtain

$$\int_0^{s_t} \left(\frac{T - D}{W} \right) ds = \frac{V_T^2 - V_A^2}{2g} - h_t \quad (16.49)$$

Using a mean value for the excess thrust during the transition phase, we may write

$$\frac{V_T^2 - V_A^2}{2g} = \frac{(\overline{T - D})}{W} s_t + h_t \quad (16.50)$$

In order to transform Eq. 16.50 into a suitable form, we set the excess thrust $(\overline{T - D})$ equal to the mean of its values at the start and the end of the flare. At the speed V_A , from Eq. 16.40, we have

$$(T - D)_A = -W\gamma_{dA} \quad (16.51)$$

and at touchdown we find with $W = C_{LT} \frac{1}{2} \rho V_T^2 S$, $D = C_{DT} \frac{1}{2} \rho V_T^2 S$ and $T = 0$,

$$(T - D)_T = -D_T = -W \left[\frac{C_D}{C_L} \right]_T \quad (16.52)$$

The mean value of the specific excess thrust is therefore

$$\frac{(\overline{T - D})}{W} = \frac{(T - D)_A + (T - D)_T}{2W} = -\frac{1}{2} \left[\gamma_{dA} + \left[\frac{C_D}{C_L} \right]_T \right] \quad (16.53)$$

Insertion of Eq. 16.53 into Eq. 16.50 produces the following expression for the flare distance

$$\frac{V_A^2 - V_T^2}{2g} = \frac{1}{2} s_t \left[\gamma_{dA} + \left[\frac{C_D}{C_L} \right]_T \right] - h_t \quad (16.54)$$

As mentioned already in Section 16.5, to comply with most airworthiness regulations, the airspeed V_A at the start of the transition flare is more than or equal to $1.3V_{MS}$. Usually, the pilot technique is such that at touchdown the airspeed is reduced to about $1.15V_{MS}$.

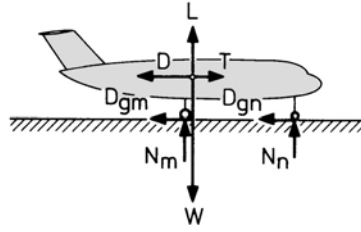


Figure 16.16 Forces acting during landing ground run

16.7. THE LANDING GROUND RUN

After touchdown, an adjustment in incidence must be made to settle the airplane in its ground attitude. This requires some rotation of the airplane, during which a free roll is traversed before the wheel brakes are applied.

However, for the sake of simplicity, we shall neglect the distance covered during the rotation phase. In other words, we shall presume that at touchdown the pilot instantaneously accomplishes an angle of attack reduction to the ground attitude value at which $C_L = C_{L_g}$ (see Fig. 16.15b).

The forces on the airplane during the landing ground run are shown in Fig. 16.16. The equation of motion in forward direction reads:

$$\frac{W}{g} \frac{dV}{dt} = T - D - D_g, \quad \text{where} \quad (16.55)$$

$$D_g = \mu (N_n + N_m) = \mu (W - L) \quad (16.56)$$

is the frictional force resulting from the adhesion forces acting between the tires and the ground (Fig. 16.17a). When a brake torque is applied to a wheel, it is reacted by an increased frictional force, through which the wheel is forced to slow its rotational speed ωr relative to the forward speed V of the wheel. At a brake torque Q , the rotational motion, approximately, is governed by

$$I \frac{d\omega}{dt} = D_g r - Q \quad (16.57)$$

where I is the moment of inertia of the wheel with respect to its axis of rotation, ω the angular velocity of the braked wheel, and r is the wheel radius.

For steady braking, from Eq. 16.57, we have the condition

$$D_g = \mu N = Q/r \quad (16.58)$$

where Q/r is the brake force applied to the wheel. The generated friction coefficient μ varies with the so-called *braking slip ratio*, s , defined by

$$s = \frac{V - \omega r}{V} \quad (16.59)$$

The variation of μ with s is illustrated in Fig. 16.17b. As the slip ratio increases, the friction coefficient rises from its free roll value μ_r at $s = 0$ to a peak value $\mu_{\max}$ at a slip ratio $s_{\mu_{\max}}$. It should

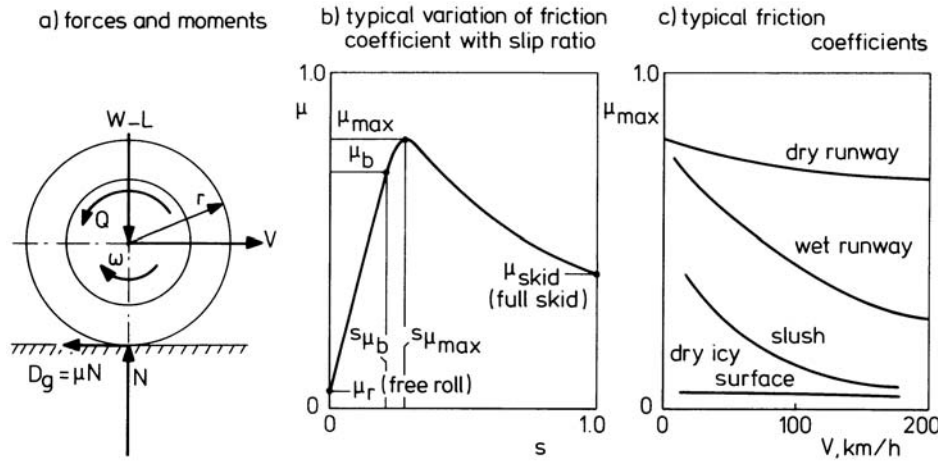


Figure 16.17 Application of brake torque on a rolling wheel

be remarked that up to this slip ratio, practically, there is only an apparent slip due to the elastic deformation of the tire.

After $s_{\mu_{\max}}$ is reached, unless the brake is released, the slip ratio increases rapidly which leads to skidding of the wheel at $s = 1.0$ and a low value of the associated friction coefficient, μ_{skid} .

From Fig. 16.17b and Eq. 16.57, it can also be understood that for $s < s_{\mu_{\max}}$ the wheel rotational motion is in a condition of stable equilibrium. On the contrary, in the region $s > s_{\mu_{\max}}$, any rotational speed disturbance will tend to diverge the slip ratio further from its original value.

From the foregoing discussion, it is evident that rolling wheels are forced by braking action to slow their angular velocity from the free roll condition ($\omega = V/r$) to a locked condition ($\omega = 0$), provided the brake forces continuously exceed the produced frictional forces.

When the brakes are controlled manually, it is not easy for a pilot to adjust and maintain a consistent braking condition at $s_{\mu_{\max}}$. This problem is largely solved by the use of anti-skid devices in which brake control is achieved automatically by reference to the slip ratio. These systems avoid excessive tire wear and effectuate an optimum friction coefficient μ_b at a slip ratio below $s_{\mu_{\max}}$ (see Fig. 16.17b). Modern systems may produce a value of μ_b up to 90 percent of $\mu_{\max}$. As portrayed in Fig. 16.17c, the attainable value of the friction coefficient depends strongly on the surface condition of the runway and the forward speed (Ref. 34, Vol. 3).

At the start of the ground run only a fraction of the available brake torque can be applied owing to the low normal force on the wheels at high forward speeds. Therefore, the ground run must be divided into two parts (Fig. 16.18). During the first part, we can assume that the friction coefficient is constant and equal to μ_b . This implies that the brake force must be gradually increased with decreasing forward velocity. During the second part, the “torque-limited” brake force, $Q_{\max}/r$, is insufficient to generate the maximum attainable frictional force,

$$Q_{\max}/r < \mu_b(W - L) \quad (16.60)$$

Under this condition, the brakes can operate at full capacity and a constant frictional force is ob-

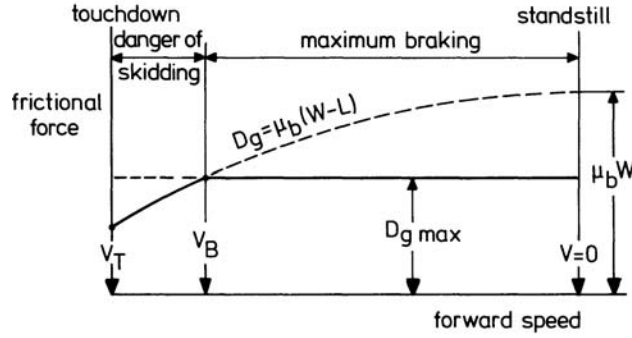


Figure 16.18 Attainable frictional force during ground run

tained at a decreasing friction coefficient as the airplane slows down,

$$D_{g \max} = Q_{\max}/r = \mu(W - L) \quad (16.61)$$

On a dry runway, the frictional force $D_{g \max}$ may be 30 to 40 percent of the weight of the airplane. The speed V_B at which the lift is sufficiently reduced that full braking is permitted follows from the equality

$$D_{g \max} = \mu_b \left(W - C_{Lg} \frac{1}{2} \rho V_B^2 S \right) \quad (16.62)$$

where C_{Lg} is the lift coefficient in the ground running condition. Thus, in the speed range from V_T down to V_B , the wheels can be made to skid except if use is made of automatic brakes.

The distance covered from the touchdown speed to rest, in general, is given by

$$s_b = \int_{V_T}^0 \frac{V dV}{a} \quad (16.63)$$

where $a = dV/dt < 0$.

For an accurate calculation of s_b , Eq. 16.63 can be evaluated by step-by-step integration. In the following, however, we will develop analytic expressions which allow direct calculation of the ground run distance. For that end, we assume automatic brakes, zero thrust, and a constant angle of attack throughout the ground run. Then from Eq. 16.55, Eq. 16.56 and Eq. 16.63, we readily obtain for the ground run distance between the speeds V_T and V_B ,

$$s_{b1} = \int_{V_T}^{V_B} \frac{V dV}{g \left[-\mu_b - (C_{Dg} - \mu_b C_{Lg}) \frac{1/2 \rho V^2}{W/S} \right]} \quad (16.64)$$

where the lift and drag coefficients C_{Lg} and C_{Dg} are, of course, the appropriate values considering the effect of ground proximity. Using the condition $W = C_{LT} \frac{1}{2} \rho V_T^2 S$, we can transform Eq. 16.64 into the form

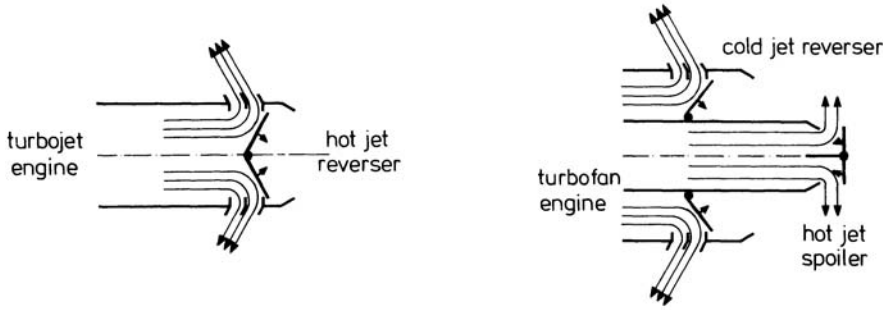


Figure 16.19 Thrust reversal

$$s_{b1} = \int_{V_T}^{V_B} \frac{V dV}{-g\mu_b \left[1 + \frac{(C_{Dg} - \mu_b C_{Lg})}{\mu_b C_{LT}} \right] \frac{V^2}{V_T^2}} = \int_{V_T}^{V_B} \frac{V dV}{-g\mu_b [1 + Z(V^2/V_T^2)]}, \quad (16.65)$$

where $Z = (C_{Dg} - \mu_b C_{Lg}) / (\mu_b C_{LT})$. Integrating Eq. 16.65 yields

$$s_{b1} = \frac{V_T^2}{2g\mu_b Z} \ln \frac{1 + Z}{1 + Z(V_B^2/V_T^2)} \quad (16.66)$$

Below the speed V_B , the acceleration is given by

$$a = \frac{dV}{dt} = \frac{g}{W} \left(-C_{Dg} \frac{1}{2} \rho V^2 S - D_{g\max} \right) \quad (16.67)$$

From Eq. 16.63, with V_T replaced by V_B , the ground run distance between the speed V_B and stand-still is

$$s_{b2} = \int_{V_B}^0 \frac{V dV}{-\frac{g}{W} (C_{Dg} \frac{1}{2} \rho V^2 S + D_{g\max})} \quad (16.68)$$

Integration gives

$$s_{b2} = \frac{W}{C_{Dg} \rho g S} \ln \left[\frac{C_{Dg} \frac{1}{2} \rho V_B^2 S}{D_{g\max}} + 1 \right] \quad (16.69)$$

The results of the analysis in this section manifest that for a short ground run distance we need a large deceleration force.

An adequate aid in dissipating kinetic energy of jet-driven airplanes is to divert the exhaust gas flow of the engines in a forward direction by means of thrust reversers (Fig. 16.19). In the case of a turbofan engine, negative thrust is obtained by reversing the cold jet through the fan. Because this airflow provides enough reverse thrust, the hot jet is then only directed in a normal direction to avoid it neutralizing the reversal effect from the cold jet.

On propeller-driven airplanes, reverse thrust is accomplished by using reversible pitch propellers (see Fig. 7.19).

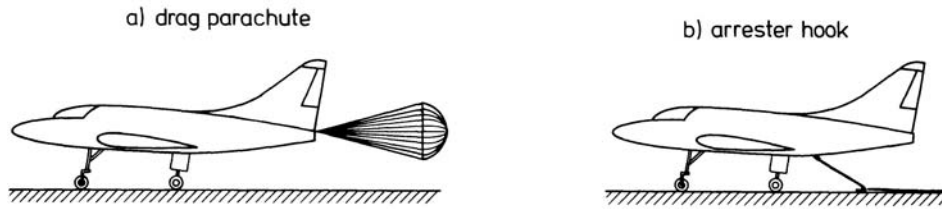


Figure 16.20 Special types of braking devices

In addition to wheel brakes and propulsive means, ground spoilers on the wings are used to destroy or reduce the lift. This condition increases the ground friction drag as the normal force on the wheels is increased (see also Section 11.3).

Another aerodynamic means to increase the retardation force during the landing run is the braking parachute for use on high-performance (military) airplanes (Fig. 16.20a). A very special form of a brake system is a cable laid across the flight deck of an aircraft carrier for catching the arrestor hook on the airplane (Fig. 16.20b).

16.8. PROBLEMS

1. What are the most important take-off airspeeds, and in which order are they typically encountered?
2. How is the balanced field length defined? And what are the properties of the decision speed V_1 in relation to it?
3. Derive the equations of motion for take-off and landing ground runs in case of a downward runway slope of angle ξ .
4. A small propeller airplane is characterized by the following data:
 - Take-off weight: 8500 N
 - Wing area: 9.84 m^2
 - Drag polar for the take-off configuration: $C_{Dg} = 0.03 + 0.0637C_{Lg}^2$
 - Maximum lift coefficient: $C_{L\max} = 1.4$
 - Lift coefficient during take-off roll: $C_{Lg} = 0.8$
 - Maximum engine shaft power at sea level conditions: 115 kW
 - Tire friction coefficient during take-off roll: $\mu = 0.05$
 - Lift-off speed: $1.05V_{\min}$
 - Propeller efficiency: $\eta_p = P_a / P_{br}$
 - Propeller efficiency during take-off roll: $\eta_{pg} = 0.5$
 - Propeller efficiency during airborne phase: $\eta_{pa} = 0.8$

Determine the ground run distance, the transition distance, and the climb-out distance at sea level altitude and in still air. What is the total take-off distance? What is the ratio between the total airborne distance and the total take-off distance?

5. For the same aircraft, determine the total take-off distance in each of the following scenarios obtained with respect to the nominal condition of problem 3:
 - Altitude of 2000 m, assuming that the available power decreases with altitude as $P_a = P_{a0}\rho/\rho_0$
 - Increased payload, so that the take-off weight is now 9000 N
 - A wet runway, so that the tire friction coefficient is reduced to $\mu = 0.03$
 - A steady headwind of 10 m/s
6. A subsonic business jet is characterized by the following data:
 - Landing weight: 60 kN
 - Wing area: 30 m^2
 - Drag polar in landing configuration: $C_{D_g} = 0.07 + 0.055C_{L_g}^2$
 - Maximum lift coefficient in landing configuration: $C_{L_{\max}} = 2.0$
 - Lift coefficient in ground run attitude: $C_{L_g} = 1.1$
 - Approach angle: $\gamma_{dA} = 3 \text{ deg}$
 - Airspeed at touchdown: $V_T = 1.2V_{\min}$
 - Friction coefficient of maximum brake power: $\mu_b = 0.4$ (constant)

Assuming that the airspeed is constant and equal to the touchdown speed throughout the entire maneuver, determine the flare distance and the ground run distance at sea level altitude and in still air. What is the total landing distance? What is the ratio between the airborne distance and the total landing distance?

7. For the same aircraft, determine the total landing distance in each of the following scenarios obtained with respect to the nominal condition of problem 4:
 - Altitude of 1500 m
 - Increased payload, so that the landing weight is now 70 kN
 - A wet runway, so that the friction coefficient is reduced to $\mu_b = 0.3$
 - A steady headwind of 5 m/s

A

NEWTONIAN MECHANICS

A.1. NEWTON'S LAWS OF MOTION

The essential equations describing the motion of bodies are based on Newton's laws of motion. Below these laws are stated for a particle, that is, a constant mass concentrated in a point.

- **Law 1:** Every particle continues in a state of rest or uniform motion in a straight line unless compelled to do otherwise by forces acting on it.
- **Law 2:** The time rate of change of linear momentum of a particle is proportional to the impressed force and is effective in the direction of the force.
- **Law 3:** Action = reaction; or, the mutual forces that two particles exert on each other are equal in magnitude and opposite in direction.

A.2. NEWTON'S FIRST LAW

It should be fully appreciated that Newton's first law holds only with respect to a frame of reference which is in a state of absolute rest. For instance, we may think on a coordinate system rigidly associated with the "fixed stars" in our solar system. Such a hypothetical coordinate system is called an inertial frame of reference.

However, Newton's first law also holds with respect to reference frames which translate uniformly relative to our inertial frame of reference at rest. To prove this, let $X_0 Y_0 Z_0$ be the inertial frame, and assume a frame $X_1 Y_1 Z_1$ to be translating uniformly with velocity $\vec{V}_{10}$ relative to $X_0 Y_0 Z_0$ (Fig. A.1). The instantaneous position of a particle in point P with respect to $X_0 Y_0 Z_0$ and $X_1 Y_1 Z_1$ is given by the vectors $\vec{r}_0$ and $\vec{r}_1$, respectively. The vector R in Fig. A.1 indicates the position of the origin of $X_1 Y_1 Z_1$ relative to $X_0 Y_0 Z_0$ at a given point of time. The three vectors are related by

$$\vec{r}_0 = \vec{R} + \vec{r}_1 \quad (\text{A.1})$$

Differentiating Eq. A.1 gives

$$\frac{d_0 \vec{r}_0}{dt} = \frac{d_0 \vec{R}}{dt} + \frac{d_0 \vec{r}_1}{dt} \quad (\text{A.2})$$

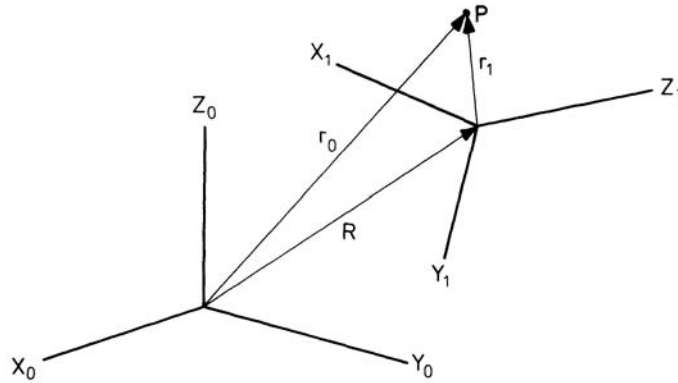


Figure A.1 Transformation of coordinates

where the subscript “0” denotes that the time derivative is taken with respect to the inertial frame $X_0 Y_0 Z_0$.

Because the position of the particle changes by the same relative amount with respect to both frames, Eq. A.2 can be written as

$$\frac{d_0 \vec{r}_0}{dt} = \frac{d_0 \vec{R}}{dt} + \frac{d_1 \vec{r}_1}{dt} \quad (\text{A.3})$$

in which the subscript “1” indicates that the derivative of $\vec{r}_1$ is taken with respect to the frame $X_1 Y_1 Z_1$. If the particle is free of force, then its velocity relative to the inertial frame $X_0 Y_0 Z_0$ must be constant. Hence, $\frac{d_0 \vec{r}_0}{dt} = \vec{V}$ is a constant. Since also $\frac{d_0 \vec{R}}{dt} = \vec{V}_{10}$ is a constant, it follows from Eq. A.3 that $\frac{d_1 \vec{r}_1}{dt} = \vec{V}_r$, being the velocity of the particle relative to the frame $X_1 Y_1 Z_1$, is a constant too. Thus Newton’s first law of motion is valid in any reference frame that moves uniformly with respect to the frame at rest. Therefore, all non-accelerating and non-rotating frames can be used as inertial frames of reference.

A.3. NEWTON’S SECOND LAW OF MOTION

The mathematical formulation of the second law is

$$\vec{F} = \frac{d}{dt} (M_i \vec{V}) \quad (\text{A.4})$$

where $\vec{F}$ is the vector force acting, and $M_i \vec{V}$ is the linear momentum of a particle with mass M_i and velocity $\vec{V}$. Since the mass of a particle is constant, Eq. A.4 can be expressed as

$$\vec{F} = M_i \frac{d\vec{V}}{dt} = M_i \vec{a} \quad (\text{A.5})$$

where $\frac{d\vec{V}}{dt} = \vec{a}$ is the acceleration of the particle. It is important to realize that also Eq. A.5 holds only when applied with respect to an inertial frame of reference. From the preceding discussion

of Newton's first law we know that coordinate systems translating uniformly to our frame at rest somewhere in the universe, also are inertial frames of reference.

To use this statement, the invariance of the second law under the coordinate transformation must be proved. Therefore, consider the particle in point P in Fig. A.1.

Since the force acting on the particle is invariant ($\vec{F} = \vec{F}_0 = \vec{F}_1$), from Eq. A.3, it follows that the time rates of change of momentum of the particle with respect to the reference frames $X_0 Y_0 Z_0$ and $X_1 Y_1 Z_1$ are related by

$$\frac{d_0}{dt} \left[M_i \frac{d_0 \vec{r}_0}{dt} \right] = \frac{d_1}{dt} \left[M_i \left[\frac{d_0 \vec{R}}{dt} + \frac{d_1 \vec{r}_1}{dt} \right] \right] \quad (\text{A.6})$$

Using $\frac{d_0 \vec{R}}{dt} = \vec{V}_{10}$ is a constant, we have

$$\frac{d_0}{dt} \left[M_i \frac{d_0 \vec{r}_0}{dt} \right] = \vec{V}_{10} \frac{d_1 M_i}{dt} + \frac{d_1}{dt} \left[M_i \frac{d_1 \vec{r}_1}{dt} \right] \quad (\text{A.7})$$

Since the mass M_i is a constant, the latter relation reduces to

$$\frac{d_0}{dt} (M_i \vec{V}) = \frac{d_1}{dt} (M_i \vec{V}_r) \quad (\text{A.8})$$

This equality indicates that Eq. A.5 indeed can be applied to both axis systems.

A.4. EFFECT OF ROTATION

In order to examine the effect of rotation, consider again the reference frames $X_0 Y_0 Z_0$ and $X_1 Y_1 Z_1$. Now suppose that $X_1 Y_1 Z_1$ is in a rotational motion relative to $X_0 Y_0 Z_0$. As shown in Fig. A.2 the rotational motion is about an axis through the origin and denoted by $\vec{\omega}_{10}$. In the frame $X_1 Y_1 Z_1$ the triad of unit vectors in the respective coordinate directions at time t are $\vec{i}$, $\vec{j}$ and $\vec{k}$. Fig. A.2 shows what happens to the unit vector $\vec{i}$, when the frame $X_1 Y_1 Z_1$ rotates about the $\vec{\omega}_{10}$ axis in the time Δt .

If the line AB is the perpendicular from the tip of $\vec{i}$ to the $\vec{\omega}_{10}$ axis, then the length of AB is equal to $\sin \phi$. Hence, the indicated change in $\vec{i}$ in the time Δt is

$$|\Delta \vec{i}| = |\vec{\omega}_{10}| \sin \phi \Delta t \quad (\text{A.9})$$

By applying the cross or vector product of two vectors we can write

$$|\vec{\omega}_{10} \times \vec{i}| = |\vec{\omega}_{10}| \times |\vec{i}| \sin \phi = |\vec{\omega}_{10}| \sin \phi \quad (\text{A.10})$$

Combining Eq. A.9 and Eq. A.10 yields

$$|\Delta \vec{i}| = |\vec{\omega}_{10} \times \vec{i}| \Delta t \quad (\text{A.11})$$

By passing to the limit

$$\lim_{\Delta t \rightarrow 0} \frac{\Delta \vec{i}}{\Delta t} = \frac{d \vec{i}}{dt} = \vec{\omega}_{10} \times \vec{i} \quad (\text{A.12})$$

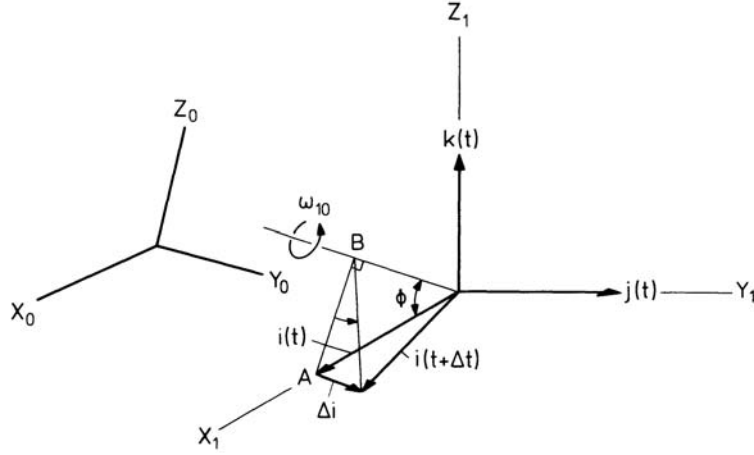


Figure A.2 Frame $X_1 Y_1 Z_1$ rotating with respect to the frame $X_0 Y_0 Z_0$

Since $\vec{i}$, $\vec{j}$ and $\vec{k}$ are similar unit vectors, we have

$$\begin{aligned}\frac{d_0 \vec{i}}{dt} &= \vec{\omega}_{10} \times \vec{i} \\ \frac{d_0 \vec{j}}{dt} &= \vec{\omega}_{10} \times \vec{j} \\ \frac{d_0 \vec{k}}{dt} &= \vec{\omega}_{10} \times \vec{k}\end{aligned}\tag{A.13}$$

From this result we may establish that for a point P fixed in $X_1 Y_1 Z_1$ and having a position vector $\vec{r}_1$, relative to the origin of $X_1 Y_1 Z_1$, the velocity due to the rotation is given by (Fig. A.3)

$$\vec{V} = \vec{\omega}_{10} \times \vec{r}_1.\tag{A.14}$$

With Eq. A.14 we can derive a relation between the time derivative of the vector $\vec{V}$ in the rotating frame $X_1 Y_1 Z_1$ to the time derivative of that vector in the non-rotating frame $X_0 Y_0 Z_0$. Therefore we proceed to consider the fact that the vector $\vec{V}$ can be expressed as

$$\vec{V} = V_x \vec{i} + V_y \vec{j} + V_z \vec{k}\tag{A.15}$$

where V_x , V_y and V_z are the components of $\vec{V}$ in the frame $X_1 Y_1 Z_1$. By differentiating $\vec{V}$ with respect to $X_1 Y_1 Z_1$ we obtain

$$\frac{d_1 \vec{V}}{dt} = \frac{dV_x}{dt} \vec{i} + \frac{dV_y}{dt} \vec{j} + \frac{dV_z}{dt} \vec{k}\tag{A.16}$$

The subscript “1” is omitted in the derivatives of the three scalar quantities as the derivative of a scalar quantity is the same in all reference frames. The derivative of the vector $\vec{V}$ with respect to $X_0 Y_0 Z_0$ is

$$\frac{d_0 \vec{V}}{dt} = \frac{dV_x}{dt} \vec{i} + \frac{dV_y}{dt} \vec{j} + \frac{dV_z}{dt} \vec{k} + V_x \frac{d_0 \vec{i}}{dt} + V_y \frac{d_0 \vec{j}}{dt} + V_z \frac{d_0 \vec{k}}{dt}\tag{A.17}$$

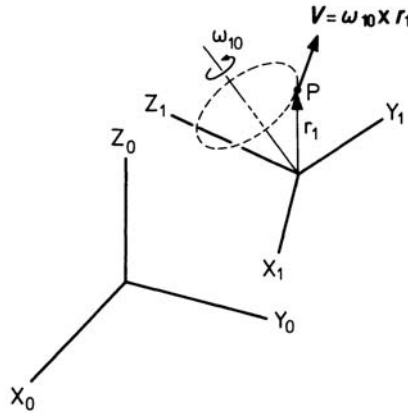


Figure A.3 Rotating coordinate system

If Eq. A.16 and Eq. A.13 are substituted into Eq. A.17, it follows that

$$\frac{d_0 \vec{V}}{dt} = \frac{d_1 \vec{V}}{dt} + \vec{\omega}_{10} \times (V_x \vec{i} + V_y \vec{j} + V_z \vec{k}) \quad (\text{A.18})$$

Using Eq. A.15, the latter result can be written as

$$\frac{d_0 \vec{V}}{dt} = \frac{d_1 \vec{V}}{dt} + \vec{\omega}_{10} \times \vec{V} \quad (\text{A.19})$$

It must be emphasized that Eq. A.19 is a general relation which applies to any vector. Thus for a vector $\vec{P}$:

$$\frac{d_0 \vec{P}}{dt} = \frac{d_1 \vec{P}}{dt} + \vec{\omega}_{10} \times \vec{P} \quad (\text{A.20})$$

It is also important to note that Eq. A.20 holds for any pair of systems rotating relative to each other.

A.5. NON-INERTIAL REFERENCE FRAMES

Now the case is considered that a frame $X_1 Y_1 Z_1$ is translating and rotating in a general manner relative to the inertial frame $X_0 Y_0 Z_0$. Using Eq. A.20, we can express Eq. A.2 as follows

$$\frac{d_0 \vec{r}_0}{dt} = \frac{d_0 \vec{R}}{dt} + \frac{d_1 \vec{r}_1}{dt} + \vec{\omega}_{10} \times \vec{r}_1 \quad (\text{A.21})$$

Differentiating Eq. A.21 with respect to $X_0 Y_0 Z_0$ gives

$$\frac{d_0^2 \vec{r}_0}{dt^2} = \frac{d_0^2 \vec{R}}{dt^2} + \frac{d_0}{dt} \left[\frac{d_1 \vec{r}_1}{dt} \right] + \vec{\omega}_{10} \times \frac{d_0 \vec{r}_1}{dt} + \frac{d_0 \vec{\omega}_{10}}{dt} \times \vec{r}_1 \quad (\text{A.22})$$

The left-hand term of this equation is the acceleration of P with respect to $X_0 Y_0 Z_0$ and is called the *absolute acceleration*, $\vec{a}$. Eq. A.20 enables us to develop from Eq. A.22 the following expression for

A

the absolute acceleration

$$\vec{a} = \frac{d_0^2 \vec{R}}{dt^2} + \frac{d_0 \vec{\omega}_{10}}{dt} \times \vec{r}_1 + \vec{\omega}_{10} \times (\vec{\omega}_{10} \times \vec{r}_1) + \frac{d_1^2 \vec{r}_1}{dt^2} + 2\vec{\omega}_{10} \times \frac{d_1 \vec{r}_1}{dt} \quad (\text{A.23})$$

The term $\frac{d_0^2 \vec{R}}{dt^2}$ is the acceleration of the origin of the moving frame $X_1 Y_1 Z_1$ with respect to $X_0 Y_0 Z_0$. The term $\frac{d_0 \vec{\omega}_{10}}{dt} \times \vec{r}_1$ is called the *tangential acceleration* owing to the rotational acceleration of $X_1 Y_1 Z_1$ relative to $X_0 Y_0 Z_0$. The term $\vec{\omega}_{10} \times (\vec{\omega}_{10} \times \vec{r}_1)$ is caused by the rotation of $X_1 Y_1 Z_1$ with respect to $X_0 Y_0 Z_0$ and represents the *centripetal acceleration*. The sum of these three terms is the acceleration of the point P fixed to $X_1 Y_1 Z_1$ as seen by an observer in the frame $X_0 Y_0 Z_0$, and is named the *transport acceleration*, $\vec{a}_t$. The term $\frac{d_1^2 \vec{r}_1}{dt^2}$ is the acceleration of P with respect to the frame $X_1 Y_1 Z_1$ and is called the *relative acceleration* $\vec{a}_r$. The term $2\vec{\omega}_{10} \times \frac{d_1 \vec{r}_1}{dt}$, finally, is the so-called *Coriolis acceleration*, $\vec{a}_c$. The sum of the last two terms of the right-hand side of Eq. A.23 is the acceleration of the particle relative to $X_1 Y_1 Z_1$ for an observer in the frame $X_0 Y_0 Z_0$. If $\vec{F}$ is the total force acting on a particle, then according to Eq. A.5 and Eq. A.23 we can write the following vector equation:

$$\vec{F} = M_i \vec{a} = M_i \vec{a}_t + M_i \vec{a}_r + M_i \vec{a}_c \quad \text{or} \quad (\text{A.24})$$

$$\vec{F} - M_i \vec{a}_t - M_i \vec{a}_c = M_i \vec{a}_r \quad (\text{A.25})$$

Apparently, Newton's second law of motion can be used to determine the motion of a particle relative to non-inertial frames by modifying the actual force according to the left-hand side of Eq. A.25.

A.6. SYSTEMS OF PARTICLES

We now consider a mass system, which consists of n particles with masses $M_1, M_2, \dots, M_n$ and with position vectors $\vec{r}_1, \vec{r}_2, \dots, \vec{r}_n$ relative to the origin of an inertial frame $X_0 Y_0 Z_0$ (Fig. A.4).

The forces acting on particle p_i may be formed by an external force $\vec{F}_i$ and internal forces due to the interactions among the particles.

According to Newton's third law of motion we can write for the internal forces acting along a straight line between two particles:

$$\vec{F}_{ij} = -\vec{F}_{ji} \quad (\text{A.26})$$

where $\vec{F}_{ij}$ is the internal force acting on particle p_i due to particle p_j , and $\vec{F}_{ji}$ is the internal force acting on particle p_j due to particle p_i . Applying Newton's second law of motion on particle p_i , we obtain

$$\vec{F}_i + \sum_{j=1}^n \vec{F}_{ij} = \frac{d}{dt} \left[M_i \frac{d\vec{r}_i}{dt} \right] \quad (\text{A.27})$$

where the quantity $M_i \frac{d\vec{r}_i}{dt}$ is the linear momentum of particle p_i relative to $X_0 Y_0 Z_0$. Note that the subscript "0" is not appended to the vector symbols since only the inertial frame $X_0 Y_0 Z_0$ is used in the present analysis. Summing of all particles of the system gives

$$\sum_{i=1}^n \vec{F}_i + \sum_{i=1}^n \sum_{j=1}^n \vec{F}_{ij} = \sum_{i=1}^n \frac{d}{dt} \left[M_i \frac{d\vec{r}_i}{dt} \right] \quad (\text{A.28})$$

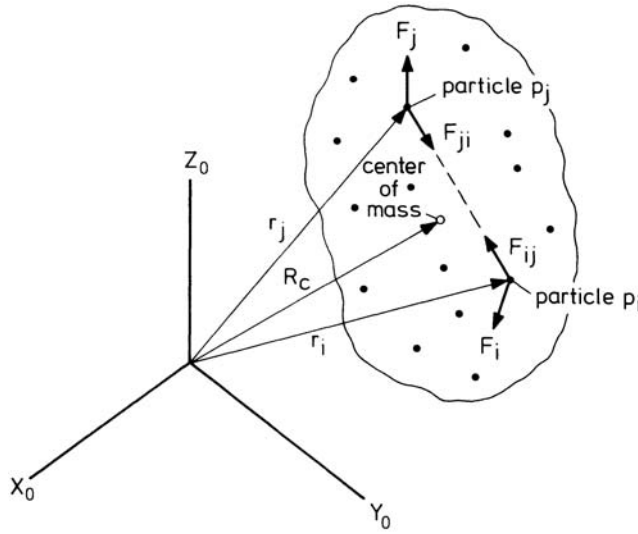


Figure A.4 System of particles in an inertial frame

Since Eq. A.26 indicates that the internal forces occur in equal and opposite pairs, we have that $\sum_{i=1}^n \sum_{j=1}^n \vec{F}_{ij} = 0$, and Eq. A.28 reduces to

$$\sum_{i=1}^n \vec{F}_i = \sum_{i=1}^n \frac{d}{dt} \left[M_i \frac{d\vec{r}_i}{dt} \right] = \sum_{i=1}^n M_i \frac{d^2 \vec{r}_i}{dt^2} \quad (\text{A.29})$$

If we consider an invariable mass system (n is a constant), in Eq. A.29 summation and differentiation can be interchanged, yielding

$$\vec{F} = \sum_{i=1}^n \vec{F}_i = \frac{d^2}{dt^2} \left[\sum_{i=1}^n M_i \vec{r}_i \right] \quad (\text{A.30})$$

where $\vec{F}$ is the entire external force applied to the system. Now let $\sum_{i=1}^n M_i = M$ be the total mass of the system. Further we introduce the position vector of the center of mass of the system, defined by

$$\vec{R}_c = \frac{1}{M} \sum_{i=1}^n M_i \vec{r}_i \quad (\text{A.31})$$

Substituting the latter quantities in Eq. A.30 yields

$$\vec{F} = M \frac{d^2 \vec{R}_c}{dt^2} \quad (\text{A.32})$$

This equation indicates that the translational motion of the center of mass of the system is the same as if the total mass is located at the center of mass and subjected to the entire external force.

A

Eq. A.32 also has an equivalent form regarding angular motion, which is obtained by vectorial multiplication of Eq. A.27 with $\vec{r}_i$,

$$\vec{r}_i \times \vec{F}_i + \sum_{j=1}^n (\vec{r}_i \times \vec{F}_{ij}) = \vec{r}_i \times \frac{d}{dt} \left[M_i \frac{d\vec{r}_i}{dt} \right] \quad (\text{A.33})$$

The moment of $\vec{F}_i$ with respect to the origin of $X_0 Y_0 Z_0$ is expressed by the vector product of $\vec{F}_i$ and $\vec{r}_i$: $\vec{M}_i = \vec{r}_i \times \vec{F}_i$. Note that besides the mass also a moment is given the symbol $\vec{M}$, but the moment is a vector quantity. The angular momentum of a particle p_i is given by

$$\vec{B}_i = \vec{r}_i \times M_i \frac{d\vec{r}_i}{dt} \quad \text{and hence} \quad (\text{A.34})$$

$$\frac{d\vec{B}_i}{dt} = \frac{d}{dt} \left[\vec{r}_i \times M_i \frac{d\vec{r}_i}{dt} \right] = \vec{r}_i \times \frac{d}{dt} \left[M_i \frac{d\vec{r}_i}{dt} \right] \quad (\text{A.35})$$

Thus, Eq. A.33 can be written as

$$\vec{M}_i + \sum_{j=1}^n (\vec{r}_i \times \vec{F}_{ij}) = \frac{d\vec{B}_i}{dt} \quad (\text{A.36})$$

For the complete system we obtain

$$\sum_{j=1}^n \vec{M}_i + \sum_{i=1}^n \sum_{j=1}^n (\vec{r}_i \times \vec{F}_{ij}) = \sum_{i=1}^n \frac{d\vec{B}_i}{dt} \quad (\text{A.37})$$

It easily may be seen from Eq. A.26 that the second term of the left-hand side of Eq. A.7 is equal to zero. If we denote $\sum_{i=1}^n \vec{M}_i = \vec{M}$ as the entire moment with respect to the origin of the reference frame $X_0 Y_0 Z_0$, then, from Eq. A.37 and Eq. A.35, we find

$$\vec{M} = \sum_{i=1}^n \frac{d\vec{B}_i}{dt} = \sum_{i=1}^n \frac{d}{dt} \left[\vec{r}_i \times M_i \frac{d\vec{r}_i}{dt} \right] = \sum_{i=1}^n \left[\vec{r}_i \times M_i \frac{d^2 \vec{r}_i}{dt^2} \right] \quad (\text{A.38})$$

Putting again summation and differentiation in the other's place produces the expression:

$$\vec{M} = \frac{d}{dt} \left[\sum_{i=1}^n \vec{r}_i \times M_i \frac{d\vec{r}_i}{dt} \right] = \frac{d\vec{B}}{dt} \quad (\text{A.39})$$

Eq. A.39 says that the external moment applied to a system of particles is equal to the time derivative of its total angular momentum.

A.7. GENERAL BODIES

A body may be considered as being made up of an infinite number of elements of which the mass is infinitesimally small. Consequently, the summations in the Eq. A.30 and Eq. A.38 must be altered into integrations. This yields (Fig. A.5)

$$\vec{F} = \int_M \frac{d^2 \vec{r}}{dt^2} dM \quad \text{and} \quad (\text{A.40})$$

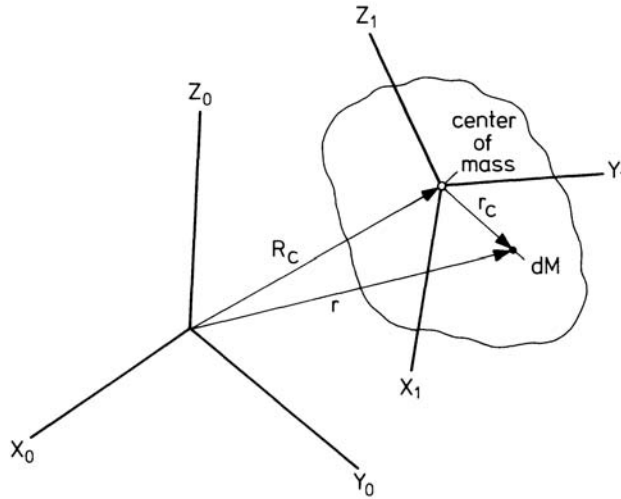


Figure A.5 Position vectors of an element of mass of a body

$$\vec{M} = \int_M \vec{r} \times \frac{d^2 \vec{r}}{dt^2} dM \quad (\text{A.41})$$

If $\vec{R}_c$ is the position vector of the center of mass of the body and $\vec{r}_c$ is the position vector of an element of mass dM of the body relative to the mass center, then

$$\vec{r} = \vec{R}_c + \vec{r}_c \quad (\text{A.42})$$

The vector $\vec{R}_c$ now is defined by

$$\vec{R}_c = \frac{1}{M} \int_M \vec{r} dM \quad (\text{A.43})$$

where $M = \int_M dM$ is the mass of the body. By using Eq. A.42 in Eq. A.23, the absolute acceleration of the element dM can be written as

$$\frac{d^2 \vec{r}}{dt^2} = \frac{d^2 \vec{R}_c}{dt^2} + \frac{d\vec{\omega}}{dt} \times \vec{r}_c + \vec{\omega} \times (\vec{\omega} \times \vec{r}_c) + \frac{\delta^2 \vec{r}_c}{\delta t^2} + 2\vec{\omega} \times \frac{\delta \vec{r}_c}{\delta t} \quad (\text{A.44})$$

where $\vec{\omega}$ is the angular velocity relative to the inertial frame $X_0 Y_0 Z_0$, and $\frac{\delta \vec{r}_c}{\delta t}$ and $\frac{\delta^2 \vec{r}_c}{\delta t^2}$ are derivatives of the vector $\vec{r}_c$ with respect to the center of mass of the body.

Insertion of Eq. A.42 into Eq. A.43 yields

$$\int_M \vec{r}_c dM = 0 \quad (\text{A.45})$$

Combining Eq. A.40, Eq. A.44 and Eq. A.45 furnishes

$$\vec{F} = \int_M \frac{d^2 \vec{R}_c}{dt^2} dM + \int_M \frac{\delta^2 \vec{r}_c}{\delta t^2} dM + 2\vec{\omega} \times \int_M \frac{\delta \vec{r}_c}{\delta t} dM \quad (\text{A.46})$$

A

This is the general equation for the translational motion of an arbitrary deformable body of mass M .

Similarly, Eq. A.41 for the rotational motion can be expanded to the same variables by taking the center of mass of the body as the reference point for the calculations. The moment due to the entire external force with respect to the center of mass of the body can be expressed as

$$\vec{M}_c = \vec{M} - \vec{R}_c \times \vec{F} \quad (\text{A.47})$$

where $\vec{M}$ is the moment relative to the origin of the frame $X_0 Y_0 Z_0$. By substituting Eq. A.40 to Eq. A.42 into Eq. A.47, we find

$$\vec{M}_c = \int_M \vec{r}_c \times \frac{d^2 \vec{r}}{dt^2} dM \quad (\text{A.48})$$

Insertion of Eq. A.44 into Eq. A.48 yields the equation for rotational motion of a general deformable body,

$$\begin{aligned} \vec{M}_c = & \int_M \vec{r}_c \times \left(\frac{d\vec{\omega}}{dt} \times \vec{r}_c \right) dM + \int_M \vec{r}_c \times [\vec{\omega} \times (\vec{\omega} \times \vec{r}_c)] dM + \\ & \int_M \vec{r}_c \times \frac{\delta^2 \vec{r}_c}{\delta t^2} dM + \int_M \vec{r}_c \times \left(2\vec{\omega} \times \frac{\delta \vec{r}_c}{\delta t} \right) dM \end{aligned} \quad (\text{A.49})$$

In deriving this equation, we used the facts that $\frac{d^2 \vec{R}_c}{dt^2}$ bears no relation to dM and $\int_M \vec{r}_c dM = 0$, so that

$$\int_M \vec{r}_c \times \frac{d^2 \vec{R}_c}{dt^2} dM = \int_M \vec{r}_c dM \times \frac{d^2 \vec{R}_c}{dt^2} = 0 \quad (\text{A.50})$$

A.8. RIGID BODIES

The rigid body approximation requires that $\frac{\delta r_t}{\delta t}$ and $\frac{\delta r_r}{\delta r^2}$ are equal to zero so that the Eq. A.46 and Eq. A.49 reduce to

$$\vec{F} = \int_M \frac{d^2 \vec{R}_c}{dt^2} dM \quad \text{and} \quad (\text{A.51})$$

$$\vec{M}_c = \int_M \vec{r}_c \times \left(\frac{d\vec{\omega}}{dt} \times \vec{r}_c \right) dM + \int_M \vec{r}_c \times (\vec{\omega} \times (\vec{\omega} \times \vec{r}_c)) dM \quad (\text{A.52})$$

In order to recast Eq. A.52 in a more familiar form, we introduce, from Eq. A.48, the relationship

$$\vec{B}_c = \int_M \vec{r}_c \times \frac{d\vec{r}}{dt} dM \quad (\text{A.53})$$

Inserting Eq. A.42 into Eq. A.53 furnishes

$$\vec{B}_c = \int_M \vec{r}_c \times \frac{d\vec{R}_c}{dt} dM + \int_M \vec{r}_c \times \frac{d\vec{r}_c}{dt} dM \quad (\text{A.54})$$

Analogous to Eq. A.50, we find that the first integral of Eq. A.54 vanishes,

$$\int_M \vec{r}_c \times \frac{d\vec{R}_c}{dt} dM = \int_M \vec{r}_c dM \times \frac{d\vec{R}_c}{dt} = 0 \quad (\text{A.55})$$

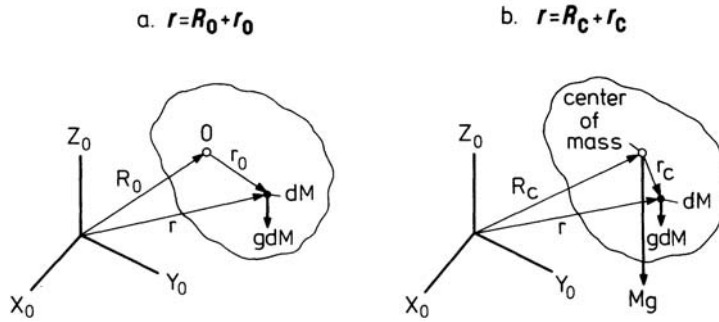


Figure A.6 Force and moment due to the gravity forces

Applying Eq. A.20 for the rate of change of the vector $\vec{r}_c$ we obtain

$$\frac{d\vec{r}_c}{dt} = \frac{\delta\vec{r}_c}{\delta t} + (\vec{\omega} \times \vec{r}_c) = \vec{\omega} \times \vec{r}_c \quad (\text{A.56})$$

Thus by substituting Eq. A.56 into Eq. A.54 we find that for a rigid body the total angular momentum relative to the center of mass is given by

$$\vec{B}_c = \int_M \vec{r}_c \times (\vec{\omega} \times \vec{r}_c) dM \quad (\text{A.57})$$

By combining Eq. A.52 and Eq. A.57 we, finally, get

$$\vec{M}_c = \int_M \vec{r}_c \times \left(\frac{d\vec{\omega}}{dt} \times \vec{r}_c \right) dM + \vec{\omega} \times \vec{B}_c \quad (\text{A.58})$$

This equation is often used in solving for the rotational motion of rigid bodies.

A.9. CENTER OF GRAVITY

The center of gravity, being the point through which the gravity force or weight of the body acts, is identical with the center of mass. To show this, we consider a body as in Fig. A.6a. The moment due to the forces of gravity about the origin of the frame $X_0Y_0Z_0$ is given by

$$\vec{M} = \int_M \vec{r} \times \vec{g} dM \quad (\text{A.59})$$

where $\vec{g}$ is the acceleration of gravity, the gravity force per unit mass.

With $\vec{r} = \vec{R}_0 + \vec{r}_0$, we obtain

$$\vec{M} = \int_M (\vec{R}_0 + \vec{r}_0) \times \vec{g} dM = \vec{R}_0 \times \int_M \vec{g} dM + \int_M \vec{r}_0 \times \vec{g} dM \quad (\text{A.60})$$

If we assume that $\vec{g}$ is constant over the body, we can rewrite Eq. A.60 as

$$\vec{M} = \vec{R}_0 \times M\vec{g} + \int_M \vec{r}_0 dM \times \vec{g} \quad (\text{A.61})$$

A

When we choose the point O in Fig. A.6a at the center of mass of the body, the last term vanishes according to Eq. A.45, giving,

$$\vec{M} = \vec{R}_c \times M \vec{g} \quad (\text{A.62})$$

where $\vec{R}_c$ is the position vector of the center of mass of the body (Fig. A.6b). Thus we see that the entire effect of the gravity forces can be replaced by a single force $M \vec{g}$ acting on the center of mass, which point, therefore, also may be called the center of gravity.

General references for Appendix A

- N.C. Barford, *Mechanics*, John Wiley, New York, 1973.
- J.W. Cornelisse, H.E.R. Schöyer and K.F. Wakker, *Rocket Propulsion and Spaceflight Dynamics*, Pitman, London, 1979.
- B. Etkin, *Dynamics of Atmospheric flight*, John Wiley, New York, 1972.

B

SWITCHING BETWEEN AXIS SYSTEMS

B.1. EULER ANGLES AND AXIS SYSTEMS

A geometric description of the Euler angles defining the relative orientations of aircraft axis systems is given in [Section 1.6](#) of this book. In this respect, it is important to recognize that Euler angles also may represent the sequence of the three elemental rotation matrices about the principle axes of an axis system that move a reference axis system to a given referred system. These matrices are a convenient calculation tool as they relate the basic vectors in the various axis systems. Therefore, in the following, attention is given to the derivation and usefulness of rotation matrices.

The four right-handed, rectangular Cartesian axis systems defined in [Section 1.6](#) are: (1) the Earth-fixed axis system, (2) the moving Earth axis system, (3) the body axis system, and (4) the air-path axis system. Displacements are positive in the positive senses of the axes. Angles are positive in clockwise direction when looking along the appropriate axis in the positive direction. Velocities, angular velocities and accelerations also are positive in these directions; see the previous [Figs. 1.10 to 1.19](#).

When studying airplane performance, the external forces acting on the airplane in flight, conveniently, are expressed in terms of their components along the axes of the air-path axis system. Otherwise, the body axis system, which is fixed to the airplane, is not very useful in performance, but in particular is employed for studying flight dynamics and airplane control. To describe the translational motion of the airplane relative to the Earth, the two Earth axis systems are of importance. The four external forces acting in flight are the airplane weight $\vec{W}$ due to gravitation, the engine thrust $\vec{T}$ from propulsion, and the aerodynamic force $\vec{R}$ caused by the interaction between the airflow and the outer surfaces of the airplane.

The gravitational force is directed along the Z_e axis of the moving Earth axis system. Propulsive force data usually are specified relative to the body axis system. The components of the aerodynamic force may be available in terms of the body axis system or in terms of the air-path axis system.

Anyway, to derive the equations of motion, we need to express all forces in the same axis system. Consequently, we should be able to determine the relationship between the basis vectors of the

various axis systems. Definitions of the four axis systems are repeated below for convenience.

B

Earth-fixed or geodetic axis system Indicated with $X_g Y_g Z_g$. The origin is any point on the Earth surface. The X_g and Y_g axes lie in the horizontal plane of the Earth. The X_g axis points into an arbitrary direction. The Z_g axis points vertically and positive downward.

Moving Earth axis system Indicated with $X_e Y_e Z_e$. The moving Earth axes are aligned with the Earth-fixed axes but are attached to the airplane. The origin coincides with the center of gravity of airplane. The X_e and Y_e axis both lie in the horizontal plane parallel to the flat surface of the Earth. The Z_e axis points vertically and is positive downward.

Body axis system Indicated with $X_b Y_b Z_b$. The axes are fixed to the airplane and oriented by reference to some geometrical datum. The origin coincides with the center of gravity of the airplane. The X_b axis lies in the plane of symmetry of the airplane and points out of the nose of the airplane. The Z_b axis is perpendicular to the X_b axis, lies also in the plane of symmetry, and is directed downward for the normal flight attitude. The Y_b axis is directed out of the right wing of the airplane.

Air-path axis system Indicated with $X_a Y_a Z_a$. The origin coincides with the center of gravity of the airplane. The X_a axis lies along the flight velocity vector $\vec{V}$. The Z_a axis is taken in the plane of symmetry of the airplane, and is positive downward for a normal airplane attitude. Accordingly, also the Y_a axis is positive to starboard.

B.2. MATRIX REPRESENTATION

An $n \times m$ matrix is a set of scalars (numbers) arranged in a rectangular array containing n rows (horizontal) and m columns (vertical). Conventionally, a matrix is identified by a bold uppercase letter. The scalars may be called elements. In case of a matrix **A**, the elements are referred to as a_{ij} . The subscript i identifies the rows (1 to n) and the subscript j the columns (1 to m) of the matrix. Usually, for a matrix **A** the shorthand notation $\mathbf{A} = [a_{ij}]$ is used.

Of importance is the multiplication of matrices. The product of an $n \times m$ matrix $\mathbf{A} = [a_{ij}]$ and an $m \times p$ matrix $\mathbf{B} = [b_{jk}]$, yields an $n \times p$ matrix $\mathbf{C} = [c_{ij}]$, of which the elements are obtained according to the following general definition of matrix multiplication:

$$\mathbf{C} = c_{ij} = \sum_{k=1}^m a_{ik} b_{kj}, \quad i = 1, \dots, n, \quad j = 1, \dots, p$$

Apparently, to obtain the element c_{ij} in matrix **C**, sequentially, each element a_{ik} in row i in matrix **A** must be multiplied with the corresponding element b_{kj} in column j in matrix **B**, and summing the results. Repetition of this action yields the complete matrix **C**.

Note that matrices **A** and **B** can be multiplied because the number of columns in matrix **A** equals the number of rows in matrix **B**. Also note that the case $m = n$ is important in many practical applications. Such a matrix is called a square matrix of order n . Writing out explicitly the multiplication for two square matrices of order 3 furnishes a general single matrix **C**:

$$\begin{aligned}\mathbf{C} = \mathbf{AB} &= \begin{bmatrix} c_{11} & c_{12} & c_{13} \\ c_{21} & c_{22} & c_{23} \\ c_{31} & c_{32} & c_{33} \end{bmatrix} = \begin{bmatrix} a_{11} & a_{12} & a_{13} \\ a_{21} & a_{22} & a_{23} \\ a_{31} & a_{32} & a_{33} \end{bmatrix} \begin{bmatrix} b_{11} & b_{12} & b_{13} \\ b_{21} & b_{22} & b_{23} \\ b_{31} & b_{32} & b_{33} \end{bmatrix} = \\ &= \begin{bmatrix} a_{11}b_{11} + a_{12}b_{21} + a_{13}b_{31} & a_{11}b_{12} + a_{12}b_{22} + a_{13}b_{32} & a_{11}b_{13} + a_{12}b_{23} + a_{13}b_{33} \\ a_{21}b_{11} + a_{22}b_{21} + a_{23}b_{31} & a_{21}b_{12} + a_{22}b_{22} + a_{23}b_{32} & a_{21}b_{13} + a_{22}b_{23} + a_{23}b_{33} \\ a_{31}b_{11} + a_{32}b_{21} + a_{33}b_{31} & a_{31}b_{12} + a_{32}b_{22} + a_{33}b_{32} & a_{31}b_{13} + a_{32}b_{23} + a_{33}b_{33} \end{bmatrix}\end{aligned}$$

Appropriate may be the use of the transpose of a matrix, which is obtained by reversal of the order of rotation. For example, the transpose of an $n \times m$ matrix $\mathbf{A} = [a_{ij}]$ is an $m \times n$ matrix, denoted by $\mathbf{A}^T = [a_{ji}]$, having m rows and n columns. In other words, the rows of $\mathbf{A}^T$ are the columns of $\mathbf{A}$, and vice versa. Thus, the transpose of the above matrix $\mathbf{C} = [c_{ij}]$ is given by:

$$\begin{aligned}\mathbf{C}^T = (\mathbf{AB})^T &= \begin{bmatrix} c_{11} & c_{21} & c_{31} \\ c_{12} & c_{22} & c_{32} \\ c_{13} & c_{23} & c_{33} \end{bmatrix} = \\ &= \begin{bmatrix} a_{11}b_{11} + a_{12}b_{21} + a_{13}b_{31} & a_{21}b_{11} + a_{22}b_{21} + a_{23}b_{31} & a_{31}b_{11} + a_{32}b_{21} + a_{33}b_{31} \\ a_{11}b_{12} + a_{12}b_{22} + a_{13}b_{32} & a_{21}b_{12} + a_{22}b_{22} + a_{23}b_{32} & a_{31}b_{12} + a_{32}b_{22} + a_{33}b_{32} \\ a_{11}b_{13} + a_{12}b_{23} + a_{13}b_{33} & a_{21}b_{13} + a_{22}b_{23} + a_{23}b_{33} & a_{31}b_{13} + a_{32}b_{23} + a_{33}b_{33} \end{bmatrix} = \mathbf{B}^T \mathbf{A}^T\end{aligned}$$

From the last example it must be noted that the transpose of the product of two matrices is the product of the transposes of the matrices in reverse order. This is valid in general. Evidently, the transpose of $\mathbf{C}^T$ is again $\mathbf{C}$; that is, $(\mathbf{C}^T)^T = \mathbf{C}$.

B.3. ROTATION MATRICES



We next discuss the transformation of the coordinates of a vector in an initial orientation of an axis system to the corresponding coordinates after a rotation of the axis system. Rotation matrices are used to this end, as any orientation can be achieved by performing elemental rotations about the three principle axes.

To explain how this works, we consider two axis systems, initially coinciding, of which one remains motionless and the other can be rotated about its axes. Then, elemental rotations about the axes of the rotating system are executed to reach a target orientation measured relative to the reference system.

To start, we examine the transfer of vector coordinates, x_e, y_e, z_e , defined in the moving Earth axis system, to their corresponding coordinates, x_b, y_b, z_b , in the body axis system.

As shown in the previous Fig. 1.15 the transfer is effected by three “positive” (clockwise) rotations:

1. a rotation by the yaw angle ψ about the Z_e axis to the intermediate position $X'Y'Z_e$;
2. a rotation by the pitch angle θ about the Y' axis to the intermediate position $X_bY'Z'$; and
3. a rotation by the roll angle ϕ about the X_b axis to the final position $X_bY_bZ_b$.

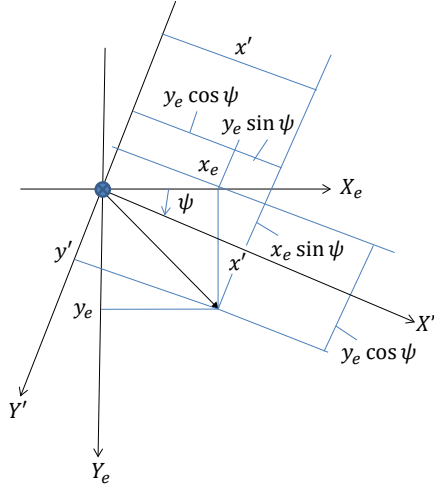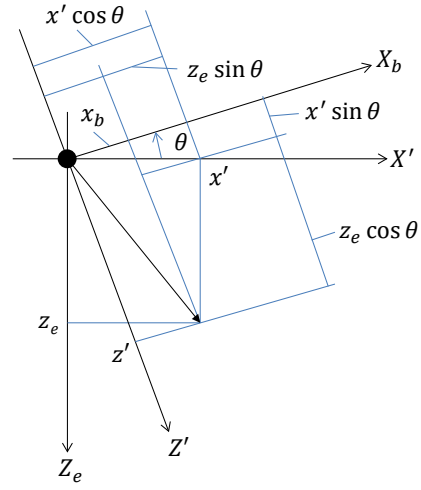Figure B.1 Yaw rotation of angle ψ about the Z_e axis.Figure B.2 Pitch rotation of angle θ about the Y' axis.

From the Figs. 1.15 and B.1, it can be seen that the rotation in the $X_e Y_e$ plane by the yaw angle ψ yields for the corresponding coordinates in the intermediate $X' Y' Z_e$ axis system:

$$\begin{aligned} x' &= x_e \cos \psi + y_e \sin \psi \\ y' &= -x_e \sin \psi + y_e \cos \psi \\ z_e &= z_e \end{aligned}$$

Using the matrix form, the above relations can be expressed as:

$$\begin{bmatrix} x' \\ y' \\ z_e \end{bmatrix} = \begin{bmatrix} \cos \psi & \sin \psi & 0 \\ -\sin \psi & \cos \psi & 0 \\ 0 & 0 & 1 \end{bmatrix} \begin{bmatrix} x_e \\ y_e \\ z_e \end{bmatrix} = \mathbf{R}_z(\psi) \begin{bmatrix} x_e \\ y_e \\ z_e \end{bmatrix},$$

where $\mathbf{R}_z(\psi)$ is the elemental rotation matrix, representing the clockwise rotation about the Z_e axis. Next, we rotate the system $X' Y' Z_e$ by the pitch angle θ about the Y' axis to the intermediate $X_b Y' Z'$ axis system, in which the coordinates are given by (see Figs. 1.15 and B.2):

$$\begin{aligned} x_b &= x' \cos \theta - z_e \sin \theta \\ y' &= y' \\ z' &= x' \sin \theta + z_e \cos \theta \end{aligned}$$

Expressed in matrix form, we have:

$$\begin{bmatrix} x_b \\ y' \\ z' \end{bmatrix} = \begin{bmatrix} \cos \theta & 0 & -\sin \theta \\ 0 & 1 & 0 \\ \sin \theta & 0 & \cos \theta \end{bmatrix} \begin{bmatrix} x' \\ y' \\ z_e \end{bmatrix} = \mathbf{R}_y(\theta) \begin{bmatrix} x' \\ y' \\ z_e \end{bmatrix},$$

where $\mathbf{R}_y(\theta)$ is the elemental rotation matrix, representing the clockwise rotation about the Y' axis.

At last, we rotate the $X_b Y' Z'$ axis system by the roll angle ϕ in the $Y' Z'$ plane. This yields the body axis system, $X_b Y_b Z_b$, where the corresponding vector coordinates are given by (see again Figs. 1.15 and B.1):

$$\begin{aligned} x_b &= x_b \\ y_b &= y' \cos \phi + z' \sin \phi \\ z_b &= -y' \sin \phi + z' \cos \phi \end{aligned}$$

Expressed in matrix form:

$$\begin{bmatrix} x_b \\ y_b \\ z_b \end{bmatrix} = \begin{bmatrix} 1 & 0 & 0 \\ 0 & \cos \phi & \sin \phi \\ 0 & -\sin \phi & \cos \phi \end{bmatrix} \begin{bmatrix} x_b \\ y' \\ z' \end{bmatrix} = \mathbf{R}_x(\phi) \begin{bmatrix} x_b \\ y' \\ z' \end{bmatrix},$$

where $\mathbf{R}_x(\phi)$ is the elemental rotation matrix, representing the clockwise rotation about the X_b axis. The product of the above three elemental matrices yields a single matrix that relates the coordinates of a vector in the moving Earth axis system to its coordinates in the body axis system:

$$\begin{bmatrix} x_b \\ y_b \\ z_b \end{bmatrix} = \mathbf{R}_x(\phi) \mathbf{R}_y(\theta) \mathbf{R}_z(\psi) \begin{bmatrix} x_e \\ y_e \\ z_e \end{bmatrix} = \mathbf{R}_{eb} \begin{bmatrix} x_e \\ y_e \\ z_e \end{bmatrix}$$

Note that the expressions for the elemental rotation matrices for the opposite directions of rotation are obtained by changing the signs of the sine functions in the matrices. For example: $\cos(-\phi) = \cos \phi$ and $\sin(-\phi) = -\sin \phi$.

The product of the above three elemental matrices yields a single matrix that relates the coordinates of a vector in the moving Earth axis system to its coordinates in the body axis system:

$$\begin{bmatrix} x_b \\ y_b \\ z_b \end{bmatrix} = \mathbf{R}_x(\phi) \mathbf{R}_y(\theta) \mathbf{R}_z(\psi) \begin{bmatrix} x_e \\ y_e \\ z_e \end{bmatrix} = \mathbf{R}_{eb} \begin{bmatrix} x_e \\ y_e \\ z_e \end{bmatrix}$$

It should be recognized that the multiplication of the elemental matrices starts with the yaw, then the pitch, and lastly the roll. Changing the order of the elemental rotations will result in a different overall rotation matrix.

B.4. MOVING EARTH AND BODY AXIS SYSTEM RELATIONSHIPS

TRANSFER FROM MOVING EARTH AXES TO BODY AXES

With reference to Fig. 1.15, and according to the results obtained in Section B.3, the rotation matrix $\mathbf{R}_{eb} = \mathbf{R}_x(\phi) \mathbf{R}_y(\theta) \mathbf{R}_z(\psi)$ is given by:

$$\mathbf{R}_{eb} = \begin{bmatrix} 1 & 0 & 0 \\ 0 & \cos \phi & \sin \phi \\ 0 & -\sin \phi & \cos \phi \end{bmatrix} \begin{bmatrix} \cos \theta & 0 & -\sin \theta \\ 0 & 1 & 0 \\ \sin \theta & 0 & \cos \theta \end{bmatrix} \begin{bmatrix} \cos \psi & \sin \psi & 0 \\ -\sin \psi & \cos \psi & 0 \\ 0 & 0 & 1 \end{bmatrix}$$

Performing the multiplication of the three clockwise rotation matrices yields the following single expression:

$$\mathbf{R}_{eb} = \begin{bmatrix} \cos \theta \cos \psi & \cos \theta \sin \psi & -\sin \theta \\ \sin \phi \sin \theta \cos \psi - \cos \phi \sin \psi & \sin \phi \sin \theta \sin \psi + \cos \phi \cos \psi & \sin \phi \cos \theta \\ \cos \phi \sin \theta \cos \psi + \sin \phi \sin \psi & \cos \phi \sin \theta \sin \psi - \sin \phi \cos \psi & \cos \phi \cos \theta \end{bmatrix} \quad (\text{B.1})$$

TRANSFER FROM BODY AXES TO MOVING EARTH AXES

The matrix for rotating in the opposite direction, i.e. from the body axis system to the moving axis system, is given by the transpose of the above matrix: $\mathbf{R}_{be} = \mathbf{R}_{eb}^T = \mathbf{R}_z^T(\psi) \mathbf{R}_y^T(\theta) \mathbf{R}_x^T(\phi)$:

$$\mathbf{R}_{be} = \begin{bmatrix} \cos \theta \cos \psi & \sin \phi \sin \theta \cos \psi + \cos \phi \sin \psi & \cos \phi \sin \theta \cos \psi - \sin \phi \sin \psi \\ \cos \theta \sin \psi & \sin \phi \sin \theta \sin \psi - \cos \phi \cos \psi & \cos \phi \sin \theta \sin \psi + \sin \phi \cos \psi \\ -\sin \theta & \sin \phi \cos \theta & \cos \phi \cos \theta \end{bmatrix} \quad (\text{B.2})$$

B.5. MOVING EARTH AND AIR-PATH AXIS SYSTEM RELATIONSHIPS

TRANSFER FROM MOVING EARTH AXES TO AIR-PATH AXES

With reference to the previous Fig. 1.17, the transfer of a vector from the moving Earth axes ($X_e Y_e Z_e$) to the air-path axes ($X_a Y_a Z_a$) is effected by three clockwise rotations: 1) a rotation by the azimuth angle χ about the Z_e axis to the intermediate position $X' Y' Z_e$, 2) a rotation by the flight-path angle γ about the Y' axis to the intermediate position $X_a Y' Z'$, and 3) a rotation by the aerodynamic angle of roll μ about the X_a axis to the final position $X_a Y_a Z_a$.

The overall rotation matrix $\mathbf{R}_{ea}$ is represented by the product of the three elemental matrices $\mathbf{R}_x(\mu)$, $\mathbf{R}_y(\gamma)$, and $\mathbf{R}_z(\chi)$:

$$\mathbf{R}_{ea} = \mathbf{R}_x(\mu) \mathbf{R}_y(\gamma) \mathbf{R}_z(\chi) = \begin{bmatrix} 1 & 0 & 0 \\ 0 & \cos \mu & \sin \mu \\ 0 & -\sin \mu & \cos \mu \end{bmatrix} \begin{bmatrix} \cos \gamma & 0 & -\sin \gamma \\ 0 & 1 & 0 \\ \sin \gamma & 0 & \cos \gamma \end{bmatrix} \begin{bmatrix} \cos \chi & \sin \chi & 0 \\ -\sin \chi & \cos \chi & 0 \\ 0 & 0 & 1 \end{bmatrix}$$

By sequential multiplication of the matrices, we obtain:

$$\mathbf{R}_{ea} = \begin{bmatrix} \cos \gamma \cos \chi & \cos \gamma \sin \chi & -\sin \gamma \\ \sin \mu \sin \gamma \cos \chi - \cos \mu \sin \chi & \sin \mu \sin \gamma \sin \chi + \cos \mu \cos \chi & \sin \mu \cos \gamma \\ \cos \mu \sin \gamma \cos \chi + \sin \mu \sin \chi & \cos \mu \sin \gamma \sin \chi - \sin \mu \cos \chi & \cos \mu \cos \gamma \end{bmatrix} \quad (\text{B.3})$$

TRANSFER FROM AIR-PATH AXES TO MOVING EARTH AXES

The matrix for rotating in the opposite direction, i.e. from the air-path axis system to the moving Earth axis system, is given by the transpose of the above matrix: $\mathbf{R}_{ae} = \mathbf{R}_{ea}^T = \mathbf{R}_z^T(\chi) \mathbf{R}_y^T(\gamma) \mathbf{R}_x^T(\mu)$:

$$\mathbf{R}_{ae} = \begin{bmatrix} \cos \gamma \cos \chi & \sin \mu \sin \gamma \cos \chi - \cos \mu \sin \chi & \cos \mu \sin \gamma \cos \chi + \sin \mu \sin \chi \\ \cos \gamma \sin \chi & \sin \mu \sin \gamma \sin \chi + \cos \mu \cos \chi & \cos \mu \sin \gamma \sin \chi - \sin \mu \cos \chi \\ -\sin \gamma & \sin \mu \cos \gamma & \cos \mu \cos \gamma \end{bmatrix} \quad (\text{B.4})$$

At this point, it is important to emphasize that, apart from the differences in the Euler angles, the similarities between Eq. B.1 and Eq. B.3, and between Eq. B.2 and Eq. B.4 are due to the same order and direction of the elemental rotations.

B.6. AIR-PATH AND BODY AXIS SYSTEM RELATIONSHIPS

TRANSFER FROM AIR-PATH AXES TO BODY AXES

With reference to the previous Fig. 1.18, as the $X_b Z_b$ plane is the plane of symmetry of the airplane and the Z_a axis lies in the $X_b Z_b$ plane, the orientation of the body axis system with respect to air-path axis system is fully defined by the angle of attack α and the angle of sideslip β . Usually, the angle of sideslip is assigned to be positive when the air flow is coming from the right of the nose of the airplane.

If we start at the air-path axis system, we must rotate counterclockwise through angle β about the Z_a axis and clockwise through angle α about the Y_b axis, respectively. Consequently, the product of the following two elemental matrices represents the rotation matrix:

$$\mathbf{R}_{ab} = \mathbf{R}_y(\alpha) \mathbf{R}_z(-\beta) = \begin{bmatrix} \cos \alpha & 0 & -\sin \alpha \\ 0 & 1 & 0 \\ \sin \alpha & 0 & \cos \alpha \end{bmatrix} \begin{bmatrix} \cos \beta & -\sin \beta & 0 \\ \sin \beta & \cos \beta & 0 \\ 0 & 0 & 1 \end{bmatrix}$$

Multiplication furnishes:

$$\mathbf{R}_{ab} = \begin{bmatrix} \cos \alpha \cos \beta & -\cos \alpha \sin \beta & -\sin \alpha \\ \sin \beta & \cos \beta & 0 \\ \sin \alpha \cos \beta & -\sin \alpha \sin \beta & \cos \alpha \end{bmatrix} \quad (\text{B.5})$$

TRANSFER FROM BODY AXES TO AIR-PATH AXES

If we start at the body axis system, we must rotate counterclockwise through an angle α about the Y_b axis and clockwise through an angle β about the Z_a axis, respectively. Now, the product of the following two elemental matrices represents the rotation matrix:

$$\mathbf{R}_{ba} = \mathbf{R}_z(\beta) \mathbf{R}_y(-\alpha) = \begin{bmatrix} \cos \beta & \sin \beta & 0 \\ -\sin \beta & \cos \beta & 0 \\ 0 & 0 & 1 \end{bmatrix} \begin{bmatrix} \cos \alpha & 0 & \sin \alpha \\ 0 & 1 & 0 \\ -\sin \alpha & 0 & \cos \alpha \end{bmatrix}$$

Performing this multiplication, or transposing the matrix Eq. B.5 furnishes:

$$\mathbf{R}_{ba} = \begin{bmatrix} \cos \beta \cos \alpha & \sin \beta & \cos \beta \sin \alpha \\ -\sin \beta \cos \alpha & \cos \beta & -\sin \beta \sin \alpha \\ -\sin \alpha & 0 & \cos \alpha \end{bmatrix} \quad (\text{B.6})$$

B.7. DERIVING THE EQUATIONS OF MOTION: SYMMETRIC FLIGHT

To demonstrate the use of rotation matrices, we will derive the equations of motion for the case of an accelerated curved symmetric flight. This means that the plane of symmetry of the airplane is continuously in the same vertical plane with respect to the Earth. The velocity vector and all external forces lie in the airplane's plane of symmetry. In this flight type the external forces acting on the airplane are: the aerodynamic force $\vec{R}$, thrust $\vec{T}$, and weight $\vec{W}$. The resultant of the external forces $\vec{F}$ is the vector sum of the three forces: $\vec{F} = \vec{R} + \vec{T} + \vec{W}$. As remarked in Section 3.3, for airplane performance analysis it is convenient to express the equations of motion along the air-path axes. However, the various components of $\vec{F}$ may be found in different axis systems, so that

axis transformations are needed. In this example, the external forces are assumed to be available as follows:

- The aerodynamic force $\vec{R}$ is specified in terms of its tangential force T^* and normal force N along the X_b and Z_b axis of the body axis system, respectively. The components T^* and N are measured positive in the negative directions of the axes. Note that here the tangential force is referred to as T^* to distinguish it from the engine thrust T (see the previous Fig. 1.28).
- Thrust $\vec{T}$ acts in forward direction along a working line, which is located in a plane coinciding with or parallel to the plane of symmetry of the airplane. The working line makes a fixed angle η with the positive X_b axis (see the previous Figs. 1.29 and 8.1 and Eq. 3.34).
- The weight $\vec{W}$, by definition, points downward along the positive Z_e axis.

According to the above conditions, we can express the external forces in terms of the air-path axes by transformations of the forces $\vec{R}$, $\vec{T}$, and $\vec{W}$. As in symmetric flight the angle of sideslip $\beta = 0$, the transformations of the components T^* and N only require a rotation about the Y_b axis. In relating the components by using rotation matrix Eq. B.6, we can write the components of the vector $\vec{R}$ in both the body axis system and the air-path axis system as matrices having three rows and one column:

$$\begin{bmatrix} D \\ S \\ L \end{bmatrix} = \mathbf{R}_{ba} \begin{bmatrix} T^* \\ 0 \\ N \end{bmatrix} = \begin{bmatrix} \cos \alpha & 0 & \sin \alpha \\ 0 & 1 & 0 \\ -\sin \alpha & 0 & \cos \alpha \end{bmatrix} \begin{bmatrix} T^* \\ 0 \\ N \end{bmatrix}$$

or

$$\begin{aligned} D &= T^* \cos \alpha + N \sin \alpha \\ L &= -T^* \sin \alpha + N \cos \alpha \end{aligned}$$

where D , S , and L are the well-known components drag, side force, and lift acting along the X_a , Y_a , and Z_a axis, respectively. These forces also are measured positive in the negative directions of the axes.

Similarly, we find from the transformation between body axes and the air-path axes for the thrust components,

$$\begin{bmatrix} T_x \\ T_y \\ T_z \end{bmatrix} = \mathbf{R}_{ba} \begin{bmatrix} T \\ 0 \\ 0 \end{bmatrix} = \begin{bmatrix} \cos \alpha_T & 0 & \sin \alpha_T \\ 0 & 1 & 0 \\ -\sin \alpha_T & 0 & \cos \alpha_T \end{bmatrix} \begin{bmatrix} T \\ 0 \\ 0 \end{bmatrix},$$

or

$$\begin{aligned} T_x &= T \cos \alpha_T \\ T_z &= -T \sin \alpha_T \end{aligned}$$

where α_T is the sum of the angle of attack α and the fixed inclination η of the thrust vector ($\alpha_T = \alpha + \eta$).

The components of the weight force in terms of the air-path axes are obtained by using the rotation matrix Eq. B.3. For symmetric flight, we find:

$$\begin{bmatrix} W_x \\ W_y \\ W_z \end{bmatrix} = \mathbf{R}_{ea} \begin{bmatrix} 0 \\ 0 \\ W \end{bmatrix} = \begin{bmatrix} \cos \gamma & 0 & -\sin \gamma \\ 0 & 1 & 0 \\ \sin \gamma & 0 & \cos \gamma \end{bmatrix} \begin{bmatrix} 0 \\ 0 \\ W \end{bmatrix},$$

or

$$\begin{aligned} W_x &= -W \sin \gamma \\ W_z &= W \cos \gamma \end{aligned}$$

Assuming the airplane as a rigid body of constant mass, we can write the two general equations of motion for curved symmetric flight in terms of the air-path axis system.

Along the X_a axis:

$$\frac{W}{g} \frac{dV}{dt} = T \cos \alpha_T - D - W \sin \gamma = T \cos \alpha_T - T^* \cos \alpha - N \sin \alpha - W \sin \gamma$$

where V is the velocity vector of the center of gravity of the airplane.

Along the Z_a axis:

$$C = \frac{W}{g} V \frac{d\gamma}{dt} = T \sin \alpha_T + L - W \cos \gamma = T \sin \alpha_T - T^* \sin \alpha + N \cos \alpha - W \cos \gamma$$

where C is the centripetal force necessary to curve the flight path.

Compared to the way we previously have found the same equations of motion for the airplane in symmetric flight, it is certainly exaggerated to derive them by using rotation matrices. However, for more complicated flight types, the latter approach definitely may offer much advantage.

B.8. DERIVING THE EQUATIONS OF MOTION: GENERIC FLIGHT IN WIND FIELD

We now derive the equations of motion for the case of generic flight in three degrees of freedom (both turning and climbing) in an arbitrary wind field. The velocity of the airplane in the moving Earth axis system is the vector sum of its airspeed vector $\vec{V}$ and the wind velocity vector $\vec{V}_w$.

$$\vec{V}_g = \vec{V} + \vec{V}_w$$

The airspeed is conveniently expressed in the air-path axis system, while the wind field is conveniently expressed in the moving Earth axis system and is, in principle, a function of time.

$$\vec{V} = \begin{bmatrix} V \\ 0 \\ 0 \end{bmatrix}_a \quad \vec{V}_w = \begin{bmatrix} U_w \left(\vec{R}(t) \right) \\ V_w \left(\vec{R}(t) \right) \\ W_w \left(\vec{R}(t) \right) \end{bmatrix}_e$$

Here, $\vec{R}(t)$ is the position of the airplane in the moving Earth axis system.

The aircraft acceleration in the moving Earth axis system is given by the time derivative of the velocity vector

$$\frac{d_e \vec{V}_g}{dt} = \frac{d_e \vec{V}}{dt} + \frac{d_e \vec{V}_w}{dt} = \frac{d_a \vec{V}}{dt} + \vec{\omega}_{ae} \times \vec{V} + \frac{d_e \vec{V}_w}{d\vec{R}} \frac{d_e \vec{R}}{dt}$$

where $\vec{\omega}_{ae}$ is the angular velocity vector of the air-path axis system with respect to the moving Earth axis system, and $d_e \vec{V}_w / d\vec{R}$ is the Jacobian of the wind velocity vector.

B

$$\frac{d_e \vec{V}_w}{d\vec{R}} = \begin{bmatrix} \frac{\partial U_w}{\partial x_e} & \frac{\partial U_w}{\partial y_e} & \frac{\partial U_w}{\partial z_e} \\ \frac{\partial V_w}{\partial x_e} & \frac{\partial V_w}{\partial y_e} & \frac{\partial V_w}{\partial z_e} \\ \frac{\partial W_w}{\partial x_e} & \frac{\partial W_w}{\partial y_e} & \frac{\partial W_w}{\partial z_e} \end{bmatrix}_e$$

Realizing that

$$\frac{d_e \vec{R}}{dt} = \vec{V}_g = \vec{V} + \vec{V}_w$$

the acceleration can then be expressed as

$$\frac{d_e \vec{V}_g}{dt} = \frac{d_a \vec{V}}{dt} + \vec{\omega}_{ae} \times \vec{V} + \frac{d_e \vec{V}_w}{d\vec{R}} (\vec{V} + \vec{V}_w)$$

We shall now proceed to express the components of the remaining vectors in the air-path axis system.

As already done in Section 1.7 (Eq. 1.22) for the components of the angular velocity of the aircraft body axis system with respect to the moving Earth axis system, it can be easily shown that the components of the angular velocity of the air-path axis system with respect to the moving Earth axis system are expressed in air-path axes as

$$\vec{\omega}_{ae} = \begin{bmatrix} \dot{\mu} - \dot{\chi} \sin \gamma \\ \dot{\chi} \cos \gamma \sin \mu + \dot{\gamma} \cos \mu \\ \dot{\chi} \cos \gamma \cos \mu - \dot{\gamma} \sin \mu \end{bmatrix}_a$$

Therefore, the first two terms in the expression of the acceleration vector become

$$\frac{d_a \vec{V}}{dt} + \vec{\omega}_{ae} \times \vec{V} = \begin{bmatrix} \dot{V} \\ 0 \\ 0 \end{bmatrix}_a + \begin{bmatrix} \dot{\mu} - \dot{\chi} \sin \gamma \\ \dot{\chi} \cos \gamma \sin \mu + \dot{\gamma} \cos \mu \\ \dot{\chi} \cos \gamma \cos \mu - \dot{\gamma} \sin \mu \end{bmatrix}_a \times \begin{bmatrix} V \\ 0 \\ 0 \end{bmatrix}_a = \begin{bmatrix} \dot{V} \\ V(\dot{\chi} \cos \gamma \cos \mu - \dot{\gamma} \sin \mu) \\ V(\dot{\chi} \cos \gamma \sin \mu + \dot{\gamma} \cos \mu) \end{bmatrix}_a$$

The remaining term due to the wind velocity vector can be expressed in the air-path axis system by using rotation matrices $\mathbf{R}_{ae}$ and $\mathbf{R}_{ea}$ (Eqs. B.3 and B.4):

$$\frac{d_e \vec{V}_w}{d\vec{R}} (\vec{V} + \vec{V}_w) = \mathbf{R}_{ea} \begin{bmatrix} \frac{\partial U_w}{\partial x_e} & \frac{\partial U_w}{\partial y_e} & \frac{\partial U_w}{\partial z_e} \\ \frac{\partial V_w}{\partial x_e} & \frac{\partial V_w}{\partial y_e} & \frac{\partial V_w}{\partial z_e} \\ \frac{\partial W_w}{\partial x_e} & \frac{\partial W_w}{\partial y_e} & \frac{\partial W_w}{\partial z_e} \end{bmatrix}_e \left(\mathbf{R}_{ae} \begin{bmatrix} V \\ 0 \\ 0 \end{bmatrix}_a + \begin{bmatrix} U_w \\ V_w \\ W_w \end{bmatrix}_e \right)$$

For the sake of continuing the analytical derivation, let us now look at the particular case in which the wind is parallel to the ground, varying in intensity only in the Z_e direction, and blowing towards

the X_e direction. It is therefore a uniform unsteady wind field with a vertical gradient. The previous equation reduces to

$$\begin{aligned} \frac{d_e \vec{V}_w}{dR} (\vec{V} + \vec{V}_w) &= \mathbf{R}_{ea} \begin{bmatrix} 0 & 0 & \frac{\partial U_w}{\partial z_e} \\ 0 & 0 & 0 \\ 0 & 0 & 0 \end{bmatrix}_e \left(\begin{bmatrix} V \cos \gamma \cos \chi + U_w \\ V \cos \gamma \sin \chi \\ -V \sin \gamma \end{bmatrix}_e + \begin{bmatrix} U_w \\ 0 \\ 0 \end{bmatrix}_e \right) = \\ &= \begin{bmatrix} -V \frac{\partial U_w}{\partial z_e} \sin \gamma \cos \gamma \cos \chi \\ -V \frac{\partial U_w}{\partial z_e} \sin \gamma (\sin \mu \sin \gamma \cos \chi - \cos \mu \sin \chi) \\ -V \frac{\partial U_w}{\partial z_e} \sin \gamma (\cos \mu \sin \gamma \cos \chi + \sin \mu \sin \chi) \end{bmatrix}_a \end{aligned}$$

The expression of the external forces acting on the airplane in the air-path axis system is

$$\sum \vec{F} = \vec{T} + \vec{D} + \vec{L} + \vec{W} = \begin{bmatrix} T - D \\ 0 \\ -L \end{bmatrix}_a + \mathbf{R}_{ea} \begin{bmatrix} 0 \\ 0 \\ W \end{bmatrix}_e = \begin{bmatrix} T - D - W \sin \gamma \\ W \cos \gamma \sin \mu \\ -L + W \cos \gamma \cos \mu \end{bmatrix}_a$$

where it has been assumed that the thrust vector is aligned with the airspeed vector.

Finally, the equations of motion in the air-path axis system can be written by substituting the previously obtained expressions for forces and accelerations into Newton's second law.

$$M \frac{d_e \vec{V}_g}{dt} = \sum \vec{F}$$

Doing this results in the following three equations

$$\begin{aligned} M \left(\dot{V} - V \frac{\partial U_w}{\partial z_e} \sin \gamma \cos \gamma \cos \chi \right) &= T - D - W \sin \gamma \\ MV \left(\dot{\chi} \cos \gamma \cos \mu - \dot{\gamma} \sin \mu - \frac{\partial U_w}{\partial z_e} \sin^2 \gamma \sin \mu \cos \chi + \frac{\partial U_w}{\partial z_e} \sin \gamma \cos \mu \sin \chi \right) &= W \cos \gamma \sin \mu \\ MV \left(-\dot{\chi} \cos \gamma \sin \mu - \dot{\gamma} \cos \mu - \frac{\partial U_w}{\partial z_e} \sin^2 \gamma \cos \mu \cos \chi - \frac{\partial U_w}{\partial z_e} \sin \gamma \sin \mu \sin \chi \right) &= -L + W \cos \gamma \cos \mu \end{aligned}$$

which can be greatly simplified by summing the second one multiplied by $\sin \mu$ and the third multiplied by $\cos \mu$, and then substituting the obtained expression of $\dot{\gamma}$ in either of the two. The final result is

$$\begin{aligned} M \left(\dot{V} - V \frac{\partial U_w}{\partial z_e} \sin \gamma \cos \gamma \cos \chi \right) &= T - D - W \sin \gamma \\ MV \left(\dot{\gamma} + \frac{\partial U_w}{\partial z_e} \sin^2 \gamma \cos \chi \right) &= L \cos \mu - W \cos \gamma \\ MV \left(\dot{\chi} \cos \gamma + \frac{\partial U_w}{\partial z_e} \sin \gamma \sin \chi \right) &= L \sin \mu \end{aligned}$$

where it can be seen that the wind gradient results in an extra acceleration term in all three equations of motion.

It is now also interesting to look at the particular case of symmetric flight in the opposite direction of the wind. This is obtained from the previous equations by setting $\mu = 0$ and $\chi = \pi$, which results in the following equations of motion.

$$\begin{aligned} M \left(\dot{V} + V \frac{\partial U_w}{\partial z_e} \sin \gamma \cos \gamma \right) &= T - D - W \sin \gamma \\ MV \left(\dot{\gamma} - \frac{\partial U_w}{\partial z_e} \sin^2 \gamma \right) &= L - W \cos \gamma \end{aligned}$$

The third equation vanishes in light of the fact that the aircraft has now only two degrees of freedom. Lastly, because the wind vector is horizontal, the rate of climb is given uniquely by the airspeed vector. When realizing that

$$\dot{V} = \frac{dV}{dH} \frac{dH}{dt} = \frac{dV}{dH} V \sin \gamma \quad \text{and} \quad \frac{\partial U_w}{\partial z_e} = - \frac{\partial U_w}{\partial H} = - \frac{dU_w / dt}{V \sin \gamma}$$

the expressions of [Eqs. 14.45](#) and [14.46](#) are found again.

C

ONE-DIMENSIONAL STEADY FLOW EQUATIONS

C.1. CONTINUITY EQUATION

The continuity equation expresses the physical principle that mass can be neither created nor destroyed. Consider a gas flowing through a channel [Fig. C.1](#). When the flow is steady, there will be no variation with time of the mass of the gas confined inside the channel between the cross-sections 1 and 2. Consequently, the same rate of mass flow will cross each section of the channel. Thus, the condition for continuity is

$$m = \rho VA = \text{constant}, \quad (\text{C.1})$$

where m is the mass flow per unit time, V is the flow velocity and A is the cross-sectional area. [Eq. C.1](#) is the continuity equation. In the logarithmic differential form this equation reads

$$\frac{d\rho}{\rho} + \frac{dV}{V} + \frac{dA}{A} = 0 \quad (\text{C.2})$$

Emphasis is made on the fact that [Eq. C.1](#) is derived by using the simplifying conditions of one-dimensional steady flow. This implies that all gas properties are uniform over any cross-section of the channel and independent of time.

In steady flow, the gas particles move along streamlines, which represent the local flow direction. Thus, by definition, particles cannot cross a streamline. All the streamlines that go through the circumference of a surface directed perpendicular to the flow direction form a stream tube ([Fig. C.2](#)). Since no particle can enter or leave the stream tube through its walls, it follows that when dealing with steady flow, the continuity equation holds also along a stream tube.

C.2. BERNOULLI'S EQUATION

Bernoulli's equation expresses the relationship between pressure and velocity along a streamline for a frictionless steady flow. To derive this equation, we may consider an element of an elemental

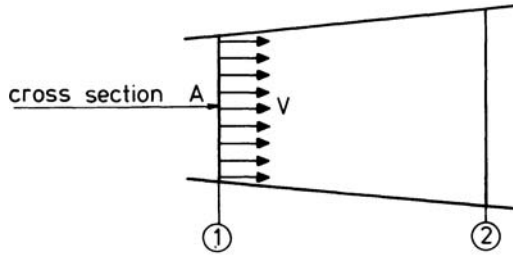


Figure C.1 Channel flow

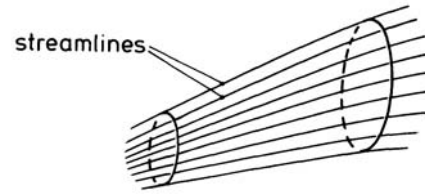


Figure C.2 Stream tube

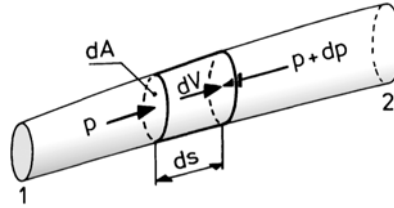


Figure C.3 Elemental stream tube

stream tube with mass $\rho ds dA$, where ds is the length and dA is the cross-sectional area of the element (Fig. C.3).

If the effect of altitude on pressure is neglected, we obtain from Newton's second law of motion:

$$-dp dA = \rho ds dA \frac{dV}{dt} \quad (\text{C.3})$$

where dp is the difference in pressure across the two cross-sections of the element of the stream tube. The acceleration of the element is given by

$$\frac{dV}{dt} = \frac{\partial V}{\partial s} \frac{ds}{dt} + \frac{\partial V}{\partial t}$$

Since in steady flow the derivative with respect to time is zero, the acceleration reduces to

$$\frac{dV}{dt} = V \frac{dV}{ds} \quad (\text{C.4})$$

Insertion of the latter expression into Eq. C.3 furnishes Euler's equation:

$$\frac{dp}{\rho} = -V dV \quad (\text{C.5})$$

When the flow is continuous, Eq. C.5 can be integrated between the stations 1 and 2 of the stream tube in Fig. C.2. This yields

$$\int_{p_1}^{p_2} \frac{dp}{\rho} + \frac{1}{2} (V_2^2 - V_1^2) = 0 \quad (\text{C.6})$$

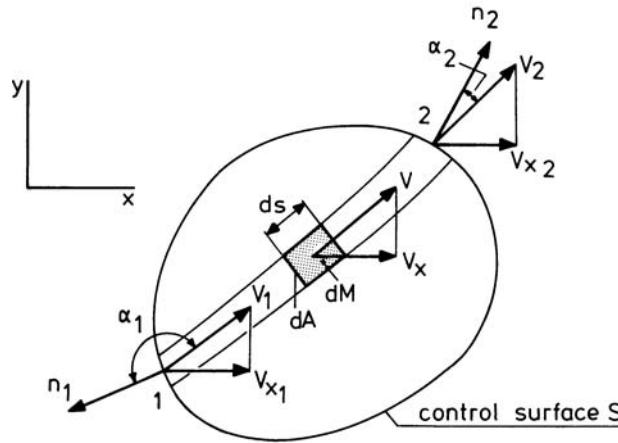


Figure C.4 The flow in a control surface

C

If we use the assumption that ρ is constant, we obtain Bernoulli's equation:

$$p_1 + \frac{1}{2} \rho V_1^2 = p_2 + \frac{1}{2} \rho V_2^2 \quad \text{or} \quad (C.7)$$

$$p_t = p + \frac{1}{2} \rho V^2 = \text{constant}, \quad (C.8)$$

where p_t is the *total pressure* and $\frac{1}{2} \rho V^2$ is the *dynamic pressure*.

A flow can only be assumed to be incompressible if the velocity is low, that is, low when compared with its speed of sound. For the case of compressible flow, the integral in Eq. C.6 can only be solved if we have additional information on the variation of density with pressure, which will be discussed in Section C.7.

C.3. THE MOMENTUM EQUATION

To derive the momentum equation we consider a gas flowing steadily through a fixed control volume bounded by a control surface S (Fig. C.4).

In order to apply Newton's second law of motion to the gas, the control volume is divided into elemental stream tubes of cross-section dA (see Fig. C.3). As the flow is steady, the x -component of the acceleration of a stream tube element is given by

$$a_x = \frac{dV_x}{dt} = V \frac{dV_x}{ds} \quad (C.9)$$

where V_x is the x -component of the velocity V . The mass of the gas enclosed by the element is

$$dM = \rho ds dA \quad (C.10)$$

The x -component of the force acting on the element is therefore

$$dF_x = \rho \, ds \, dA V \frac{dV_x}{ds} \quad (\text{C.11})$$

To determine the integral of Eq. C.11 extended over the complete control volume, it is appropriate to first consider the contributions of the individual stream tubes.

The contribution of the stream tube 1-2 to the force F_x becomes

$$\int_1^2 \rho \, ds \, dA V \frac{dV_x}{ds} = \int_1^2 (\rho V \, dA) \, dV_x \quad (\text{C.12})$$

where the product $\rho V \, dA$ represents the mass flow rate, which has a constant value along the stream tube. Hence

$$\int_1^2 (\rho V \, dA) \, dV_x = \rho V \, dA (V_{x_2} - V_{x_1}) \quad (\text{C.13})$$

Then for the entire system, we can write

$$F_x + W_x = \int_S \rho V (V_{x_2} - V_{x_1}) \, dA \quad (\text{C.14})$$

The term on the left-hand side of Eq. C.14 is the sum of the x -components of the resultant force F acting on the gas within the control surface S and the weight W of the gas confined in the control volume. Evidently, we can write Eq. C.14 as

$$F_x + W_x = \int_S \rho V V_x \cos \alpha \, dS \quad (\text{C.15})$$

where dS represents the area of the surface element that an elemental stream tube cuts out of the control surface. The angle α is the angle between the direction of the velocity V at the place where the stream tube pierces through the control surface and the outward normal at the same point. The product $V \cos \alpha$ in Eq. C.15 is the projection of the velocity V on the outward normal of S . Let V_n denote $V \cos \alpha$. Then, Eq. C.15 becomes

$$F_x + W_x = \int_S \rho V_n V_x \, dS \quad (\text{C.16})$$

Note that the normal velocity V_n is positive at points where the gas leaves the control volume and negative at points where the gas goes into the control volume. Eq. C.16 is the momentum equation, written in a general form. Since the product $\rho V_n \, dS$ is the mass flow rate that passes a surface element dS , Eq. C.16 says that the sum of the components of the external forces in a given direction acting on a gas contained in a control volume equals the rate of change of momentum of the gas in the same direction.

In the application of the momentum equation, it is normally found convenient to employ special forms. As a typical example, we will consider here the steady one-dimensional flow through a channel (Fig. C.5).

Let the control surface consist of the interior surface of the channel and the cross-sections 1 and 2. Neglecting the weight of the gas, the momentum equation then furnishes for the component in the direction of flow of the force exerted by the walls of the channel on the fluid:

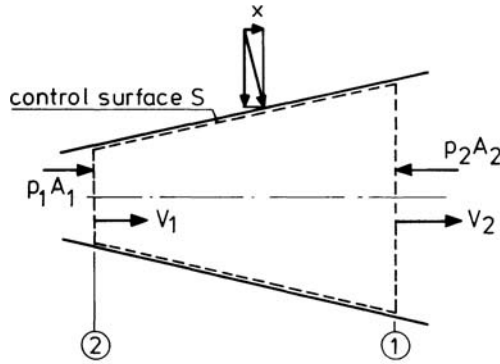


Figure C.5 Flow through a channel

$$X = m(V_2 - V_1) + p_2 A_2 - p_1 A_1 \quad (\text{C.17})$$

In this equation $p_1 A_1$ and $p_2 A_2$ are the forces that the gas outside the portion of the channel between stations 1 and 2 exerts on the flow within the control volume.

C.4. THE ENERGY EQUATION

The energy equation is based on the first law of thermodynamics that states that energy is conserved in a thermodynamic system. Thus, for a system of gas, the energy supplied must equal the sum of the increase in the internal energy of the system and the energy which leaves the system as work. The first law of thermodynamics may be written as

$$dQ = dE + dW \quad (\text{C.18})$$

where dQ is the amount of energy added to the system, dW is the amount of work done by the system and dE is the corresponding change in internal energy. It is convenient to employ lower case letters to denote the values of extensive variables per unit mass of fluid. Then, Eq. C.18 becomes

$$dq = dq + dw \quad (\text{C.19})$$

For any system we can break the work dw into two parts:

$$dw = dw_m + p d\left(\frac{1}{\rho}\right) \quad (\text{C.20})$$

in which $p d(1/\rho)$ is the increment of work done by the gas on the surrounding control surfaces and dw_m includes all other forms of work.

The internal energy is all the energy internal to the system boundaries. Neglecting the potential energy,

$$e = u + \frac{V^2}{2} \quad (\text{C.21})$$

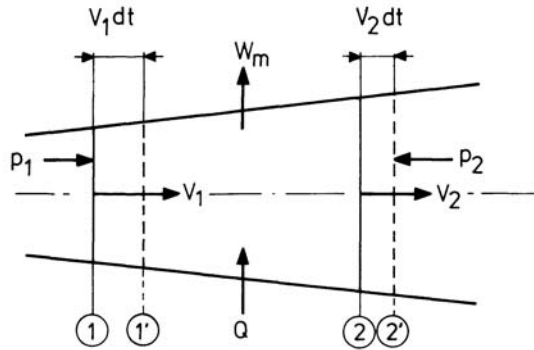


Figure C.6 Channel flow with addition and extraction of energy

in which u denotes the internal molecular energy, and $V^2/2$ is the kinetic energy of the system per unit mass. For our analysis, we consider a flow through a channel, and we define the system as the gas in the channel between the cross-sections 1 and 2 (Fig. C.6). After a time dt , the system will have moved to the position 1'-2'. Then, from the principle of the conservation of energy, the net energy transferred to the system is the energy in volume 1'-2' at time $t + dt$ minus the energy in volume 1-2 at time t .

For steady flow, the internal energy in region 1'-2' remains unchanged so that the net energy transferred to the system is also given by the energy in region 2-2' at time $t + dt$ minus the energy in region 1-1' at time t .

Assuming that the properties of the gas masses in the regions 2-2' and 1-1' can be considered to be the same as the properties of the gases when they pass their respective entry-sections 1 and 2, we obtain the energy balance for a flowing gas as

$$[m(q - w_m) - (p_2 V_2 A_2 - p_1 V_1 A_1)] dt = m \left[(u_2 - u_1) + \left[\frac{V_2^2}{2} - \frac{V_1^2}{2} \right] \right] dt \quad (\text{C.22})$$

where m is the mass flow rate and pVA represents the work done by the system on the surroundings. Eq. C.22 expresses that in time dt , heat is added and energy in the form of work is extracted at the rates q and w_m units of energy per unit mass.

Noting that from Eq. C.1,

$$m = \rho_1 V_1 A_1 = \rho_2 V_2 A_2,$$

we get the following form of the energy equation,

$$q - w_m = \left[\frac{p_2}{\rho_1} - \frac{p_1}{\rho_1} \right] = (u_2 - u_1) + \left[\frac{V_2^2}{2} - \frac{V_1^2}{2} \right] \quad (\text{C.23})$$

or in differential form,

$$dq - dw_m = d\left(\frac{p}{\rho}\right) + du + V dV \quad (\text{C.24})$$

Again, it should be noted that Eq. C.23 and Eq. C.24 refer to a steady one-dimensional flow of unit mass.

C.5. ISENTROPIC RELATIONS

The first law of thermodynamics for an incremental change of state of a system of gas may be written as

$$dq = du + p d\left(\frac{1}{\rho}\right) \quad (\text{C.25})$$

When we use the concept of enthalpy, h , defined as

$$h = u + \frac{p}{\rho} \quad (\text{C.26})$$

then, for an infinitesimal process,

$$dh = du + p d\left(\frac{1}{\rho}\right) + \frac{1}{\rho} dp \quad (\text{C.27})$$

Combination of Eq. C.25 and Eq. C.27 yields

$$dq = dh - \frac{1}{\rho} dp \quad (\text{C.28})$$

The specific heat at constant pressure is therefore

$$c_p = \left(\frac{\partial q}{\partial T}\right)_p = \frac{\partial h}{\partial T} \quad (\text{C.29})$$

The specific heat at constant volume is

$$c_v = \left(\frac{\partial q}{\partial T}\right)_v = \frac{\partial u}{\partial T} \quad (\text{C.30})$$

Assuming that we are dealing with a perfect gas, we have the equation of state

$$\frac{p}{\rho} = RT \quad (\text{C.31})$$

where R is the specific gas constant. For a perfect gas the specific heats are related by

$$c_p = \frac{\partial}{\partial T} \left(u + \frac{p}{\rho}\right) = \frac{\partial}{\partial T} (u + RT) = c_v + R \quad (\text{C.32})$$

Insertion of Eq. C.30 to Eq. C.32 into Eq. C.23 leads to the following form of the energy equation per unit mass flow rate of a perfect gas:

$$q - w_m = c_p (T_2 - T_1) + \frac{V_2^2}{2} - \frac{V_1^2}{2} \quad (\text{C.33})$$

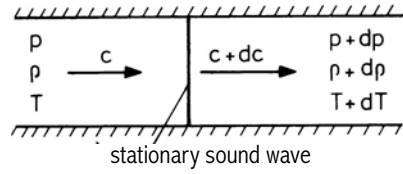


Figure C.7 Derivation of a formula for the speed of sound

For adiabatic flow ($q = w_m = 0$) we have

$$c_p T + \frac{V^2}{2} = \text{constant} \quad (\text{C.34})$$

or in differential form

$$c_p dT + V dV = 0 \quad (\text{C.35})$$

For inviscid flow, Eq. C.35 can be combined with Euler's equation, Eq. C.5. The resulting form is:

$$c_p dT - \frac{dp}{\rho} = 0 \quad (\text{C.36})$$

Substituting Eq. C.31 and Eq. C.32 into Eq. C.36, we obtain

$$\frac{dp}{\rho} = \frac{\gamma}{\gamma - 1} \frac{dT}{T} \quad (\text{C.37})$$

where γ is the ratio of the specific heats, $\gamma = c_p / c_v$. For the case of constant specific heats, Eq. C.37 may be integrated, with the result that

$$\frac{p}{T\gamma(\gamma - 1)} = \text{constant}. \quad (\text{C.38})$$

Using the perfect gas law, Eq. C.31, the latter equation can be transformed to

$$\frac{p}{\rho^\gamma} = \text{constant}. \quad (\text{C.39})$$

Eq. C.38 and Eq. C.39 are called the Poisson relations, and provide information on the variations of p , T , and ρ along a streamline in an isentropic (adiabatic and reversible) flow.

C.6. THE SPEED OF SOUND

The speed of sound is the rate at which a weak disturbance or sound wave propagates through a medium. In order to derive an expression for the speed of sound, we consider a sound wave moving with speed c through a perfect gas at rest in a constant area duct (Fig. C.7).

Suppose that we are traveling with the sound wave. We then see at both sides of the sound wave a steady flow to the right. Across the sound wave, the velocity, stationary sound wave pressure, density and temperature of the gas are changed by the amounts dc , dp , $d\rho$ and dT , respectively.

Applying the continuity equation, Eq. C.1, we get

$$\rho c = (\rho + d\rho)(c + dc) \quad (\text{C.40})$$

When neglecting the product of two small quantities, we obtain from Eq. C.40

$$c = -\rho \frac{dc}{d\rho} \quad (\text{C.41})$$

From Euler's equation, Eq. C.5, we have

$$dc = -\frac{dp}{\rho c} \quad (\text{C.42})$$

Substitution of Eq. C.42 into Eq. C.41 yields

$$c^2 = \frac{dp}{d\rho} \quad (\text{C.43})$$

Assuming that the flow through the sound wave is isentropic, the relationship between pressure and density is given by Eq. C.39,

$$\frac{p}{\rho^\gamma} = \text{constant} = C \quad (\text{C.44})$$

Hence

$$\frac{dp}{d\rho} = \frac{d(C\rho^\gamma)}{d\rho} = \gamma C\rho^{\gamma-1} = \gamma \frac{p}{\rho} \quad (\text{C.45})$$

Combining Eq. C.43 and Eq. C.45 results in the following expression for the speed of sound,

$$c = \sqrt{\gamma \frac{p}{\rho}} \quad (\text{C.46})$$

Substituting the perfect gas law, Eq. C.31, into Eq. C.46 yields

$$c = \sqrt{\gamma RT} \quad (\text{C.47})$$

This equation shows that the speed of sound in a perfect gas depends only on the (absolute) temperature of the gas.

C.7. BERNOULLI'S EQUATION FOR COMPRESSIBLE FLOW

According to the energy equation for adiabatic flow, Eq. C.34, we may write

$$c_p T + \frac{V^2}{2} = \text{constant} = c_p T_t \quad (\text{C.48})$$

where T_t is the value of the temperature that would occur if the velocity was slowed down adiabatically to zero velocity and is called the stagnation or *total temperature*. Calculations are often facilitated if the flow velocities are taken into account implicitly by introducing the concept of total

temperature and by expressing the flow velocities in terms of Mach number. The Mach number M is defined as

$$M = V/c \quad (\text{C.49})$$

where c is the speed of sound. For a perfect gas the speed of sound can be expressed diversely as

$$c = \sqrt{\gamma \frac{p}{\rho}} = \sqrt{\gamma R T} = \sqrt{(\gamma - 1) c_p T} \quad (\text{C.50})$$

C

Combining Eq. C.48 and Eq. C.50 yields the relationships

$$\frac{T_t}{T} = 1 + \frac{V^2}{2c_p T} = 1 + \frac{\gamma - 1}{2} M^2 \quad (\text{C.51})$$

From Eq. C.51, and the Eq. C.38 and Eq. C.39 we get for the corresponding pressure and density ratios for isentropic flow:

$$\frac{p_t}{p} = \left[\frac{T_t}{T} \right]^{\frac{\gamma}{\gamma-1}} = \left[1 + \frac{\gamma-1}{2} M^2 \right]^{\frac{\gamma}{\gamma-1}} \quad (\text{C.52})$$

$$\frac{\rho_t}{\rho} = \left[\frac{p_t}{p} \right]^{\frac{1}{\gamma}} = \left[1 + \frac{\gamma-1}{2} M^2 \right]^{\frac{1}{\gamma-1}} \quad (\text{C.53})$$

Eq. C.51 to Eq. C.53 show that the static temperature, pressure and density and the velocity of a moving gas are equivalent in terms of energy to a total temperature, total pressure, and total density. This may be useful, for example, in studying the gas flow through a jet engine. With the substitution of Eq. C.49 and Eq. C.50, Eq. C.52 can be written as

$$\frac{p_t}{p} = \left[1 + \frac{\gamma-1}{2\gamma} \frac{\rho}{p} V^2 \right]^{\frac{\gamma}{\gamma-1}} \quad (\text{C.54})$$

The latter form is often called *Bernoulli's equation for compressible flow*, where p_t is the total pressure that would occur if the flow was decelerated isentropically to zero velocity.

C.8. ISENTROPIC FLOW OF A PERFECT GAS THROUGH A CHANNEL OF VARYING CROSS-SECTION

For steady flow the mass flow rate crossing a section of the flow passage follows from the continuity equation, Eq. C.1:

$$m = \rho V A \quad (\text{C.55})$$

For a perfect gas, Eq. C.55 can be transformed to

$$m = \frac{p}{RT} M \sqrt{\gamma R T} A = \frac{p}{\sqrt{T}} \sqrt{\frac{\gamma}{R}} M A \quad (\text{C.56})$$

By insertion of Eq. C.51 and Eq. C.52 into Eq. C.56 the mass flow rate can be expressed in terms of stagnation conditions,

$$m = \frac{p_t}{\sqrt{T_t}} \sqrt{\frac{\gamma}{R}} M \left[1 + \frac{\gamma-1}{2} M^2 \right]^{-\frac{\gamma+1}{2(\gamma-1)}} A \quad (\text{C.57})$$

Since for steady isentropic flow the quantities m , T_t and p_t are constants, we find by differentiating Eq. C.57 that

$$\frac{dA}{A} + \frac{dM}{M} - \frac{\frac{\gamma+1}{2} M^2}{1 + \frac{\gamma-1}{2} M^2} \frac{dM}{M} = 0 \quad (\text{C.58})$$

Rearranging, we get for the variation of the Mach number with cross-sectional area

$$\frac{dM}{M} = -\frac{1 + \frac{\gamma-1}{2} M^2}{1 - M^2} \frac{dA}{A} \quad (\text{C.59})$$

The related variations of velocity, temperature, pressure and density with area change follow from Eq. C.59 in combination with Eq. C.51, Eq. C.52 and Eq. C.53. These are repeated below for easy reference in the following analysis and made visible in Fig. C.8,

$$\frac{T_t}{T} = 1 + \frac{\gamma-1}{2} M^2 = 1 + \frac{V^2}{2c_p T} \quad (\text{C.51})$$

$$\frac{p_t}{p} = \left[1 + \frac{\gamma-1}{2} M^2 \right]^{\frac{\gamma}{\gamma-1}} \quad (\text{C.52})$$

$$\frac{\rho_t}{\rho} = \left[1 + \frac{\gamma-1}{2} M^2 \right]^{\frac{1}{\gamma-1}}. \quad (\text{C.53})$$

From Fig. C.8 we see that the effects of area change are opposite for subsonic and supersonic flow. In the case of a converging-diverging channel, the minimum cross-sectional area is called the throat ($dA = 0$). There, according to Eq. C.59, the flow must satisfy the condition that the Mach number either shows an extreme ($dM = 0$) or is equal to unity (Fig. C.9).

Under the first-mentioned condition, in the channel subsonic expansion takes place followed by subsonic diffusion or for supersonic flow a decreasing Mach number in the converging section but not reaching a Mach number of unity, and in the diverging section an increasing Mach number. When $M = 1$ we have the condition where the flow velocity at the throat equals the local speed of sound.

Under this condition the flow is said to be choked because the mass flow is the maximum which the throat can cross with the given stagnation temperature and pressure. The mass flow rate in a choked flow, from Eq. C.57, is given by

$$m^* = \frac{p_t}{\sqrt{T_t}} \sqrt{\frac{\gamma}{R}} \left[\frac{\gamma+1}{2} \right]^{-\frac{\gamma+1}{2(\gamma-1)}} A^* \quad (\text{C.60})$$

where an asterisk is used to mark the properties of the flow at the throat. Equating Eq. C.60 and Eq. C.57 yields

type of flow	converging channel ($dA < 0$)	diverging channel ($dA > 0$)
subsonic flow ($M < 1$)	$M < 1 \rightarrow M \leq 1$ M increases V increases T decreases p decreases ρ decreases	$M \leq 1 \rightarrow M < 1$ M decreases V decreases T increases p increases ρ increases
supersonic flow ($M > 1$)	$M > 1 \rightarrow M \geq 1$ M decreases V decreases T increases p increases ρ increases	$M \geq 1 \rightarrow M > 1$ M increases V increases T decreases p decreases ρ decreases

Figure C.8 Effects of area change in isentropic flow through a duct

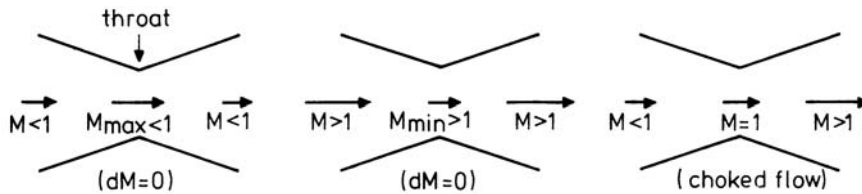


Figure C.9 Isentropic flow through a converging-diverging channel

$$\frac{A}{A^*} = \frac{1}{M} \left[\frac{2}{\gamma+1} \left[1 + \frac{\gamma-1}{2} M^2 \right] \right]^{-\frac{\gamma+1}{2(\gamma-1)}} \quad (\text{C.61})$$

The ratios T/T_t , p/p_t , ρ/ρ_t and A/A^* are plotted in Fig. C.10 for a perfect gas with $\gamma = 1.4$, as expressed by Eqs. C.51 to C.53 and C.61.

To find the conditions at a particular section of a channel with a given shape, the local Mach number follows directly from the ratio A/A^* in Fig. C.10. Then, with known stagnation conditions, the curves also give the corresponding values of T , p and ρ . The conditions at the throat are found by setting $M = 1$ in Eq. C.51 to Eq. C.53:

$$\frac{T_t}{T^*} = \frac{\gamma+1}{2} = 1.2 \quad (\gamma = 1.4) \quad (\text{C.62})$$

$$\frac{p_t}{p^*} = \left[\frac{\gamma+1}{2} \right]^{\frac{\gamma}{\gamma-1}} = 1.893 \quad (\gamma = 1.4) \quad (\text{C.63})$$

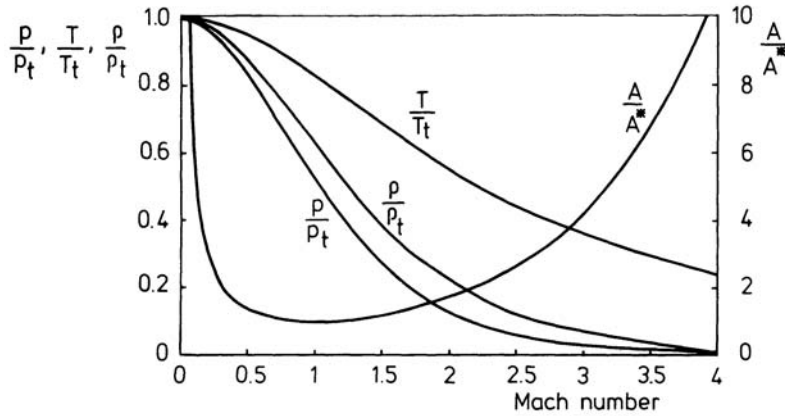


Figure C.10 Characteristic ratios for isentropic flow ($\gamma = 1.4$)

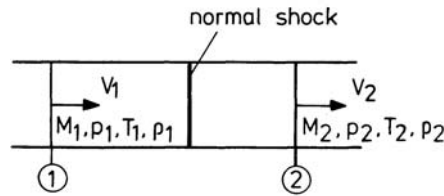


Figure C.11 Adiabatic flow in a constant area duct

$$\frac{\rho_t}{\rho^*} = \left[\frac{\gamma + 1}{2} \right]^{\frac{1}{\gamma-1}} = 1.577 \quad (\gamma = 1.4) \quad (\text{C.64})$$

Consider a convergent-divergent channel in which we want to establish subsonic expansion in the convergent part, followed by a Mach number of unity at the throat and supersonic expansion at the divergent part of the channel. To achieve this, the pressure at the throat must be greater than the ambient pressure at the outlet p_0 . Thus, the pressure ratio required for obtaining the condition $M^* = 1$ is

$$\frac{p_t}{p^*} \geq \left[\frac{\gamma + 1}{2} \right]^{\frac{\gamma}{\gamma-1}} = 1.893 \quad (\gamma = 1.4) \quad (\text{C.65})$$

Again, in the case of a converging-diverging channel, the presence of a throat does not necessarily imply $M^* = 1$ because for values of p_t/p_0 lower than given by Eq. C.63 subsonic flow is found throughout (unchoked flow).

C.9. NORMAL SHOCK WAVES

Consider an adiabatic flow through a constant area duct, where the gas properties change between the cross-sections 1 and 2 (Fig. C.11).

With the assumption of a perfect gas, the governing equations are:

1. The equation of state

$$p = \rho RT \quad (\text{C.66})$$

2. The continuity equation

$$m = \rho_1 V_1 A = \rho_2 V_2 A. \quad (\text{C.67})$$

3. The momentum equation

$$(p_1 - p_2) A = m (V_2 - V_1) \quad (\text{C.68})$$

4. The energy equation

$$c_p T_1 + \frac{V_1^2}{2} = c_p T_2 + \frac{V_2^2}{2} \quad (\text{C.69})$$

The above four equations contain the four variables, p, ρ, T and V . Therefore, the gas properties at section 2 can be expressed in terms of the properties at section 1. Substitution of Eq. C.67 into Eq. C.68 yields

$$p_1 + \rho_1 V_1^2 = p_2 + \rho_2 V_2^2 \quad (\text{C.70})$$

Using the perfect gas law, Eq. C.66, and with $R\gamma/(\gamma-1)$ substituted for the specific heat at constant pressure in Eq. C.69, we obtain

$$\frac{\gamma}{\gamma-1} \frac{p_1}{\rho_1} + \frac{V_1^2}{2} = \frac{\gamma}{\gamma-1} \frac{p_2}{\rho_2} + \frac{V_2^2}{2} \quad (\text{C.71})$$

Combining Eq. C.67, Eq. C.70 and Eq. C.71 results in the following single equation,

$$\frac{V_1^2}{2} \left[1 + \frac{V_2}{V_1} \right] \left[1 - \frac{V_2}{V_1} \right] = \frac{\gamma}{\gamma-1} V_1 V_2 \left[1 - \frac{V_2}{V_1} \right] - \frac{\gamma}{\gamma-1} \frac{p_1}{\rho_1} \left[1 - \frac{V_2}{V_1} \right] \quad (\text{C.72})$$

In addition to the trivial solution that V_2 is equal to V_1 , a second solution is valid mathematically, namely,

$$\frac{V_1^2}{2} \left[1 + \frac{V_2}{V_1} \right] = \frac{\gamma}{\gamma-1} \left[V_1 V_2 - \frac{p_1}{\rho_1} \right] \quad (\text{C.73})$$

We can manipulate Eq. C.73 to produce explicitly the velocity ratio,

$$\frac{V_2}{V_1} = \frac{\gamma-1}{\gamma+1} \left[1 + \frac{2\gamma}{\gamma-1} \frac{p_1}{\rho_1} \frac{1}{V_1^2} \right] \quad (\text{C.74})$$

A velocity variation may be experienced in a supersonic flow in the form of a discontinuity which is called a *shock wave* (Fig. C.12).

With $V = M\sqrt{\gamma p/\rho}$ and the continuity equation, we can express the relationship between the velocities before and after the shock in terms of the initial Mach number M_1 :

$$\frac{V_2}{V_1} = \frac{\rho_1}{\rho_2} = \frac{2}{\gamma+1} \frac{1}{M_1^2} + \frac{\gamma-1}{\gamma+1} \quad (\text{C.75})$$

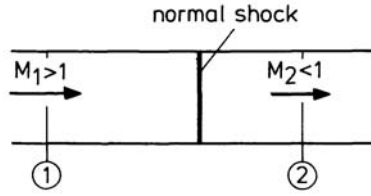


Figure C.12 Shock wave formation in a supersonic flow

C

The relationship between the pressures p_2 and p_1 is found from Eq. C.70 and Eq. C.75 as

$$\begin{aligned} \frac{p_2}{p_1} &= 1 + \frac{\rho_1 V_1^2}{p_1} - \frac{\rho_2 V_2^2}{p_1} = 1 + \gamma M_1^2 - \gamma M_2^2 \left[\frac{2}{\gamma+1} \frac{1}{M_1^2} + \frac{\gamma-1}{\gamma+1} \right] \quad \text{or} \\ \frac{p_2}{p_1} &= \frac{2\gamma}{\gamma+1} M_1^2 - \frac{\gamma-1}{\gamma+1}. \end{aligned} \quad (\text{C.76})$$

Using Eq. C.66, Eq. C.75 and Eq. C.76, the temperature ratio is found to be

$$\frac{T_2}{T_1} = \frac{p_2}{p_1} \frac{\rho_1}{\rho_2} = \left[\frac{2\gamma}{\gamma+1} M_1^2 - \frac{\gamma-1}{\gamma+1} \right] \left[\frac{2}{\gamma+1} \frac{1}{M_1^2} + \frac{\gamma-1}{\gamma+1} \right] \quad (\text{C.77})$$

The corresponding equation for the ratio of the Mach numbers is found, from Eq. C.75 and Eq. C.77, to be

$$\left[\frac{M_2}{M_1} \right]^2 = \left[\frac{V_2}{V_1} \right]^2 \frac{T_1}{T_2} = \frac{\frac{2}{\gamma+1} \frac{1}{M_1^2} + \frac{\gamma-1}{\gamma+1}}{\frac{2\gamma}{\gamma+1} M_1^2 - \frac{\gamma-1}{\gamma+1}} \quad \text{or} \quad M_2 = \left[\frac{1 + \frac{\gamma-1}{2} M_1^2}{\gamma M_1^2 - \frac{\gamma-1}{2}} \right]^{1/2} \quad (\text{C.78})$$

Apparently, for a given value of γ , the ratios p_2/p_1 , T_2/T_1 , ρ_2/ρ_1 , V_2/V_1 and the Mach number M_2 are unique functions of the initial Mach number M_1 . For $M_1 \geq 1$, we have:

$$\frac{p_2}{p_1} \geq 1, \frac{T_2}{T_1} \geq 1, \frac{\rho_2}{\rho_1} \geq 1, \frac{V_2}{V_1} \leq 1, M_2 \leq 1$$

Thus, at supersonic velocities, all changes are accompanied by shock waves, through which the pressure, temperature and density are increased, and the flow velocity and Mach number are reduced. The relationship between the initial and final Mach number is plotted in Fig. C.13, which shows that the flow velocity behind a normal shock is always subsonic ($M_2 < 1$). The loss in kinetic energy is converted into heat so that the occurrence of a shock wave is an irreversible adiabatic (non-isentropic) process. Though mathematically possible, the case of $M_1 < 1$ with the resulting M_2 being greater than unity, is physically impossible, since this solution to the equations is in defiance of the second law of thermodynamics. The relationship between the total pressures on the two sides of the normal shock is given by

$$\frac{p_{t2}}{p_{t1}} = \frac{p_2}{p_1} \left[\frac{1 + \frac{\gamma-1}{2} M_2^2}{1 + \frac{\gamma-1}{2} M_1^2} \right]^{\frac{\gamma}{\gamma-1}}$$

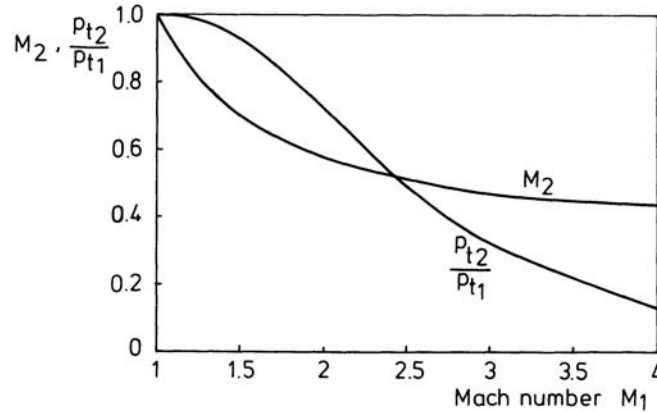


Figure C.13 Final Mach number and total pressure ratio versus initial Mach number for a normal shock ($\gamma = 1.4$)

Using Eq. C.76 and Eq. C.78, this ratio can be written

$$\frac{p_{t2}}{p_{t1}} = \left[\frac{\gamma + 1}{2\gamma M_1^2 - (\gamma - 1)} \right]^{\frac{1}{\gamma-1}} \left[\frac{(\gamma + 1)M_1^2}{2 + (\gamma - 1)M_1^2} \right]^{\frac{\gamma}{\gamma-1}} \quad (\text{C.79})$$

Fig. C.13 shows that, for $M_1 > 1$, the total pressure always decreases when the flow passes a shock wave. Finally, it is worthwhile to derive a similar expression for the ratio of the total pressure behind the normal shock to the initial static pressure,

$$\frac{p_{t2}}{p_1} = \frac{p_{t2}}{p_{t1}} \frac{p_{t1}}{p_1} = \left[\frac{\gamma + 1}{2} M_1^2 \right]^{\frac{\gamma}{\gamma-1}} \left[\frac{2\gamma M_1^2}{\gamma + 1} - \frac{\gamma - 1}{\gamma + 1} \right]^{\frac{1}{1-\gamma}} \quad (\text{C.80})$$

This relationship is called the Rayleigh formula, and is of importance to the measurement of air-speed.

C.10. OBLIQUE SHOCK WAVES

If, in a direction parallel to the shock wave, a uniform velocity V_t is superimposed on the flow field of the normal shock, the resultant upstream velocity is (Fig. C.14a)

$$V_1 = \sqrt{V_{n1}^2 + V_t^2} \quad (\text{C.81})$$

where V_{n1} is the normal component of the velocity V_1 . The inclination of the velocity V_1 relative to the shock is given by

$$\beta = \tan^{-1} (V_{nt} / V_t) \quad (\text{C.82})$$

Since $V_{n2} < V_{n1}$, the resultant velocity V_2 behind the shock makes a smaller angle with the shock than the upstream velocity. That is, the flow is deflected over an angle θ toward the shock.

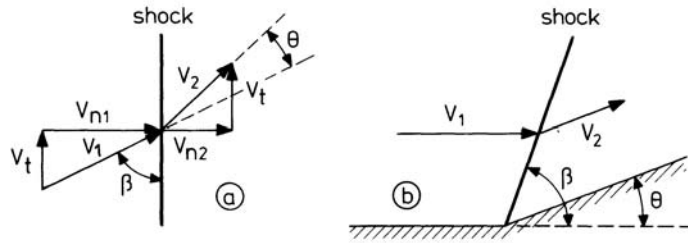


Figure C.14 Flow through oblique shock

C

Since in a frictionless steady flow any streamline can be replaced by a boundary, the oblique shock wave represents the behavior of a supersonic flow when turning suddenly through a deflection angle θ (Fig. C.14b). The equations relating the gas properties before and after the oblique shock can be obtained readily, if we recognize that these properties are not affected by the superposition of a velocity parallel to the shock wave. Thus, all the relations derived in Section C.9 for the normal shock are applicable if the Mach number M_1 in the normal shock equations is replaced by $M_1 \sin \beta$, where now $M_1 = V_1/c_1$ refers to the upstream Mach number before the oblique shock. Then, from Eq. C.75 to Eq. C.77, we have the following ratios across the shock:

$$\frac{\rho_1}{\rho_2} = \frac{V_{n2}}{V_{n1}} = \frac{2}{\gamma + 1} \frac{1}{M_1^2 \sin^2 \beta} + \frac{\gamma - 1}{\gamma + 1} \quad (\text{C.83})$$

$$\frac{p_2}{p_1} = \frac{2\gamma}{\gamma + 1} M_1^2 \sin^2 \beta - \frac{\gamma - 1}{\gamma + 1} \quad (\text{C.84})$$

$$\frac{T_2}{T_1} = \left[\frac{2\gamma}{\gamma + 1} M_1^2 \sin^2 \beta - \frac{\gamma - 1}{\gamma + 1} \right] \left[\frac{2}{\gamma + 1} \frac{1}{M_1^2 \sin^2 \beta} + \frac{\gamma - 1}{\gamma + 1} \right] \quad (\text{C.85})$$

Similarly, from Eq. C.79, the total pressure ratio becomes

$$\frac{p_{t2}}{p_{t1}} = \left[\frac{\gamma + 1}{2\gamma M_1^2 \sin^2 \beta - (\gamma - 1)} \right]^{\frac{1}{\gamma - 1}} \left[\frac{(\gamma + 1) M_1^2 \sin^2 \beta}{2 + (\gamma - 1) M_1^2 \sin^2 \beta} \right]^{\frac{\gamma}{\gamma - 1}} \quad (\text{C.86})$$

From Fig. C.14a and Eq. C.83 we obtain

$$\frac{\tan(\beta - \theta)}{\tan \beta} = \frac{V_{n2}}{V_{n1}} = \frac{2}{\gamma + 1} \frac{1}{M_1^2 \sin^2 \beta} + \frac{\gamma - 1}{\gamma + 1} \quad (\text{C.87})$$

Solving Eq. C.87 for the deflection angle θ produces the following expression

$$\theta = \tan^{-1} \left[\frac{M_1^2 \sin 2\beta - 2 \cot \beta}{2 + M_1^2 (\gamma + \cos 2\beta)} \right] \quad (\text{C.88})$$

Finally, the Mach number M_2 after the shock may be obtained by writing

$$\frac{M_2}{M_1} = \frac{V_2 c_1}{c_2 V_1} = \frac{\sin \beta}{\sin(\beta - \theta)} \frac{V_{n2}}{V_{n1}} \frac{c_1}{c_2} \quad (\text{C.89})$$

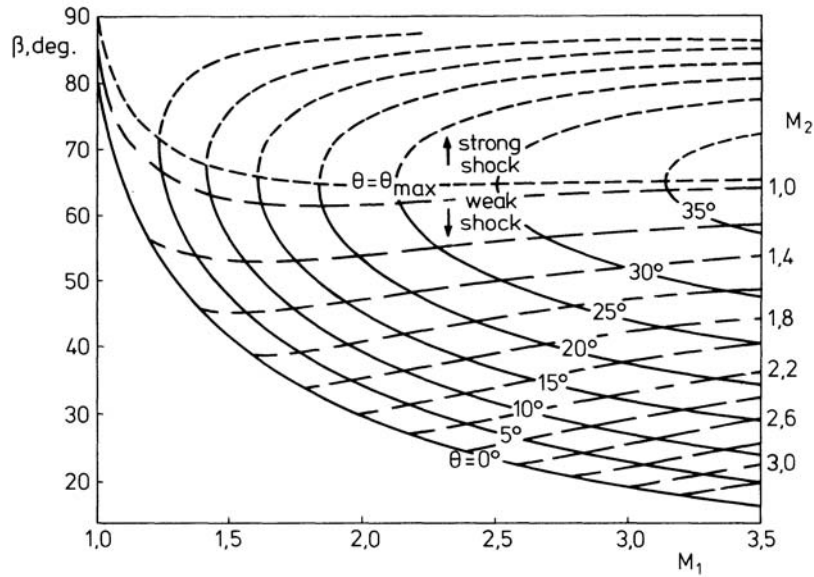


Figure C.15 Oblique shock properties

Noting that $c_1/c_2 = \sqrt{T_1/T_2}$ and using Eq. C.83 and Eq. C.85 yields

$$M_2^2 = \frac{1}{\sin^2(\beta - \theta)} \frac{1 + \frac{\gamma-1}{2} M_1^2 \sin^2 \beta}{\gamma M_1^2 \sin^2 \beta - \frac{\gamma-1}{2}} \quad (\text{C.90})$$

Combining Eq. C.90 and Eq. C.88 furnishes

$$M_2^2 = \frac{1 + \frac{\gamma-1}{2} M_1^2}{\gamma M_1^2 \sin^2 \beta - \frac{\gamma-1}{2}} + \frac{M_1^2 \cos^2 \beta}{1 + \frac{\gamma-1}{2} M_1^2 \sin^2 \beta} \quad (\text{C.91})$$

In Fig. C.15, β is plotted versus M_1 for constant values of θ . The points on the curves that correspond to the same value of M_2 are joined by dashed lines. The graph shows that for each value of M_1 there exists a maximum value of θ . If the deflection angle is greater than $\theta_{\max}$, the gas properties are no longer described by the preceding equations since a detached shock will occur (Fig. C.16). Examining the curves in Fig. C.15, we also see that there are two possible inclination angles for each value of M_1 and θ . The shock with the larger β results in a subsonic M_2 and is a stronger shock than that with the smaller inclination angle. Experience indicates, however, that a weak shock with the smaller β usually is found in actual flow. This means that the Mach number behind an oblique shock remains supersonic, except for a small range of values of θ near $\theta_{\max}$.

Clearly, the occurrence of an attached oblique-shock requires that $\theta < \theta_{\max}$ and an inclination angle such that

$$\frac{\pi}{2} \geq \beta \geq \sin^{-1} \left[\frac{1}{M_1} \right] \quad (\text{C.92})$$

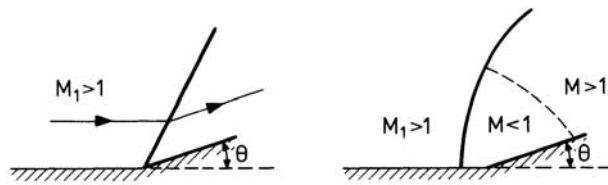


Figure C.16 Supersonic flow in a corner

The upper limit, $\beta = \pi/2$, leads to the presence of a normal shock, whilst at the lower limit of β we have the condition for an infinitely weak shock or *Mach wave* ($M_{n1} = 1$). The associated minimum shock inclination is called the *Mach angle*, usually given the symbol μ :

$$\beta_{\min} = \mu = \sin^{-1} \left[\frac{1}{M_1} \right] \quad (\text{C.93})$$

When the condition of Eq. C.93 is applied to the preceding equations, we find that the value of θ is zero and that there is no change in the gas properties across the Mach wave.

General references for Appendix C

- L. Prandtl and O.G. Tietjens, *Applied Hydro- and Aeromechanics*, McGraw-Hill, New York, 1934.
- H.W. Liepmann and A. Roshko, *Elements of Gasdynamics*, John Wiley, New York, 1957.
- A.M. Kuethe and J.D. Schetzer, *Foundations of Aerodynamics*, John Wiley, New York, 1959.
- R.M. Rotty, *Introduction to Gas Dynamics*, John Wiley, New York, 1962.
- A.M. Kuethe and C.-Y. Chow, *Foundations of Aerodynamics*, John Wiley, New York, 1976.
- J.J. Bertin and M.L. Smith, *Aerodynamics for Engineers*, Prentice-Hall, Inc., Englewood-Cliffs, New Jersey, 1979.
- M.A. Saad, *Compressible Fluid Flow*, Prentice-Hall, Inc., Englewood-Cliffs, New Jersey, 1985.

D

INTERNATIONAL STANDARD ATMOSPHERE

H , m	T , K	p , N/m ²	ρ , kg/m ³	c , m/s	$\mu \times 10^5$, kg/(m·s)
−1000	294.65	113929	1.3470	344.11	1.8206
−900	294.00	112614	1.3344	343.73	1.8175
−800	293.35	111312	1.3219	343.35	1.8144
−700	292.70	110022	1.3095	342.97	1.8113
−600	292.05	108744	1.2971	342.59	1.8081
−500	291.40	107478	1.2849	342.21	1.8050
−400	290.75	106223	1.2728	341.82	1.8019
−300	290.10	104981	1.2607	341.44	1.7988
−200	289.45	103751	1.2487	341.06	1.7956
−100	288.80	102532	1.2368	340.68	1.7925
0	288.15	101325	1.2250	340.29	1.7894
100	287.50	100129	1.2133	339.91	1.7862
200	286.85	98945	1.2017	339.52	1.7831
300	286.20	97773	1.1901	339.14	1.7800
400	285.55	96611	1.1787	338.75	1.7768
500	284.90	95461	1.1673	338.37	1.7737
600	284.25	94322	1.1560	337.98	1.7705
700	283.60	93193	1.1448	337.59	1.7673
800	282.95	92076	1.1337	337.21	1.7642
900	282.30	90970	1.1226	336.82	1.7610
1000	281.65	89874	1.1117	336.43	1.7578
1100	281.00	88790	1.1008	336.04	1.7547
1200	280.35	87715	1.0900	335.65	1.7515

D

$H, \text{ m}$	$T, \text{ K}$	$p, \text{ N/m}^2$	$\rho, \text{ kg/m}^3$	$c, \text{ m/s}$	$\mu \times 10^5, \text{ kg/(m}\cdot\text{s)}$
1300	279.70	86652	1.0793	335.27	1.7483
1400	279.05	85599	1.0686	334.88	1.7451
1500	278.40	84556	1.0581	334.49	1.7419
1600	277.75	83523	1.0476	334.09	1.7388
1700	277.10	82501	1.0372	333.70	1.7356
1800	276.45	81489	1.0269	333.31	1.7324
1900	275.80	80487	1.0167	332.92	1.7292
2000	275.15	79495	1.0065	332.53	1.7260
2100	274.50	78513	0.9964	332.13	1.7228
2200	273.85	77541	0.9864	331.74	1.7195
2300	273.20	76578	0.9765	331.35	1.7163
2400	272.55	75625	0.9666	330.95	1.7131
2500	271.90	74682	0.9569	330.56	1.7099
2600	271.25	73749	0.9472	330.16	1.7067
2700	270.60	72825	0.9375	329.77	1.7034
2800	269.95	71910	0.9280	329.37	1.7002
2900	269.30	71004	0.9185	328.97	1.697
3000	268.65	70108	0.9091	328.58	1.6937
3100	268.00	69221	0.8998	328.18	1.6905
3200	267.35	68343	0.8906	327.78	1.6872
3300	266.70	67475	0.8814	327.38	1.6840
3400	266.05	66615	0.8723	326.98	1.6807
3500	265.40	65764	0.8632	326.58	1.6775
3600	264.75	64922	0.8543	326.18	1.6742
3700	264.10	64088	0.8454	325.78	1.6709
3800	263.45	63264	0.8366	325.38	1.6677
3900	262.80	62447	0.8278	324.98	1.6644
4000	262.15	61640	0.8191	324.58	1.6611
4100	261.50	60841	0.8105	324.17	1.6578
4200	260.85	60050	0.8020	323.77	1.6545
4300	260.20	59268	0.7935	323.37	1.6513
4400	259.55	58494	0.7851	322.96	1.6480
4500	258.90	57728	0.7768	322.56	1.6447
4600	258.25	56970	0.7685	322.15	1.6414
4700	257.60	56221	0.7603	321.75	1.6381
4800	256.95	55479	0.7522	321.34	1.6347
4900	256.30	54745	0.7441	320.93	1.6314
5000	255.65	54020	0.7361	320.53	1.6281
5100	255.00	53302	0.7282	320.12	1.6248
5200	254.35	52591	0.7203	319.71	1.6215
5300	253.70	51889	0.7125	319.30	1.6181
5400	253.05	51194	0.7048	318.89	1.6148

H , m	T , K	p , N/m ²	ρ , kg/m ³	c , m/s	$\mu \times 10^5$, kg/(m·s)
5500	252.40	50506	0.6971	318.48	1.6115
5600	251.75	49827	0.6895	318.07	1.6081
5700	251.10	49154	0.6820	317.66	1.6048
5800	250.45	48489	0.6745	317.25	1.6014
5900	249.80	47831	0.6671	316.84	1.5981
6000	249.15	47181	0.6597	316.43	1.5947
6100	248.50	46537	0.6524	316.01	1.5914
6200	247.85	45901	0.6452	315.60	1.5880
6300	247.20	45272	0.6380	315.19	1.5846
6400	246.55	44650	0.6309	314.77	1.5813
6500	245.90	44034	0.6238	314.36	1.5779
6600	245.25	43426	0.6169	313.94	1.5745
6700	244.60	42825	0.6099	313.52	1.5711
6800	243.95	42230	0.6031	313.11	1.5677
6900	243.30	41642	0.5963	312.69	1.5644
7000	242.65	41060	0.5895	312.27	1.5610
7100	242.00	40486	0.5828	311.85	1.5576
7200	241.35	39917	0.5762	311.43	1.5542
7300	240.70	39355	0.5696	311.01	1.5507
7400	240.05	38800	0.5631	310.59	1.5473
7500	239.40	38251	0.5566	310.17	1.5439
7600	238.75	37708	0.5502	309.75	1.5405
7700	238.10	37172	0.5439	309.33	1.5371
7800	237.45	36642	0.5376	308.91	1.5336
7900	236.80	36117	0.5313	308.48	1.5302
8000	236.15	35599	0.5252	308.06	1.5268
8100	235.50	35087	0.5190	307.64	1.5233
8200	234.85	34581	0.5130	307.21	1.5199
8300	234.20	34081	0.5070	306.79	1.5164
8400	233.55	33587	0.5010	306.36	1.5130
8500	232.90	33099	0.4951	305.93	1.5095
8600	232.25	32616	0.4892	305.51	1.5061
8700	231.60	32139	0.4834	305.08	1.5026
8800	230.95	31668	0.4777	304.65	1.4991
8900	230.30	31202	0.4720	304.22	1.4956
9000	229.65	30742	0.4663	303.79	1.4922
9100	229.00	30287	0.4608	303.36	1.4887
9200	228.35	29838	0.4552	302.93	1.4852
9300	227.70	29395	0.4497	302.50	1.4817
9400	227.05	28956	0.4443	302.07	1.4782
9500	226.40	28523	0.4389	301.63	1.4747
9600	225.75	28095	0.4336	301.20	1.4712

$H, \text{ m}$	$T, \text{ K}$	$p, \text{ N/m}^2$	$\rho, \text{ kg/m}^3$	$c, \text{ m/s}$	$\mu \times 10^5, \text{ kg/(m}\cdot\text{s)}$
9700	225.10	27673	0.4283	300.77	1.4677
9800	224.45	27255	0.4230	300.33	1.4642
9900	223.80	26843	0.4178	299.90	1.4606
10000	223.15	26436	0.4127	299.46	1.4671
10100	222.50	26034	0.4076	299.03	1.4536
10200	221.85	25636	0.4026	298.59	1.4500
10300	221.20	25244	0.3976	298.15	1.4465
10400	220.55	24857	0.3926	297.71	1.4430
10500	219.90	24474	0.3877	297.27	1.4394
10600	219.25	24096	0.3829	296.83	1.4359
10700	218.60	23723	0.3781	296.39	1.4323
10800	217.95	23355	0.3733	295.95	1.4287
10900	217.30	22991	0.3686	295.51	1.4252
11000	216.65	22632	0.3639	295.07	1.4216
11100	216.65	22278	0.3582	295.07	1.4216
11200	216.65	21929	0.3526	295.07	1.4216
11300	216.65	21586	0.3471	295.07	1.4216
11400	216.65	21248	0.3417	295.07	1.4216
11500	216.65	20916	0.3363	295.07	1.4216
11600	216.65	20589	0.3311	295.07	1.4216
11700	216.65	20266	0.3259	295.07	1.4216
11800	216.65	19949	0.3208	295.07	1.4216
11900	216.65	19637	0.3158	295.07	1.4216
12000	216.65	19330	0.3108	295.07	1.4216
12100	216.65	19028	0.3060	295.07	1.4216
12200	216.65	18730	0.3012	295.07	1.4216
12300	216.65	18437	0.2965	295.07	1.4216
12400	216.65	18148	0.2918	295.07	1.4216
12500	216.65	17865	0.2873	295.07	1.4216
12600	216.65	17585	0.2828	295.07	1.4216
12700	216.65	17310	0.2783	295.07	1.4216
12800	216.65	17039	0.2740	295.07	1.4216
12900	216.65	16772	0.2697	295.07	1.4216
13000	216.65	16510	0.2655	295.07	1.4216
13100	216.65	16252	0.2613	295.07	1.4216
13200	216.65	15998	0.2572	295.07	1.4216
13300	216.65	15747	0.2532	295.07	1.4216
13400	216.65	15501	0.2493	295.07	1.4216
13500	216.65	15258	0.2454	295.07	1.4216
13600	216.65	15020	0.2415	295.07	1.4216
13700	216.65	14785	0.2377	295.07	1.4216
13800	216.65	14553	0.2340	295.07	1.4216

H , m	T , K	p , N/m ²	ρ , kg/m ³	c , m/s	$\mu \times 10^5$, kg/(m·s)
13900	216.65	14326	0.2304	295.07	1.4216
14000	216.65	14101	0.2268	295.07	1.4216
14100	216.65	13881	0.2232	295.07	1.4216
14200	216.65	13664	0.2197	295.07	1.4216
14300	216.65	13450	0.2163	295.07	1.4216
14400	216.65	13240	0.2129	295.07	1.4216
14500	216.65	13032	0.2096	295.07	1.4216
14600	216.65	12828	0.2063	295.07	1.4216
14700	216.65	12628	0.2031	295.07	1.4216
14800	216.65	12430	0.1999	295.07	1.4216
14900	216.65	12236	0.1967	295.07	1.4216
15000	216.65	12044	0.1937	295.07	1.4216
15100	216.65	11856	0.1906	295.07	1.4216
15200	216.65	11670	0.1877	295.07	1.4216
15300	216.65	11488	0.1847	295.07	1.4216
15400	216.65	11308	0.1818	295.07	1.4216
15500	216.65	11131	0.1790	295.07	1.4216
15600	216.65	10957	0.1762	295.07	1.4216
15700	216.65	10786	0.1734	295.07	1.4216
15800	216.65	10617	0.1707	295.07	1.4216
15900	216.65	10451	0.1680	295.07	1.4216
16000	216.65	10287	0.1654	295.07	1.4216
16100	216.65	10126	0.1628	295.07	1.4216
16200	216.65	9968	0.1603	295.07	1.4216
16300	216.65	9812	0.1578	295.07	1.4216
16400	216.65	9658	0.1553	295.07	1.4216
16500	216.65	9507	0.1529	295.07	1.4216
16600	216.65	9359	0.1505	295.07	1.4216
16700	216.65	9212	0.1481	295.07	1.4216
16800	216.65	9068	0.1458	295.07	1.4216
16900	216.65	8926	0.1435	295.07	1.4216
17000	216.65	8786	0.1413	295.07	1.4216
17100	216.65	8649	0.1391	295.07	1.4216
17200	216.65	8514	0.1369	295.07	1.4216
17300	216.65	8380	0.1348	295.07	1.4216
17400	216.65	8249	0.1326	295.07	1.4216
17500	216.65	8120	0.1306	295.07	1.4216
17600	216.65	7993	0.1285	295.07	1.4216
17700	216.65	7868	0.1265	295.07	1.4216
17800	216.65	7745	0.1245	295.07	1.4216
17900	216.65	7624	0.1226	295.07	1.4216
18000	216.65	7505	0.1207	295.07	1.4216

D

<i>H</i> , m	<i>T</i> , K	<i>p</i> , N/m ²	<i>ρ</i> , kg/m ³	<i>c</i> , m/s	<i>μ</i> × 10 ⁵ , kg/(m·s)
18100	216.65	7387	0.1188	295.07	1.4216
18200	216.65	7272	0.1169	295.07	1.4216
18300	216.65	7158	0.1151	295.07	1.4216
18400	216.65	7046	0.1133	295.07	1.4216
18500	216.65	6936	0.1115	295.07	1.4216
18600	216.65	6827	0.1098	295.07	1.4216
18700	216.65	6720	0.1081	295.07	1.4216
18800	216.65	6615	0.1064	295.07	1.4216
18900	216.65	6512	0.1047	295.07	1.4216
19000	216.65	6410	0.1031	295.07	1.4216
19100	216.65	6310	0.1015	295.07	1.4216
19200	216.65	6211	0.0999	295.07	1.4216
19300	216.65	6114	0.0983	295.07	1.4216
19400	216.65	6018	0.0968	295.07	1.4216
19500	216.65	5924	0.0953	295.07	1.4216
19600	216.65	5831	0.0938	295.07	1.4216
19700	216.65	5740	0.0923	295.07	1.4216
19800	216.65	5650	0.0909	295.07	1.4216
19900	216.65	5562	0.0894	295.07	1.4216
20000	216.65	5475	0.0880	295.07	1.4216
20100	216.75	5389	0.0866	295.14	1.4222
20200	216.85	5305	0.0852	295.20	1.4227
20300	216.95	5222	0.0839	295.27	1.4233
20400	217.05	5140	0.0825	295.34	1.4238
20500	217.15	5060	0.0812	295.41	1.4244
20600	217.25	4981	0.0799	295.48	1.4249
20700	217.35	4903	0.0786	295.54	1.4255
20800	217.45	4827	0.0773	295.61	1.4260
20900	217.55	4752	0.0761	295.68	1.4266
21000	217.65	4678	0.0749	295.75	1.4271
21100	217.75	4605	0.0737	295.82	1.4277
21200	217.85	4533	0.0725	295.88	1.4282
21300	217.95	4463	0.0713	295.95	1.4287
21400	218.05	4393	0.0702	296.02	1.4293
21500	218.15	4325	0.0691	296.09	1.4298
21600	218.25	4258	0.0680	296.16	1.4304
21700	218.35	4192	0.0669	296.22	1.4309
21800	218.45	4127	0.0658	296.29	1.4315
21900	218.55	4063	0.0648	296.36	1.4320
22000	218.65	4000	0.0637	296.43	1.4326
22100	218.75	3938	0.0627	296.49	1.4331
22200	218.85	3877	0.0617	296.56	1.4337

H , m	T , K	p , N/m ²	ρ , kg/m ³	c , m/s	$\mu \times 10^5$, kg/(m·s)
22300	218.95	3817	0.0607	296.63	1.4342
22400	219.05	3758	0.0598	296.70	1.4348
22500	219.15	3699	0.0588	296.77	1.4353
22600	219.25	3642	0.0579	296.83	1.4359
22700	219.35	3586	0.0570	296.90	1.4364
22800	219.45	3530	0.0560	296.97	1.4370
22900	219.55	3476	0.0552	297.04	1.4375
23000	219.65	3422	0.0543	297.10	1.4381
23100	219.75	3370	0.0534	297.17	1.4386
23200	219.85	3318	0.0526	297.24	1.4391
23300	219.95	3266	0.0517	297.31	1.4397
23400	220.05	3216	0.0509	297.37	1.4402
23500	220.15	3167	0.0501	297.44	1.4408
23600	220.25	3118	0.0493	297.51	1.4413
23700	220.35	3070	0.0485	297.58	1.4419
23800	220.45	3023	0.0478	297.64	1.4424
23900	220.55	2976	0.0470	297.71	1.4430
24000	220.65	2930	0.0463	297.78	1.4435
24100	220.75	2885	0.0455	297.85	1.4441
24200	220.85	2841	0.0448	297.91	1.4446
24300	220.95	2797	0.0441	297.98	1.4451
24400	221.05	2755	0.0434	298.05	1.4457
24500	221.15	2712	0.0427	298.12	1.4462
24600	221.25	2671	0.0421	298.18	1.4468
24700	221.35	2630	0.0414	298.25	1.4473
24800	221.45	2590	0.0407	298.32	1.4479
24900	221.55	2550	0.0401	298.39	1.4484
25000	221.65	2511	0.0395	298.45	1.4490
25100	221.75	2473	0.0388	298.52	1.4495
25200	221.85	2435	0.0382	298.59	1.4500
25300	221.95	2398	0.0376	298.66	1.4506
25400	222.05	2361	0.0370	298.72	1.4511
25500	222.15	2325	0.0365	298.79	1.4517
25600	222.25	2289	0.0359	298.86	1.4522
25700	222.35	2254	0.0353	298.92	1.4528
25800	222.45	2220	0.0348	298.99	1.4533
25900	222.55	2186	0.0342	299.06	1.4539
26000	222.65	2153	0.0337	299.13	1.4544
26100	222.75	2120	0.0332	299.19	1.4549
26200	222.85	2088	0.0326	299.26	1.4555
26300	222.95	2056	0.0321	299.33	1.4560
26400	223.05	2025	0.0316	299.39	1.4566

H , m	T , K	p , N/m ²	ρ , kg/m ³	c , m/s	$\mu \times 10^5$, kg/(m·s)
26500	223.15	1994	0.0311	299.46	1.4571
26600	223.25	1964	0.0306	299.53	1.4577
26700	223.35	1934	0.0302	299.60	1.4582
26800	223.45	1905	0.0297	299.66	1.4587
26900	223.55	1876	0.0292	299.73	1.4593
27000	223.65	1847	0.0288	299.80	1.4598
27100	223.75	1819	0.0283	299.86	1.4604
27200	223.85	1792	0.0279	299.93	1.4609
27300	223.95	1765	0.0275	300.00	1.4614
27400	224.05	1738	0.0270	300.06	1.4620
27500	224.15	1712	0.0266	300.13	1.4625
27600	224.25	1686	0.0262	300.20	1.4631
27700	224.35	1660	0.0258	300.27	1.4636
27800	224.45	1635	0.0254	300.33	1.4642
27900	224.55	1611	0.0250	300.40	1.4647
28000	224.65	1586	0.0246	300.47	1.4652
28100	224.75	1562	0.0242	300.53	1.4658
28200	224.85	1539	0.0238	300.60	1.4663
28300	224.95	1516	0.0235	300.67	1.4669
28400	225.05	1493	0.0231	300.73	1.4674
28500	225.15	1470	0.0227	300.80	1.4679
28600	225.25	1448	0.0224	300.87	1.4685
28700	225.35	1426	0.0220	300.93	1.4690
28800	225.45	1405	0.0217	301.00	1.4696
28900	225.55	1384	0.0214	301.07	1.4701
29000	225.65	1363	0.0210	301.13	1.4706
29100	225.75	1342	0.0207	301.20	1.4712
29200	225.85	1322	0.0204	301.27	1.4717
29300	225.95	1302	0.0201	301.33	1.4723
29400	226.05	1283	0.0198	301.40	1.4728
29500	226.15	1264	0.0195	301.47	1.4733
29600	226.25	1245	0.0192	301.53	1.4739
29700	226.35	1226	0.0189	301.60	1.4744
29800	226.45	1208	0.0186	301.67	1.4750
29900	226.55	1190	0.0183	301.73	1.4755
30000	226.65	1172	0.0180	301.80	1.4760
30100	226.75	1154	0.0177	301.87	1.4766
30200	226.85	1137	0.0175	301.93	1.4771
30300	226.95	1120	0.0172	302.00	1.4777
30400	227.05	1103	0.0169	302.07	1.4782
30500	227.15	1087	0.0167	302.13	1.4787
30600	227.25	1071	0.0164	302.20	1.4793

H , m	T , K	p , N/m ²	ρ , kg/m ³	c , m/s	$\mu \times 10^5$, kg/(m·s)
30700	227.35	1055	0.0162	302.27	1.4798
30800	227.45	1039	0.0159	302.33	1.4803
30900	227.55	1023	0.0157	302.40	1.4809
31000	227.65	1008	0.0154	302.47	1.4814
31100	227.75	993	0.0152	302.53	1.4820
31200	227.85	978	0.0150	302.60	1.4825
31300	227.95	964	0.0147	302.67	1.4830
31400	228.05	949	0.0145	302.73	1.4836
31500	228.15	935	0.0143	302.80	1.4841
31600	228.25	921	0.0141	302.86	1.4846
31700	228.35	908	0.0138	302.93	1.4852
31800	228.45	894	0.0136	303.00	1.4857
31900	228.55	881	0.0134	303.06	1.4863
32000	228.65	868	0.0132	303.13	1.4868

E

CONVERSION FACTORS

Table E.1 Conversion factors

Quantity	Unit	SI-equivalent
Length	1 foot (ft)	= 0.3048 m
	1 statute mile (mi)	= 1.609 34 km
	1 nautical mile (nmi)	= 1.852 00 km
	1 inch (in)	= 0.0254 m
Area	1 square foot (ft ²)	= 0.092 903 m ²
Volume	1 Imperial gallon (gal)	= 4.546 09 dm ³
	1 U.S. gallon (US gal)	= 3.785 41 dm ³
	1 pint (pt)	= 0.568 261 dm ³
	1 quart (qt)	= 1.136 52 dm ³
Velocity	1 ft/min	= 0.005 08 m/s
	1 ft/s	= 0.3048 m/s
	1 mi/hr (mph)	= 1.609 34 km/hr
	1 nmi/hr (knot, kts)	= 1.852 km/hr
Acceleration	1 ft/s ²	= 0.3048 m/s ²
Mass	1 pound (lb)	= 0.453 592 kg
	1 slug (slug)	= 14.5939 kg
Mass rate of flow	1 lb/s	= 0.453 592 kg/s
Volume rate of flow	1 gal/hr	= 4.546 09 dm ³ /hr
	1 ft ³ /s	= 0.028 3168 m ³ /s
Density	1 lb/ft ³	= 16.0185 kg/m ³

Table E.1 Conversion factors (continued)

Quantity	Unit	SI-equivalent
	1 slug/ft ³	= 515.379 kg/m ³
Force	1 kilogram-force (kgf)	= 9.806 65 N
	1 pound-force (lbf)	= 4.448 22 N
Moment of force	1 pound-foot (lbf·ft)	= 1.355 82 N·m
Moment of inertia	1 lb·ft ²	= 0.042 140 1 kg·m ²
Pressure and stress	1 lbf/in ² (psi)	= 6.894 76 kPa
	1 lbf/ft ²	= 47.880 3 Pa
	1 inch mercury (in Hg)	= 3.386 39 kPa
	1 atmosphere (atm)	= 101 325 Pa
Dynamic viscosity	1 lb/(ft·s)	= 1.488 16 kg/(m·s)
Kinematic viscosity	1 ft ² /s	= 0.092 903 m ² /s
Energy and work	1 ft·lbf	= 1.355 82 J
	1 kgf·m	= 9.806 65 J
	1 British thermal unit (Btu)	= 1.055 06 kJ
Power	1 ft·lbf/s	= 1.355 82 W
	1 kgf·m/s	= 9.806 65 W
	1 Imperial horsepower (hp) (= 550 ft·lbf/s)	= 745.700 W
	1 metric horsepower (cv) (75 kgf·m/s)	= 735.499 W
Heat flow rate	1 Btu/hr	= 0.293 071 W
Temperature	degree Celsius or centigrade (°C)	= (T°C + 273.15) K
	degree Fahrenheit (°F)	= 5/9 · (T°F + 459.67) K
	degree Rankine (°R)	= 5/9 · (T°R) K

REFERENCES

- [1] Anon., U.S. *Standard Atmosphere*, 1976, National Oceanic and Atmospheric Administration, National Aeronautics and Space Administration, United States Air Force, U.S. Government Printing Office, Washington, D.C., 1976.
- [2] Anon., *Handbook of Geophysics*, Macmillan, New York, 1960.
- [3] Anon., *International Standard Atmosphere (ISA)*, International Organization for Standardization, ISO 2533, 1975.
- [4] F.W. Cole, *Introduction to Meteorology*, John Wiley, New York, 1980.
- [5] J.R. von Mises, *Theory of Flight*, McGraw-Hill, New York, 1945.
- [6] I.H. Abbot and A.E. von Doenhoff, *Theory of Wing Sections*, McGraw-Hill, New York, 1949.
- [7] E. Torenbeek, *Synthesis of Subsonic Airplane Design*, Delft University Press, 1976.
- [8] W. Gracey, *Measurement of Aircraft Speed and Altitude*, John Wiley, New York, 1981.
- [9] E.H.J. Pallett, *Aircraft Instruments*, Pitman, London, 1981.
- [10] J. Andresen, *Fundamentals of Aircraft Flight and Engine Instruments*, Hayden Book Company, New York, 1970.
- [11] I. Moir and A. Seabridge, *Aircraft Systems – Mechanical, electrical and avionics subsystems integration*. Wiley Aerospace Series, 2008
- [12] G. Girishkumar, B. McCloskey, A.C. Luntz, S. Swanson and W. Wilke, *Lithium-Air Battery: Promise and Challenges*, Journal of Physical Chemistry Letters, 1(14), 2193-2203, 2010.
- [13] D.L. Gabriel, J. Meyer and F. du Plessis, *Brushless DC motor characterisation and selection for a fixed wing UAV*, IEEE Africon 2011, Livingstone, Zambia, 2011.
- [14] D. Hanselman, *Brushless Permanent Magnet Motor Design*, 2nd ed., Magna Physics Publishing, 2006.
- [15] Shi, D., Dai, X., Zhang, X., Quan, Q., *A practical performance evaluation method for electric multicopters*, IEEE/ASME Transactions on Mechatronics, Vol. 22, No. 3, 2017, pp 1337-1348.
- [16] D. Fielding and J.E.C. Topps, *Thermodynamics Data for the Calculation of Gas Turbine Performance*, Aeronautical Research Council, R.&M. No.3099, HMSO, London, 1959.
- [17] J.C. Samuels and B.M. Gale, *Effect of Humidity on Performance of Turbojet Engines*, National Advisory Committee for Aeronautics, Technical Note 2119, Washington, June 1950.

- [18] G. Jackson, *The Effect of Atmospheric Humidity and Temperature on the Engine Power and Take-off Performance of a Hastings I*, Aeronautical Research Council, C.P. No.77, HMSO, London, 1952.
- [19] N.K. Borer, J.M. Derlaga, K.A. Deere, M.B. Carter, S.A. Viken, M.D. Patterson, B.L. Litherland, *Comparison of Aero-Propulsive Performance Predictions for Distributed Propulsion Configurations*, AIAA SciTech, Grapevine, Texas, United States, 2017.
- [20] K. Cagatay Bayindir, M.A. Gozukucuk, A. Teke, *A comprehensive overview of hybrid electric vehicle: powertrain configurations, powertrain control techniques and electronic control units*, Energy Conversion and Management, 52(2), 1305–1313, 2012.
- [21] J.Y. Hung, L.F. Gonzales, *On parallel hybrid-electric propulsion system for unmanned aerial vehicles*, Progress in Aerospace Sciences, 52(1), 1–17, 2012.
- [22] L. Guzella, A. Sciarretta, *Vehicle Propulsion Systems. Introduction to Modeling and Optimization*, 3rd Ed., Springer-Verlag, 2013.
- [23] R.D. Hager and D. Vrabel, *Advanced Turboprop Project*, NASA SP-495, NASA Scientific and Technical Information Division, Washington, D.C., 1988.
- [24] H. Glauert, *Airplane Propellers*, Aerodynamic Theory, Vol. IV (William F. Durand, ed.). Dover Publications Inc., New York, 1963.
- [25] T. Theodorsen, *Theory of Propellers*, McGraw-Hill, New York, 1948.
- [26] E.P. Hartman and D. Biermann, *The Aerodynamic Characteristics of Full-Scale Propellers Having 2, 3, and 4 Blades of Clark Y and R.A.F. 6 Airfoil Sections*, NACA Report 640, 1937.
- [27] B.W. McCormick, *Aerodynamics, Aeronautics, and Flight Mechanics*, John Wiley, New York, 1979.
- [28] B.W. McCormick, *Aerodynamics of V/STOL Flight*, Academic Press, New York, 1967.
- [29] Hamilton Standard Division, United Aircraft Corp., *Generalized Method of Propeller Performance Estimation*, Hamilton Standard Publication PDB 6101 A, 1963.
- [30] Anon., *SBAC Standard Method of Propeller Performance Estimation*, Society of British Aircraft Constructors Ltd., 1950.
- [31] A.J. Bocci, *A New Series of Aerofoil Sections Suitable for Aircraft Propellers*, Aeronautical Quarterly, February, 1977.
- [32] C. Rohrbach and H.S. Wainauski, *Aerodynamic Characteristics of an Advanced Technology Propeller for Commuter Aircraft*, American Institute of Aeronautics and Astronautics, AIAA Paper No.81-1565, 1981.
- [33] Anon., *U.S. Standard Atmosphere, 1962*, U.S. Government Printing Office, Washington, D.C., 1962.

- [34] Anon., *Engineering Sciences Data*, Aeronautical Series, Performance Vol. 1-6, Engineering Sciences Data Unit (ESDU) International Ltd., London.
- [35] F.H. Hawkins, *Human Factors in Flight*, Gower Technical Press Ltd., England, 1987.
- [36] A. and L. Welch and F. Irving, *Now Soaring Pilot*, John Murray, England, 1970.
- [37] A.E. Bryson, Jr. and Y.-C. Ho, *Applied Optimal Control*, Hemisphere Publishing Corporation, Washington, D.C., 1975.
- [38] N.X. Vinh, *Optimal Trajectories in Atmospheric Flight*, Elsevier, Amsterdam, 1981.
- [39] E.S. Rutowski, *Energy Approach to the General Aircraft Performance Problem*, Journal of the Aeronautical Sciences, Vol. 21, No. 3, March 1954.
- [40] A.E. Bryson, Jr., M.N. Desai and W.C. Hoffman, *Energy-State Approximation in Performance Optimization of Supersonic Aircraft*, Journal of Aircraft, Vol. 6, No. 6, Nov./Dec. 1969.
- [41] A.D. Edwards, *Performance Estimation of Civil jet Aircraft*, Aircraft Engineering, Vol. 22, No. 254, April 1950.
- [42] A.H. Stratford, *Air Transport Economics in the Supersonic Era*, MacMillan, London, 1973.
- [43] Anon., *Standard Method for the Estimation of Direct Operating Costs of Aircraft*, Society of British Aircraft Constructors, Issue No. 4, 1959.
- [44] Anon., *Standard Method of Estimating Comparative Direct Operating Costs of Turbine Powered Transport Airplanes*, Air Transport Association of America, 1967.
- [45] D.V. Maddalon, *Estimating Airline Operating Costs*, NASA Technical Memorandum 78694, May 1978.
- [46] Anon., *Short-Medium Range Aircraft - AEA Requirements*, Association of European Airlines, Brussels, Nov. 1986.
- [47] E. Ower, R. Warden and W.S. Brown, *An Investigation of Ground Effect with a Model of a Mid-Wing Monoplane*, Aeronautical Research Council, R.&M. No. 1847, HMSO, London, 1938.
- [48] D.H. Perry, *The Airborne Path During Take-off for Constant Rate-of-Pitch Manoeuvres*, Aeronautical Research Council, C.P. No. 1042, HMSO, London, 1969.
- [49] F.E. Douwes Dekker and D. Lean, *Take-off and Landing Performance*, AGARD Flight Test Manual, Volume 1, Chapter 8, Pergamon Press, 1962.
- [50] F.J. Hale, *Aircraft Performance, Selection, and Design*, John Wiley, New York, 1984.
- [51] J.D. Anderson, Jr., *Introduction to Flight*, McGraw-Hill, New York, third edition, 1989.
- [52] A.C. Kermode, *Mechanics of Flight*, Pitman, London, 1962.

- [53] A. Miele, *Flight Mechanics*, Vol 1, Theory of Flight Paths, Addison-Wesley, Reading, Massachusetts, 1962.
- [54] D.O. Dommasch, S.S. Sherby and T.F. Connolly, *Airplane Aerodynamics*, Pitman, London, 1961.
- [55] H. Ashley, *Engineering Analysis of Flight Vehicles*, Addison-Wesley, Reading, Massachusetts, 1974.
- [56] J.V. Iribarne and H.-R. Cho, *Atmospheric Physics*, D. Reidel Publishing Company, Dordrecht, Holland, 1980.
- [57] H. Cohen, G.F.C. Rogers and H.I.H. Saravanamuttoo, *Gas Turbine Theory*, Longman, London, 2001.
- [58] P.J. McMahon, *Aircraft Propulsion*, Pitman, London, 1971.
- [59] J.L. Kerrebrock, *Aircraft Engines and Gas Turbines*, The MIT Press, Massachusetts, 1977.
- [60] P.G. Hill and C.R. Peterson, *Mechanics and Thermodynamics of Propulsion*, Addison-Wesley, Reading, Massachusetts, 1965.
- [61] M.J. Zucrow, *Gas Turbines and Jet Propulsion*, Volume II of Aircraft and Missile Propulsion, John Wiley, New York, 1958.
- [62] H. Roxbee Cox (Consulting Editor), *Gas Turbine Principles and Practice*, George Newnes Limited, London, 1955.
- [63] N.D. Van Sickle (Editor), *Modern Airmanship*, Van Nostrand Reinhold Company, New York, 1971.
- [64] D.P. Davies, *Handling the Big Jets*, Air Registration Board, Brabazon House, Redhill, Surrey, England, 1967.
- [65] R.S. Shevell, *Fundamentals of Flight*, Prentice-Hall, Inc., Englewood Cliffs, New Jersey, 1983.
- [66] D. Stinton, *The Anatomy of the Airplane*, G.T. Foulis & Co Ltd., London, 1966.
- [67] C.D. Perkins and R.E. Hage, *Airplane Performance Stability and Control*, John Wiley, New York, 1949.
- [68] C.E. Padilla, *Optimizing Jet Transport Efficiency, Performance, Operations & Economics*, McGraw-Hill, New York, 1996.
- [69] J.D. Anderson, *Aircraft Performance and Design*, McGraw-Hill, New York, 1999.
- [70] M.E. Eshelby, *Aircraft Performance - Theory and Practice*, Arnold, London, 2000.
- [71] P. Clark, *Buying the Big Jets: Fleet planning for airlines*, Ashgate Publishing Ltd. Aldershot, UK, 2001.
- [72] M. Saarlas, *Aircraft Performance*, John Wiley, New York, 2007.

Elements of Airplane Performance

Ger J.J. Ruijgrok, Mark Voskuil, Carmine Varriale

Elements of Airplane Performance provides a comprehensive introduction to the principles governing the flight performance of fixed-wing aircraft. After covering fundamental concepts related to atmospheric properties, equations of motion, aerodynamics, propeller and jet propulsion, electric powertrains, and flight instrumentation, the book guides its readers through the analysis of performance in steady and accelerated flight. Detailed chapters are dedicated to the most important flight phases: climb and descent (including gliding), cruise, take-off and landing, turning and maneuvering flight. Both point and path performance are covered, and the effect of aircraft design parameters, as well as operational parameters like weight, altitude, and local atmospheric conditions, are discussed. Appendices offer essential background in mechanics, coordinate systems and transformations, fluid dynamics, and a standard atmosphere model. Exercises are provided at the end of each chapter.

Ger J.J. Ruijgrok

Faculty of Aerospace Engineering, Delft University of Technology

Gerrit J.J. Ruijgrok has been Professor of Aerospace Engineering at the Brussels Free University and at Delft University of Technology. His educational and research tasks have focused on performance, propulsion, and noise of aircraft.



Mark Voskuil

Faculty of Military Sciences, Netherlands Defence Academy

Mark Voskuil is Professor of Weapon- and Aviation Systems at the Faculty of Military Sciences of the Netherlands Defence Academy. His research and teaching focuses on the performance, stability and control of fighter aircraft, helicopters and unmanned aerial vehicles.



Carmine Varriale

Faculty of Aerospace Engineering, Delft University of Technology

Carmine Varriale is Assistant Professor of Flight Mechanics at Delft University of Technology. He is a passionate educator with research interests in the flight mechanics and performance of unconventional aircraft.



© 2025 TU Delft OPEN Publishing
ISBN 978-94-6518-164-6
DOI <https://doi.org/10.59490/mt.235>
textbooks.open.tudelft.nl

Cover image: Turkish Stars
Aerobatic Display in Clear Blue Sky,
Alispective on Pexels (30082679),
Free To Use.